

MAKE	MODEL	CHASSIS/EQUIVALENT	COMMENTS	COMMENTS	COMMENTS	COMMENTS
Aiwa	TV14MT11		2004, £90-£110			
Aiwa	TV21MT11		2004, £165			
Aiwa	TVF21TS1U	Sony BX1 chassis		remote RMZ5200		
Aiwa	TVSE1430K	Daewoo CP385	2003, £199			
Aiwa	TVSE2130K	Daewoo CP385				
Aiwa	VX14MW1U	CP082S (Daewoo CP082)	2003			
Aiwa	VX21MW1U	CP082S (Daewoo CP082)	2003			
Aiwa	VXD1420K	combi Orion chassis, deck OVD-6S	PCB marked TM9423A, video VM9171B	Micro OEC0085B, option codes	LOPTr Q406 2SD2599	
Aiwa	VXD1450K	combi Orion chassis, deck OVD-7				
Aiwa	VXD2120K	combi Orion chassis, deck OVD-6S	PCB marked TM9450A, video VM9171B	Micro OEC0085B, option codes in	EEPROM address 100H	
Aiwa	VXD2121K	combi Orion chassis, deck OVD-6S	PCB marked TMA523A, video VMA239A	Micro OEC0113B		
Aiwa	VXD2150K	combi Orion chassis, deck OVD-7	PCB marked TMA523A, video VMA239A	Micro OEC0113B		
Aiwa	VXF2121K	combi Orion chassis, deck OVD-6S	PCB marked TMX477A, video VMX199A	Micro OEC0096A		
Aiwa	VXG140K	combi Orion chassis, deck OVD-5	PCB marked TM7379, video VM7125	Micro OEC6044D		
Aiwa	VXG142K	combi Orion chassis, deck OVD-5A	PCB marked TM7379B, video VM7125	Micro OEC6044D		
Aiwa	VXG143K	combi Orion chassis, deck OVD-6	PCB marked TM9423A, video VM9162D	Micro OEC0078C, option codes	EEPROM address 100H	
Aiwa	VXG143KAL (has "A" circled)	combi Orion chassis, deck OVD-6S	PCB marked TMX473A, video VMX193B	Micro OEC0093B		
Aiwa	VXG145K	combi Orion chassis, deck OVD-7	main PCB VMA230A, PSU PCB VPA150A	Micro OEC0107B, option codes	EEPROM address 0B4h (0B4->0B4h)	
Aiwa	VX11410K	combi Orion chassis, deck OVD-4A		Micro OEC6018		
Aiwa	VX11420K	combi Orion chassis, deck OVD-4A	PCB marked TM4316, video VM4079	Micro OEC6025A		
Aiwa	VX1145K	combi Orion chassis, deck OVD-5	PCB marked TM8395A, video VM7125D	Micro OEC6044D		
Aiwa	VX1147K	combi Orion chassis, deck OVD-5A	PCB marked TM8395B, video VM7125	Micro OEC6044D	PSU IC501 STRF6653	
Aiwa	VX11480K	combi Orion chassis, deck OVD-5	PCB marked TM7379A, video VM7125A	Micro OEC6044A		
Aiwa	VX1149K	combi Orion chassis, deck OVD-6	PCB marked TM9423A, video VM9162D	Micro OEC0078C, option codes	EEPROM address 100H	
Aiwa	VX1149KAL (has "A" circled)	combi Orion chassis, deck OVD-6S	PCB marked TMX473A, video VMX193B	Micro OEC0093B		
Aiwa	VX2910K	combi, deck TN9300	1992			
Akai	CT1417	Onwa				
Akai	CT2115UK	Samsung P58SC				
Akai	CT2125	Samsung P58SC				
Akai	CT2137	Akai CT2157				
Akai	CT2157	Akai CT2137				
Akai	CT2158	Sanyo E4-A21				
Akai	CT2159U	Onwa				
Akai	CT2161	Stereo plus				
Akai	CT2162UNT	Onwa				
Akai	CT2185	Sanyo A5-A21				
Akai	CT2565	Stereo plus				
Akai	CT2567	Stereo plus	Goodmans 285DPL			
Akai	CT2570	Compact D2	ITT			
Akai	CT2579N	Nokia Compact D-E				
Akai	CT2585N	Eurostereo2				
Akai	CT2820	Compact D2	ITT			
Akai	CT2862UNT	Onwa K9228				
Akai	CT2865	Stereo plus				
Akai	CT2867	Stereo plus				
Akai	CT2870N	Nokia Compact D2-E				
Akai	CT2879N	Nokia Compac D-E				
Akai	CT2885N	Eurostereo2				
Akai	MP237H1 (MP2 37 H1)	Mono Plus 2 (MP2)	=TV1420UK			
Akai	MZ82R1	Nokia/Salora/Luxor MZ-chassis				
Akai	SN63B6	Stereo Plus-2, same as TV2551TN	Nokia TV2881T			
Akai	SN71B6	Stereo Plus-2, same as TV2851TN	Nokia TV2881T			
Akai	SW72B2	Stereo Plus-2, same as TV2881T	Nokia TV2881T			
Akai	TV2551TN	Stereo Plus-2 (SN/SW chassis)	Nokia TV2881T			
Akai	TV2835T	Schneider TV9.7				
Akai	TV2851TN	Stereo Plus-2 (SN/SW chassis)	Nokia TV2881T			
Akai	TV2852TN	Stereo Plus-2 (SN/SW chassis)	Nokia TV2881T			
Akai	TV2881T	Stereo Plus-2 (SN/SW chassis)	Nokia TV2881T			
Akai	TV2891T	Nokia/Salora/Luxor MZ-chassis				
Akai	TV3291T	Nokia/Salora/Luxor MZ-chassis				
Akai	WSP28NTFSFDGB	PT92 +DVD				
Akai	WSP32NTFSFDGB(S)	PT92 +DVD				
Akai	TV1420UK (TV1420TUK)	Mono Plus 2 (MP2)	remote RCN622			
Akai	TV1421(T)	Mono Plus 2 (MP2)				
Akai	TV2020(T)UK	Mono Plus 2 (MP2)				
Akai	TV2021(T)	Mono Plus 2 (MP2)				
Akai	TV2120(T)	Mono Plus 2 (MP2)				
Akai	TV2121(T)	Mono Plus 2 (MP2)				
Akashi	1450	Elron EC142				
Akura	ATPTV028FT	PT92 ??				
Akura	ATPTV028WSS	PT92				
Akura	AVTV028WSS	PT92 or 11AK19Pro				
Akura	CX10	Boots CTV10R	Alba CTV10			
Akura	CX10	Nikkai Baby 10	Tourer			
Akura	CX10	Osaki P10R	Thorn P10R			
Akura	CX10	Samsung C1210R				
Akura	CX12	Thorn P14BT				
Akura	CX1400T	CX26				
Akura	CX1400T	Minoka MK 1495T				
Akura	CX18	Thorn P146R				
Akura	CX24					
Akura	CX25					
Akura	CX26	Digital Chassis				
Akura	CX30					
Akura	CX32	Thorn CT51R				
Akura	CX33	Thorn CT51T				
Akura	CX35					
Akura	CX4	Osaki P142	Thorn P142			
Alba	CS1919	Rank A823				
Alba	CTV10	Nikkai Baby 10				
Alba	CTV100	Matsui 1436	Bush 2004			
Alba	CTV1400	Hanwood HTV3604R				
Alba	CTV144R	Nikkai TLG14R				
Alba	CTV3309	11AK20M-6	1999-	AK20 prod.code 10000107		
Alba	CTV3359	11AK20M-6	1999-	AK20 prod.code: 10000813	remote 930	
Alba	CTV3409	11AK08-13/14 or 11AK20M-3	11AK20 after 1999	AK20 prod.code 10000112		
Alba	CTV3410	Bush 2007 2033T 2167NTX 2169NTX				
Alba	CTV3411	Orion chassis	PCB marked TMX466B	LOPTr Q401 2SD2599	remote 076R0DG040	
Alba	CTV3418	11AK20M-6	1999, remote 930	AK20 prod.code 10000114		
Alba	CTV3418BLK	11AK36	remote 1940			
Alba	CTV3419SIL	11AK36	remote 1940			
Alba	CTV3451TXT	Orion chassis	PCB marked TMA504A	Micro OECF001A		
Alba	CTV3455	CTV841				
Alba	CTV3458	Bush 2007 2033T 2167NTX 2169NTX				
Alba	CTV3459	11AK08 or 11AK20M-6	11AK20 after 1999	AK20 prod.code 10000113		
Alba	CTV3469	11AK20 or 11AK36	chassis depends on the year			
Alba	CTV3481	Orion chassis	Micro PCJ195C30ECF009A (OECF009A)	Remote 076N0GE030		
Alba	CTV4805	Matsui 1455	Onwa			
Alba	CTV4808	11AK19E3				
Alba	CTV4809	11AK10(older) or 11AK19-5, 11AK19-8A, 11AK19E3 (after 1997)		AK19 prod.code: 10000233		
Alba	CTV4851	11AK19				
Alba	CTV4855	Onwa				
Alba	CTV4856	11AK10				
Alba	CTV4858SIL	11AK19E3 or 11AK30(2002-2003)	chassis depends on the year	11AK30 - 10014185		
Alba	CTV4859	11AK19-8A	1999-	AK19 prod.code: 10000234		
Alba	CTV4861SIL	Beko 12.7 chassis, PCB marked G70.190-10				
Alba	CTV4866	NEW ONWA (Bush 2060NTX)	1997	Micro C69609Y, PSU IC STRS6309		
Alba	CTV4889	11AK10-15, 11AK19-8A	AK19 after 1999	AK19 prod.code: 10000971		
Alba	CTV501	Onwa				
Alba	CTV5105SIL	Beko 12.7 chassis, PCB marked G70.190-03	2003, £100	LOPTr 058.013-TR7, 1142.1816, 003071095; equiv. HR8484, FBT40962		
Alba	CTV5109SIL	11AK30.2, 11AK30A4	2002-2003	AK30 prod.code: 10014183		
Alba	CTV5165SIL	Beko 12.7 chassis				
Alba	CTV5984	11AK19E3				
Alba	CTV6682	11AK12				
Alba	CTV6682A	11AK19				
Alba	CTV6688	11AK19 or 11AK37-8	11AK37 after 2002			
Alba	CTV701	Onwa				
Alba	CTV703	Alba CTV703 CTV704T CTV713	Bush 2020T 2021 2021T	Hinari HIT51T		
Alba	CTV704	Indiana 100	NEI			
Alba	CTV704T	Alba CTV703 CTV704T CTV713	Bush 2020T 2021 2021T	Hinari HIT51T		
Alba	CTV711	Indiana 100	NEI			
Alba	CTV712	Indiana 100	NEI			
Alba	CTV713	Alba CTV703 CTV704T CTV713	Bush 2020T 2021 2021T	Hinari HIT51T		
Alba	CTV741	Indiana 100	NEI			
Alba	CTV742	Indiana 100	NEI			
Alba	CTV743	C-43 (Bush 2914)				
Alba	CTV744	Indiana 100	NEI			
Alba	CTV747	Orion 14A chassis				

Alba	CTV748	Orion 14A chassis	PCB marked TM0157M, Micro OEG8034	Scan coils YS-60275K					
Alba	CTV752	Indiana 200	NEI						
Alba	CTV840	Onwa	also Bush 1402, Hinary HIT140RC	Goodmans 1404, 1404A					
Alba	CTV841	also Bush 1452T, Goodmans 147TT							
Alba	CTV841	Bush 2114							
Alba	PTV9C	Goodmans Q9001							
Alba	PTV9C	Samsung BT110							
Alba	T1114	Ferguson 3840							
Alba	T14	Bush 2007 2033T 2167NTX 2169NTX							
Alba	VTV10	Orion chassis (Bush BTV10)							
Amstrad	CTV1400	(new) = Crown CTF14R							
Amstrad	CTV1401	Orion 14PS	Saisho CT1400/Matsui 1410						
Amstrad	CTV1409	Orion 14PR	Saisho CT14R						
Amstrad	CTV1409	Triumph CTV8208							
Amstrad	CTV1410	Orion 14LR chassis	Alba CTV840						
Amstrad	CTV1600	Triumph CTV8205							
Amstrad	CTV20T	similar to CTV1400							
Amstrad	CTV2110	Onwa							
Amstrad	CTV280	Bush 2857							
Amstrad	CTV3014F	PT11 chassis							
Amstrad	CTV3021N	PT11 chassis	1998						Micro CTV352/V1.4
Amstrad	CTV3021NF	SM1 chassis	1998						Micro CTV352/V1.4
Amstrad	CTV3028N	SM1 chassis							Micro CTV352/V1.4
Amstrad	CTV3121N	PT11 chassis							
Amstrad	CTV3128N	SM2 chassis							
Amstrad	CTV3228NF	SM2 chassis	1999						
Amstrad	CTV3321NF	PT92 chassis							
Amstrad	STV20		with sat Rx						
Amstrad	TVR1	Funai							
Amstrad	TVR2	Funai							
Amstrad	TVR3	Funai							
Amstrad	WSTV7328N	11AK19P							
Argaro	1401	Fidelity ZX2000							
Autovox	CTR2282GB	Series 1							
Autovox	CTR2283GB	Series 1							
Autovox	CTR2682GB	Series 1							
Autovox	CTR2683GB	Series 1							
B & O	3000	20AX							
B & O	3140	MX3000							
B & O	3141	MX3000							
B & O	3142	MX3000							
B & O	3143	MX3000							
B & O	3144	MX3000							
B & O	3145	MX3000							
B & O	3146	MX3000							
B & O	3147	MX3000							
B & O	3263	Made 1989							
B & O	3300	20AX							
B & O	3502	20AX							
B & O	3602	20AX							
B & O	3702	20AX							
B & O	3703	LX2800							
B & O	3705	LX2800							
B & O	3707	LX2800							
B & O	3712	LX2800							
B & O	3713	LX2800							
B & O	3714	LX2800							
B & O	3715	LX2800							
B & O	3718	LX2800							
B & O	3720	LX2800							
B & O	3741	LX2500							
B & O	3742	LX2500							
B & O	3743	LX2500							
B & O	3745	LX2500							
B & O	3747	LX2500							
B & O	3752	LX2500							
B & O	3753	LX2500							
B & O	3754	LX2500							
B & O	3755	LX2500							
B & O	3758	LX2500							
B & O	3760	LX2500							
B & O	3800	20AX							
B & O	3802	20AX							
B & O	3900	20AX							
B & O	3923	LX4500							
B & O	4002	20AX							
B & O	4402	20AX							
B & O	5000	39XX							
B & O	5102	77XX							
B & O	6000	39XX							
B & O	6002	20AX							
B & O	7702	7XXX							
B & O	8102	71XX							
B & O	9000	33XX							
B & O	311x	MX2000							
B & O	7433	7702							
B & O	L2500	37XX							
B & O	L2502	38XX							
B & O	L2800	37XX							
B & O	L2802	38XX							
B & O	LX2500	37XX							
B & O	LX2502	38XX							
B & O	LX2800	37XX							
B & O	LX2802	38XX							
B & O	M20	31XX							
B & O	MX1500	78XX							
B & O	MX2000	31XX							
B & O	MX3000	314X							
B & O	MX5500	326X							
Baird	6170	Ferguson TX90							
Baird	6171	Ferguson TX90							
Baird	8233	Ferguson TX10							
Baird	RR5188	Tatung 1790							
Baird	RR5190	Sanyo E4-A21							
Baird	RR5191N	ICC7							
Baird	RR5988	Tatung 180							
Baird	RR5990	Sanyo E4-A25							
Baird	RR5991N	ICC5 IMC							
Baird	RR6890N	Sanyo ED1-2B							
Baird	RR6891	ICC5 IMC							
Beko	10214	10.2 (AT2)							
Beko	11214T	10.2 (AT2)							
Beko	11221T	10.2 (AT2)							
Beko	11225(T)	10.2 (AT2)							
Beko	12220(T) (NX)	10.2 (AT2)							
Beko	14212T (R )	12,1							
Beko	14213T (R )	12,1							
Beko	14242-8TDS	12,8							
Beko	14242T (R )	12,4							
Beko	14272TDS	12,7	PCB marked A99.190-16						
Beko	15225 (T) (NX)	10.2 (AT2)	2003 E70, 2004 E85						PCB marked G70.190-03
Beko	16325(NX)(T)	10.3 (AT3)							
Beko	16228 (T) (NX)	10.2 (AT2)							
Beko	16328(NX)	10.3 (AT3)							
Beko	17125(NX)(T)	11,1							
Beko	17325(T) ( R )	10.3 (AT3)							
Beko	18221 (T) (NX)	10.2 (AT2)							
Beko	19221	10.2 (AT2)							
Beko	19321(NX)(T)	10.3 (AT3)							
Beko	19421(T)	10.4 (AT4)							
Beko	20120NX	11,1							
Beko	20212R (T)	12,1							
Beko	20242-8R	12,8							
Beko	20242T ( R )	12,4							
Beko	20272TDS	12,7							
Beko	20320(NX)(T)	10.3 (AT3)	PCB marked G70.190-03						
Beko	20420(T)	10.4 (AT4)							
Beko	21211T	12,1							
Beko	21241T(RD)	12,4							

Beko	21411(ND)	14.1							
Beko	24242TS	12.5							
Beko	25121(T)	11.1							
Beko	25411ND	14.1							
Beko	25421( R )(T)	10.4 (AT4)							
Beko	26114( R ) ( T )	11.1							
Beko	26414( R )(T)	10.4 (AT4)							
Beko	27120	11.1							
Beko	27420(A)( R )	10.4 (AT4)							
Beko	28128(NX)(T)	11.1							
Beko	28328(NX)(T)	10.3 (AT3)							
Beko	28411(ND)	14.1	PCB 7SZ.190-09						
Beko	28412(VND)	14.1							
Beko	28416(ND)	14.1	PCB marked 7SZ.190-16 or 7SZ.190-19	IC601 MC44608P40, fet 2SK25	LOPTx Ternal 058.834-TR2	(003311167, HR8700),	chopper 059.834-EL1(2354.0029),		
Beko	28421(NDS)	14.2							
Beko	284216(WNS)	14.2							
Beko	28422(NDS)	14.2	PCB marked U99.190						
Beko	284248(WNS)	14.2							
Beko	28426(NDS)(ND)	14.2							
Beko	29121(NX)	11.1							
Beko	29321(NX)	10.3 (AT3)							
Beko	30128(NX)(T)	11.1							
Beko	30128T	11.1							
Beko	30328(NX)(T)	10.3 (AT3)							
Beko	31114	11.1							
Beko	31414	10.4 (AT4)							
Beko	32120( R ) ( T )	11.1							
Beko	32420( R )	10.4 (AT4)							
Beko	32426(NDS)(ND)	14.2							
Beko	34133ND	11.1							
Beko	35228PD	11.2							
Beko	36233PD	11.2	PCB marked 6SZ.190-11						
Beko	38328NX	10.3 (AT3)							
Binatone	*019014*	Boots CTV1414R							
Binatone	*019014*	Dansai CTV1477							
Binatone	*019014*	Matsui 1450, 1455							
Binatone	*019014*	Saisho CTV147R							
Black Diamond	BD14T	11AK20S							
Black Diamond	BD20T	11AK19-8A, 11AK19P4	1999-2000-2001-						
Black Diamond	BD21L	11AK19-8A	1999-						
Black Diamond	BD21S	11AK19-8A	1999-						
Black Diamond	BD21T	11AK19-8A	1999-						
Black Diamond	BD3251WD	11AK33							
Black Diamond	BD32WS	11AK19P4							
Black Diamond	BD3251WS	11AK19P5							
Black Diamond	BDS1451UK	11AK20SE or 11AK36							
Black Diamond	BDS2051T	11AK30-A4							
Black Diamond	BDS2151S	11AK30							
Black Diamond	BDS21S	11AK19-8A	1999-						
Black Diamond	BDS2851WD	11AK19P, 11AK33J2(2001), 11AK33J3(2002), 11AK33J4	2000-2004						
Black Diamond	BDS28WS	11AK19P4	(R629=27R)						
Black Diamond	BD29S	11AK19P							
Black Diamond	BDS29S	11AK19P4							
Black Diamond	BDS3251WS	11AK19P5							
Black Diamond	BDS32S	11AK19Pro							
Black Diamond	BDS32WS	11AK19Pro							
Black Diamond	MD2850PFS	11AK33J3							
Black Diamond	MD3250PFS	11AK33J4	2002-2003						
Blaugpunkt	Milano IL32	FM100							
Boots	CTV10R	Akura CX10							
Boots	CTV10R	Nikkai Baby 10							
Boots	CTV1410	Decca 160							
Boots	CTV1411R	Decca 190							
Boots	CTV1412R	Decca 190							
Boots	CTV1414R	Matsui 1450 / Saisho CT147R							
Boots	TV14	Thorn 1690/1691							
Britannia	B10114S	Fidelity ZX4000							
Britannia	B1014R	Fidelity ZX4000							
Britannia	B14M11	Fidelity C14R06							
Bush	1400	Alba CTV1300	Alba CTV1400						
Bush	1402	Orion 14LR chassis	Alba CTV840, Hinary HIT140RC						
Bush	1407	Orion 14LR chassis	Alba CTV840						
Bush	1427T	Alba CTV841							
Bush	1430	Sanyo EC2-B14							
Bush	1431	Grundig G1000							
Bush	1432	Grundig G1000							
Bush	1433 (10000108)	11AK08 (remote 900) or 11AK20 (remote 930)	depends on the year, AK20 after 1999						
Bush	1433AL-BLUE(10000109)	11AK20M-6	1999-						
Bush	1433 (silver)	11AK20M-6	1999-						
Bush	1433 (white) (10001493)	11AK20M-6	1999-						
Bush	1433(yellow)	11AK20M-6	1999-						
Bush	1433BLU3 (10013255)	11AK36-2(2002), 11AK36A2(2003)	2002-2003						
Bush	1433(GRN) (10000809)	11AK20M-6	1999-						
Bush	1433GRN2	11AK20S							
Bush	1433SIL (10013014)	11AK36A2	2002-2003						
Bush	1433/CORN (10000807)	11AK20M-6	1999-						
Bush	1433/LILIAC (10000808)	11AK20M-6	1999-						
Bush	1433/MINT (10000806)	11AK20M-6	1999-						
Bush	1434	11AK08 or 11AK20M-6	depends on the year, AK20 after 1999						
Bush	1435	11AK08, 11AK36							
Bush	1435GTV (silver)	11AK20M-6	1999-						
Bush	1436	11AK08-13 or 11AK20M-6	11AK20 after 1999						
Bush	1438 (10001492)	11AK20D2, 11AK20SE, 11AK20M-6							
Bush	1438SIL (10061680)	11AK20S	2000						
Bush	1438SIL	11AK36A2							
Bush	1439	PT11							
Bush	1442	11AK20S							
Bush	1444 (10008717)	11AK20SE	2001						
Bush	1452T	Same as Alba CTV841	Kong Wah K-91151T						
Bush	1459T	Onwa							
Bush	1470T	1480TS							
Bush	1471T	Grundig G1000							
Bush	1472T	Grundig G1000							
Bush	1473T	11AK08-12 or 11AK20M-6	depends on the year, AK20 after 1999						
Bush	1473T (blue) (10000812)	11AK20M-6	1999-						
Bush	1473T (silver)(10000130)	11AK20M-6	1999-						
Bush	1473T (green)(10000802)	11AK20M-6	1999-						
Bush	1473T (white)(10000804)	11AK20M-6	1999-						
Bush	1473T (yellow)(10000803)	11AK20M-6	1999-						
Bush	1473T/LILIAC (10001491)	11AK20M-6	1999-						
Bush	1473T/MINT (10001490)	11AK20M-6	1999-						
Bush	1474T	11AK08-14 or 11AK20M-6	depends on the year, AK20 after 1999						
Bush	1476T	11AK08							
Bush	1477T	chassis EC							
Bush	1478T	11AK20M-6							
Bush	1478TSIL	11AK36	2003, £69.99						
Bush	147TT	same as Alba CTV841	also Bush 1452T						
Bush	1480TS	1470T							
Bush	1487TV	11AK20S (with Internet access)							
Bush	1587NTX								
Bush	170KA	-Bush 1773T							
Bush	1773T	Orion CTN chassis (label says PT6T)	LOPTX 40337-53, serv. Mode - short Micro						
Bush	2002	Kong Wah K-91151T	Alba CTV841						
Bush	2002	Onwa							
Bush	2004	Matsui 1436	Alba CTV100						
Bush	2004T	Indiana 100							
Bush	2007	2007 2033T 2167NTX 2169NTX	Alba CTV3458						
Bush	2009		Alba CTV601						
Bush	2009B	Onwa							
Bush	2011	11AK19-8A	1999-						
Bush	2017SIL	11AK30-2(2002), 11AK30A4(2002-2003), 11AK30A5	2002-2004						
Bush	2020	11AK01	Kong Wah K-91151T, Alba CTV841						
Bush	2020	Matsui 1580	Saisho CM159TX						
Bush	2023T	11AK10-11, 11AK19-8A, 11AK19B-1	AK19 after 1999						
Bush	2027T	PT9601 (Goodmans GTV211)							
Bush	2028T	11AK10-17							
Bush	2030T	11AK19-8A							
Bush	2031T	11AK19-8A	1999-						
Bush	2033T	2007 2033T 2167NTX 2169NTX	Alba CTV3458						

Bush	2034T	11AK19 or 11AK30(2002-2003)		11AK30 - 10014182			
Bush	2037TSIL	11AK30A4	2002-2003	10014184			
Bush	2038TSIL	Beko 12.7		PCB marked G70.190-10			
Bush	2052	Kong Wah K-91151T	Alba CTV841	Matsui 2074	Goldstar CIS4441		
Bush	2052T	Onwa					
Bush	2057	Bush 2059	Bush 2157	Bush 2159			
Bush	2059	see Bush 2057					
Bush	2060NTX	NEW ONWA	similar to Alba CTV4886				
Bush	2063NTX	11AK10-8					
Bush	2063NTX/A	11AK10-15		AK10 prod.code: 1000257			
Bush	2067NTX	PT9601 (Goodmans GTV211)					
Bush	2068NTX	11AK10-17					
Bush	2071NTX	11AK19-8A, 11AK19E3(2000), 11AK19P5(2002)	1999-2002	AK19 prod.code: 10000229			
Bush	2077NTXSIL	11AK30-2 (2002), 11AK30A4 (2002-2003), 11AK30	2002-2004				
Bush	2102	Onwa					
Bush	2114	11AK01	Kong Wah K-91151T, Alba CTV841	Matsui 2074	Goldstar CIS4441		
Bush	2131TSIL	11AK19P4, 11AK19P5		AK19 prod.code: 10006073			
Bush	2134TSIL	11AK30	£130				
Bush	2136TSIL	Beko					
Bush	2137TSIL	11AK30	2002-2003, £149.99	prod.code: 10015421			
Bush	2138TSIL	Beko 12.7	2003, £149.99	PCB marked G70.190-6	Micro SDA5535-A062		
Bush	2151(TX)	Indiana 100					
Bush	2152	Kong Wah K-91151T	Alba CTV841	Matsui 2074	Goldstar CIS4441		
Bush	2152T	Onwa					
Bush	2157	see Bush 2057					
Bush	2159	see Bush 2057					
Bush	2160NTX	Grundig G1000					
Bush	2164NTX	11AK19-8A, 11AK19B-1	1999-	AK19 prod.code: 10000364	Micro SDA5255-A059(11AK19-xx), SDA5255-A073(11AK19-8A), SDA5255-A045(11AK		
Bush	2167NTX	2007 2033T 2167NTX 2169NTX	Alba CTV3458				
Bush	2168NTX	2007 2033T 2167NTX 2169NTX	Alba CTV3458				
Bush	2171NTX	11AK19-8A	1999-	AK19 prod.code: 10000363			
Bush	2171NTXSIL	11AK19P5		AK19 prod.code: 10006101			
Bush	2177NTXSIL	11AK30-2(2002), 11AK30A4(2002-2003), 11AK30	2002-2004				
Bush	2214	Osume CTV1474R	Alba CTV841				
Bush	2321	11AK01	Kong Wah K-91151T, Alba CTV841	Matsui 2074	Goldstar CIS4441		
Bush	2420 (2420 Mk I)	chassis C600					
Bush	2514T	Indiana 100					
Bush	2515T	Indiana 100					
Bush	2520TX	Indiana 100					
Bush	2521TX	Indiana 100		Turkish			
Bush	2534TSIL	11AK19P5		Turkish			
Bush	2541(TX)	Indiana 100		prod.code: 10014200			
Bush	2550NTX	Schneider TV4	Serv. Mode: see Bush 2850NTX				
Bush	2550NTX/A	Schneider TV8					
Bush	2568NTX	11AK19-08					
Bush	2571NTX	11AK19-8A, 11AK19E3	1998-2000	AK19 prod.code: 10001134, 100006102			
Bush	2574NTXSIL	11AK19P4, 11AK19P5	2001-2002	AK19 prod.code: 10009365			
Bush	2714	11AK03					
Bush	2720	11AK03					
Bush	2721	11AK03					
Bush	2768NTSIL	SM2					
Bush	2814T	11AK03					
Bush	2820T	11AK03					
Bush	2821T	11AK03					
Bush	2850NTX	Schneider TV4	Serv. mode: press RED and BLUE on R/C together then within 5 sec press P- and V+ together on TV. If you do not have original remote, use any Philips RC5 remote				
Bush	2850NTX/A	Schneider TV8					
Bush	2855WD	Schneider TV4					
Bush	2857NTX	Harwood HTV9425RTN	Amstrad CTV280				
Bush	2863NTX	11AK12					
Bush	2863NTX/A	11AK19-8A					
Bush	2868NTX	SM1 Stereo					
Bush	2868NTXSMS2	SM2					
Bush	2867NTX	11AK12 or 11AK19					
Bush	2868NTX	11AK19-5, 11AK19-8A	1999-	AK19 prod.code: 10000518			
Bush	2870VPL	11AK19-8A					
Bush	2871NTX	11AK19-8A, 11AK19E3 (from March2000), 11AK19P5 (from Apr2002)		AK19 prod.code: 10000517, 10006103			
Bush	2872NTX	11AK19E3					
Bush	2874NTX	11AK19E3					
Bush	2874NTXSIL	11AK37-6	2002				
Bush	2876NTX	PT92	2001				
Bush	2877NTXSIL	11AK19P4, 11AK19P5 or 11AK37-8	2001-2002(11AK19), 2003(11AK37)	AK19 prod.code: 10009515			
Bush	2879	C43 (Alba CTV-743)					
Bush	28ZKA	4400 chassis					
Bush	28ZKF	4400 chassis					
Bush	2914	C43 (Alba CTV-743)					
Bush	2920T	Alba CTV703 CTV704T CTV713	Hinari HIT51T				
Bush	2921	Alba CTV703 CTV704T CTV713	Hinari HIT51T				
Bush	2921T	Alba CTV703 CTV704T CTV713	Hinari HIT51T				
Bush	3114	Orion 14EBS	Saisho CT149X	(TVS 89-90 P231)			
Bush	3114A/AS	Orion 14LR chassis	Matsui 1466, Hinary HIT140RC				
Bush	3114AT		Osaki 3114AT				
Bush	3370VPL	11AK19					
Bush	3463NTX	4400 chassis	around £700-£800				
Bush	3472NTX (34BKD)	4400 chassis					
Bush	6690D	11AK19B1 +digi/box		AK19 prod.code: 10003064			
Bush	6693D	11AK33J4 +digi/box	2003 £349, 2004 £299	10019795			
Bush	7690D	11AK19B1 +digi/box					
Bush	7693D	11AK33J4 +digi/box	2003, 2004 £399	10019794			
Bush	AC6465	Rank T23A					
Bush	BC6004	Murphy MC6124	Murphy 6425				
Bush	BC6268	T22A	BC6238	BC6468			
Bush	BC7100	Saba chassis					
Bush	BC7200	T24E	Murphy MC7240				
Bush	BC7300	T26A					
Bush	BT14	chassis TV14	Bush BTV140T				
Bush	BTV10	Orion chassis (Alba VTV10)					
Bush	BTV140T		Bush BTV14				
Bush	BTV16	similar to BTV20	Serv.mode: MENU-MUTE-PAUSE-MUTE				
Bush	BTV17	Orion chassis, deck OVD-6, same as Goodmans	PCB marked TM9423A, video VM9162A	Micro OEC0078A, option codes	PSU IC STRF6707		
Bush	BTV17/OVD7	Orion chassis, deck OVD-7			PSU IC STRG6653		
Bush	BTV17SIL/OVD7	Orion chassis, deck OVD-7					
Bush	BTV170TBLK	Orion chassis	PCB marked VMA230A				
Bush	BTV17A	similar to BTV17	PCB marked TM9423A		PSU IC STRF6707		
Bush	BTV180TSI		PCB marked VMX193G	Micro OEC0093	PSU IC STRF6707		
Bush	BTV183DVD	TV/VCR/DVD	2004 £99				
Bush	BTV18SIL	Orion chassis, deck OVD-7, 2003 £99	2003, £249, 2004 £199				
Bush	BTV18SIL/A	Orion chassis, deck OVD-7	PSU PCB VPA150A				
Bush	BTV20	similar to BTV16	PCB marked VMB290A	Micro OEC0133A			
Bush	BTV213DVD	TV/VCR/DVD	Serv.mode: MENU-MUTE-PAUSE-MUTE				
Bush	CTV1400	Harwood HTV3604R	2003, £329				
Bush	DVD142RC	11AK46-1 +DVD	Serv.mode: INSTALL-4-7-2-5	remote			
Bush	DVD142TV	11AK46-1, 11AK46-5 +DVD	2003, £170	remote			
Bush	DVD143TVFNT1	PT90 +DVD		remote	631020001381		
Bush	DVD144RC						
Bush	DVD145TV		2004, £99				
Bush	DVD660TV	PT90 +DVD	2003, £140				
Bush	DVD660TVSIL/A	PT92 +DVD		remote	631020001381		
Bush	IBX260	INTERNET Box double scart					
Bush	ITV2100	Beko 14.1					
Bush	ITV2112	Beko 12.4 with Internet access					
Bush	ITV2800	Beko 14.1 with Internet	Micro SDA555x (SB7640-03/TXT), video N	serv.mode: MENU then 7.5.9.2			
Bush	ITV6600	Beko 14.1	PCB 7SZ.190.14, remote KWR2020	Micro SAA5563PS/M3, jungle TDA8843, sound MSP3410D			
Bush	ITV8401	11AK20S with Internet access	PCB 7SZ.190-17				
Bush	M1400	Fidelity ZX3000 Mk2					
Bush	M1500	Fidelity ZX3000 Mk2					
Bush	M20T01	Fidelity ZX4000					
Bush	M22T01	Fidelity ZX4000					
Bush	RF6682VPL	Beko 14.1 or 14.2	2001(14.1); 2002(14.2)	14.1 - PCB marked 7SZ.190-18; 14.2 - PCB marked S99.190-04, S99.190-07			
Bush	RF7682VPL	Beko 14.1 or 14.2	14.2 - PCB marked S99.190-07				
Bush	WS5673SIL (10016197)	11AK37-10, 11AK37-11		AK37 prod.code: 10016197			
Bush	WS5676SIL	11AK37					
Bush	WS5680		2004, £180				
Bush	WS6667 (28ZKA)	4400 chassis					
Bush	WS6668SIL (28ZKV)	4400 chassis	PCB marked B-4411				
Bush	WS6671 (10004932)	11AK19P4, 11AK19P5	in 11AK19P4 Micro is 19V1.OFT-A14	AK19 prod.code: 10004932			
Bush	WS6671SIL (10006104)	11AK19P4, 11AK19P5		AK19 prod.code: 10006104			
Bush	WS6671SIL (10014467)	11AK37-8		AK37 prod.code: 10014467			
Bush	WS6672	PT92					
Bush	WS6673	11AK19P5					

Bush	WS6673 (10014458)	11AK37-8	2002-	AK37 prod.code: 10014458					
Bush	WS6673SIL (10008659)	11AK19P4, 11AK19P5	2001-2002	AK19 prod.code: 10008659					
Bush	WS6673SIL (10014469)	11AK37-8	2002-	AK37 prod.code: 10014469					
Bush	WS6674	PT92	2002/2003, £199						
Bush	WS6677	11AK19							
Bush	WS6680SIL	Beko 14.2 chassis	2003, £250	PCB U99.190-07					
Bush	WS7667	4400 chassis							
Bush	WS7671	11AK19B1, 11AK19P4							
Bush	WS7673	11AK19P5 or 11AK37-6 (after 2002)	in 11AK19 Micro 19V1.OFT-A14						
Bush	WS7673SIL (10008660)	11AK19P4, 11AK19P5	2001-2002	AK19 prod.code: 10008660					
Bush	WS7673SIL (10014465)	11AK37-6		AK37 prod.code: 10014465					
Bush	WS7674SIL	PT92							
Bush	WS7680SIL	Beko 14.2 chassis							
Bush	WS766 (26ZKF)	4400 chassis	PCB marked B-4410	Options: Op1-A8, Op2-F8, Op3-1B					
Cathay	CT3520	Indiana 100	NEI						
Cathay	CTV1481R	Indiana 100	NEI						
Cathay	CTV2004T	Indiana 100	NEI						
Cathay	ST4000	Indiana 100	NEI						
Co-op	6348	Rank T20							
Crown	CF952BNFT	F11							
Crown	CF961417/W	F10/F12/F14							
Crown	CR10	Baby 10							
Crown	CR1406FT	Akura CX26							
Crown	CR20NT	Akura CX26							
Crown	CR2894R	Akura CX26							
Crown	CRP14(T)	SM1 Mono	also see Matsui 1496, 2096 etc						
Crown	CRP2196NT	SM1 Mono							
Crown	CRP21NT (T/TS)	SM1 Mono							
Crown	CRP26NT	SM1 Stereo							
Crown	CRT9655RTN	11AK10							
Crown	CRV37	11AK08							
Crown	CRV47	11AK08-13							
Crown	CRV72NT	11AK12							
Crown	CTF139TSL		2003, £100	Serv.mode: remove R/C top cover and press hidden button on the left hand side, then press OK. Use P+/- to navigate. V					
Crown	CTF1401R	G1000							
Crown	CTF1402T	G1000							
Crown	CTF14R	Amstrad CTV1400 (new)							
Crown	CTF2001R	G1000							
Crown	CTF2005NFT	G1000							
Crown	CTF2805NFT	E2000							
Crown	CTF28NFT		similar CTF29NF						
Crown	CTF29NF		similar CTF28NFT						
Daewoo	14C3	CP005 or CP185							
Daewoo	14C4	CP005 or CP185							
Daewoo	14C5	CP005							
Daewoo	14H3	CP082							
Daewoo	14Q1 14Q2 14Q3	CP370 (1-speaker)	VM -without TEXT, TM-with TEXT						
Daewoo	14T1 14T2 14T3	CP370 (2-speakers)	VM -without TEXT, TM-with TEXT						
Daewoo	14U1	CP005							
Daewoo	14V1	CP005							
Daewoo	14V2	CP005							
Daewoo	14V3	CP005 or CP185							
Daewoo	14V5	CP005							
Daewoo	20A1	CP330							
Daewoo	20C4	CP005							
Daewoo	20C5	CP005							
Daewoo	20H4	CP092							
Daewoo	20Q1 20Q2 20Q3	CP370 (1-speaker)	VM -without TEXT, TM-with TEXT						
Daewoo	20T1 20T2 20T3	CP370 (2-speakers)	VM -without TEXT, TM-with TEXT						
Daewoo	20U1	CP005							
Daewoo	20V1	CP005							
Daewoo	20V3	CP005 or CP185							
Daewoo	20V4	CP005							
Daewoo	20V5	CP005							
Daewoo	21C6	CP005							
Daewoo	21Q1 21Q2	CP370 (1-speaker)	VM -without TEXT, TM-with TEXT						
Daewoo	21T1 21T2	CP370 (2-speakers)	VM -without TEXT, TM-with TEXT						
Daewoo	21U1	CP005							
Daewoo	21U3	CP005							
Daewoo	21V1	CP005							
Daewoo	21V2	CP005							
Daewoo	21V3	CP005 or CP185							
Daewoo	21V4	CP005							
Daewoo	21V6	CP005							
Daewoo	25G7	CP785	PSU I801 STRF6653						
Daewoo	2880Z	CP820	2003						
Daewoo	2881Z	CP820F	2003						
Daewoo	28A6Z	CP820	2003						
Daewoo	28A7	CP785	PSU I801 STRF6653						
Daewoo	28A7Z	CP820	2003						
Daewoo	28B1	CP785(50Hz) or CP810(100Hz)							
Daewoo	28B1Z	CP820	2003						
Daewoo	28B2Z	CP820	2003						
Daewoo	28G6Z	CP820	2003						
Daewoo	28G7	CP785	PSU I801 STRF6653						
Daewoo	28G7Z	CP820	2003						
Daewoo	28G8Z	CP820	2003						
Daewoo	28W5Z	CP820	2003						
Daewoo	28W8Z	CP820F	2003						
Daewoo	29U7Z	CP820F	2003						
Daewoo	29U8	CP885F							
Daewoo	29U8Z	CP820F	2003						
Daewoo	DDT14H9S	CP099F (TV/DVD Combi)	2002	remote R-52B02					
Daewoo	DDT21H9S	CP099F (TV/DVD Combi)	2002	remote R-52B02					
Daewoo	DMQ1454	C901	DMQ2154	Thorn P1480R					
Daewoo	DMQ1457	CP315							
Daewoo	DMQ1494	CP315							
Daewoo	DMQ2057	CP315							
Daewoo	DMQ2072	CP320							
Daewoo	DMQ2154	C901	DMQ1454	Thorn P1480R					
Daewoo	DMQ2159	CP315							
Daewoo	DP32SM/SP	SP115 (plasma)	2002	R-V28A(E)					
Daewoo	DP42GM/GP	SP115 (plasma)	2002	R-V28A(E)					
Daewoo	DP42SM/SP	SP115 (plasma)	2002	R-V28A(E)					
Daewoo	DP42WM/WP	SP115 (plasma)	2002	R-V28A(E)					
Daewoo	DSC3210E	SC140	2002, Multisystem B/G, D/K, I	R-46G22					
Daewoo	DSC3220E	SC150	2002/2003, Multisystem B/G, D/K, I	Remote R-46G22					
Daewoo	DSC3220L	SC150	2002/2003, Multisystem B/G, D/K, I	Remote R-46G22					
Daewoo	DSC3261H	SC132	2002, Multisystem B/G, D/K, I	RV-22N					=NEC PF32W01
Daewoo	DSC3270EGB	SC130	2001, Multisystem B/G, D/K, I	RV-22D					
Daewoo	DSJ6000LHM	SJ210H (LCD Projection HDTV monitor)	2003						
Daewoo	DSJ6000LN	SJ210H (LCD Projection HDTV monitor)	2002						
Daewoo	DSP4210GM	SP110 (plasma)	2001						
Daewoo	DTA2011	CP385	PSU I801 STRF6653						
Daewoo	DTA2012	CP385	PSU I801 STRF6653						
Daewoo	DTA2013	CP385	PSU I801 STRF6653						
Daewoo	DTA2018	CP385	PSU I801 STRF6653						
Daewoo	DTA2111	CP385	PSU I801 STRF6653						
Daewoo	DTA2115	CP385	PSU I801 STRF6653						
Daewoo	DTA2119	CP385	PSU I801 STRF6653						
Daewoo	DTA21Y1	CP385	PSU I801 STRF6653						
Daewoo	DTB21U6	CP185F	2002, Multisystem B/G, D/K, I	R-40A10 (nontext), R-40A01(text AAA battery), R-44C05 (text AA battery)					
Daewoo	DTC14T6	CP390	1998, Multi-standard I, B/G, D/K						
Daewoo	DTC14U1	CP002	2000						
Daewoo	DTC14V1	CP002	2000						
Daewoo	DTC14V3	CP002	2000						
Daewoo	DTC14V4	CP002	2000						
Daewoo	DTC14V5	CP002	2000						
Daewoo	DTC20T6	CP390	1998, Multi-standard I, B/G, D/K						
Daewoo	DTC20V1	CP002	2000						
Daewoo	DTC20V3	CP002	2000						
Daewoo	DTC20V4	CP002	2000						
Daewoo	DTC20V5	CP002	2000						
Daewoo	DTC21T7	CP390	1998, Multi-standard I, B/G, D/K						
Daewoo	DTC21U1	CP002	2000						
Daewoo	DTC21U3	CP002	2000						
Daewoo	DTC21V1	CP002	2000						
Daewoo	DTC21V3	CP002	2000						

Daewoo	DTC21V4	CP002	2000				
Daewoo	DTE25G6	CP785	PSU I801 STRF6653				
Daewoo	DTE25G7	CP785	PSU I801 STRF6653				
Daewoo	DTE2896	CP785	PSU I801 STRF6653				
Daewoo	DTE2898	CP785	PSU I801 STRF6653				
Daewoo	DTE28A6	CP785	PSU I801 STRF6653				
Daewoo	DTE28A7GB	CP785	PSU I801 STRF6653				
Daewoo	DTE28B1	CP785	PSU I801 STRF6653				
Daewoo	DTE28G2	CP785	PSU I801 STRF6653				
Daewoo	DTE28G6	CP785	PSU I801 STRF6653				
Daewoo	DTE28G7GB	CP785	PSU I801 STRF6653				
Daewoo	DTE28G8	CP785	PSU I801 STRF6653				
Daewoo	DTE29G3KZR	CP795	PSU I801 STRF6653				
Daewoo	DTE29G3ZZR	CP795	PSU I801 STRF6653				
Daewoo	DTJ28A6F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28A7F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28B1F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28G6F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28G7F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28G8F	CP810	PSU I801 STRF6654				
Daewoo	DTL25G6F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL25G7F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28G2F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28G6F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28G7F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28G8F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28J8F	CP810F	2000				
Daewoo	DTP14C3	CP005	2000				
Daewoo	DTP14C4	CP005	2000				
Daewoo	DTP14C5	CP005	2000				
Daewoo	DTP14V1	CP005	2000				
Daewoo	DTP14V2	CP005	2000				
Daewoo	DTP14V3	CP005	2000				
Daewoo	DTP14V5	CP005	2000				
Daewoo	DTP20C4	CP005	2000				
Daewoo	DTP20C5	CP005	2000				
Daewoo	DTP20V1	CP005	2000				
Daewoo	DTP20V3	CP005	2000				
Daewoo	DTP21C6	CP005	2000				
Daewoo	DTP21V1	CP005	2000				
Daewoo	DTP21V2	CP005	2000				
Daewoo	DTP21V4	CP005	2000				
Daewoo	DTP21V6	CP005	2000				
Daewoo	DTP28G8GBS	CP885					
Daewoo	DTR14D3	CP490	VG-noTEXT, TM-TEXT, Multistandard I, B/G, D/K				
Daewoo	DTR16D3	CP490	VG-noTEXT, TM-TEXT, Multistandard I, B/G, D/K				
Daewoo	DTR20D3	CP490	VG-noTEXT, TM-TEXT, Multistandard I, B/G, D/K				
Daewoo	DTR21D3	CP490	VG-noTEXT, TM-TEXT, Multistandard I, B/G, D/K				
Daewoo	DTU14D3	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU14D4	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU16D3	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU20D3	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU20D4	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU21D3	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU21D4	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTV2810	WP811N	2000				
Daewoo	DTV28W2GB	WP811N	2000				
Daewoo	DVT1482P	CP310	Ferguson FG14CB12V		Goodmans TVC1400 TVC14VP		
Daewoo	DVT1484D	CP310	Ferguson FG14CB12V		Goodmans TVC1400 TVC14VP		
Daewoo	DVT1485P	CP310					
Daewoo	DVT14F4P	CP350 Combi					
Daewoo	DVT14F6	CP420, K-Mecha Deck					
Daewoo	DVT14F8	CP420, K-Mecha Deck					
Daewoo	DVT14H1P(TP)	CP062	2000				
Daewoo	DVT14H2P(TP)	CP062	2000				
Daewoo	DVT2082P	CP310					
Daewoo	DVT2083P	CP310					
Daewoo	DVT2084P(D)	CP310	Ferguson FG20CB12V				
Daewoo	DVT2085P	CP310					
Daewoo	DVT20F4	CP350 Combi					
Daewoo	DVT20F6	CP420, K-Mecha Deck					
Daewoo	DVT20F8	CP420, K-Mecha Deck					
Daewoo	DVT20H1P(TP)	CP062	2000				
Daewoo	DVT20H2P(TP)	CP062	2000				
Daewoo	DVT2182LA	CP350 Combi					
Daewoo	DVT21F1	CP420, K-Mecha Deck	1999				
Daewoo	DVT21F2	CP420, K-Mecha Deck	1999				
Daewoo	DVT21F4LA	CP350 Combi					
Daewoo	DWF28W8GB	WP895F(50Hz) (CP885)					
Daewoo	DWL28W8-100D	WP811F (100Hz)	2002				
Daewoo	DWP28W2GB	WP795	2000		R-40A13		
Daewoo	DWX2880GB	CP885	2002				
Daewoo	DWX28W5GB	CP885	2002				
Daewoo	GB14A5T	CP375					
Daewoo	GB14C3BL	CP185	2000				
Daewoo	GB14C4NTS	CP185	2000				
Daewoo	GB14F7T1	CP420, K-Mecha Deck	Panasonic TX14GV1 combi				
Daewoo	GB14F8T1	CP420, K-Mecha Deck					
Daewoo	GB14F8T2	CP420, K-Mecha Deck					
Daewoo	GB14H1T	CP062					
Daewoo	GB14H2(NBL)	CP062					
Daewoo	GB14H3T2(T1)	CP082	2001				
Daewoo	GB14H4T2(T1)	CP082	2001				
Daewoo	GB20A5	CP375					
Daewoo	GB20C4ANT	CP185	2000				
Daewoo	GB20C4T	CP005					
Daewoo	GB20C5NT	CP185	2000				
Daewoo	GB20F7T2	CP420, K-Mecha Deck					
Daewoo	GB20F8T2	CP420, K-Mecha Deck					
Daewoo	GB20H1T	CP062					
Daewoo	GB20H2T	CP062					
Daewoo	GB20H3T2(T1)	CP082	2001				
Daewoo	GB20H4T2(T1)	CP082	2001				
Daewoo	GB20T8ST	CP380					
Daewoo	GB21A5T	CP375					
Daewoo	GB21C6NT	CP185	2000				
Daewoo	GB21F1T2	CP420, K-Mecha Deck					
Daewoo	GB21H4T2(T1)	CP082	2001				
Daewoo	GB21T5ST	CP375					
Daewoo	GB2896ST	CP775	Goodmans 255NS / 285NS				
Daewoo	GB2898ST	CP775					
Daewoo	GB28G2ST	CP775					
Daewoo	GB51F4TXT	CP350 Combi					
Daewoo	GB582TXT	CP350 Combi					
Daewoo	T140	CP330					
Daewoo	T142	CP330					
Daewoo	T200	CP330					
Daewoo	T202	CP330	Thom CT512T				
Daewoo	T512	CP330					
Daewoo	T514	CP365					
Daewoo	T564	CP760	Thom CT514TN				
Dansai	CTV1410	Orion chassis with STR5412 in PSU	PCB marked MCS M3 94V-0		LOPTx 101-214017, lcs STR5412, KA2914A, MN15245KWC, KA2154		
Dansai	CTV1477	Binatone 019014	Boots CTV1414R		Matsui 1450	Saisho CT147R	
Dansai	CTV1481R/T	Indiana 100					
Dansai	CTV2004T	Indiana 100					
Dansai	TA11401	Decca 141	Solarvox		Nikkai TLG99		
Dansai	TAT1051	Indiana 100					
Decca	! Model No's	1st digit: 9 = txt: 8 = non txt	2nd digit = chassis i.e. 9 = 190		e.g. DN8951 = 190 non txt		
Decca	! Model No's	newer models go by letter	e.g. VU2CEO = C series				
Decca	also see Tatung						
Decca	CT1273	120 Chassis					
Decca	CT9273	120 Chassis					
Decca	CV1371	130 Chassis					
Decca	CV1810	110 Chassis					
Decca	CZ8151	110 Chassis					
Decca	CZ8152	110 Chassis					
Decca	D28NEE5	Tatung E1					
Decca	D28W440	4400 chassis					
Decca	DN1251	120/125 Chassis					











Ferguson	A36R	TX80			
Ferguson	A51EAL	TX100			
Ferguson	A51F	ICC2			
Ferguson	A51N	ICC7			
Ferguson	A59EAK	TX100			
Ferguson	A59EAS	TX100			
Ferguson	A59F	ICC7			
Ferguson	A59N	ICC7/8			
Ferguson	A68N	ICC7			
Ferguson	AXF51	TX100			
Ferguson	B14C	TX90E			
Ferguson	B14R	TX90E			
Ferguson	B39F	TX90E			
Ferguson	B49F	TX90E			
Ferguson	B51F	ICC7			
Ferguson	B51NX	ICC8			
Ferguson	B59F	ICC7			
Ferguson	B59N	ICC8			
Ferguson	B59NX	ICC8			
Ferguson	B68N	ICC8			
Ferguson	B68NX	ICC8			
Ferguson	B78NTX	ICC5			
Ferguson	C14C	TX90E			
Ferguson	C15012R	Samsung P88 chassis			
Ferguson	C2152	TX100			
Ferguson	C2153	TX100			
Ferguson	C3615UT	Eurocombo2			
Ferguson	C39F	TX90E			
Ferguson	C49F	TX90E			
Ferguson	C51F	ICC8			
Ferguson	C51N	ICC8			
Ferguson	C51ND	ICC7			
Ferguson	C51NX	ICC8			
Ferguson	C59NX	ICC8			
Ferguson	C68F	ICC7			
Ferguson	C68NX	ICC8			
Ferguson	D14R	TX805			
Ferguson	D51N	ICC9			
Ferguson	D51ND	ICC9	NICAM		
Ferguson	D51NDD	ICC9			
Ferguson	D59F	ICC9	Mono sound		
Ferguson	D59N	ICC9	NICAM		
Ferguson	D68N	ICC9	NICAM		
Ferguson	D78N	ICC9	NICAM		
Ferguson	DSF68NX	IDC2			
Ferguson	F16/17	ICC7?			
Ferguson	FG14CB12V	CP-310 (Daewoo)	Goodmans TVC1400 TVC14VP	Daewoo DVT1484D	
Ferguson	FG20CB12V	CP-310 (Daewoo)	Goodmans TVC1400 TVC14VP	Daewoo DVT1484D	
Ferguson	FTV28WN1	11AK37	2004 E250		
Ferguson	M3610U	TX807			
Ferguson	M3615UT	TX807			
Ferguson	M3673GC(T)	TX91G			
Ferguson	M51131RH	TX807C			
Ferguson	M5115UT	TX807			
Ferguson	M5515UT	TX807			
Ferguson	M5518U	ICC17			
Ferguson	M5519U	TX91G			
Ferguson	M5520U	TX91G			
Ferguson	M5573GF	TX91G			
Ferguson	M6322U	ICC17			
Ferguson	M6373GH	TX92F			
Ferguson	M7017U	TX807CS			
Ferguson	M7022U	ICC17			
Ferguson	M7073GH	TX92F			
Ferguson	M8122U	ICC17			
Ferguson	M8123U	ICC17			
Ferguson	M8421U	ICC17			
Ferguson	M8422U	ICC17			
Ferguson	MC01	TX90	Receiver/Monitor		
Ferguson	MC05	TX90	Receiver/Monitor		
Ferguson	MC09	TX85			
Ferguson	MC09	TX90			
Ferguson	RR5191N	ICC7			
Ferguson	S59N	ICC9	NICAM+		
Ferguson	S68N	ICC9	NICAM+		
Ferguson	S7971	TX100			
Ferguson	S7981	TX100			
Ferguson	T10R	TX90	Mains/Batt portable 10"		
Ferguson	T14R	TX805			
Ferguson	T14T	TX91			
Ferguson	T25DPL	ICC9			
Ferguson	T28DPL	ICC9			
Ferguson	T49F	TX91			
Ferguson	T5173GF	TX91G			
Ferguson	T51F	TX91			
Ferguson	T59F	TX92	Thompson Digital Chassis		
Ferguson	T59FB	TX92F			
Ferguson	T59NB	TX92F			
Ferguson	T59NB	TX92F			
Ferguson	T68N	TX92			
Ferguson	T7021U	ICC17			
Ferguson	T7025UD	ICC17			
Ferguson	T78DPL	ICC9			
Ferguson	T78N	TX92			
Ferguson	T94N	ICC9			
Ferguson	TB6013C	TX10			
Ferguson	TB6023	TX9			
Ferguson	TB6213	TX9			
Ferguson	U2001	TX100			
Ferguson	U2201	TX100			
Ferguson	V51NB	TX91G			
Ferguson	W70201S	ICC17			
Ferguson	W7022U	ICC17			
Ferguson	W7023U	ICC17			
Ferguson	WF70401G	ICC20	(Telefunken chassis 446X)		
Ferguson	X51FB	TX91G			
Fidelity	1482	ZX2000			
Fidelity	AVS1600	ZX3000			
Fidelity	AVS2000	ZX3000			
Fidelity	C14M06/R06	ZX1415	Brittania B14M11		
Fidelity	C14M07	Solarvox 140 chassis	Nikkai TLG88		
Fidelity	C14M08	Solarvox 141 chassis	Nikkai TLG99		
Fidelity	C14R08	ZX4000			
Fidelity	C14T01	ZX5000			
Fidelity	C20R03	ZX4222			
Fidelity	C20T03	ZX4223			
Fidelity	C20T04	ZX5000 (Digital)	Saisho/Matsui CM260T		
Fidelity	CS1T01	ZX5000			
Fidelity	CM14	ZX3000			
Fidelity	CTM14	ZX3000 Mk2			
Fidelity	CTM1400	ZX3000 Mk2			
Fidelity	CTM2000	ZX3000			
Fidelity	CTM2001	ZX3000			
Fidelity	CTM2002	ZX3000			
Fidelity	CTM2003R/T	ZX3000			
Fidelity	CTM2003TX	ZX4200			
Fidelity	CTM200TX	ZX4200			
Fidelity	CTV14	ZX2000			
Fidelity	CTV14 Mk2	ZX3000	Triumph CTV8209		
Fidelity	CTV140	ZX2000			
Fidelity	CTV1404	ZX1411	Murphy M14R01		
Fidelity	CTV1404R	ZX4000			
Fidelity	CTV1404S	ZX4000			
Fidelity	CTV1405	ZX3000			
Fidelity	CTV1405S	ZX4000			
Fidelity	CTV140R	ZX4010			
Fidelity	CTV14R	ZX2000			
Fidelity	CTV14S	ZX2000/3000			
Fidelity	CTV20	ZX4120			

Fidelity	CTV2001	ZX3000							
Fidelity	CTV2020	ZX3000							
Fidelity	CTV2022	ZX3000 Mk2							
Fidelity	CTV2024	ZX3000/2000							
Fidelity	CTV2026	ZX3000							
Fidelity	CTV20R	ZX3000/2000							
Fidelity	CTV20T	ZX3000							
Fidelity	CTV2201	ZX3000							
Fidelity	CTV2201S	ZX4230							
Fidelity	CTV2201T	ZX4231							
Fidelity	CTV2210	ZX3000							
Fidelity	CTV2224	ZX3000							
Fidelity	CTV2226	ZX3000							
Fidelity	CTV22R	ZX3000							
Fidelity	CTV22T	ZX3000							
Fidelity	WSTV7028NF	11AK19-8A							
Fidelity	WSTV7028NF	11AK19-8A							
Finlandia	A. Model numbers:-	E.G. C59CZ7 C=colour; 59=crt size;	C=year of manuf.; Z=Finlandia	7= version (higher the vers.	the more features)				
Finlandia	AZ			Salora J	Ipsalo 2				
Finlandia	BZ			Salora J	Ipsalo 2				
Finlandia	CZ			Salora K	Ipsalo 3				
Finlandia	DZ	Salora 16L37/20L30 etc		Salora L	Ipsalo 3				
Finlandia	EZ	Tashiko 51E941/942	Hitachi CPT2658	Salora K	Ipsalo 3				
Finlandia	FZ		Nokia	Salora M	Digital				
Finlandia	GZ		Hitachi CS2852TA	Salora M	Digital				
Finlandia	HZ		Nokia	Salora M	Digital				
Finlandia	JZ			Salora N					
Finlandia	NZ								
Finlandia	PZ								
Finlandia	SZ	Salora 1F3		Salora F					
Finlandia	TZ			Salora F					
Finlandia	VZ			Salora F					
Finlandia	XZ	Salora 1G3/1G5		Salora G/H	Ipsalo 1/2				
Finlandia	YZ			Salora J	Ipsalo 2				
Finlandia		Salora 1H4		Salora H	Ipsalo 2				
Finlandia		Salora 21/25/28M87	Hitachi CPT6608	Salora M	Digital				
Finlandia		Salora 22J40	Hitachi CPT2050/2250	Salora J	Ipsalo 2				
Finlandia		Salora 22K30 etc	Hitachi CPT2188/2568 etc	Salora K	Ipsalo 3				
Finlandia		Salora 24K7H / 22K37	Hitachi CPT2488	Salora K	Ipsalo 3				
Finlandia			Hitachi CPT2625	Salora J	Ipsalo 2				
Finlandia			Hitachi CPT2060/2260/2660	Salora J	Ipsalo 2				
Finlandia			Hitachi C15-P108	Salora L	Ipsalo 3				
Finlandia			Hitachi C17-P118	Salora L	Ipsalo 3				
Finlandia			Hitachi CPT1556	Salora L	Ipsalo 3				
Finlandia			Hitachi CPT2656	Salora K	Ipsalo 3				
Finlandia			Hitachi C28-P759						
Finlandia			Hitachi CPT2888	Salora K	Ipsalo 3				
Finlux	1013	160							
Finlux	1014	145							
Finlux	1014M	145 chassis Tatung							
Finlux	1015	165							
Finlux	1016	160							
Finlux	10B28	3000							
Finlux	10B35	3000							
Finlux	1101	165							
Finlux	1111	1000 Mono							
Finlux	1119	1000 Mono							
Finlux	1122	1000 Mono							
Finlux	1131	1000 Mono							
Finlux	1141	1000 Mono							
Finlux	1406	1000 Stereo							
Finlux	1412	1000 Stereo							
Finlux	1418	1000 Stereo							
Finlux	1422	1000 Stereo							
Finlux	14A1TX	Mono Plus 2 (MP2)							
Finlux	1622	3000							
Finlux	1632	1000 Stereo							
Finlux	1642	1000 Mono							
Finlux	2015	170							
Finlux	21A17	5000							
Finlux	21E17.	5000							
Finlux	21F12	5000							
Finlux	21S20	5100							
Finlux	21S22	5100							
Finlux	21S34	5000							
Finlux	21S38	5000							
Finlux	2472	2000							
Finlux	2482	2000							
Finlux	25C28	5000							
Finlux	25F14	5000							
Finlux	25K10	5000							
Finlux	25K30	5000							
Finlux	25S22	5100							
Finlux	25S24	5000							
Finlux	25S34	5000							
Finlux	25S38	5000							
Finlux	25S52	5000							
Finlux	26S3	2000 Stereo							
Finlux	26E12.	5000							
Finlux	26E17.	5000							
Finlux	2872	2000							
Finlux	2882	2000							
Finlux	28C26	5100							
Finlux	28E17.	5000							
Finlux	28F12	5000							
Finlux	28K10	5000							
Finlux	28K30	5000							
Finlux	28S22	5100							
Finlux	28S24	5000							
Finlux	28S34	5000							
Finlux	28S38	5000							
Finlux	28W25	Eurodigi							
Finlux	3021F	3000							
Finlux	3024F	3000							
Finlux	3024F	3000							
Finlux	3028F	3000							
Finlux	3029	3000							
Finlux	3029V	3000							
Finlux	3029V	3000							
Finlux	32A21	3800							
Finlux	32W25	Eurodigi							
Finlux	32W35	Eurodigi							
Finlux	34A21	3600							
Finlux	34F12	3600							
Finlux	3621	3600							
Finlux	3624	3600							
Finlux	3628	3600							
Finlux	3720	CBT-9508							
Finlux	3815	C-8500							
Finlux	3821	8500							
Finlux	5021	C-8500							
Finlux	5021A65	5000							
Finlux	5021F12	5000							
Finlux	5025(S) 25524	5000							
Finlux	5025E17	5000							
Finlux	5025F12	5000							
Finlux	5025K10	5000							
Finlux	5025M14	5000							
Finlux	5025N65	5000							
Finlux	5028E17	5000							
Finlux	5028F12	5000							
Finlux	5028K10	5000							
Finlux	5028M14	5000							
Finlux	5028N65	5000							
Finlux	5029A65	5000							
Finlux	50F21	3600							
Finlux	50F25	3000							
Finlux	50F28	3000							
Finlux	50V29	3000							



Goodmans	2043	Goldstar PC04A					
Goodmans	2045TS	CP375					
Goodmans	2050R	Tatung C Series					
Goodmans	2053T	Tatung (A Series ?)					
Goodmans	205N	CP365					
Goodmans	2065TS	Daewoo CP005					
Goodmans	2066TS	Daewoo CP005	2003, £99				
Goodmans	206NS	Daewoo CP380	serv. Mode - special remote R-30SVC				
Goodmans	2145TS	Daewoo CP375					
Goodmans	2155PF	Daewoo CP485					
Goodmans	215N	Daewoo CP365					
Goodmans	2160PF		2003 £180-£150; 2004 £140				
Goodmans	216NS	Daewoo CP380					
Goodmans	217NS	Daewoo (CP785)	≈257NS				
Goodmans	2180	Nikkai					
Goodmans	218NS	Daewoo CP385					
Goodmans	2195T	Daewoo CP330					
Goodmans	255NS	Daewoo CP775					
Goodmans	256NS	Philips L6.2					
Goodmans	2575	Formenti F11					
Goodmans	257NS	Daewoo CP785					
Goodmans	258NS	Daewoo chassis	2003, £199				
Goodmans	285DPL	Stereo plus					
Goodmans	285NS	Daewoo CP775					
Goodmans	286NS/05	Philips L6.2AA chassis					
Goodmans	2875	Formenti F11					
Goodmans	288NS	Daewoo (CP785)	Multistandard PAL/SECAM, I, B/G				
Goodmans	289NS		2003, £199				
Goodmans	336NS	F16					
Goodmans	336NS-A	F19					
Goodmans	3375	Formenti F11					
Goodmans	5160TT	HinariCT15/ST200/VT200/CDTV2	Hinari CT14				
Goodmans	C141	Nikkai					
Goodmans	C210	10" remote control TV	2003, £179				
Goodmans	CTV20XRT	Osaki 20	Fidelity ZX3000				
Goodmans	CTV2R	Nikkai TLG2121					
Goodmans	CTV2T	Nikkai TLG2121					
Goodmans	CTX14X	Fidelity ZX4000	Jackson Mk2				
Goodmans	F28WTF	FPC2001 (TWIST) flat screen	2003 around £350				
Goodmans	F32WTF	FPC2001 (TWIST) flat screen	2003 around £499				
Goodmans	FST51TT	Murphy 3510T	Murphy CTV3540T				
Goodmans	GD2580	Ferguson TX92					
Goodmans	GD2580D	TX92F					
Goodmans	GD2880A	ICC9					
Goodmans	GD2880B	FTX92					
Goodmans	GD2880D	TX92F					
Goodmans	GTV147	11AK08, 11AK20M-6(after 1999)			AK20 prod.code: 10000675		
Goodmans	GTV148T	11AK08, 11AK20M-6(after 1999)			AK20 prod.code: 10000676		
Goodmans	GTV14DVD	chassis P1420 (TV+DVD)	2003, £139		PCB marked 0707-A20261-03 (LLOPTx CF0801, LOPTr 2SD2599, chopper Tr 2SD2500, Micro CTV322S V1.2 (PCA84C		
Goodmans	GTV14DVDXI	TV +DVD	2003, £199				
Goodmans	GTV211	PT9601 (Bush 2027T)					
Goodmans	GTV257	11AK19-5					
Goodmans	GTV288	11AK19-8A					
Goodmans	GTV288SIL	11AK19E3, 11AK19P4, 11AK19P5	2000-2002		AK19 prod.code: 10006762		
Goodmans	GTV34R2	11AK20M-6	1999-		AK20 prod.code: 10000677		
Goodmans	GTV34R6SIL	11AK20SE1					
Goodmans	GTV34RDVD	chassis P1420 (TV+DVD)	2002		PCB marked 0707-A20261-03		
Goodmans	GTV34RDVDXI	11AK46 (TV+DVD)					
Goodmans	GTV34T2	11AK20M-6	1999-		AK20 prod.code: 10000678		
Goodmans	GTV34T6SIL	11AK36					
Goodmans	GTV370VCRX		serv.mode see Bush BTV16, BTV20				
Goodmans	GTV371VCR	Bush BTV17, Tatung TVC563, deck OVD-6	PCB marked TM9423A, video VM9162A	Micro OEC0078A, option codes	EEPROM address 100H		
Goodmans	GTV372VCR	Orion chassis		Micro OEC0093B			
Goodmans	GTV376VCR		2004 £89				
Goodmans	GTV400	Grundig G1000					
Goodmans	GTV401	Grundig G1000					
Goodmans	GTV48T2	PT11 (??)					
Goodmans	GTV51N1	11AK19			remote		
Goodmans	GTV51N2DVD		2004, £165				
Goodmans	GTV51N3BLU4	11AK19			remote		
Goodmans	GTV51NDVD	11AK?? +DVD	2004, £199				
Goodmans	GTV62W1SIL	11AK37-11					
Goodmans	GTV66N3	11AK19P4					
Goodmans	GTV66W1	11AK19B1	Micro SDA5457-B001				
Goodmans	GTV66W2 28ZKQ	4400					
Goodmans	GTV69RF2	11AK37-10 (10019793)	2003				
Goodmans	GTV69W2D2T	11AK33 with digibox	2004 £360				
Goodmans	GTV69W3BLK	11AK37-8	2002				
Goodmans	GTV69W3SIL	11AK19Pro or 11AK37	11AK37 after 2002				
Goodmans	GTV69W5SIL	11AK19P5 or 11AK37	11AK37 after 2002	AK19 prod.code:10014298, AK37 prod.code:10014462			
Goodmans	GTV76RF1	11AK37-10 (10019792)	2003				
Goodmans	GTV76W1	11AK19					
Goodmans	GTV76W2SIL	11AK19P2, 11AK19P5					
Goodmans	GTV76W4SIL	11AK37-6	2002, 2003				
Goodmans	GTV9200	Samsung C1125					
Goodmans	K1405T		2003 £65-£69, 2004 £65				
Goodmans	K2005T		2004, £99				
Goodmans	K2105	11AK30A4					
Goodmans	K24W10		2003 £130; 2004 £120				
Goodmans	K28W05		2004 £199				
Goodmans	Q9001	Alba PTV9C	2003 around £200-£250, 2004 £199				
Goodmans	RC7051	LG D17 chassis	Samsung BT110				
Goodmans	TD1540	TV+DVD	2003, £179				
Goodmans	TVC100S	combi	2004, £99				
Goodmans	TVC1400	CP310 (Daewoo)	Ferguson FG14CB12V	Daewoo DVT1484D			
Goodmans	TVC141	CP420 (Daewoo, K-Mecha Deck)					
Goodmans	TVC142T	CP420 (Daewoo, K-Mecha Deck)					
Goodmans	TVC143TS	CP082 (Daewoo)	2003, £140				
Goodmans	TVC145TW	CP420 (Daewoo, K-Mecha Deck)	Daewoo DVT14F8PA				
Goodmans	TVC146T	CP420 (Daewoo, K-Mecha Deck)					
Goodmans	TVC146TWS	CP420 (Daewoo, K-Mecha Deck)	Daewoo DVT14F6PA				
Goodmans	TVC147TWS	CP082 (Daewoo)	2003, £149				
Goodmans	TVC14VP	CP310 (Daewoo)	Ferguson FG14CB12V	Daewoo DVT1484D			
Goodmans	TVC201T	CP420 (Daewoo, K-Mecha Deck)					
Goodmans	TVC202TS	CP082 (Daewoo)	2003, £179				
Goodmans	TW28D11		2003 £300-£350; 2004 £280				
Goodmans	TW32D11		2003 around £450				
Goodmans	UGOFL37M12G230	see Goodmans 1490T-IB					
Goodmans	W280NS	F16 or F19 (depends on the year)					
Goodmans	W282NS	F19					
Goodmans	W282NS-T	FPC2001 (Formenti-Seleco)					
Goodmans	W288NS	F16 or F19 (depends on the year)					
Goodmans	W288NS-A	F19					
Goodmans	W321NS	F16 or F19 (depends on the year)					
Goodmans	W321NS-A	F19	LOPTx 1372.0052A (equiv. 1362.5001A, HR8770, FBT40828)				
Goodmans	W322NS	F19					
Goodmans	W325NS-T	FPC2001 (Formenti-Seleco)	2003 around £380				
Goodmans	W32T1	PT92					
Graetz	25C00	ITT Core 110					
Graetz	Bungraf 2891	Nokia digital chassis B-E2					
Granada	12C011	Thorn 1730					
Granada	14C011	Thorn 1790					
Granada	14C012	Thorn TX90					
Granada	14C013	Thorn TX90					
Granada	14C021	Sanyo CTP3141	Tashiko 14D961				
Granada	14C022	Sanyo E2	Sanyo CTP3144				
Granada	14C031	Toshiba 140E4B					
Granada	14C032	Toshiba 140E4B					
Granada	14C041	Sharp C1410HD					
Granada	14C051	Philips 1014					
Granada	14C052	Philips CTX	Philips 2206				
Granada	14C061	PanasonicM12H	Panasonic TC430G				
Granada	14C062	PanasonicM12C	Panasonic TC431GR				
Granada	14C063	Panasonic M12	TC450				
Granada	14C071	Sony XE3 KV1430UB					
Granada	14C111	Mitsubishi CP1424B					
Granada	14D031	Toshiba 14E7B					
Granada	14D032	Toshiba 145E7B					
Granada	14D041	Sharp C1411					

Granada	14D061	Panasonic TC1460	
Granada	14D121	Hitachi 1474	
Granada	14D122	Hitachi 1476	
Granada	14E011.	Ferguson 14C2 / 14J2	
Granada	14E041.	Sharp C1420	
Granada	14E071.	Sony KV1460UB	
Granada	14E072.	Sony 1462UB	
Granada	14E091.	ITT CP3120	
Granada	14E191.	Network NE14CD	
Granada	14E211.	Fidelity 1405S	
Granada	14E212.	Fidelity 1405R	
Granada	14E252.	Hinari TVA1	
Granada	16C011	Thorn TX9	Ferguson 37801
Granada	16C012	Thorn TX9	Ferguson 37023
Granada	16C051	Philips 2016	
Granada	16C052	Philips CTX	Philips 2216
Granada	16C151	GEC 1657	
Granada	16C152	GEC 1658	
Granada	16E061.	Panasonic TC1675	
Granada	16E221.	Zanussi 16ZB32	
Granada	20C011	Ferguson TX100	Ferguson 20C4
Granada	20C012	Thorn TX9	Ferguson 37493
Granada	20C021	Hitachi 2044 / 2074	
Granada	20C021	Sanyo CTP6134	
Granada	20C022	Hitachi 2076	
Granada	20C022	Sanyo 83P-D20	Sanyo CTP6135
Granada	20C051	Philips 2036	Panasonic TC2061
Granada	20C061	Panasonic U5	
Granada	20C071	Sony XE3	Sony KV2060UB
Granada	20C081	Grundig 512201	
Granada	20C082	Grundig 512406	
Granada	20D031	Toshiba 202R5B	
Granada	20E091.	ITT CT3326	
Granada	20E091.	ITT Monoprint B	ITT CT3315M
Granada	20E221.	Zanussi 20ZA374	
Granada	22C011	Ferguson 22B5	
Granada	22C011	Ferguson TX10	
Granada	22C021	Sanyo CTP7133	
Granada	22C022	Sanyo CTP7134	
Granada	22C023	Sanyo 80P	Sanyo CTP7135
Granada	22C031	Toshiba 222E5B	
Granada	22C032	Toshiba 222R5B	
Granada	22C051	Philips 5240	
Granada	22C052	Philips 5751	
Granada	22C053	Philips CTX	Pye 2060
Granada	22C061	Panasonic U5	Panasonic TX5500
Granada	22C071	Sony YE2	Sony KV2212UB
Granada	22C081	Grundig 562201	
Granada	22C111	Mitsubishi CT2224B	
Granada	22C112	Mitsubishi CT2227BM	
Granada	22C121	Hitachi 2276	
Granada	22C122	Hitachi 2278	
Granada	22C151	GEC 2295	
Granada	22D051	Philips 2061	
Granada	26C031	Toshiba 261T	
Granada	26C061	Panasonic U5W	Panasonic TX2656
Granada	36C031	Toshiba 159R4B	
Granada	36C051	Philips 2309	
Granada	36C091	ITT CT3725	
Granada	36C111	Mitsubishi CT1501BM	
Granada	36D121	Hitachi 1556	
Granada	41C061	Panasonic U5	Panasonic TX1752
Granada	51C011	Ferguson TX100 51A3	
Granada	51C031	Toshiba 211E4B	
Granada	51C032	Toshiba 212T4B	
Granada	51C033	Toshiba 212R4B	
Granada	51C051	Philips 4829	
Granada	51C061	Panasonic U5	
Granada	51C062	Panasonic TX1	
Granada	51C122	Hitachi 2158	
Granada	51D031	Toshiba 210R6B	
Granada	51D051	Philips 2340	
Granada	51D061	Panasonic TC2175	
Granada	51D111	Mitsubishi CT2117BM	
Granada	51D112	Mitsubishi CT2101TX	
Granada	51D121	Hitachi 2176	
Granada	51D123	Hitachi 2174	
Granada	51D124	Hitachi 2178	
Granada	51E011.	Ferguson TX100 51G3	
Granada	51E021.	Sanyo CTP2146	
Granada	51E051.	Philips 1551	
Granada	51E071.	Sony KV21MXU	
Granada	51E072.	Sony AE1 KV21XMTU	
Granada	51E073.	Sony SX KV21XRTU	
Granada	59C121	Hitachi 2568	
Granada	59D121	Hitachi 2476	
Granada	59D122	Hitachi 2478	
Granada	59E031.	Toshiba 258T	
Granada	59E051	Philips 2370	
Granada	59E052.	Philips 3570	
Granada	59E221.	Zanussi 24ZM360	
Granada	59E222.	Zanussi 24ZM366	
Granada	59E223.	Zanussi 24ZS366	
Granada	66D121	Hitachi 2888	
Granada	66E071.	Sony SX	
Granada	69E221.	Zanussi 28ZM360	
Granada	78E061.	Panasonic TX3370	
Granada	C09EN1	Panasonic 9200	
Granada	C09EV1	Philips 10CX1120	
Granada	C10EV1	Toshiba 1071	
Granada	C13KV1	Sony 1320	
Granada	C14AS1	Sanyo CPT3131	
Granada	C14AY1/2	Sharp	
Granada	C14BA1	GEC C1405H	Hitachi NP84 Mk1
Granada	C14BS1	Sanyo CPT3131	
Granada	C14EA3	GEC 1409	
Granada	C14EP1	Philips	
Granada	C14EP3	Philips 14CE1201	
Granada	C14EP4	Philips 14CN2201	
Granada	C14ER1	Panasonic TC1470	
Granada	C14ER4	Panasonic TC1475	
Granada	C14ES1	Sanyo CBP3144	
Granada	C14ES2	Sanyo CBP3144	
Granada	C14ES3	Hinari CT5	
Granada	C14ET2	Toshiba 145	
Granada	C14ET3	Toshiba 145R	
Granada	C14EV1	Hinari CT4	
Granada	C14EV2	Panasonic TC1480	
Granada	C14EV2	Sharp 1480	
Granada	C14EV3	ITT CP3120	
Granada	C14EV3	ITT CP3126	
Granada	C14EV4	Panasonic TC1485	
Granada	C14FD1	Hinari CT17	
Granada	C14FD3	Hinari CT18	
Granada	C14FS1	Hinari CT17	
Granada	C14FS1	Sanyo CBP3001	
Granada	C14FS2	Sanyo CBP3011	
Granada	C14FS5	Sanyo OEM	
Granada	C14FT3	JVC C140EY	
Granada	C14GP1	Philips 14CN2001	
Granada	C14GP2	Philips 14GR1021	
Granada	C14GP3	Philips 14GR1021	Tashiko
Granada	C14GP4	Philips 14GR1221	Tashiko
Granada	C14GP5	Philips 14GR1221	
Granada	C14GS1	Sanyo CBP3011	
Granada	C14GS1	Sanyo CBP3012	
Granada	C14GS5	Sanyo CBP3011	
Granada	C14GY1	Pye 37KN2010	
Granada	C14GY2	Pye 37KN2012	









Granada	C59NN7	Panasonic TX25AD1DP			
Granada	C59NP5	Philips 25632AC			
Granada	C59NP6	Philips 25421			
Granada	C59NP7	Philips 25727BP			
Granada	C59NP8	Philips 259021			
Granada	C59NX5	Toshiba 2555DB			
Granada	C59NX6	Toshiba 2552DB			
Granada	C59PH7	Hitachi C2548TN			
Granada	C59PS4	Sanyo 25MT1			
Granada	C59PX6	Toshiba 2563DB			
Granada	C59RH6	Hitachi C2556TN			
Granada	C59RH7	Hitachi C2586TN			
Granada	C59RN6	Panasonic TX25MD3			
Granada	C59RP6	Philips 25PT4523			
Granada	C59RS4	Sanyo 25MT2			
Granada	C66EB6	Sanyo 2866			
Granada	C66EB7	Sanyo 2865			
Granada	C66EK7	ITT 3896			
Granada	C66EK7	ITT 38767			
Granada	C66EP1	Philips 7690			
Granada	C66EP4	Philips 27CE3290			
Granada	C66EP5	Philips 27CE3598			
Granada	C66EP6	Philips27CE3590			
Granada	C66ET5	Toshiba 289T			
Granada	C66EV1	Sharp 2848			
Granada	C66EV3	Seleco 28362			
Granada	C66EV5	Sharp 2836			
Granada	C66EV7	Nordmende 9387			
Granada	C66EV7	Nordmende 2401S			
Granada	C66EV7	Seleco 28487			
Granada	C66EvV1	Sharp 2248			
Granada	C66EY5	Dynatron D820			
Granada	C66EY5	Pye 820			
Granada	C66EZ4	Salora	OEM		Finlandia
Granada	C66EZ5	Salora	OEM		Finlandia
Granada	C66FK7	ITT 3898			
Granada	C66FP7	Philips 27CE7593			
Granada	C66FP7	Pye 7593			
Granada	C66FR5	Panasonic XC78			
Granada	C66FR7	Panasonic XC78			
Granada	C66FY5	Pye 68KE3985			
Granada	C66FZ1	Salora	OEM		Finlandia
Granada	C66FZ2	Salora	OEM		Finlandia
Granada	C66FZ4	Salora	OEM		Finlandia
Granada	C66FZ5	Salora	OEM		Finlandia
Granada	C66FZ6	Salora	OEM		Finlandia
Granada	C66FZ7	Salora	OEM		Finlandia
Granada	C66GK6	Panasonic TX28W1			
Granada	C66GK7	Panasonic TX28A1			
Granada	C66GY4	Pye 27CE3598			
Granada	C66GZ6	Salora	OEM		Finlandia
Granada	C66GZ7	Salora	OEM		Finlandia
Granada	C66HK6	Panasonic TX28W1			
Granada	C66HP5	Philips 6590			
Granada	C66HZ5	Luxor 7005	Salora N		DeGraaf
Granada	C66JZ6	Salora	Salora M		Finlandia
Granada	C66JG6	Grundig 7460			
Granada	C66JL6	Sanyo CBP2876			
Granada	C66JZ5	Nokia	N-chassis		Finlandia
Granada	C66Kp6	Philips 25ST2781			
Granada	C66KZ6	Nokia 28N8C	Eurostero 2 B-F		
Granada	C66LH7	Hitachi C2874TN			
Granada	C66LP6	Philips 28PT482A			
Granada	C66LZ6	Finlux 5000	Nokia 5000		Finlandia
Granada	C66LZ8	As C66LZ6 with built in sat rx	Nokia 5000		Finlandia
Granada	C66MH6	Hitachi C2865TN			
Granada	C66MN6	Panasonic TX28X1			
Granada	C66MN7	Panasonic TX28X1DP			
Granada	C66MP6	Philips 28PT512A			
Granada	C66MP7	Philips 28PT532B			
Granada	C66MP8	6770C			
Granada	C66MZ6	Finlux	5000 chassis		Finlandia
Granada	C66MZ8	Finlux	5000 with built-in sat. receiver		Finlandia
Granada	C66NH6	Hitachi C2846TN			
Granada	C66NH7	Hitachi C2976TNY			
Granada	C66NP6	Philips 284521			
Granada	C66NX7	Toshiba 2857DB			
Granada	C66PH7	Hitachi C2848TN			
Granada	C66PX7	Toshiba 2857DB			
Granada	C66RH7	Hitachi C2886TN			
Granada	C66RN6	Panasonic TX28MD3			
Granada	C66RP6	Philips 28PT4523			
Granada	C66RX7	Toshiba 2877DB			
Granada	C67KP9	Philips 28ML8916			
Granada	C67KP9	Philips 28ML8762			
Granada	C67MP9	Philips 28PW632A			
Granada	C67MZ7	Nokia 7296UK			
Granada	C67NP8	Philips 28PW6631			
Granada	C67NP9	Philips 28PW662B			
Granada	C68LH7	Hitachi C2894TN			
Granada	C68MP8	Philips 29PT822B			
Granada	C68MX7	Toshiba 2939DB			
Granada	C68NN6	Panasonic TX29AD1			
Granada	C68NN7	Panasonic TX29AD1DP			
Granada	C68NP5	Philips 29PT832A			
Granada	C68NP7	Philips 29PT727B			
Granada	C68NP8	Philips 29PT9021			
Granada	C68NP9	Philips 29PT828CP			
Granada	C68RN7	Panasonic TX29AD2DP			
Granada	C78MP9	Philips 32PW962			
Granada	C78MT6	Ferguson D78N			
Granada	C78NP9	Philips 32PW9631			
Granada	C78PP9	Philips 32W9612			
Granada	C80MX7	Toshiba 3339DB			
Granada	CV66MX5	Toshiba 2835DB			
Granada	D16VP1	Philips KT3 16C928			
Granada	D16VP2	Philips G11			
Granada	D16VY3	Philips KT3			
Granada	D20VP3	Philips KT3			
Granada	D20VY3	Philips KT3			
Granada	D22VP3	Philips G11			
Granada	D22WP1	Philips K30			
Granada	D22XP5	Philips K30			
Granada	D22XY5	Philips K30			
Granada	D26TP2	Philips G11			
Granada	D26WP3	Philips K30			
Granada	D26XY5	Philips K30			
Grundig	14GR3000	TV/DV/DVCR	2004 £120		
Grundig	6100	CUC42			
Grundig	7600	CUC740	8600		
Grundig	1514/1614	GSC100	6415		
Grundig	1644GB	GSC200			
Grundig	1645GB	GSC200			
Grundig	2463/3102/3103/3104	CUC40	4102/4103/4104	6232	
Grundig	28WF100	Orion 8500	2003, 100Hz, £399		Serv.mode: switch on while holding MENU on front panel, when red LED is on release MENU and press STBY on R/C.
Grundig	28XKB GW7060	Orion 2500			
Grundig	32EKB GW8260	Orion chassis	around £500		
Grundig	32WF100	Orion 8500			serv.mode: see 28WF100
Grundig	32WF8000	4400, Pureflat CRT	2003, £429		
Grundig	3302/3303/3304/3305	CUC52c	3306/3307/3308		3362/3403/3404
Grundig	3302/3303/3304/3312	CUC50	3313/3314/3402/		3403/3404/6630
Grundig	4245GB	GSC200			
Grundig	4445GB	GSC200			
Grundig	6245GB	GSC200			
Grundig	6445/1645	GSC200			
Grundig	6445GB	GSC200			
Grundig	70WF8000	2500 (Orion chassis)	2003 around £400		serv.mode: see W70-2100
Grundig	C2402	CUC51KT			
Grundig	C8400	CUC70KT	C7402		C7400

Grundig	CKP100	GTP			
Grundig	CUC7301	Matsui 20V1T			
Grundig	G1000	MATSUI 14R1/20T1			
Grundig	GRD150	E1			
Grundig	GRD200	E2			
Grundig	GRD250	E1			
Grundig	GRD280	E2			
Grundig	GRD300	E2			
Grundig	Greenville 7002 text	CUC6330			
Grundig	Greenville 7002/8 text	CUC6330			
Grundig	Greenville 7003 NIC/TOP	CUC2030N	1997, Multistandard B/G, D/K, I		TP900
Grundig	Greenville 7007 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	GT1401	G1000			
Grundig	GT1402	G1000			
Grundig	GT2001	G1000			
Grundig	GT2003	G1000			
Grundig	GT2101	G1000			
Grundig	GT2103	G1000			
Grundig	GT2105	G1000ST			
Grundig	GW7060	=28XKB (Orion 2500 chassis)			
Grundig	GW8260	=32EKB (Orion chassis)	around £500		
Grundig	M55-290/8 IDTV	CUC1806	1999, Multistandard B/G, D/K, I		TP800
Grundig	M55-420/8 DOLBY	CUC1807	2002, Multistandard B/G, D/K, I		TP100C
Grundig	M63-281/8 IDTV	CUC1826			
Grundig	M63-370	CUC3600			
Grundig	M63-420/8 DOLBY	CUC1837	2000, Multistandard B/G, D/K, I		TP100C
Grundig	M63-575/9 BL	CUC4511			
Grundig	M63-776/9 TOP	CUC3665	1995, Multistandard B/G, D/K, I		TP720 or TP760
Grundig	M70-1680 DPL/IDTV	CUC1961	1995, Multistandard B/G, D/K, I		TP770
Grundig	M70-269/9	CUC1952 (Digi6)	100Hz, PAL/SECAM I, B/G, D/K, L, M		
Grundig	M70-290/8 IDTV	CUC1836	1999, Multistandard B/G, D/K, I		TP800
Grundig	M70-690/9 TOP	CUC6851			
Grundig	M70-879/8 DOLBY	CUC1837	2000, Multistandard B/G, D/K, I		
Grundig	M72-2110MV/DOLBY	CUC1838	2000, Multistandard B/G, D/K, I		TP100C
Grundig	M72-410/9	CUC1842			
Grundig	M72-420/8 DOLBY	CUC1838	2000, Multistandard B/G, D/K, I		TP100C
Grundig	M82-100 IDTV				
Grundig	M82-101	CUC1880			
Grundig	M82-105/91	CUC1882			
Grundig	M82-1690/9 TOP	CUC6368	1996-1997, Multistandard		TP760
Grundig	M82-269 PALPLUS/LOG	CUC1983 (Digi6)	100Hz, PAL/SECAM I, B/G, D/K, L, M		
Grundig	M82-269/9	CUC1984 (Digi6)	100Hz, PAL/SECAM I, B/G, D/K, L, M		
Grundig	M82-495	CUC3840			
Grundig	M82-795 /9 PIP/TOP	CUC7880	1994		
Grundig	M82-795 TOP	CUC7890	1994		
Grundig	M84-211/8 IDTV	CUC1829	1999, Multistandard B/G, D/K, I		TP800
Grundig	M84-212/8 DOLBY	CUC1839	2000-2002, Multistandard B/G, D/K, I		TP100C
Grundig	M95-115/9 IDTV/PIP	CUC1893	(similar CUC1822/1824/1852/1882)		
Grundig	M95-410/9	CUC1894 (Digi6)	100Hz, PAL/SECAM I, B/G, D/K, L, M		
Grundig	M95-490	CUC3850			
Grundig	M95-795	CUC7890			
Grundig	MF55-5201/8 DOLBY	CUC2136M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	MF55-9101/8 DOLBY	CUC2136M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	MF72-3101/8 DOLBY	CUC2131M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	MF72-3110/8 DOLBY	CUC1838	2001, Multistandard B/G, D/K, I		TP110C
Grundig	MF72-9101/8 DOLBY	CUC2131M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	MF72-9110/8 DOLBY	CUC1838	2001, Multistandard B/G, D/K, I		TP110C
Grundig	MF94-6110/8 DOLBY	CUC1839	2001, Multistandard B/G, D/K, I		TP110C
Grundig	MFW102-6110MV/AC3	Rear projector	2000, Multistandard B/G, D/K, I		TP130C
Grundig	MFW70-3201 NIC	CUC2069N	2002, Multistandard B/G, D/K, I		
Grundig	MFW70-3210/8 DOLBY	CUC1934	2002, Multistandard B/G, D/K, I		TP110C
Grundig	MFW70-430/8 DOLBY	CUC1934	2000, Multistandard B/G, D/K, I		TP110C
Grundig	MFW70-530/9 DPL	CUC1930	2000, 100Hz Multistandard B/G, D/K, I		
Grundig	MFW82-3101 NIC	CUC2068N	2001, Multistandard B/G, D/K, I		
Grundig	MFW82-3110MV/DOLBY	CUC1935	2000-2002, Multistandard B/G, D/K, I		TP110C
Grundig	MFW82-430/8 DOLBY	CUC1935(VNA), CUC1935A(VNI, VND)	2000-2002, Multistandard B/G, D/K, I		TP110C
Grundig	MFW82-530/9 DPL	CUC1931	2000, 100Hz Multistandard B/G, D/K, I		TP850C
Grundig	MFW82-530/9 DVD	CUC1931	2001, Multistandard B/G, D/K, I		TP120C
Grundig	MFW82-6210/9 DOLBY	CUC1935	2002, Multistandard B/G, D/K, I		TP110C
Grundig	MFW82-6211/9 DVD	CUC1935	2002, Multistandard B/G, D/K, I		TP140C
Grundig	MFW92-6110/9 DVD	CUC1937	2001, Multistandard B/G, D/K, I		TP140C
Grundig	MW70-150/8 DOLBY	CUC1934(VNM,VNA), CUC1934A(VNX)	2000(VNM), 2002(VNA), 2003(VNX)		TP100C
Grundig	MW70-2101 NIC/DOLBY	CUC2059N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	MW70-2201 NIC	CUC2069N	2002, Multistandard B/G, D/K, I		
Grundig	MW70-2203 NIC	CUC2069N	2002, Multistandard B/G, D/K, I		
Grundig	MW70-2699 NIC	CUC2059N	1999, Multistandard B/G, D/K, I		TP810C
Grundig	MW70-2700 NIC/DOLBY	CUC2059N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	MW70-2701 DOLBY/FT	CUC2059			TP810C
Grundig	MW70-3699 NIC/FT	CUC2059N	1999		TP810C
Grundig	MW70-3700 DPL/FT	CUC2059N	1999		TP810C
Grundig	MW70-500 IRDT	CUC2059D IDTV	1999, Pal I		TP815C
Grundig	MW70-502 IRDT/DOLBY	CUC2058D IDTV	2000, Pal I		TP815C
Grundig	MW70-505 IRDT/DPL	CUC2059D IDTV	1999, Pal I		TP815C
Grundig	MW70-510/8aDPL	CUC1930	2000, 100Hz Multistandard B/G, D/K, I		
Grundig	MW70-600 IRDT	CUC2059D IDTV	1999, Pal I		TP815C
Grundig	MW70-605 IRDT/DPL	CUC2059D IDTV	1999, Pal I		TP815C
Grundig	MW82-150/8 DOLBY	CUC1935(VNA,VNM), CUC1935A(VNX)	2000(VNM), 2002(VNA), 2003(VNX)		TP100C
Grundig	MW82-2101 NIC/DOLBY	CUC2059N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	MW82-2201 NIC	CUC2068N	2001, Multistandard B/G, D/K, I		
Grundig	MW82-2203 NIC	CUC2068N	2002, Multistandard B/G, D/K, I		
Grundig	MW82-2699 NIC	CUC2058N	1999, Multistandard B/G, D/K, I		TP810C
Grundig	MW82-2700 DPL/FT	CUC2058			
Grundig	MW82-2700 NIC/DOLBY	CUC2058N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	MW82-3112MV/DOLBY	CUC1935(VNM,VNA), CUC1935A(VNX)	2001(VNM), 2002(VNA), 2003(VNX)		TP100C
Grundig	MW82-3699 NIC/FT	CUC2058N	1999		TP810C
Grundig	MW82-3700 DPL/FT	CUC2058N	1999		TP810C
Grundig	MW82-500 IRDT	CUC2058D IDTV	1999, Pal I		TP815C
Grundig	MW82-502 IRDT	CUC2058D IDTV	2000, Pal I		TP815C
Grundig	MW82-505 IRDT/DPL	CUC2058D IDTV	1999, Pal I		TP815C
Grundig	MW82-510/8aDPL	CUC1931	2000, 100Hz Multistandard B/G, D/K, I		
Grundig	MW82-520/9	CUC1983	1999, Multistandard B/G, D/K, I		TP850
Grundig	MW82-600 IRDT	CUC2058D IDTV	1999, Pal I		TP815C
Grundig	MW82-605 IRDT/DPL	CUC2058D IDTV	1999, Pal I		TP815C
Grundig	P17/649/12	CUC5200			
Grundig	P37-065	G1000			
Grundig	P37-070	CUC7301			
Grundig	P37-071	CUC7301			
Grundig	P37-080GB	CUC7303	2000, Pal I		TP750C
Grundig	P37-090GB	CUC7303	2000, Pal I		TP715 (black) or TP750C (grey)
Grundig	P37-1010	Orion chassis	2004 E75		
Grundig	P37-1101/5TXT	Beko 12.4			
Grundig	P37-142	CUC51A			
Grundig	P37-2101MV	CUC2103			
Grundig	P37-2102MV	CUC2100			
Grundig	P37-2103MV	CUC2100			
Grundig	P37-2226	CUC2201			
Grundig	P37-4101GB	CUC2103	2001, Pal I		TP750C
Grundig	P37-4101MV	CUC2103 multisystem			
Grundig	P37-549	CUC5306			
Grundig	P37-730	CUC7301			
Grundig	P37-731	CUC7301			
Grundig	P37-830 Multi/ICN	CUC2003H	1998, Multistandard B/G, D/K, I		TP715 Hotel
Grundig	P37-830 text/GB	CUC7303	2000, Pal I		TP750C
Grundig	P37-830 text/IR	CUC7303	2000, Pal I		TP750C
Grundig	P37-930 text/GB	CUC7303	2000, Pal I		TP750C
Grundig	P39-3010	Orion chassis			
Grundig	P45-830 Multi MegASIS	CUC2003H	1998, Multistandard B/G, D/K, I		TP800 Hotel
Grundig	P65-245	CUC2401			
Grundig	PW110-520/9	Plasma	1999, Multistandard B/G, D/K, I		TP950C
Grundig	S-7150 Series	2210			
Grundig	S-7150 Series	2220			
Grundig	S-7150 Series	2222			
Grundig	S-7150 Series	2250			
Grundig	S-7150 Series	3200			
Grundig	S-7150 Series	2252R			
Grundig	S-7150 Series	6210/6610			
Grundig	S-9250 Series	2200			
Grundig	S-9250 Series	2230			
Grundig	SE 7016/9	CUC1952 (Digi6)	100Hz, PAL/SECAM I, B/G, D/K, L, M		

Grundig	SE 7087 TOP/LOG	CUC6360			
Grundig	SE 7216/8 DOLBY	CUC1838	2000, Multistandard B/G, D/K, I		TP912C
Grundig	SE 7277 text	CUC6331			
Grundig	SE 7287 TOP/LOG	CUC6365			
Grundig	SE 8216/9	CUC1984 (DigI6)	100Hz, PAL/SECAM I, B/G, D/K, L, M		
Grundig	ST 1770 TOP	CUC6360			
Grundig	ST 1772 TOP/LOG	CUC6365			
Grundig	ST 770 TOP/LOG	CUC6360			
Grundig	ST 770/9 TOP	CUC6360	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST3022RK	CUC731KT			
Grundig	ST55-710	CUC2020			
Grundig	ST55-715	CUC2021			
Grundig	ST55-725	CUC7350			
Grundig	ST55-725a	CUC2020			
Grundig	ST55-725b	CUC2021			
Grundig	ST55-730 GB/DOLBY	CUC2021N	2000, Multistandard B/G, D/K, I		TP715 or TP750C
Grundig	ST55-730 S/GB/DOLBY	CUC2021N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST55-734GB/DOLBY	CUC2103 (similar to CUC2100)	2001, Pal I		TP750C
Grundig	ST55-734GB/DOLBY	CUC2121 (similar to CUC2100)	2002, Pal I		TP750C
Grundig	ST55-750/9	CUC7350			
Grundig	ST55-798	CUC7350			
Grundig	ST55-801/9	CUC7350			
Grundig	ST55-825 FT/GB	CUC2021	1999, Multistandard B/G, D/K, I		TP715 or TP750C
Grundig	ST55-834 GB/DOLBY	CUC2021N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST55-876	CUC7350	Matsui 21V1N		
Grundig	ST55-894GB/DOLBY	CUC2103 (similar to CUC2100)	2001, Pal I		TP750C
Grundig	ST55-894GB/DOLBY	CUC2121 (similar to CUC2100)	2002, Pal I		TP750C
Grundig	ST63-2103/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST63-270/8 IDTV	CUC1838 or CUC1825			
Grundig	ST63-400/4 DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST63-4101/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST63-660	CUC5360			
Grundig	ST63-700 NIC/TOP	CUC2030N	1997, Multistandard B/G, D/K, I		TP713
Grundig	ST63-700A NIC/FT	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-701 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-702 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-702/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST63-706 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-712 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-713/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST63-720 text	CUC6330			
Grundig	ST63-725/8 FT/GB	CUC6330			
Grundig	ST63-750/9 TOP	CUC6360	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST63-755/9 TOP	CUC6360	1996, Multistandard		TP720
Grundig	ST63-760/9	CUC7861			
Grundig	ST63-761/9 TOP	CUC6365	1996, Multistandard		TP720
Grundig	ST63-775DPL	CUC2040			
Grundig	ST63-780 NIC/TOP	CUC2030N	1997, Multistandard B/G, D/K, I		TP713
Grundig	ST63-782 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-800/9 TOP	CUC6360	1996, Multistandard		TP720
Grundig	ST70-109 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-2102 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-2103/8 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-2104/8 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-282/8	CUC1838			
Grundig	ST70-284/8 DOLBY	CUC1837	2000, Multistandard B/G, D/K, I		
Grundig	ST70-292/8 DOLBY	CUC1837	2000, Multistandard B/G, D/K, I		TP100C
Grundig	ST70-300/8 DOLBY	CUC1837	2000		
Grundig	ST70-5001 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-5101/8 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-5108/6 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-602 NIC	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-700 NIC	CUC2030N	1997, Multistandard B/G, D/K, I		TP713
Grundig	ST70-700 S/GB/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-700A NIC/FT	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-701 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-702 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-703 NIC	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-705 NIC	CUC2030N	1998, Multistandard B/G, D/K, I		TP715
Grundig	ST70-705/8 text	CUC6330			
Grundig	ST70-705/9 TOP	CUC6360			
Grundig	ST70-705/9 TOP/LOG	CUC6360			
Grundig	ST70-706 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-707 NIC/FT	CUC2030N	1999		TP715
Grundig	ST70-708 GB/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-712 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-712/5 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-713/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-720 text	CUC6330			
Grundig	ST70-725/8 FT/GB	CUC6330			
Grundig	ST70-728 text	CUC6330			
Grundig	ST70-730 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-740 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-741/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-750/9 TOP	CUC6360	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST70-755/5 TOP	CUC6360	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST70-760 TOP/LOG	CUC6361			
Grundig	ST70-770 text	CUC6330			
Grundig	ST70-775 DPL	CUC2040			
Grundig	ST70-778 text	CUC6330			
Grundig	ST70-780 NIC/TOP	CUC2030N	1997, Multistandard B/G, D/K, I		TP713
Grundig	ST70-782 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-782 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-800/9 TOP	CUC6360	1996, Multistandard		TP720
Grundig	ST70-809/9	CUC6360	1996, Multistandard		TP720
Grundig	ST70-822/4 DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-829 NIC/DOLBY	CUC2050N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	ST70-839 NIC/DOLBY	CUC2050N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	ST70-853 NIC	CUC2050N	1999, Multistandard B/G, D/K, I		TP800
Grundig	ST70-854 PIP/DOLBY	CUC2050N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	ST70-875	CUC2059N			
Grundig	ST70-875 DPL/FT	CUC2050			
Grundig	ST70-898/8A Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-900 NIC	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-900/4 DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-904 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-95 TOP	CUC6360			
Grundig	ST72-161	CUC1822			
Grundig	ST72-2104/8	CUC2130 or CUC2131M (depends on date of m	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST72-760 text	CUC6331			
Grundig	ST72-760/8 text	CUC6331			
Grundig	ST72-760/9DPL	CUC7861			
Grundig	ST72-762/9 TOP	CUC6365	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST72-860 NIC	CUC2031N	1997, Multistandard B/G, D/K, I		TP800
Grundig	ST82-774	CUC7890			
Grundig	ST84-2202	CUC2062N			
Grundig	ST84-796/9 TOP	CUC6380	2000, Multistandard B/G, D/K, I		TP150C
Grundig	ST84-896 NIC	CUC2080N			
Grundig	ST95-575	CUC5839			
Grundig	Sydney ST872 text	CUC6331			
Grundig	Sydney ST872/8 text	CUC6331			
Grundig	T51-070	CUC7301	Matsui 20V1T		
Grundig	T51-071	CUC7301			
Grundig	T51-1101/5TXT	Beko 12.4			
Grundig	T51-2101MV	CUC2103	similar to CUC2100		
Grundig	T51-3101MV	CUC2103	similar to CUC2100		
Grundig	T51-720 text GB	CUC7303			
Grundig	T51-730	CUC7301			
Grundig	T51-830 Multi/ICN	CUC2003H	1998, Multistandard B/G, D/K, I		TP715 Hotel
Grundig	T55-1010	Orion chassis	2001	Remote 076R0DG200	serv. mode: switch on, set pin code removal: switch to stby, hold "7" on R/C for 6 sec
Grundig	T55-1020	Orion chassis M3K5-07G, PCB TMA518A	2001, around £60	Remote 076R0DG200	serv. mode: see T55-1010 pin code removal: see T55-1010
Grundig	T55-1101/5 TXT	Beko 12.4			
Grundig	T55-1120	Orion chassis	2004, £90-£100	PCB TMC562A, Micro 195C6PCLEOCF010A (OECF010A)	
Grundig	T55-2101MV	CUC2103	similar to CUC2100		
Grundig	T55-3020	E9 or E12 check on PCB (Evelux)			
Grundig	T55-340	CUC3400	P37-342GB		
Grundig	T55-340/90	CUC3490			
Grundig	T55-4101GB	CUC2103	similar to CUC2100, 2001 Pal I		TP750C
Grundig	T55-4104 MHOT/C.L	CUC2103H	2002, Multistandard B/G, D/K, I		TP800Hd





Hitachi	CPT1492	NP84C2								
Hitachi	CPT1493	NP84C2								
Hitachi	CPT1494	NP84C2								
Hitachi	CPT1497	NP84C2								
Hitachi	CPT1499	NP84C2								
Hitachi	CPT1556	Salora L								
Hitachi	CPT1557	Salora L								
Hitachi	CPT1558	Luxor 18036549								
Hitachi	CPT1624	NP82CQ								
Hitachi	CPT1626	NP82CQ								
Hitachi	CPT1644	NP84CQ								
Hitachi	CPT1646	NP84CQ								
Hitachi	CPT1646R	NP84CQ								
Hitachi	CPT1657	NP8C								
Hitachi	CPT1674	NP84CQ/4								
Hitachi	CPT1676	NP84CQ/4								
Hitachi	CPT2016	NP81CQ/2								
Hitachi	CPT2024	NP82CQ	GEC C2086							
Hitachi	CPT2026	NP83CQ								
Hitachi	CPT2028	NP83CQ								
Hitachi	CPT2036	NP83CQ	GEC 2090 / C2295							
Hitachi	CPT2038	NP83CQ								
Hitachi	CPT2044	NP83CQ/2	GEC2294H							
Hitachi	CPT2046	NP83CQ/2	GEC2294H							
Hitachi	CPT2048	NP83CQ/2								
Hitachi	CPT2050	Salora J 22J40								
Hitachi	CPT2051	NP80CR	Expert 2061							
Hitachi	CPT2055	NP80C								
Hitachi	CPT2060	Salora J								
Hitachi	CPT2066	NP85CQ/2								
Hitachi	CPT2068	NP85CQ/2								
Hitachi	CPT2071	NP80CR								
Hitachi	CPT2074	NP83CQ/2								
Hitachi	CPT2076	NP83CQ/2								
Hitachi	CPT2078	NP83CQ/2								
Hitachi	CPT2091	NP83CQ								
Hitachi	CPT2118	G6P								
Hitachi	CPT2128	G7P/2								
Hitachi	CPT2138	G7PS/2								
Hitachi	CPT2158	NP85CQ/2								
Hitachi	CPT2174	G6P								
Hitachi	CPT2176	G6P	GEC C2095 / C2200 / C2295							
Hitachi	CPT2178	G6P								
Hitachi	CPT2188	Salora K								
Hitachi	CPT2196	G8Q/P								
Hitachi	CPT2198	G8Q/P								
Hitachi	CPT2210	NP81CQ/2								
Hitachi	CPT2216	NP81CQ/2								
Hitachi	CPT2218	NP81CQ/2								
Hitachi	CPT2224	NP81CQ/2	GEC C2085 / C2285 / C2288							
Hitachi	CPT2226	NP81CQ/2	GEC C2286							
Hitachi	CPT2228	NP83CQ/2								
Hitachi	CPT2234	NP83CQ	GEC 2288H							GEC2089H
Hitachi	CPT2236	NP83CQ								
Hitachi	CPT2238	NP83CQ								
Hitachi	CPT2244	NP83CQ/2	GEC2294H							
Hitachi	CPT2246	NP83CQ/2	GEC2294H							
Hitachi	CPT2248	NP83CQ/2								
Hitachi	CPT2250	Salora J								
Hitachi	CPT2260	Salora J	IPSALO-2							
Hitachi	CPT2274	NP83CQ/2								
Hitachi	CPT2276	NP83CQ/2								
Hitachi	CPT2278	NP83CQ/2								
Hitachi	CPT2476	G6P								
Hitachi	CPT2478	G6P								
Hitachi	CPT2488	Salora K								
Hitachi	CPT2508	G7P MK2								
Hitachi	CPT2524	G7P/2								
Hitachi	CPT2528	G7P								
Hitachi	CPT2538	G7P MK2								
Hitachi	CPT2550	Salora J								
Hitachi	CPT2568	NP86LUQ/2								
Hitachi	CPT2578	G8Q/P								
Hitachi	CPT2596	G8Q/P								
Hitachi	CPT2598	G8Q/P								
Hitachi	CPT2598A	G8Q								
Hitachi	CPT2625	Sakora J								
Hitachi	CPT2626	NP83CQ								
Hitachi	CPT2650	Salora J								
Hitachi	CPT2656	Salora L								
Hitachi	CPT2658	Salora L								
Hitachi	CPT2660	Salora J	IPSALO-2							
Hitachi	CPT2808	G7P-MK2								
Hitachi	CPT2888	Salora K								
Hitachi	CPT3308	G6P								
Hitachi	CPT5908	Salora M								
Hitachi	CPT6608	Salora M								
Hitachi	CPV2055	NP80C								
Hitachi	CRP143	NP6C								
Hitachi	CRP146	PAL4								
Hitachi	CRP147	PAL4								
Hitachi	CRP148	PAL4								
Hitachi	CTP202	PAL4								
Hitachi	CTP203	NP6C								
Hitachi	CTP205	PAL4								
Hitachi	CTP206	PAL4								
Hitachi	CTP208	NP8CQ								
Hitachi	CTP209	PAL4								
Hitachi	CTP213	NP6C								
Hitachi	CTP215	NP6C								
Hitachi	CTP216	NP6C								
Hitachi	CTP217	NP6C								
Hitachi	CTP230	NP8C								
Hitachi	CWP132	NP6C								
Hitachi	CWP300	NP8CQ								
Hitachi	D36WF840N	D8 (A8 plus digibox but without feature box)	2001							
Hitachi	GIRD3000	USAT001								
Hitachi	GRD100	OMNI								
Hitachi	P26	SJ								
Hitachi	P27	SX								
Hitachi	P27FM	SX								
Hitachi	P32	SV								
Huanayu	37C2	similar to Hitachi NP82CQ								
ITT	1530HS	EUROMONO 1								HOTEL
ITT	1730HS	EUROMONO 1								HOTEL
ITT	2130HS	EUROMONO 1								HOTEL
ITT	3578UK	COMPACT D								
ITT	3588UK	COMPACT D								
ITT	3788UK	COMPACT D								
ITT	3888UK	COMPACT D								
ITT	3988MS	DIGI B 110								
ITT	848C	COMPACT B								
ITT	Compact B Mk2	CT3425 / CT3437	CT3548							FX3448
ITT	Compact D2 FST	ST25TX								
ITT	Core 110°	5520 / 6320 / 7140								
ITT	Core 2	CP3128								
ITT	CP2212	CVC1110/12								
ITT	CP2342	CVC1110/12 PICO 1A								
ITT	CP2352	CVC1110/12 PICO 1A								
ITT	CP3104	PICO S								
ITT	CP3104/16	PICO S/2								
ITT	CP3106	MONOPRINT A								
ITT	CP3120	Zx4200								
ITT	CP3125/T	PICO S/2-3								
ITT	CP3126	MONOPRINT B								
ITT	CP3128	CORE 2 90DEG								
ITT	CP3200	PICO 1A								
ITT	CP3204	PICO S/2222-3								
ITT	CP3210	PICO A FS								



ITT	CP3225	PICO S+S/2							
ITT	CP3225/1	PICO S/3							
ITT	CP3228	MONOPRINT B							
ITT	CT2500	CVC1175							
ITT	CT2500/2	PICO 1ST/2							
ITT	CT2512	CVC1200							
ITT	CT2512/2	MINI 2 90DEG FS							
ITT	CT2600	CVC1210/15	MINI 2 110DEG STD						
ITT	CT2601	COMPACT 80R DST							
ITT	CT2612	CVC1210/15							
ITT	CT2612/2	MINI 2 110DEG FS							
ITT	CT2613	COMPACT 80R 110DEG							
ITT	CT2700	MINI 2 110DEG STD							
ITT	CT2701	COMPACT 80R DST							
ITT	CT2712	CVC1200	MINI 2 110DEG FS						
ITT	CT2713	COMPACT 80R							
ITT	CT3306	MONOPRINT A							
ITT	CT3307	MONOPRINT A							
ITT	CT3314M	MONOPRINT A							
ITT	CT3315	PICO S-S3							
ITT	CT3325	PICOS2-S3							
ITT	CT3326	MONOPRINT B							
ITT	CT3327	MONOPRINT B							
ITT	CT3414M	80R 110DEG							
ITT	CT3415	80R 110DEG							
ITT	CT3425	80R 110DEG							
ITT	CT3426	COMPACT B							
ITT	CT3435	COMPACT 80R 90DEG							
ITT	CT3436	COMPACT 80R 90DEG							
ITT	CT3437	COMPACT B							
ITT	CT3446	DIGI 3 90DEG							
ITT	CT3448	COMPACT B100DEG							
ITT	CT3535	80R 110DEG							
ITT	CT3537	COMPACT B 110DEG FST							
ITT	CT3548	COMPACT B2 110DEG FST							
ITT	CT3548	COMPACTB							
ITT	CT3548UK	COMPACTB							
ITT	CT3578	COMPACTD							
ITT	CT3598	COMPACTD							
ITT	CT3715	COMPACT 80R							
ITT	CT3724	COMPACT 80R 110DEG							
ITT	CT3724	MONO PLUS							
ITT	CT3835	COMPACT 80R 110DEG FST							
ITT	CT3837	COMPACT B 110DEG							
ITT	CT3878	COMPACTD							
ITT	CT3888	COMPACTD							
ITT	CT4030	CORE 90 FST							
ITT	CT4532	EUROMONO 1/2 90 DEG							
ITT	CT5110	CORE 2							
ITT	CT5111	CORE 2 90DEG							
ITT	CT5520	CORE 2 110DEG							
ITT	CT5521	CORE 2 90DEG							
ITT	CT5523	EUROMONO 1/2 90DEG							
ITT	CT6332	EUROMONO 1/2 110DEG							
ITT	CVC1100	Granada YK1							
ITT	CVC1102								
ITT	CVC1110	Granada AK1							
ITT	CVC1112								
ITT	CVC1120								
ITT	CVC1150								
ITT	CVC1175	Solarvox 20S09	CT2500/2						
ITT	CVC1200	Solarvox 20T19							
ITT	CVC1200								
ITT	CVC1202	CT2512							
ITT	CVC1203								
ITT	CVC1204								
ITT	CVC1210	CT2600 / 2700							
ITT	CVC1212								
ITT	CVC1215		TX2612						
ITT	CVC1217								
ITT	CVC20								
ITT	CVC21								
ITT	CVC25								
ITT	CVC30		TX791						
ITT	CVC32								
ITT	CVC40	CP340							
ITT	CVC45								
ITT	CVC5								
ITT	CVC7								
ITT	CVC800								
ITT	CVC801	Granada XK1/5	CP0211/1						
ITT	CVC802	CT1511/2							
ITT	CVC803	CT0500/2							
ITT	CVC820	Granada WK1/5							
ITT	CVC823	CT600/1							ITT80-90°
ITT	CVC824	CT3701/3732	CT/TX3432/3732						ITT80-90°/110°
ITT	CVC825		ITT 3732						
ITT	CVC830		ITT80-110°						
ITT	CVC9								
ITT	Digi 3	ST3876/3896	ST3576						
ITT	Digivision 6362	Eurostereo 1							
ITT	Digivision 6382	Eurostereo 1							
ITT	Digivision 7162	Eurostereo 1							
ITT	Digivision 7182	Eurostereo 1							
ITT	EuroMono2		FX5532						
ITT	EuroStereo		2BF110NN						
ITT	FS9R	FS10R							
ITT	FX3448	Compact B							
ITT	FX3448UK	Compact B							
ITT	FX3548	Compact B							
ITT	FX3548UK	Compact B							
ITT	FX3724	MONO PLUS							
ITT	FX4030	CORE 2 90DEG							
ITT	FX4530	CORE 2 90DEG							
ITT	FX4532	EUROMONO 1/2 90DEG							
ITT	FX5124	MONOPLUS							
ITT	FX5520	CORE 2 110DEG							
ITT	FX5521	CORE 2 90DEG							
ITT	FX5524	MONO PLUS							
ITT	FX5530	CORE 2 90DEG							
ITT	FX5532	EUROMONO 1/2 90DEG							
ITT	FX6320	CORE 2 110DEG							
ITT	FX6330	CORE 2 110DEG							
ITT	FX6332	EUROMONO 1/2 110DEG							
ITT	MC3896	DIGI 3 110DEG							
ITT	Mini 2 ST2/2								TX3325
ITT	Monoprint A	CT3306	CP3106						
ITT	Monoprint B	CT3327	CT3326						TX3326
ITT	Monoprint B								TX3126
ITT	Pico 1A	Granada 14AK1							
ITT	Pico S/2								
ITT	Pico S/3	CT2500	TX2612						CP3106
ITT	Pico S/3	Solarvox 16R19	Solarvox 20S19						CT23304
ITT	Pico S/3	Tashiko 14F681	Solarvox 14R19						KB Aristocrat A632S
ITT	SAT7190	M80							CT3315/1
ITT	SFN3578	COMPACT D-2							CP3125
ITT	SFN3878	COMPACT D-2							
ITT	SFN5363	EUROSTEREO 1							
ITT	SFN5515	5000							
ITT	SFN5552	EUROSTEREO 1							
ITT	SFN5553	EUROSTEREO 2 B-F							
ITT	SFN5575	STEREO PLUS							
ITT	SFN5581	COMPACT D/E							
ITT	SFN6315	5000							
ITT	SFN6355	STEREO PLUS							
ITT	SFN6361	COMPACT DE							
ITT	SFN6363	EUROSTEREO 1							
ITT	SFN6364	EUROSTEREO 2 B-F							
ITT	SFN6365	STEREO PLUS							

ITT	SFN6380	COMPACT B/2				
ITT	SFN6385	EUROSTEREO PLUS				
ITT	SFN7155	STEREO PLUS				
ITT	SFN7161	COMPACT D/E				
ITT	SFN7163	EUROSTEREO 1				
ITT	SFN7164	EUROSTEREO 2 B-F				
ITT	SFN7165	STEREO PLUS				
ITT	SFN7180	COMPACT D/2				
ITT	SFN7185SR	EUROSTEREO PLUS				
ITT	SFN7284	EURODIGI 16.9				
ITT	SFN7291	EURODIGI 16.9				
ITT	SFN8291	EURODIGI 16.9				
ITT	SFN8294	EURODIGI 16.9				
ITT	SFN9291	EURODIGI 16.9				
ITT	SFN9294	EURODIGI 16.9				
ITT	SFX3489	COMPACT D/2				
ITT	SFX3578	COMPACT D/2				
ITT	SFX3598	COMPACT D/2				
ITT	SFX3878	COMPACT D/2				
ITT	SFX3888	COMPACT D/2				
ITT	ST3487	DIGI 3 110DEG				
ITT	ST3493C	CVC1200				
ITT	ST3576	DIGI 3 110DEG				
ITT	ST3576T	DIGI 3 110DEG				
ITT	ST3876	DIGI 3				
ITT	ST3876T	DIGI 3				
ITT	TX2812	CVC1200				
ITT	TX2812	CVC1210/15				
ITT	TX2712	CVC1200				
ITT	TX28UK	COMPACTD				
ITT	TX3126	MONOPRINT B				
ITT	TX3325	CVC1200				
ITT	TX3326	MONOPRINT B				
ITT	TX3327	MONOPRINT B				
ITT	TX3446	DIGI 3 90DEG				
ITT	TX3447	DIGI 3 110DEG				
ITT	TX3493C	CVC1200				
ITT	TX3546	DIGI 3 110DEG				
ITT	TX3546T	DIGI 3 110DEG				
ITT	TX3835	80R 110DEG FST				
JMB	JMB20NTX (10009379)	11AK19P4, 11AK19P5	2001-2002		AK19 prod.code: 10009379	
JMB	JMB20NTX	11AK30-2				
JMB	JMB20R	Daewoo chassis				
JMB	JMB28NTX (10009380)	11AK19P4, 11AK19P5	2001-2002		AK19 prod.code: 10009380	
JMB	JMB28NTX	11AK37-6	2002-2003			
JMB	JMB66W	11AK19P5, 11AK37-6 (after 2002)				
JMB	JMB76W	PT92				
JMB	JMBM020FSTS	PT92				
JMB	JMBN028WSS	PT92				
JMB	JMBTV1402R	CTU-AA	Service mode: switch to channel 75, hold	*	Micro TDA9380PS/N2/110586	
JMB	JMBTV455GR	CTN-BB				
JMB	JMBV028WSS	11AK19Pro				
JMB	J1PTV014K	PT11				
JVC	2151	TX100				
JVC	7943	TX10				
JVC	7731R	TX90	TX9			
JVC	7732T		TX9			
JVC	7741R	TX100				
JVC	7742T	TX100				
JVC	7831R	FERG TX9				
JVC	7832T	TX10				
JVC	7841R	TX100				
JVC	7842T	TX100				
JVC	7933TS	TX10				
JVC	AV1414EE	CG	2002, multisystem B/G, D/K, I		RM-C360GY	
JVC	AV1415EE	CG	2002, multisystem B/G, D/K, I			
JVC	AV1434EE	CG	2002, multisystem B/G, D/K, I		RM-C364GY	
JVC	AV1435 AV1435EE AV1435F	CG	2002, multisystem B/G, D/K, I		RM-C90 or RM-C364	
JVC	AV1438	CG	2002, multisystem B/G, D/K, I		RM-C90 or RM-C364	
JVC	AV14A3	CG	2002, multisystem B/G, D/K, I			
JVC	AV14AMG3	CG	2002, multisystem B/G, D/K, I			
JVC	AV14BJ8EPS	11AK36 (non UK model)				
JVC	AV14F3	CG	2002, multisystem B/G, D/K, I		RM-C90 or RM-C364	
JVC	AV14F43BK	CG	2002, multisystem B/G, D/K, I		RM-C368GY	
JVC	AV14FM	CG	2000, multisystem B/G, D/K, I			
JVC	AV14FMG3B	CG	2002, multisystem B/G, D/K, I		RM-C90 or RM-C364	
JVC	AV14FMT3	CG	2002, multisystem B/G, D/K, I		RM-C90 or RM-C364	
JVC	AV14FTR	CG	2000, multisystem B/G, D/K, I			
JVC	AV16N73	CG	2002, multisystem B/G, D/K, I		RM-C367GY	
JVC	AV20N3	CG	2002, multisystem B/G, D/K, I		RM-C364GY	
JVC	AV20N43BK	CG	2002, multisystem B/G, D/K, I		RM-C368GY	
JVC	AV20N4BK	CG	2000, multisystem B/G, D/K, I			
JVC	AV20NMG3B	CG	2002, multisystem B/G, D/K, I		RM-C364GY	
JVC	AV20NX3	CH	2002, multisystem B/G, D/K, I		RM-C1014-1H	
JVC	AV2105EE	CG	2002, multisystem B/G, D/K, I		RM-C90 or RM-C364	
JVC	AV2115EE	CG	2002, multisystem B/G, D/K, I		RM-C364GY-1H	
JVC	AV2168TEE	CH	2002, multisystem B/G, D/K, I		RM-C1023-1H	
JVC	AV2178TEE	CH	2002, multisystem B/G, D/K, I		RM-C1013-1H	
JVC	AV21A10	CG	2002, multisystem B/G, D/K, I			
JVC	AV21BF11EJS	no chassis	2002, UK PAL I		RM-C1100	
JVC	AV21D43BK	CG	2002, multisystem B/G, D/K, I		RM-C368GY	
JVC	AV21D73	CG	2002, multisystem B/G, D/K, I		RM-C367GY	
JVC	AV21DX3	CH	2002, multisystem B/G, D/K, I		RM-C1014-1H	
JVC	AV21F1EK	JX	1992			
JVC	AV21H1EK	JX III	1993			
JVC	AV21H2EK	JX III	1993			
JVC	AV21SX1EK	BB	1996		RM-C770	
JVC	AV21TS1EK	BB	1996		RM-C760	
JVC	AV21TS4EK	JH	1999/2000			
JVC	AV21VM1EK	BA	1995			
JVC	AV24WT2EK	JF	1997, UK PAL I		RM-C794	
JVC	AV24WT5Exx	JK II	2001		RM-C55 (Silver) or RM-C51 (Black)	
JVC	AV2555TEE	CH	2002, multisystem B/G, D/K, I		RM-C1013-1H	
JVC	AV2568TEE	CH	2002, multisystem B/G, D/K, I		RM-C1013-1H	
JVC	AV25F1EK	JX	1990-1992			
JVC	AV25FX11EK	JX II	1991			
JVC	AV25GS1EK	MXI, II	1993			
JVC	AV25KX3	CH	2002, multisystem B/G, D/K, I		RM-C1014-1H	
JVC	AV25LH3	CH	2002, multisystem B/G, D/K, I		RM-C1011-1H	
JVC	AV25LS3	CH	2002, multisystem B/G, D/K, I		RM-C1010-1H	
JVC	AV25LX3	CH	2002, multisystem B/G, D/K, I		RM-C1014-1H	
JVC	AV25PS	JK	2000, multisystem B/G, D/K, I			
JVC	AV25PX	JK	2000, multisystem B/G, D/K, I			
JVC	AV25S1EK	MX II	1993		RM-C873	
JVC	AV25S4EK	MX IV	1994			
JVC	AV25SD4EK	MX III	1994/1995			
JVC	AV25SX1EK	JA	1996		RM-C770	
JVC	AV25SX2EK	JE	1998		RM-C792	
JVC	AV25XA4EK	JH	1999/2000			
JVC	AV25TS1EK	JC	1996		RM-C760	
JVC	AV25TS4EK	JH	1999/2000			
JVC	AV25VM1EK	JA	1995		RM-C760	
JVC	AV28BD5EKIS	Daewoo CP785	2000, UK PAL I			
JVC	AV28BT5	11AK19 (nonUK)				
JVC	AV28CT1EK	JK II	2002, PAL I		RM-C55 (Silver) or RM-C51 (Black)	
JVC	AV28F1EK	JX	1991			
JVC	AV28GS1EK	MXI, II	1993			
JVC	AV28GT1BJF	11AK45B4	2003		RM-C1512B (VE30021286)	
JVC	AV28GT1SJF	11AK45B4	2003		RM-C1512S (VE30021287)	
JVC	AV28H20EUB (black)	MF II	2002, Euro-multisystem B/G, D/K, I		RM-C50 (black)	
JVC	AV28H20EUS (silver)	MF II	2002, Euro-multisystem B/G, D/K, I		RM-C54H (silver)	
JVC	AV28L2EU	MF	2001			
JVC	AV28R100EKS	JK, colour variant of AV28WFR1EKS	2001			
JVC	AV28R10EKSL	JK, colour variant of AV28WFR1EKS	2001			
JVC	AV28R250EKS	JL	2002		RM-C60 (Silver) or RM-C52 (Black)	
JVC	AV28R25EKS	JL	2002		RM-C60 (Silver) or RM-C52 (Black)	
JVC	AV28R25EKS/c	JL2	2003		the /c version is identified by letter "C" at the end of the serial number	
JVC	AV28R370KE	JL2	2003		RM-C1504	
JVC	AV28R4SK	JW	2004		RM-C1502-1C (Silver)	

JVC	AV28S1EK	MX II	1993	RM-C873					
JVC	AV28S2EK	JK	2001	RM-C55					
JVC	AV28S4EK	MX IV	1994						
JVC	AV28SD4EK	MX III	1994/1995						
JVC	AV28T10EKSL	JK, colour variant of AV28WFT1EKS	2001						
JVC	AV28T25EK	JL	2002	RM-C55H (Grey) or RM-C52 (Black)					
JVC	AV28T25EK/c	JL2	2003	the /c version is identified by letter "C" at the end of the serial number					
JVC	AV28T35SPE	JL2	2003	RM-C1502					
JVC	AV28T4SK (AV28T4BK)	JW	2004	RM-C1502-1C (Silver) or RM-C1502B-2C (Black)					
JVC	AV28T55EK	JL	2002	RM-C55H (Grey) or RM-C52 (Black)					
JVC	AV28T67SKE	JL2	2003	RM-C1500					
JVC	AV28T77SK	JW	2004	RM-C1502-1C (Silver)					
JVC	AV28VM1EK	JA	1995	RM-C760					
JVC	AV28WFR1EKS	JK (Dolby variant of AV28WFT1EKS)	2000/2001 PAL I	RM-C52					
JVC	AV28WFT1EKS	JK	2000/2001 PAL I	RM-C51					
JVC	AV28WFX1EU		multisystem B/G, D/K, I	RM-C50 (black)					
JVC	AV28WH3EP	MC							
JVC	AV28WH5EU	MF	2001, Multistandard B/G, D/K, I	RM-C54					
JVC	AV28WR2EK	JF	1997						
JVC	AV28WR4EK	JF	1999						
JVC	AV28WT2EK	JF	1997, UK PAL I	RM-C794					
JVC	AV28WT4EK	JF	1999						
JVC	AV28WTSKES	JK II	2001, UK PAL I	RM-C55 (Silver) or RM-C51 (Black)					
JVC	AV28WX1EK	JD	1996	RM-C782					
JVC	AV28X10EKS	MF	2001	RM-C55					
JVC	AV28X25EIGY	MF II	2002, Irish PAL I	RM-C55					
JVC	AV28X25EIKGY	MF II	2002, UK PAL I	RM-C55					
JVC	AV28X25EIS	MF II	2002, Euro-multisystem B/G, D/K, I	RM-C54					
JVC	AV28X35HKE	ML	2003, PAL I	RM-C55					
JVC	AV28X37HKE	ML	2003, PAL I	RM-C55					
JVC	AV28X4SK (AV29X4SR)	ML2	2004, PAL I	RM-C64H					
JVC	AV28Z10EUS	MF	2001, Multistandard B/G, D/K, I	RM-C58					
JVC	AV2968TEE	CH	2002, multisystem B/G, D/K, I	RM-C1023-1H					
JVC	AV29BD3EK	JE	1998						
JVC	AV29LS2	CH	2002, multisystem B/G, D/K, I	RM-C1020-1H					
JVC	AV29LX2	CH	2002, multisystem B/G, D/K, I	RM-C1024-1H					
JVC	AV29R8B	JK	2000, multisystem B/G, D/K, I						
JVC	AV29RF6	JK	2000, multisystem B/G, D/K, I						
JVC	AV29SX1EK	JA	1995						
JVC	AV29SX2EK	JE	1997-1998	RM-C792					
JVC	AV29SX4EK	JH	1999						
JVC	AV29TS2EK	JE	1998	RM-C795					
JVC	AV29TS4Ex	JH	1999	RM-C795-1E					
JVC	AV29W93	CH	2002, multisystem B/G, D/K, I	RM-C1011-1H					
JVC	AV29W93B	CH	2002, multisystem B/G, D/K, I	RM-C1012-1H					
JVC	AV29WS3	CH	2002, multisystem B/G, D/K, I						
JVC	AV32H20EUS	MF II	2002, Euro-multisystem B/G, D/K, I	RM-C54H (silver)					
JVC	AV32P10EKS/EIS	MF	2001, PAL I (EKS) or multisystem (EIS)	RM-C57					
JVC	AV32R250EKS	JL	2002	RM-C60H					
JVC	AV32R25EKS	JL (Dolby variant of AV32T25EKS)	2002	RM-C60H					
JVC	AV32R25EKS/c	JL2	2003	the /c version is identified by letter "C" at the end of the serial number					
JVC	AV32R370KE	JL2	2003	RM-C1504					
JVC	AV32R4SK	JW	2004	RM-C1502-1C (Silver)					
JVC	AV32T25EKS	JL	2002	RM-C55H (Grey) or RM-C52 (Black)					
JVC	AV32T25EKS/c	JL2	2003	the /c version is identified by letter "C" at the end of the serial number					
JVC	AV32T4SK (AV32T4SR)	JW	2004	RM-C1502-1C (Silver)					
JVC	AV32T55EKS	JL	2002	RM-C55H (Grey) or RM-C52 (Black)					
JVC	AV32T67SKE	JL2	2003	RM-C1500					
JVC	AV32T77SK	JW	2004	RM-C1502-1C (Silver)					
JVC	AV32WFP1EK	MD	1999/2000						
JVC	AV32WFR1EKS	JK (Dolby variant of AV32WFT1EKS)	2000/2001 PAL I	RM-C52					
JVC	AV32WFT1EKS	JK	2000/2001 PAL I	RM-C51					
JVC	AV32WFX1EU		multisystem B/G, D/K, I	RM-C50 (black)					
JVC	AV32WH3EP	MC	1998						
JVC	AV32WL1EK	MD	2000	RM-C55					
JVC	AV32WP2EK	MB	1998						
JVC	AV32WR2EK	JF	1997						
JVC	AV32WR4EK	JF	1999						
JVC	AV32WX1EK	JD	1996	RM-C782					
JVC	AV32X250EUS	MF II	2002, multisystem B/G, D/K, I	RM-C54					
JVC	AV32X25EIGY	MF II	2002, Irish PAL I	RM-C55					
JVC	AV32X25EIKGY	MF II	2002, UK PAL I	RM-C55					
JVC	AV32X25EUS	MF II	2002, multisystem B/G, D/K, I	RM-C54					
JVC	AV32X35HKE	ML	2003, PAL I	RM-C55					
JVC	AV32X37HKE	ML	2003, PAL I	RM-C55					
JVC	AV32X4SK (AV32X4SR)	ML2	2004, PAL I	RM-C64H					
JVC	AVN280EKT	BYII							
JVC	AVS250	BXII							
JVC	AVS250EK	BXII							
JVC	C1480	BXII							
JVC	C14A1EK	MV							
JVC	C14E1EK	Onwa							
JVC	C14E1EK	Onwa							
JVC	C2151R	TX100							
JVC	C2152T	TX100							
JVC	C2153TS	TX100							
JVC	C21ET1EK	Onwa	same as C21M3EK						
JVC	C21M3EK	Onwa	same as C21ET1EK						
JVC	C21TX1	MY							
JVC	C21TX1	MYII							
JVC	CS2180	BXII							
JVC	CS2181	BYX							
JVC	CS2181	BYX							
JVC	CS2190	BXII							
JVC	CS2191	BYX							
JVC	CS21M2EK	MYII							
JVC	CS21M3EK	Onwa							
JVC	CV14EKB	CY21EK CVT14EKB							
JVC	CVT14EKB	CY21EK CV14EKB							
JVC	CY21EK	CV14EKB CVT14EKB							
JVC	FXE95TN	DXE95TN							
JVC	HV28P37SJE(SUE)	MM	2003-2004, multisystem, £400-£500	RM-C1800					
JVC	HV29LPZ	MF	2002, multisystem B/G, D/K, I	RM-C214 (TEXT), RM-C215 (without TEXT for /HK model)					
JVC	HV29VWZ	MF	2002, multisystem B/G, D/K, I	RM-C1030					
JVC	HV32P37SJE(SUE)	MM	2003-2004, multisystem, £600-£700	RM-C1800					
JVC	HV34LZ	MF	2002, multisystem B/G, D/K, I	RM-C1030					
JVC	HV36P38SJE(SUE)	MM	2003-2004, multisystem, £1000-£1300	RM-C1800					
JVC	HV53PRO	MF	Projection						
JVC	TUC200	E2							
LG	2190	PC04A							
LG	CB20F84	Beko 12.4/12.5							
LG	CE20F60K	MC019A	2001						
LG	CE20J9BX/GX/RX	MC009A	2000						
LG	CE21F60KX	MC019A	2001						
LG	CE21M66KX	MC019A	2001						
LG	CE21G28ET	MC007B	2000						
LG	CE21G86	MC007B	2000						
LG	CE21T22KX	MC019A	2001						
LG	CE28H86T	MC007A	2000						
LG	CE29010ET	MC991A	1999						
LG	CE29Q28ET	MC007A	2000						
LG	CE29Q46ET	MC007A	2000						
LG	CF21A50F	PC58B							
LG	CF21C28F	PC58B							
LG	CF25A50F	PC58A Chassis							
LG	CF25A56T	PC73A							
LG	CF25A64D/T	PC73A	1997						
LG	CF25C20F	PC33J							
LG	CF25C22F	PC33J							
LG	CF25C28F	PC58A Chassis							
LG	CF28A50F	PC58A Chassis	Saville XPM25						
LG	CF28A64T	PC73A	1997						
LG	CF28C22F	PC33J Chassis							
LG	CF28C28F	PC58A Chassis							
LG	CF29C20N	PC33J							
LG	CF29C42F	PC33J Chassis							
LG	C114A80	PC31A							
LG	C114A80	PC31A Chassis							
LG	C114B50F	Beko 11.1							

LG	C114E20F	PC53A Chassis	1998						
LG	C114F80F	Beko 12.1 (?? not sure)							
LG	C114F84X	Beko 12.4/12.5		user remote part 7F5187, service remote part K99187					
LG	C120A50	PC11A							
LG	C120A80F(A)	PC31A Chassis							
LG	C120A90F	PC31A	1996						
LG	C120A96F	PC53A Chassis							
LG	C120C22F	PC42B Chassis							
LG	C120E20F	PC53A Chassis	1998						
LG	C120F60X	PC81A	1998						
LG	C120F80F	PC81A							
LG	C120F84X	Beko 12.4/12.5							
LG	C121A80F	PC31A Chassis							
LG	C121C22	PC42B Chassis							
LG	C121E20F	PC53A Chassis	1998						
LG	C121F60X	PC81A	1998						
LG	C121F80F	PC81A							
LG	C121Q20ET	PC99DA	1999						
LG	C121T20F	PC81B (=KC121T20F)			multistandard B/G, D/K, I				
LG	C121T24F	PC81B (=C121T20F)			multistandard B/G, D/K, I				
LG	C125H40	PC8KA							
LG	C129H40	PC8KA							
LG	CIS4361	PC04X							
LG	CIS4441	PC04X		Similar to Bush 2114					
LG	CIT2162X	PC08X8							
LG	CIT2165X	PC08X8							
LG	CIT2168F	PC04A							
LG	CIT2170F	PC12B							
LG	CIT2172F	PC07X2							
LG	CIT2175	PC07X2							
LG	CIT2180F	PC04A							
LG	CIT2181F	PC04A							
LG	CIT2190F	PC04A		Matsui 2091					
LG	CIT2191F	PC04A							
LG	CIT2570F	PC12B							
LG	CIT2588	MC05B							
LG	CIT2871F	PC12B							
LG	CIT4172	PC11A							
LG	CIT4175	PC11A							
LG	CIT4441	PC04X							
LG	CIT4442	PC04X							
LG	CIT4782	PC08X8							
LG	CIT4785	PC08X8							
LG	CIT4902	PC04A							
LG	CIT4905	PC04A							
LG	CIT6105	PC04X							
LG	CIT9172	PC11A							
LG	CIT9505	PC08X8							
LG	CIT9508	PC08X8							
LG	CIT9822	PC04A							
LG	CIT9825	PC04A							
LG	CIT9902F	PC04A							
LG	CIT9905	PC04A							
LG	CT2190	Matsui 2090							
LG	CY20B70Y	MC41A							
LG	D128F211	DC26A							
LG	D128Z12	PD37A	2002						
LG	D132F211	DC26A	1998						
LG	D132F211	DC26A	2002						
LG	D132Q82	PD00JA	2001						
LG	KCI20F60X	PC81A	1998						
LG	KCI21F60X	PC81A	1998						
LG	KCI21T24F	PC81B (=C121T20F)			=C121T20F				
LG	KE14P21B/BX/SX	MV025A, Deck D-33	2002						
LG	KE14P2B/BX/GX/PX/SX	MV995B	2000, £175						
LG	KE14U43	MV995A	1999						
LG	KE14U73X	MV995A	1999						
LG	KE15FA91SXB(X)	MV025A	2003						
LG	KE15FA92SXB(X)	MV031A	2003/2004, £199						
LG	KE15FA9SXB(X)	MV995B	2002						
LG	KE20P30X	MV995B	2000, £220						
LG	KE20P31X	MV025A, Deck D-33	2002						
LG	KE20U73X	MV995A	1999						
LG	KE21P10T	MV008A, Deck D-33							
LG	K114U30	MV55A							
LG	K114U71	PV71A, Deck D-27							
LG	K114U72	PV71A, Deck D-27							
LG	K114V20	PC32A							
LG	K114V38	MV55A	1996						
LG	K120U30	MV55A							
LG	K120U71	PV71A, Deck D-27							
LG	K120U72	PV71A, Deck D-27							
LG	K120V38	MV55A	1996						
LG	KY14V30	MC48A							
LG	KY20V30	MC48A							
LG	LAFINION 72	MC035A, see RZ29FC40RB	2003						
LG	LAFINION 82W	MC035A, see RZ32FZ40RB	2003						
LG	LE15A10	MF004A	2000/2001						
LG	LE15A15	ML012A	2001/2002						
LG	LPXG2	NP00EA	2000						
LG	LPXG22	NP00ED	2001						
LG	LPXG24	NP00ED	2001						
LG	MW30LZ10	MF02HA							
LG	MZ40PA10	MP00MA	2001						
LG	MZ40PZ10	MP00MC	2001						
LG	RE15LA30	MF004A	2000						
LG	RE20CB10MX	MC019A	2002/2003						
LG	RE20LA30	MF002A, LCD	2003, £739						
LG	RE21FB30RX	MC019A	2002						
LG	RE28FZ10PX	MC017A	2001		LOPTx 6174V-6003Q				
LG	RE28FZ10RX	MC022A	2003		LOPTx 6174V-5003G				
LG	RE28FZ30RQ	MC036A	2003						
LG	RE28FZ31RQ	MC022A	2003						
LG	RE29FA31PX	MC017A	2003						
LG	RE29FA33PX(X)	MC017A	2003, £539						
LG	RE32FZ10IP		2003, £569						
LG	RE32FZ10PX	MC017A	2001		LOPTx 6174V-6003E				
LG	RE32FZ30RQ	MC036A	2003						
LG	RE39NZ40RB	MP015D	2003						
LG	RE44SZ20RD	MB02JA	2002						
LG	RE49NZ21RB	MP015D	2002						
LG	RE56NZ21RB	MP015D	2002						
LG	RI28CX10RX	Beko			service remote part K99187				
LG	RI28CZ10RX	Beko 14.2	2002		chassis marked V180-190.03, V180-190.08				
LG	RI32CZ10RX	Beko 14.2	2002						
LG	RZ15LA31	ML012A	2002/2003, £369						
LG	RZ15LA32	ML024A, LCD	2002/2003, £320						
LG	RZ17LZ10	ML027A, LCD	2002/2003, £489						
LG	RZ20LA31	LCD	2003, £719						
LG	RZ23LZ20	LCD	2003, £499						
LG	RZ29FC40RB	MC035A, Lafinion 72	2003						
LG	RZ30LZ13	LCD	2003, £1,995						
LG	RZ32FZ40RB	MC035A, Lafinion 82W	2003						
LG	WF32Q10IP	MC993A	1999						
LG	WF28A12T	MC52C	1996						
LG	WF32A14T	MC52C	1996						
LG	WF32A22DJ	PC82A	1998						
Loewe	3781 (Aventos 3781)		2004 £650						
Loewe	63410	C8500							
Loewe	63415	C8500							
Loewe	63417	C8500							
Loewe	63471	C8500							
Loewe	MCP110	C8500							
Loewe	MCP114	C8500							
Logik	690	Orion 20LS		Saisho CT204					
Logik	698	Orion 20LT		Saisho CT208					
Logik	4090	TX90							
Logik	4094	TX90							
Logik	4098	TX100							
Logik	4290	TX100							

Logik	4294	TX100							
Logik	4298	TX10							
Logik	20A1	TX100							
Logik	20E1	TX90							
Logik	4298	TX100							
Logik	M125	KC							
Luxor	3351	L1 Chassis							
Luxor	3392	Mono Plus 2 (MP2)							
Luxor	3654	L1 Chassis							
Luxor	3711	B-2 Chassis							
Luxor	3781	180 Chassis	B-1 Chassis						
Luxor	4211	B-2 Chassis							
Luxor	4723	Nokia 3723							
Luxor	4743	Nokia 3743							
Luxor	4751	A-1 CHASSIS							
Luxor	4781	B-1 CHASSIS							
Luxor	4783	Nokia 3783							
Luxor	4791	B-2 CHASSIS							
Luxor	4854	L-1 CHASSIS							
Luxor	4874	L-2 CHASSIS							
Luxor	5111	BC Chassis	B-2 Chassis						
Luxor	5114	BC Chassis	B-2 Chassis						
Luxor	5134	B3-1 Chassis	SX9 Chassis						
Luxor	5141	SX9 Chassis							
Luxor	5151	A1 Chassis							
Luxor	5191	B2 Chassis							
Luxor	5192	Mono Plus 2 (MP2)							
Luxor	5355	SX9 Chassis							
Luxor	5564	L-2 CHASSIS							
Luxor	5566	K1							
Luxor	5592	Mono Plus 2 (MP2)							
Luxor	5601	BC Chassis	B-2 Chassis						
Luxor	5608	BC Chassis	B-2 Chassis						
Luxor	5609	B-2 Chassis							
Luxor	5619	SX9 Chassis							
Luxor	5634	SX9 Chassis							
Luxor	5636	SX9 Chassis							
Luxor	5639	SX9 Chassis							
Luxor	5644	SX9 Chassis							
Luxor	5661	A-1 CHASSIS							
Luxor	5664	A-1 CHASSIS							
Luxor	5681	B-1 CHASSIS							
Luxor	5691	B-2 Chassis							
Luxor	5698	B-2 Chassis							
Luxor	6355	SX9 Chassis							
Luxor	6368	K-1 Chassis							
Luxor	6385	M Chassis	Salora						
Luxor	6387	L-2 CHASSIS							
Luxor	6615	A-2 CHASSIS							
Luxor	6656	SX9 Chassis							
Luxor	6661	A-1 CHASSIS							
Luxor	6663	A-1 CHASSIS							
Luxor	6664	A-1 CHASSIS							
Luxor	6709	B-2 Chassis							
Luxor	6711	B-2 Chassis							
Luxor	6711	BC Chassis							
Luxor	6714	A-2 CHASSIS							
Luxor	6718	B-2 Chassis							
Luxor	6718	BC Chassis							
Luxor	6719	A-2 CHASSIS							
Luxor	6734	SX9 Chassis							
Luxor	6736	SX9 Chassis							
Luxor	6739	SX9 Chassis							
Luxor	6741	SX9 Chassis							
Luxor	6781	A-1 CHASSIS							
Luxor	6791	B-2 Chassis							
Luxor	6798	B-2 Chassis							
Luxor	7064	L-2 CHASSIS							
Luxor	7068	K-1 Chassis							
Luxor	7075	M Chassis	Salora						
Luxor	7076	M-1 CHASSIS							
Luxor	7085	M Chassis	Salora						
Luxor	7128	EURODIGI 16:9							
Luxor	8228	EURODIGI 16:9							
Luxor	8289	Nokia/Salora/Luxor MZ-chassis							
Luxor	9128	EURODIGI 16:9							
Luxor	18056449	SX9 Chassis							
Luxor	18067349	SX9 Chassis							
Luxor	17L67	L2 Chassis							
Luxor	FS71U1	FEATURE STEREO (FS Chassis)							
Matsui	1091X	Goodmans Compact-100							
Matsui	1400 IRE	11AK36A8	2003-2004			AK36 prod.code: 10023024			
Matsui	1402								
Matsui	1403								
Matsui	1407	orion chassis	PCB marked TM7384A			serv.mode: set volume to minimum, press VOL- on TV and '9' on R/C, navigate using Ch+/Ch-, adjust using Vol+/Vol-, to			
Matsui	1407RS	same chassis to 2107N	serv.mode: see Matsui 1407						
Matsui	1408R	Orion chassis	PCB TM9414A, TM9414B, Micro OEC6053			Remote 076R0BR060			
Matsui	1408T	Orion TV134TX	PCB marked TM9414B, Micro OEC6053A			Remote 07680BQ150			
Matsui	1409R	Orion chassis, serv.mode see 1407	PCB marked TMX486A			076R0DG020		scan coils XY-14016AL2 E157951 fail very often	
Matsui	1409T	Orion chassis, serv.mode see 1407	PCB marked TMX486A			076R0DG010		scan coils XY-14016AL2 E157951 fail very often	
Matsui	140R	=140R Orion chassis	PCB marked TM6362						
Matsui	140T	=140T Orion chassis	PCB marked TM6362						
Matsui	1410	Amstrad CTV1401	Saisho CT1400						
Matsui	1410	Saisho CT142R	ORION 14PS(B)						
Matsui	1410R	Orion CTN BB							
Matsui	1410T	Orion CTN BB							
Matsui	1414R		there is no elec.service mode, but there is child lock, volume lock and tuning lock						
Matsui	1420	Orion 14DS	Saisho CT141						
Matsui	1420A	Saisho CT141X							
Matsui	1420B								
Matsui	1420T	Orion chassis, serv.mode see 1407	2002/2003 £70, 2004 £60			PCB TMA504A, Micro OECF00	INIT 01 -> EEPROM 03H, INIT 02 ->04H and so on		
Matsui	1420T(SIL)(B)	Orion chassis, serv.mode see 1407	2004			PCB TMB557A, Micro PCM195C3OECF009B (OECF009B)			
Matsui	1421T Silver		2004 £60						
Matsui	1422								
Matsui	1424	TATUNG 190/195							
Matsui	1430								
Matsui	1430A								
Matsui	1434	Tatung 190							
Matsui	1435	Orion 14A chassis	PCB marked TM0176B						
Matsui	1435B	Orion chassis	PCB marked TM0176C						
Matsui	1436	Bush 2004	Alba CTV100						
Matsui	1436XA								
Matsui	1440	Orion 14DR	Saisho CT142R						
Matsui	1440A	Saisho CT142RX							
Matsui	1450	Binatone 01/9014	Boots CTV1414R						
Matsui	1450	Matsui 1455							
Matsui	1450	Saisho CT147R	HINARI CT4			Dansai CTV1477			
Matsui	1455	Alba CTV4805	Onwa						
Matsui	1465	1860 2060							
Matsui	1465								
Matsui	1466	ORION 14LR							
Matsui	1476	Orion chassis	PCB marked TM0280A			LOPTx Q401 2SD2089 LOPTx FCM-14B007A			
Matsui	1480	Saisho CT149							
Matsui	1480A	Orion 14DT	Saisho CT149X						
Matsui	1480B								
Matsui	1481								
Matsui	1481B	Orion 14AT	PCB marked TM0157						
Matsui	1482								
Matsui	1496(T) ( R )	Matsui 2096, CHASSIS SR1	Crown CRP2196NT						
Matsui	1498	Onwa							
Matsui	1408R	see 1408R (letter "O" = zero)							
Matsui	14R1	Grundig G1000							
Matsui	14T1	Grundig G1000	GT1402						
Matsui	14TRS0	Tatung F chassis							
Matsui	14TV/DVR1	TV/DVD/VCR Combi	2004 £199						
Matsui	14V1	G1000	GT1401						
Matsui	14V1R	GrundigCUC7301	P37-071						
Matsui	14V1T	GrundigCUC7301	P37-731						
Matsui	14V2R	CUC7303							



Mitsubishi	CT15MS1TX	EE2		
Mitsubishi	CT180			
Mitsubishi	CT186			
Mitsubishi	CT1902			
Mitsubishi	CT1905			
Mitsubishi	CT2023			
Mitsubishi	CT2027			
Mitsubishi	CT2027			
Mitsubishi	CT2101			
Mitsubishi	CT2117			
Mitsubishi	CT2124	Euro 4 Chassis		
Mitsubishi	CT2125			
Mitsubishi	CT2131	Euro 4 Chassis		
Mitsubishi	CT2132	Euro 4 Chassis		
Mitsubishi	CT2141	Euro 4 Chassis		
Mitsubishi	CT2142	Euro 4 Chassis		
Mitsubishi	CT2144	Euro 4 Chassis		
Mitsubishi	CT2145	Euro 6 Chassis		
Mitsubishi	CT2145BM	Euro 6 Chassis		
Mitsubishi	CT2146	Euro 6 Chassis		
Mitsubishi	CT21461X	Euro 6 Chassis	EURO 4	
Mitsubishi	CT2153	Euro 4Z Chassis		
Mitsubishi	CT2154	Euro 4 Chassis		
Mitsubishi	CT2155	Euro 4Z Chassis		
Mitsubishi	CT21A2STX(LST)	Euro 12 Chassis		
Mitsubishi	CT21A3STX	Euro 12 Chassis		
Mitsubishi	CT21A5STX	Euro 14FS		
Mitsubishi	CT21AV1B	EE3		
Mitsubishi	CT21M1	Euro 10 Chassis		
Mitsubishi	CT21M1BM	Euro 10 Chassis		
Mitsubishi	CT21M1LM	Euro 10 Chassis		
Mitsubishi	CT21M2	Euro 14		
Mitsubishi	CT21M3	Euro 14		
Mitsubishi	CT21M5B(T)	EE4		
Mitsubishi	CT2206			
Mitsubishi	CT2217			
Mitsubishi	CT2223			
Mitsubishi	CT2224			
Mitsubishi	CT2227			
Mitsubishi	CT2230			
Mitsubishi	CT2517	Euro 1 Chassis		
Mitsubishi	CT2525	Euro 10 Chassis		
Mitsubishi	CT2528	Finlux 9000		
Mitsubishi	CT2531	Euro 4 Chassis		
Mitsubishi	CT2532	Euro 4 Chassis		
Mitsubishi	CT2533			
Mitsubishi	CT2534	Euro 4 Chassis		
Mitsubishi	CT2545	Euro 4 Chassis		
Mitsubishi	CT2553	Euro 4Z Chassis		
Mitsubishi	CT2554			
Mitsubishi	CT2555	Euro 4Z Chassis		
Mitsubishi	CT25A2STX(LST)	Euro 12 Chassis		
Mitsubishi	CT25A3STX	Euro 12 Chassis		
Mitsubishi	CT25A4STX(LST)	Euro 12 Chassis		
Mitsubishi	CT25A5STX	Euro 14FS		
Mitsubishi	CT25A6STX	Euro 12 Chassis		
Mitsubishi	CT25AV1B	EE3	TV/Sat Rx	
Mitsubishi	CT25AV1BDS	EE3 Chassis		
Mitsubishi	CT25B2STX	Euro 11 Chassis		
Mitsubishi	CT25B3ST	B3		
Mitsubishi	CT25M1	M1 Chassis Euro 10 Chassis		
Mitsubishi	CT25M2TX	Euro 14		
Mitsubishi	CT25M3TX	Euro 14		
Mitsubishi	CT25M5BT	EE4		
Mitsubishi	CT28AV1B	EE3		
Mitsubishi	CT28BW2B	EE3 Chassis		
Mitsubishi	CT28BW2BD	EE3W		
Mitsubishi	CT2964	Euro 4Z Chassis		
Mitsubishi	CT2965	Euro 8F Chassis	PSU similar to Euro 10	
Mitsubishi	CT29A4ST	Euro 12 Chassis		
Mitsubishi	CT29A6ST	Euro 12 Chassis		
Mitsubishi	CT29AT5			
Mitsubishi	CT29B2STX	Euro 11 Chassis		
Mitsubishi	CT29B3ST	B3		
Mitsubishi	CT29B4ST	B4		
Mitsubishi	CT29BV1(BD)	EE3W		
Mitsubishi	CT32BW1B	W1		
Mitsubishi	CT32CW1BD	EW1		
Mitsubishi	CT33B3ST	B3		
Mitsubishi	CT33C1STX(TX)			
Mitsubishi	CT37C1STX(TX)			
Mitsubishi	CT37C2STX	E9		
Murphy	3510T	Goodmans FST51TT		
Murphy	CTV 3510	Murphy CTV 3540T		
Murphy	CTV3500	Cathay/Osaki P22G	Phase PH20567	Susumu FX14S/FX1400R
Murphy	CTV3540T	Goodmans FST51TT		
Murphy	M14R01	Fidelity ZX4000	Fidelity CTV1404R	
Murphy	M1500	Fidelity ZX4000		
Murphy	M22S01	Fidelity ZX4200		
Murphy	M22S01	Fidelity ZX4200		
Murphy	M22T01	Fidelity ZX4000		
Murphy	MC6124	Bush BC6004		
Naiko	N1088	Goodmans Compact-110		
Naiko	N2810DVD	PT92 +DVD	2003/2004 Safeways £299	
Naiko	N2811W	PT92		
Naiko	N2818W	PT92		
Naiko	N2850W	PT92	2003/2004	
Naiko	N2866	PT90A +DVD		
Naiko	N2897	F16		
Naiko	N3211W	PT92		
Naiko	N3280W	PT90	2003/2004	
Narita	DVT2	TV+DVD Profilo PT90C chassis		
NEC	PF32W01	Daewoo SC132 chassis	=Daewoo model DSC3261H	
NEI	1288	Mono		
NEI	1451R/TX	Indiana 100 Chassis	Bush	
NEI	1461R	Indiana 100 Chassis	Bush	
NEI	1481R	Indiana 100 Chassis	Similar to NEI2031	
NEI	1482	Indiana 100 Chassis	Bush	
NEI	14FRE			
NEI	14SRE		Sunkyong	
NEI	1551TX	Indiana 100 Chassis	Bush	
NEI	1581TX	Indiana 100 Chassis	Bush	
NEI	1601			
NEI	2031R/TX	Indiana 100 Chassis		
NEI	2041R	Indiana 200 Chassis	Bush	
NEI	2047(TX)	Indiana 200 Chassis		
NEI	2051R/TX	Indiana 200 Chassis	Bush	
NEI	2052R	Indiana 200 Chassis	Bush	
NEI	2131R	Indiana 100 Chassis		
NEI	2147(TX)	Indiana 200 Chassis		
NEI	2151R/TX	Indiana 200 Chassis	Bush	
NEI	2152R	Indiana 200 Chassis		
NEI	2181R	Indiana 200 Chassis	Bush	
NEI	2591FTXN	CE25		
NEI	2891FTXN	CE25		
NEI	5544	11AK03 Chassis		
NEI	ART701	Evelux E5 (use remote to bring out of stby)	Evelux = Elektronika Velenje in Slovenia	
NEI	C25F1FXN	CE25		
NEI	C28F1FXN	CE25		
NEI	CTV61	Indiana 100 Chassis		
NEI	E14D1X	Evelux E5		
NEI	E14TX	Evelux E5		
NEI	E20C1X	Evelux E5		
NEI	E2591TFXN	CE25		
NEI	E25G1TFXN	Evelux E5		
NEI	E28G1TFXN	Evelux E5		
NEI	NE3743TX	11AK08		
NEI	NE5147	11AK03 Chassis		
NEI	NE5155NT	11AK10		

NEI	NE5159NT	11AK10			
NEI	NE5159TX	11AK10			
NEI	NE5555	11AK10			
NEI	NE559TX	11AK10			
Network	1210	Similar to NE11288	Mono		
Network	1286		Mono		
Network	1401	Bush T24		Toshiba X53	
Network	1402	Goldstar			
Network	1414	Grundig GSC-100			
Network	1430	Goldstar			
Network	1451R	Indiana 100 Chassis	NEI		
Network	1461R	Indiana 100 Chassis	NEI		
Network	1481R	Indiana 100 Chassis	NEI		
Network	1482R	Indiana 200 Chassis	NEI		
Network	1551TX	Indiana 100 Chassis	NEI		
Network	1581TX	Indiana 100 Chassis	NEI		
Network	2020	Grundig GSC-100			
Network	2031R	Indiana 100 Chassis			
Network	2031TX	Indiana 100 Chassis			
Network	2041R	Indiana 200 Chassis			
Network	2051R	Indiana 200 Chassis			
Network	2052R	Indiana 200 Chassis			
Network	2081	Indiana 200 Chassis			
Network	21311X	Indiana 200 Chassis			
Network	2151R	Indiana 200 Chassis			
Network	2152R	Indiana 200 Chassis			
Network	2181	Indiana 200 Chassis			
Network	2571	CE25			
Network	2591	CE25			
Network	2871	CE25			
Network	2891	CE25			
Network	3000172	Goldstar			
Network	NW1414	Grundig GSC-100			
Network	NW2020	Grundig GSC-100			
Nikkai	2155	Indiana 100 Chassis			
Nikkai	2156T	Indiana 100 Chassis			
Nikkai	Baby 10	Osaki P10R			
Nikkai	Baby 10	Samsung C1210R / Boots CTV10R	Akura Tourer CX10	Genexia CTV1001	
Nikkai	K3743TX	11AK08			
Nikkai	K5155NT	11AK10			
Nikkai	K5159NT	11AK10			
Nikkai	NT20	Sentra STX600	Susumu FX20		
Nikkai	TLG0101	Sentra STX600	Solarvox CML14RC		
Nikkai	TLG0909	Solarvox CML14			
Nikkai	TLG100	Solarvox 142TT	Osume CTV1486T		
Nikkai	TLG101	Hinari TVA1			
Nikkai	TLG120TX	Indiana 100 Chassis			
Nikkai	TLG1407T	Indiana 100 Chassis			
Nikkai	TLG1409				
Nikkai	TLG1432				
Nikkai	TLG1433				
Nikkai	TLG1447	Indiana 200 Chassis			
Nikkai	TLG1447T	Indiana 200 Chassis			
Nikkai	TLG1447TC	Indiana 100 Chassis			
Nikkai	TLG14R	Alba CTV14R			
Nikkai	TLG151T	Indiana 100 Chassis			
Nikkai	TLG200				
Nikkai	TLG2000	Indiana 100 or 200 Chassis			
Nikkai	TLG201	Indiana 100 Chassis			
Nikkai	TLG20TX	Indiana 200 Chassis			
Nikkai	TLG2121	Goodmans CTV2R			
Nikkai	TLG2122	Goodmans CTV2T			
Nikkai	TLG2149	Indiana 200 Chassis			
Nikkai	TLG2151TX	Indiana 200 Chassis			
Nikkai	TLG2155	Indiana 100			
Nikkai	TLG2156	Indiana 100			
Nikkai	TLG2195				
Nikkai	TLG2501	NEI CE25			
Nikkai	TLG2801	NEI CE25			
Nikkai	TLG511	Indiana 100 Chassis			
Nikkai	TLG51TX	Indiana 200 Chassis			
Nikkai	TLG88/89	Fidelity C14M07	Harwood HTV9014R	Hinari CT11	
Nikkai	TLG88/89	Osume 1484R	Soundwave CTV1401R	Solarvox 140	
Nikkai	TLG99	Dansai TA11401	Osume CTV1484R	Fidelity C14M08	
Nikkai	TLG99	Tashiko 14F841	Goodmans C140	Solarvox 141	
Nikkai	TV1407T	Indiana 100 Chassis	Bush		
Nokia	1425HS	EUROMONO 2			
Nokia	1430HS	EUROMONO 1/2			
Nokia	1530UK HS	EUROMONO 2			
Nokia	1630HS	EUROMONO 1 OR 2			
Nokia	1725HS	EUROMONO 2			
Nokia	1730HS	EUROMONO 1 OR 2			
Nokia	1741HS	HOTEL PLUS	tuning - for RCN612 press MUTE,VISION,1servis- MUTE,RED.TV (or STOP)		
Nokia	2125HS	EUROMONO 2			
Nokia	2141HS	HOTEL PLUS	tuning - for RCN612 press MUTE,VISION,TV; for RCN624 press MUTE,VISION,STOP.		
Nokia	3721(T)	Mono Plus 2 (MP2)			
Nokia	3723	Luxor 4723			
Nokia	3724UKFX	MonoPlus			
Nokia	3743	Luxor 4743			
Nokia	3755UK	MONOPLUS 90			
Nokia	3783	Luxor 4783			
Nokia	5121(T)	Mono Plus 2 (MP2)			
Nokia	5155	MONOPLUS 90			
Nokia	5521(T)	Mono Plus 2 (MP2)			
Nokia	5556 UK SFN	Monoplus 110			
Nokia	5575 UK SFN	STEREO PLUS			
Nokia	6355 NICAM	STEREO PLUS			
Nokia	6356 UK SFN	Monoplus 110			
Nokia	6364UKSFN	Eurostereo 2			
Nokia	7155UK SFN	STEREO PLUS			
Nokia	7156 UK SFN	Monoplus 110			
Nokia	7165 UK SFN	STEREO PLUS			
Nokia	7204MAC	EURODIGI 16:9			
Nokia	7291-T	Nokia/Salora/Luxor MZ-chassis			
Nokia	7294UK	Eurodigii 16:9 II	1993	PSU IC LF0112	
Nokia	8284MAC	EURODIGI 16:9			
Nokia	8284SAT	EURODIGI 16:9			
Nokia	8291-T	Nokia/Salora/Luxor MZ-chassis			
Nokia	8294SAT	EURODIGI 16:9			
Nokia	8294UK	Eurodigii 16:9 II	1993	PSU IC LF0112	
Nokia	CT3711	SANYO			
Nokia	CT3724	MONOPLUS			
Nokia	CT4030UK	CORE2			
Nokia	CT5111UK	CORE2			
Nokia	CT5124	MONOPLUS 90DEG			
Nokia	Digivision 6381	Nokia digital chassis B-E2			
Nokia	Digivision 6381 N UK	Nokia digital chassis B-E2			
Nokia	Digivision 7171	Nokia digital chassis B-E2			
Nokia	Digivision 7182	Nokia digital chassis B-E2			
Nokia	Digivision 8281	Nokia digital chassis B-E2			
Nokia	FP72B2	=SFN7296			
Nokia	FP82B2	=SFN8296			
Nokia	FS91E1	FS chassis			
Nokia	FX3724UK	MonoPlus			
Nokia	FX3725	MONOPLUS			
Nokia	FX4030UK	CORE2			
Nokia	FX4530UK	CORE2			
Nokia	FX5530UK	CORE2			
Nokia	FX5532	EUROMONO 2			
Nokia	FX6332	EUROMONO			
Nokia	MP51A1	MONOPLUS			
Nokia	SFN3755	MONOPLUS			
Nokia	SFN5155	MONOPLUS			
Nokia	SFN5166	MONOPLUS			
Nokia	SFN5554	STEREO PLUS			
Nokia	SFN5573	Eurostereo 2 B-F			
Nokia	SFN6374	Eurostereo 2 B-F			
Nokia	SFN6386	FEATURE STEREO (FS Chassis)			
Nokia	SFN7173	Eurostereo 2 B-F			



Nokia	SFN7174	Eurostereo 2 B-F							
Nokia	SFN7186	FEATURE STEREO (FS Chassis)							
Nokia	SFN7296	FEATURE STEREO PLUS							
Nokia	SFN8296	FEATURE STEREO PLUS							
Nokia	SP55A1.5554	STEREO PLUS							
Nokia	SP63D1.6355UK	STEREO PLUS							
Nokia	SP71D1	STEREO PLUS							
Nokia	SP71L1	STEREO PLUS	Akai CT2867						
Nokia	ST51A1	MONOPLUS							
Nokia	ST51D2	MONOPLUS							
Nordmende	1434PI	F10							
Nordmende	1444	F10							
Nordmende	2112	F10							
Nordmende	2513A	F8							
Nordmende	3434	F10							
Nordmende	3601		Ferguson 3787						
Nordmende	3602	F8							
Nordmende	3604	F14							
Nordmende	4230	FV I	Ferguson 3787						
Nordmende	4231		Ferguson 3787						
Nordmende	5038	F15/16							
Nordmende	5205	F15/16							
Nordmende	5432	F11							
Nordmende	6559	F15							
Nordmende	7000	F15							
Nordmende	778535A	F5 TT							
Nordmende	8180		Ferguson 3787						
Nordmende	9572D	F5 TT							
Nordmende	982512H	F10							
Nordmende	982514/H	F10							
Nordmende	982515/H	F10							
Nordmende	F11B	Ferguson ICC3							
Nordmende	F15	Ferguson ICC5	Telefunken 617						
Nordmende	F16	Ferguson ICC5	Telefunken 517						
Nordmende	F17/F18	Ferguson ICC5	Telefunken 518/618/B/A						
Nordmende	F19	Ferguson IKC2							
Nordmende	F19/F20	Ferguson IKC2	Telefunken 418/A						
Nordmende	F20	Ferguson IKC2							
Nordmende	F22	Ferguson TX80	Telefunken 318A						
Nordmende	F23	ICC8-S	Telefunken 418						
Nordmende	F23-11	ICC7-S	Telefunken 418B-ST						
Nordmende	F24	ICC8-M	Telefunken 418C						
Nordmende	F24-11	ICC7-M	Telefunken 418B						
Nordmende	Futura 55	chassis F18							
Oceanic	B294SAT	Eurodigi 16.9							
Okishi	N2818W	PT92							
Onimax	2818	TV9.3 Multi (Schneider)	Micro IC901 ST92R195B0/EPF	LOPTx 1372.0031_+HR8409					
Onwa	K9228	Akai CT2862UNT							
Orion	14AT	Matsui 1481B							
Orion	14DR	Matsui 1440	Saisho CT142R						
Orion	14DS	Matsui 1420	Saisho CT141						
Orion	14DT	Matsui 1480A	Saisho CT149X						
Orion	14LR	Matsui 1466							
Orion	14PR	Amstrad CTV1409	Saisho CT14R	Triumph CTV8208					
Orion	14PS	Amstrad CTV1401	Matsui 1410	Saisho CT1400					
Orion	16BR	Matsui 1640	Saisho CT162R						
Orion	18PS	Matsui 1810	Saisho CT1800						
Orion	20LS	Logik 690	Saisho CT204						
Orion	20LT	Logik 698	Saisho CT208						
Orion	286KB	4300	PCB marked B-4101						
Orion	28ZKM TV28F44	4400							
Orion	28ZKN TV28F44	4400							
Orion	3850	Bush 4400 chassis							
Orion	C1500	combi Orion chassis	PSU PCB VPA150A, main PCB VMA230A	Micro OEC0107					
Orion	CTV144	Saisho CX14R	Triumph CTV8212						
Orion	CTV164	Saisho CX16R	Triumph CTV8312						
Orion	T28F44	4400							
Orion	TV134TX	Matsui 1408T		Remote 07660BQ160					
Orion	TV2844W	4400 chassis							
Orion	TV400TX	chassis CTT-H AA							
Orion	TV4400NTX	4400 chassis							
Orion	TV450TX (TV450R)	CTN AA chassis							
Orion	TV700BR	CTN AA chassis							
Orion	TV700SLTX	CTN BB chassis							
Orion	TV800TX	CTN AA chassis							
Osaki	3214S	Orion 14A chassis							
Osaki	Ci5013T	Samsung Ci5052XT							
Osaki	CTV14	Jackson Mk2	Triumph CTV8209						
Osaki	P10	Nikkai Baby 10 etc							
Osaki	P140	Philips GR1-AX	Philips 14GR1021						
Osaki	P142	Akura CX4							
Osaki	P145	Philips GR1-AX							
Osaki	P20G	Murphy CTV3500							
Osaki	P20H	Hinari CT4							
Osaki	P60G	Hitachi NP8CQ							
Osume	CTV1474R	Bush Z214							
Osume	CTV1484R	Solarvox 141	Nikkai TLG99	Harwood HTV9014R					
Osume	CTV1486T	Nikkai TLG100T							
Pacific	PDTV14-100	Orion chassis	Micro 195C6PC00ECF011A (OECF011A)						
Pacific	PTV2701T	Schneider chassis TV9							
Pacific	PTV3604	CTS AA	Micro SAA5541PS/M5/0330						
Pacific	PTV3605	Beko T2 8	PCB marked G80.190-02	LOPTx 003071094 (058.413-TR5), equiv. FBT41041					
Pacific	PTV3606	Orion chassis	PCB marked TMB557A						
Pacific	PTV5102	CTS AA		serv.: select prog 75, press OSD key (+) on R/C and MENU on TV together for 10 sec, green S will appear in lower left c					
Pacific	PTV7001T	E9 chassis (Evelux, made in Slovenia)	Micro SDA5255-B001						
Pacific	PTV7002	E9 chassis (Evelux, made in Slovenia)							
Pacific	PTV7003	E9 chassis (Evelux, made in Slovenia)	Micro SDA5255-B002						
Panasonic	1665	Z1							
Panasonic	21V2	Alpha 4							
Panasonic	25A3	Euro 1							
Panasonic	25X1DP	Alpha 4							
Panasonic	28X1	Alpha 4H							
Panasonic	28X1DP	Alpha 4							
Panasonic	CT20S	U4 Chassis							
Panasonic	CT22S	U4W Chassis							
Panasonic	TC1302	M6							
Panasonic	TC1303	M6							
Panasonic	TC1404	M11							
Panasonic	TC1405	M11							
Panasonic	TC1406	M11							
Panasonic	TC1407	M12							
Panasonic	TC1408	M12							
Panasonic	TC1460	Z1							
Panasonic	TC1465	Z1							
Panasonic	TC1470	Z1							
Panasonic	TC1475	Z1							
Panasonic	TC1480	Z3							
Panasonic	TC1485T	Z3	1990						
Panasonic	TC1483R	Z375 (DAEWOO CP375)							
Panasonic	TC1484R(B)	Z185 (Daewoo CP185)							
Panasonic	TC14J1R1	Z7							
Panasonic	TC14K1R	Z7							
Panasonic	TC14L3R	MX1A							
Panasonic	TC14S1M	Z5							
Panasonic	TC14S1R/B	Z5							
Panasonic	TC14S1R/BH	Z5						remote TNQ8E0460	
Panasonic	TC14S2R	Z5						remote TNQ8E0461	
Panasonic	TC14S3R(W)	Z7						remote TNQ8E0460	
Panasonic	TC14S3RC	Z7	nonUK Pal B/G						
Panasonic	TC14S4RL	Z7						remote TNQ8E0460	
Panasonic	TC15M1	Z4							
Panasonic	TC15M1M	Z4							
Panasonic	TC15M1R	Z4							
Panasonic	TC15M1T	Z4							
Panasonic	TC15M2	Z4							
Panasonic	TC15M2R	Z4						remote TNQ8E0448	
Panasonic	TC15MIR	Z1							
Panasonic	TC1601	M11							
Panasonic	TC1602	M11							

Panasonic	TC1631	U4							
Panasonic	TC1632	U4							
Panasonic	TC1633	U4							
Panasonic	TC1635	U4							
Panasonic	TC1637	U4							
Panasonic	TC1641	U4							
Panasonic	TC1651	U5							
Panasonic	TC1665	Z1							
Panasonic	TC1675	Z1							
Panasonic	TC1752	U5							
Panasonic	TC1785	Z3							
Panasonic	TC1786	Z3							
Panasonic	TC1802	M11							
Panasonic	TC1802U	M7							
Panasonic	TC1803	M7							
Panasonic	TC1807	M9							
Panasonic	TC1808	M11							
Panasonic	TC1810	M11							
Panasonic	TC1830	M12							
Panasonic	TC1832	M12							
Panasonic	TC200	M11							
Panasonic	TC2000	U3							
Panasonic	TC2002	U1							
Panasonic	TC2006	M7							
Panasonic	TC201	M9	M11						
Panasonic	TC2011	U3W							
Panasonic	TC202	M11							
Panasonic	TC202	PIX-M9							
Panasonic	TC2020	M11							
Panasonic	TC2024	U3W							
Panasonic	TC202G	PIX-M9							
Panasonic	TC2030	M12							
Panasonic	TC2031	U4W							
Panasonic	TC2033	U4							
Panasonic	TC2035	M11							
Panasonic	TC204	M9							
Panasonic	TC2043	U4W							
Panasonic	TC2051	U5							
Panasonic	TC2055	M11							
Panasonic	TC2056	M11							
Panasonic	TC2061	U5							
Panasonic	TC2076	M11							
Panasonic	TC208	U3							
Panasonic	TC2086	M11							
Panasonic	TC210	M11							
Panasonic	TC211	M12							
Panasonic	TC2110	U5N							
Panasonic	TC2112	U5							
Panasonic	TC212	M11							
Panasonic	TC214	M11							
Panasonic	TC215	M12							
Panasonic	TC216	M11							
Panasonic	TC2160	U5N							
Panasonic	TC217	M11							
Panasonic	TC2175	Z1							
Panasonic	TC218	M11							
Panasonic	TC2185	Z3							
Panasonic	TC2195	Z3T							
Panasonic	TC21K1R	Z7							
Panasonic	TC21L3R	MX1A							
Panasonic	TC21M	Z4							
Panasonic	TC21M1R	Z4							
Panasonic	TC21M2R	Z4							
Panasonic	TC21R	ALPHA2				remote TNQ8E0447			
Panasonic	TC21R1	ALPHA2							
Panasonic	TC21S1	Z5				remote TNQ8E0461			
Panasonic	TC21S3	Z7							
Panasonic	TC21S4RL	Z7				remote TNQ8E0460			
Panasonic	TC220	M11							
Panasonic	TC2201	U1	PIU-S1C						
Panasonic	TC2202	U1							
Panasonic	TC2203	U1							
Panasonic	TC2204	U1							
Panasonic	TC2205	U2							
Panasonic	TC2206	U1/U4							
Panasonic	TC2207	U2							
Panasonic	TC2208	U2							
Panasonic	TC2209	U3							
Panasonic	TC221	U3							
Panasonic	TC2210NS	M11							
Panasonic	TC2210SP	M8							
Panasonic	TC2210VR	M12							
Panasonic	TC2211	U3W							
Panasonic	TC2213	U3W							
Panasonic	TC2216	U3W							
Panasonic	TC222	M11							
Panasonic	TC2220	M11							
Panasonic	TC2221	U3							
Panasonic	TC2223	U3							
Panasonic	TC2225	U3							
Panasonic	TC2226	U3							
Panasonic	TC2229	U3							
Panasonic	TC223	M12							
Panasonic	TC2231	M7							
Panasonic	TC2232	U4W							
Panasonic	TC2233	U4W							
Panasonic	TC2234	U4							
Panasonic	TC2235	M11							
Panasonic	TC2235UR	U4							
Panasonic	TC2239	U4							
Panasonic	TC224	M11							
Panasonic	TC2240	U4							
Panasonic	TC2243	U4							
Panasonic	TC225	U3							
Panasonic	TC2251	M8							
Panasonic	TC2253	U5							
Panasonic	TC2255	M11							
Panasonic	TC2256	M11							
Panasonic	TC2263	U5							
Panasonic	TC2271	M8							
Panasonic	TC2276	M11							
Panasonic	TC2283	U2 / U3							
Panasonic	TC2291	U2							
Panasonic	TC2292	U2							
Panasonic	TC2293	U2							
Panasonic	TC230	M12							
Panasonic	TC232	M12							
Panasonic	TC233	M12							
Panasonic	TC234	M12							
Panasonic	TC235	M12							
Panasonic	TC2461	U5							
Panasonic	TC2475	ALPHA1W							
Panasonic	TC24R1	ALPHA2							
Panasonic	TC26	M11							
Panasonic	TC2600	M8							
Panasonic	TC2603	M11							
Panasonic	TC261	M8							
Panasonic	TC2610	M11							
Panasonic	TC262	M7	PIUS1						
Panasonic	TC2620	M11							
Panasonic	TC2622	U3W							
Panasonic	TC2629	U3							
Panasonic	TC262G	M11							
Panasonic	TC262GA	PIUS1							
Panasonic	TC262SPM	M9							
Panasonic	TC2630	M12							
Panasonic	TC2633	U4							
Panasonic	TC2634	U4							
Panasonic	TC2635	M11							

Panasonic	TC2636	U4			
Panasonic	TC2637	U4			
Panasonic	TC2640	U4			
Panasonic	TC2641	U4W			
Panasonic	TC2650	M8			
Panasonic	TC2651	M8			
Panasonic	TC2656	M11			
Panasonic	TC265SPM	M9			
Panasonic	TC2665	M11			
Panasonic	TC2671	M8			
Panasonic	TC2675	M11			
Panasonic	TC2676	M11			
Panasonic	TC2680	U2			
Panasonic	TC2681	U2			
Panasonic	TC2683	U3			
Panasonic	TC2684	U3			
Panasonic	TC2686	M11			
Panasonic	TC2690	U3			
Panasonic	TC271	M8			
Panasonic	TC272	M8			
Panasonic	TC273P	M7			
Panasonic	TC273S	M9			
Panasonic	TC273SP	M7			
Panasonic	TC273SPM	M9			
Panasonic	TC273W	M12			
Panasonic	TC274	M7			
Panasonic	TC275	PIX-M8	M11		
Panasonic	TC275G	PIX-M8			
Panasonic	TC280	M7			
Panasonic	TC282	M9			
Panasonic	TC283	M7			
Panasonic	TC294	M11			
Panasonic	TC295	M9			
Panasonic	TC296	M11			
Panasonic	TC297	M9			
Panasonic	TC298	M11			
Panasonic	TC300SP	M6			
Panasonic	TC333	PIX-M6			
Panasonic	TC333G	PIX-M6			
Panasonic	TC361	M7			
Panasonic	TC371	PBX-M7A2			
Panasonic	TC381	PIX-M6A			
Panasonic	TC381G	M6			
Panasonic	TC381U	M6			
Panasonic	TC400	M11			
Panasonic	TC410	M11			
Panasonic	TC421	M11			
Panasonic	TC4230	M12			
Panasonic	TC430	M12H			
Panasonic	TC430G	M12H			
Panasonic	TC431	M12C			
Panasonic	TC431GR	M12C			
Panasonic	TC450	M12H			
Panasonic	TC450G	M12H			
Panasonic	TC4688	M12			
Panasonic	TC471	M11			
Panasonic	TC471NP	M7			
Panasonic	TC471SP	M7			
Panasonic	TC471SPM	M9			
Panasonic	TC481	M6			
Panasonic	TC482	M11			
Panasonic	TC482S	M6			
Panasonic	TC482SP	M6			
Panasonic	TC4830	M12			
Panasonic	TC48G				
Panasonic	TC492	PIX-M11			
Panasonic	TC492G	PIX-M11			
Panasonic	TC493	M11			
Panasonic	TC610	M11			
Panasonic	TC610SPM	M9			
Panasonic	TC681MN	M12			
Panasonic	TC681MRS	M12			
Panasonic	TC682	PIX-M11			
Panasonic	TC682GR	PIX-M11			
Panasonic	TC683	M11			
Panasonic	TC684	M11			
Panasonic	TC685	M11			
Panasonic	TC687	M12			
Panasonic	TC688	M12			
Panasonic	TC800	X8			
Panasonic	TC810	M11			
Panasonic	TC811	M11			
Panasonic	TC815	M11			
Panasonic	TC816	M11			
Panasonic	TC817	M11			
Panasonic	TC820	M11			
Panasonic	TC830	M12			
Panasonic	TC831	M12			
Panasonic	TC871	M8			
Panasonic	TC872	M8			
Panasonic	TC873	M8			
Panasonic	TC874	M7			
Panasonic	TC874SPM	M9			
Panasonic	TC890SPM	M9			
Panasonic	TC890W	M12			
Panasonic	TC9200	U1			
Panasonic	TCAL20	M11			
Panasonic	TCAL26	M11			
Panasonic	TCV1	M11			
Panasonic	TX1	ALPHA1			
Panasonic	TX1485	ALPHA1			
Panasonic	TX14B3T	Z375 (Daewoo CP375)			
Panasonic	TX14B4T	Z185 (Daewoo CP185), 2003 around £110	Service Mode: Select channel 99, set sharpness to minimum, hold set's DOWN key and press MUTE on remote at the same time. Use the up/down keys to select the		
Panasonic	TX14GV1	Z421 (Daewoo CP420, K-Mecha deck)			
Panasonic	TX14GV2	Z082PF (Daewoo CP082), deck K30	PSU I801 STRF6653		
Panasonic	TX14JT1	Z7			
Panasonic	TX14K1T	Z7			
Panasonic	TX14K2T	Z7			
Panasonic	TX14S1R	Z5			
Panasonic	TX14S1T7(B or BH)	Z5			remote TNQ8E0461
Panasonic	TX14S2T	Z5			remote TNQ8E0461-1
Panasonic	TX14S3T(W)	Z7			remote EUR511300
Panasonic	TX14S3TC	Z7	nonUK Pal B/G		
Panasonic	TX14S4TL	Z7			remote EUR511300
Panasonic	TX15AT1	ZM3L (Orion chassis)	remote EUR511300		PCB marked TMB538A
Panasonic	TX15LT2	LH1 chassis (LCD TV)	2001		
Panasonic	TX15LV1	LH5 chassis (LCD TV + DVD player)	2002		
Panasonic	TX15M	Z4			
Panasonic	TX15M1R	ALPHA1			
Panasonic	TX15M1T	Z4			
Panasonic	TX15M2T	Z4			TNQ8E0448
Panasonic	TX1631	U4W			
Panasonic	TX1632	U4			
Panasonic	TX1641	U4			
Panasonic	TX1642	U4			
Panasonic	TX1752	U5			
Panasonic	TX1786	Z3T			
Panasonic	TX2	ALPHA1			
Panasonic	TX2024	U3W			
Panasonic	TX2034	U4			
Panasonic	TX2112	U5N			
Panasonic	TX211AD2	EURO2			
Panasonic	TX2162	U5			
Panasonic	TX2172	ALPHA1			
Panasonic	TX2175	Z1			
Panasonic	TX2178	ALPHA1			
Panasonic	TX2195	Z3T			
Panasonic	TX21AD2	ALPHA1			
Panasonic	TX21AD2DP	EURO2L			

Panasonic	TX21AP1	Z8T			remote EUR511300				
Panasonic	TX21AT1	Z8T	2002		remote EUR511300				
Panasonic	TX21AV1	Z082PF (Daewoo CP082, K30 Deck)			remote EUR51941				
Panasonic	TX21CK1	Z8							
Panasonic	TX21GV1	Z421V (Daewoo CP420, K-Mecha Deck)							
Panasonic	TX21JT1	Z7							
Panasonic	TX21JT2	ZM3L (Orion chassis)	2003, remote EUR511300		PCB marked TMB553A, Micro	LOPTR Q401 2SD2499	PSU Q511 2SK2647		
Panasonic	TX21K1T	Z7							
Panasonic	TX21K2T	Z7							
Panasonic	TX21M1T	Z4							
Panasonic	TX21M2T	Z4			remote TNQ8E0448				
Panasonic	TX21MD1	EURO2L							
Panasonic	TX21MD3	EURO2M							
Panasonic	TX21MD4	EURO4			remote EUR511200				
Panasonic	TX21MK1	EURO4			remote EUR511200				
Panasonic	TX21S1T	Z5			remote TNQ8E0461				
Panasonic	TX21S3	Z7							
Panasonic	TX21S4TL	Z7			remote EUR511300				
Panasonic	TX21T	ALPHA2							
Panasonic	TX21T1	ALPHA2							
Panasonic	TX21V1	ALPHA2							
Panasonic	TX21V2	ALPHA4							
Panasonic	TX21V2BC	ALPHA1							
Panasonic	TX2200	U4							
Panasonic	TX2230	U4							
Panasonic	TX2231	U4							
Panasonic	TX2234	U4W							
Panasonic	TX2244	U4W							
Panasonic	TX2284	U3W							
Panasonic	TX2450	U5W							
Panasonic	TX2464	U5							
Panasonic	TX2470	ALPHA1W							
Panasonic	TX2472	ALPHA1X							
Panasonic	TX2480	ALPHA1							
Panasonic	TX2482	ALPHA1							
Panasonic	TX2488	ALPHA1							
Panasonic	TX2492	ALPHA1W							
Panasonic	TX24A1	ALPHA2							
Panasonic	TX24A1C	ALPHA1							
Panasonic	TX24DX1	EURO4			remote EUR511210				
Panasonic	TX24PS1	EURO10							
Panasonic	TX24T1	ALPHA2W							
Panasonic	TX24W1	ALPHA2W							
Panasonic	TX251XDP	ALPHA1							
Panasonic	TX25A2	ALPHA3							
Panasonic	TX25A2X	ALPHA3							
Panasonic	TX25A3	EURO1							
Panasonic	TX25AD1	EURO2S							
Panasonic	TX25AD2	EURO2S							
Panasonic	TX25AD70F/P	EURO3H							
Panasonic	TX25BM1	ALPHA2							
Panasonic	TX25CK1	Z8							
Panasonic	TX25G1	ALPHA2							
Panasonic	TX25LD4DP	EURO4			remote EUR511200				
Panasonic	TX25DM4F	EURO4	Multistandard PAL/SECAM B/G,D/K,I		remote EUR511200				
Panasonic	TX25MD1	EURO2L							
Panasonic	TX25MD3	EURO2M							
Panasonic	TX25MD4	EURO4			remote EUR511200				
Panasonic	TX25MK1	EURO4	1999						
Panasonic	TX25T2	ALPHA2							
Panasonic	TX25W2	ALPHA3							
Panasonic	TX25W2A	ALPHA3							
Panasonic	TX25W3	EURO1							
Panasonic	TX25X1	ALPHA4							
Panasonic	TX25X1DP	ALPHA4							
Panasonic	TX25XD1E	EURO2S							
Panasonic	TX25XD4	EURO4			remote EUR511200				
Panasonic	TX25XD90	EURO5			remote EUR511211				
Panasonic	TX25XDP3	EURO2M							
Panasonic	TX2636	U4W							
Panasonic	TX2646	U4W							
Panasonic	TX2656	U5W							
Panasonic	TX26LXD1	LH18 Chassis (LCD TV)	2004		remote EUR7635010				
Panasonic	TX28A1	ALPHA2W							
Panasonic	TX28A1C	ALPHA1							
Panasonic	TX28A2	ALPHA3							
Panasonic	TX28A2X	ALPHA3							
Panasonic	TX28A3	EURO1							
Panasonic	TX28CK1	Z8							
Panasonic	TX28DK1	EURO4			remote EUR511210				
Panasonic	TX28DK2	EURO4			remote EUR511210				
Panasonic	TX28DT2	EURO4D	Pal-I		remote EUR511230				
Panasonic	TX28DT2/E	EURO4D	Pal-I		remote EUR511230				
Panasonic	TX28DT30	EURO8DH (built-in digital receiver)							
Panasonic	TX28DT4	EURO10D (built-in digital receiver)	2003 around £510		remote EUR511243				
Panasonic	TX28DT53	EURO4DS (built-in digital receiver)							
Panasonic	TX28EX2000	EURO4	Multistandard PAL/SECAM B/G,D/K,I		remote EUR511200				
Panasonic	TX28G1	ALPHA2							
Panasonic	TX28LD1	EURO2							
Panasonic	TX28LD4DP	EURO4			remote EUR511200				
Panasonic	TX28LDM4F	EURO4	Multistandard PAL/SECAM B/G,D/K,I		remote EUR511200				
Panasonic	TX28MD3	EURO2M							
Panasonic	TX28MD4	EURO4			remote EUR511200				
Panasonic	TX28MK1	EURO4			remote EUR511200				
Panasonic	TX28PB50	EURO7			remote EUR511224				
Panasonic	TX28PG40	EURO7			remote EUR511224				
Panasonic	TX28PG45	EURO7			remote EUR511212A				
Panasonic	TX28PK1	EURO4			remote EUR511210				
Panasonic	TX28PK10	EURO5L			remote EUR511211				
Panasonic	TX28PK2	EURO4			remote EUR511210				
Panasonic	TX28PK25	EURO4H 100Hz			remote EUR511211				
Panasonic	TX28PK3L	EURO4			remote EUR511210				
Panasonic	TX28PL1	EURO4			remote EUR511210				
Panasonic	TX28PL10	EURO4H 100Hz	around £660		remote EUR511211				
Panasonic	TX28PL4	EURO4			remote EUR511210				
Panasonic	TX28PS1	EURO10	2003 around £450		remote EUR511320				
Panasonic	TX28PS12	EURO10	2003 around £510						
Panasonic	TX28PS5	EURO10							
Panasonic	TX28W1	ALPHA2W							
Panasonic	TX28W2	ALPHA3							
Panasonic	TX28W3	EURO1							
Panasonic	TX28X1	ALPHA4							
Panasonic	TX28X1DP	ALPHA4							
Panasonic	TX28XD1E	EURO2S							
Panasonic	TX28XD3	EURO2M							
Panasonic	TX28XD4	EURO4			remote EUR511200				
Panasonic	TX28XD90	EURO5			remote EUR511211				
Panasonic	TX28XDP3	EURO2M							
Panasonic	TX29A3	EURO1							
Panasonic	TX29AD1	EURO2S							
Panasonic	TX29AD10C(F)	E2100	nonUK						
Panasonic	TX29AD1DP	EURO2S							
Panasonic	TX29AD2	EURO2S							
Panasonic	TX29AD20C	E2100	nonUK						
Panasonic	TX29AD30C	E2100	nonUK						
Panasonic	TX29AD70	EURO3H							
Panasonic	TX29AK1	EURO4			remote EUR511200				
Panasonic	TX29AK10P	EURO5			remote EUR511211				
Panasonic	TX32DH40	EURO8DH (built-in digital receiver)							
Panasonic	TX32DK1	EURO4			remote EUR511210				
Panasonic	TX32DK2	EURO4			remote EUR511210				
Panasonic	TX32DT2	EURO4D			remote EUR511230				
Panasonic	TX32DT30	EURO8DH (built-in digital receiver)							
Panasonic	TX32DT4	EURO10D (built-in digital receiver)			remote EUR511243				
Panasonic	TX32DT53	EURO4DS (built-in digital receiver)							
Panasonic	TX32LXD1	LH18 Chassis (LCD TV)	2004		remote EUR7635010				
Panasonic	TX32PB50(N)	EURO7			remote EUR511224				
Panasonic	TX32PD30	GP1 , 100Hz							
Panasonic	TX32PF10	EURO5			remote EUR511220				

Panasonic	TX32PG30	EURO7		remote EUR511212A					
Panasonic	TX32PG50	EURO7		remote EUR511224					
Panasonic	TX32PH40	EURO7P	2002	remote EUR511224					
Panasonic	TX32PK1	EURO4		remote EUR511210					
Panasonic	TX32PK2	EURO4		remote EUR511210					
Panasonic	TX32PK20	EURO5		remote EUR511211					
Panasonic	TX32PK25	EURO4H 100Hz		remote EUR511211					
Panasonic	TX32PK3	EURO4		remote EUR511210					
Panasonic	TX32PL1	EURO4		remote EUR511210					
Panasonic	TX32PL10	EURO4H 100Hz	around £900	remote EUR511211					
Panasonic	TX32PL4	EURO4		remote EUR511210					
Panasonic	TX32PS1	EURO10	2003	remote EUR511320					
Panasonic	TX32PS5	EURO10							
Panasonic	TX3300	U4							
Panasonic	TX3370GR	ALPHA1							
Panasonic	TX33A1	ALPHA2W							
Panasonic	TX33A1G	ALPHA2							
Panasonic	TX33A2	ALPHA3							
Panasonic	TX33AK10	EURO5		remote EUR511211					
Panasonic	TX36DT35	EURO8	2002	remote EUR511241					
Panasonic	TX36PB50(N)	EURO7		remote EUR511224					
Panasonic	TX36FD30	GP1 , 100Hz							
Panasonic	TX36PF10	EURO5		remote EUR511220					
Panasonic	TX36PG50	EURO7		remote EUR511224					
Panasonic	TX36PL30	EURO7		remote EUR511212A					
Panasonic	TX37A2	ALPHA3							
Panasonic	TX37A2G	ALPHA3							
Panasonic	TX47T1 (projector)	EURO5VP		remote EUR511220					
Panasonic	TX47PT10 (projector)	EURO7VP							
Panasonic	TX5600	U5							
Panasonic	TXC21	U4							
Panasonic	TXC22	U5							
Panasonic	TXC71	ALPHA1W							
Panasonic	TXC74	ALPHA1W							
Panasonic	TXC78	ALPHA1W							
Panasonic	TXC84	ALPHA2							
Panasonic	TXC88	ALPHA2							
Panasonic	TXG10	AC1 Multisystem							
Panasonic	TXW28D1F	E2100	nonUK						
Panasonic	TXW28D2	EURO3HW							
Panasonic	TXW28D5F/P	EURO5							
Panasonic	TXW28R3	EURO3W							
Panasonic	TXW28R4(DP)	EURO4		remote EUR511210					
Panasonic	TXW32D2	EURO3HW							
Panasonic	TXW32D3DP/L	EURO3HW							
Panasonic	TXW32D4DP	EURO5		remote EUR511211					
Panasonic	TXW32D5F/P	EURO5							
Panasonic	TXW32R4(DP)	EURO4		remote EUR511210					
Panasonic	TXW36D3DP/L	EURO3HWS							
Panasonic	TYSU1	ALPHA1							
Panasonic	TYSU2	ALPHA1							
Panasonic	TYSU3	ALPHA1							
Perdio	CT2005	Indiana 100	Bush						
Perdio	P1408	Indiana 100	Bush						
Perdio	P1480	Indiana 100	Bush						
Perdio	P2004	Indiana 100	Bush						
Perdio	P2005	Indiana 100	Bush						
Perdio	P2101	Indiana 100	Bush						
Perdio	P2102	Indiana 100	Bush						
Phase	PH20567	Murphy CTV3500							
Philips	797	K12							
Philips	912	TX							
Philips	928	KT3							
Philips	934	KT3							
Philips	10CX1120	Pye 25KX1201							
Philips	1201	K30							
Philips	1205	K30							
Philips	1234	K30							
Philips	1250	K30							
Philips	12B611	T8	1976						
Philips	12B710	TX	1982						
Philips	12B711	TX	1982						
Philips	12B912	TX	1982						
Philips	12B915	TX	1982						
Philips	12TX1501	TX1	1982						
Philips	12TX2301	TX2	1982						
Philips	12TX2460	TX2	1982						
Philips	12TX2501	TX2	1982						
Philips	12TX2502	TX2	1982						
Philips	12TX3201	TX3	1984						
Philips	12TX3303	TX3	1984						
Philips	12TX3501	TX3	1984						
Philips	12TX3502	TX3	1984						
Philips	14B614	T8	1976						
Philips	14C825	KT2	1977						
Philips	14C925	KT3	1979						
Philips	14CE1200	CP90	1988						
Philips	14CE1201	CP90	1987						
Philips	14CE1210	CP90	1988						
Philips	14CE1500	CP90	1988						
Philips	14CF1014	CF1	1985						
Philips	14CF1114	CF1	1985						
Philips	14CN2201	NC3-CR	1988						
Philips	14CN3001	NC3	1987						
Philips	14CT2006	CTX-S	1982						
Philips	14CT2007	CTX-E	1984						
Philips	14CT2201	CTX-E	1983						
Philips	14CT2206	CTX-E	1983						
Philips	14CT3005	KT3	1980						
Philips	14CT3205	KT3	1980						
Philips	14CT3605	KT3	1984						
Philips	14CT3606	KT3							
Philips	14CT3607	KT3							
Philips	14CT4206	KT4 SYSTEM 4	1983						
Philips	14GR1021	GR1-AX	1989						
Philips	14GR1212	GR1-AX							
Philips	14GR1220	GR1-AX	1990						
Philips	14GR1221	GR1-AX	1990						
Philips	14GR1227/05B	GR1-AX	1992						
Philips	14GR2520	G90AE	1989						
Philips	14PT1121A	GR1-AX	1993						
Philips	14PT1332/05	L6.1AA	1996						
Philips	14PT1342	L6.1	1996-2000						
Philips	14PT1356/05	L01.2E AA	2002						
Philips	14PT135A	ANUBIS A	1994						
Philips	14PT135B	AA5	1995						
Philips	14PT1532	L6.1	1996-1998						
Philips	14PT1553/05	L6.1	1998						
Philips	14PT1556/05	L01.2E AA	2002, 2004 £80						
Philips	14PT155A	ANUBIS A	1993	RCLE011					
Philips	14PT155B	AA5	1995						
Philips	14PT156A	ANUBIS A	1994						
Philips	14PT156B	AA5-AB	1994-1996						
Philips	14PT2002/05	L01.2E	2002						
Philips	14PT2665/05	L9.2E AA	2000-2001						
Philips	14PT2666/05	L01.2E	2001	RCLE014					
Philips	14PT3685/05	L9.3E	2000-2001						
Philips	14PT6107/06D	TDVD1.1E	2002						
Philips	14PV110	Epsilon 2001 , Turbo drive deck	2001						
Philips	14PV111/07	Funai MK11 deck	2002	similar 14PV111 14PV112 14PV203 14PV415 14PV460					
Philips	14PV112/07	Funai MK11 deck	2002	similar 14PV111 14PV112 14PV203 14PV415 14PV460					
Philips	14PV120/07	Funai MK12 deck	2003	similar 14PV120 14PV125 14PV225 14PV422 14PV425					
Philips	14PV125/07	Funai MK12 deck	2003	similar 14PV120 14PV125 14PV225 14PV422 14PV425					
Philips	14PV135/07	Funai MK12 deck	2004	similar 14PV135 14PV235 14PV385					
Philips	14PV182/05	MONO98 chassis							
Philips	14PV202	Epsilon 2001 , Turbo drive deck	2001						
Philips	14PV203/07	Funai MK11 deck	2002	similar 14PV111 14PV112 14PV203 14PV415 14PV460					
Philips	14PV210	Delta 99, Turbo drive deck	1999						
Philips	14PV220	Epsilon 2001 , Turbo drive deck	2001						

Philips	14PV225/07	Funai MK12 deck	2003			similar 14PV120 14PV125 14PV225 14PV422 14PV425					
Philips	14PV227	Epsilon 2001 , Turbo drive deck	2001								
Philips	14PV235/07	Funai MK12 deck	2004			similar 14PV135 14PV235 14PV385					
Philips	14PV284/05(S)	MONO98 chassis									
Philips	14PV320	Delta 99, Turbo drive deck	1999								
Philips	14PV325	Delta 99, Turbo drive deck	1999								
Philips	14PV327	Delta 99, Turbo drive deck	1999								
Philips	14PV340	Delta 99, Turbo drive deck	1999								
Philips	14PV345	Delta 99, Turbo drive deck	1999								
Philips	14PV350	Epsilon 2001 , Turbo drive deck	2001								
Philips	14PV354	Epsilon 2001 , Turbo drive deck	2001								
Philips	14PV358	Epsilon 2001 , Turbo drive deck	2001								
Philips	14PV360/07	Funai MK11 deck				similar 14PV360 14PV365					
Philips	14PV365/07	Funai MK11 deck				similar 14PV360 14PV365					
Philips	14PV374/07	Funai MK12 deck	2003								
Philips	14PV375/07	Funai MK12 deck	2003								
Philips	14PV385/07	Funai MK12 deck	2004			similar 14PV135 14PV235 14PV385					
Philips	14PV415/07	Funai MK11 deck	2002			similar 14PV111 14PV112 14PV203 14PV415 14PV460					
Philips	14PV422/07	Funai MK12 deck	2003			similar 14PV120 14PV125 14PV225 14PV422 14PV425					
Philips	14PV425/07	Funai MK12 deck	2003			similar 14PV120 14PV125 14PV225 14PV422 14PV425					
Philips	14PV460/07	Funai MK11 deck	2002			similar 14PV111 14PV112 14PV203 14PV415 14PV460					
Philips	14TVCR24	COMBI									
Philips	14TX1504	TX-14	1982								
Philips	14TX2504	TX2	1982								
Philips	14TX3504	TX3	1984								
Philips	14TX3540	TX3									
Philips	15AA3332	ANUBIS A	1991								
Philips	15CE1010	CP90	1987								
Philips	15CE1210	CP90	1987								
Philips	15CE1510	CP90	1987								
Philips	15CE1518	CP90	1988								
Philips	15CT2309	CTX-E	1985								
Philips	15GR2330	G90AE	1988								
Philips	15GR2331	G90AE	1991								
Philips	15GR2530	G90AE	1989								
Philips	16C927	KT3	1979								
Philips	16C928	KT3	1979								
Philips	16CT2016	CTX-E	1982								
Philips	16CT2216	CTX-E	1983								
Philips	16CT3015	KT3	1980								
Philips	16CT3215	KT3	1980								
Philips	16CT3715	KT3	1981								
Philips	16CT4418	KT4 SYSTEM 4	1983								
Philips	16CT4616	KT4 SYSTEM 4	1983								
Philips	16CT4718	KT4 SYSTEM 4	1983								
Philips	17B920/15X	E2	1983								
Philips	17CE1230	CP90	1987								
Philips	17CE1530	CP90	1987								
Philips	17CE1538	CP90	1988								
Philips	17CE1630	CP90	1987								
Philips	17CT2319	CTX-E	1985								
Philips	17CT2619	CTX-E	1985								
Philips	17GR2340	G90AE	1989								
Philips	17GR2341	G90AE	1991								
Philips	17GR2540	G90AE	1989								
Philips	17HT1340	ANUBIS B	1993								
Philips	17HT1540	ANUBIS B	1993								
Philips	17HT1549	ANUBIS B	1993								
Philips	17HT3252	A7H.1	1998								
Philips	17HT3302	A7H.1	1998								
Philips	17PT1563/05	L7.2E AA	1998								
Philips	17PT1565	L9.2E	2000								
Philips	17PT1568	AA5-AB	1995								
Philips	17PT166A	ANUBIS A AC	1994								
Philips	20C933	KT3	1979								
Philips	20C934	KT3	1980								
Philips	20CT2026	CTX-E	1983								
Philips	20CT2035	CTX-E	1985								
Philips	20CT2036	CTX-E	1982								
Philips	20CT2235	CTX-E	1986								
Philips	20CT2236	CTX-E	1984								
Philips	20CT2635	CTX-E	1986								
Philips	20CT2636	CTX-E	1985								
Philips	20CT3027	KT3	1984								
Philips	20CT3227	KT3	1981								
Philips	20CT3723	KT3	1984								
Philips	20CT3726	KT3	1982								
Philips	20CT4428	KT4 SYSTEM 4	1983								
Philips	20CT4626	KT4 SYSTEM 4	1983								
Philips	20CT4636	KT4 SYSTEM 4	1984								
Philips	20CT4728	KT4 SYSTEM 4	1983								
Philips	20PT1552	L6.1	1996								
Philips	20PV184/05	MONO98 chassis									
Philips	20PV220	Delta 99, Turbo drive deck	1999								
Philips	20PV230	Epsilon 2001 , Turbo drive deck	2001								
Philips	21AA3350	ANUBIS A	1991								
Philips	21AA3356	ANUBIS A	1992/1993								
Philips	21AA3557	ANUBIS A	1992/1993								
Philips	21AA3556	ANUBIS B	1992								
Philips	21CE1051	CP90	1987								
Philips	21CE1059	CP90	1987								
Philips	21CE1250	CP90	1987								
Philips	21CE1251	CP90	1987								
Philips	21CE1259	CP90	1987								
Philips	21CE1550	CP90	1987								
Philips	21CE1551	CP90	1987								
Philips	21CE1557	CP90	1988								
Philips	21CE1558	CP90	1988								
Philips	21CE1559	CP90	1987								
Philips	21CE2340	2A	1986								
Philips	21CE2640	2A	1986								
Philips	21CE4550	2B	1986								
Philips	21CE4559	2B	1987								
Philips	21CE5554	2B	1988								
Philips	21CE7550	3A	1987								
Philips	21CE7650	3A	1987								
Philips	21CT4829	KT4 SYSTEM 4	1985								
Philips	21GR1251	GR1-AX	1990								
Philips	21GR2150	G90AE	1989								
Philips	21GR2350	G90AE	1989								
Philips	21GR2550	G90AE	1989								
Philips	21GR2552	G90AE	1989								
Philips	21GR2554	G90AE	1991								
Philips	21GR2752	G90B	1989								
Philips	21GR9752	G90B	1991								
Philips	21HT1350	ANUBIS B	1995								
Philips	21HT1550	ANUBIS B	1993								
Philips	21HT1559	ANUBIS B	1993								
Philips	21HT5403/05Z	L9H.2E AA	2000								
Philips	21PT1385	AA5-AB	1995								
Philips	21PT1532	L6.1AA	1996								
Philips	21PT1653/05	L6.2 AA	1998								
Philips	21PT165A	ANUBIS A AC	1993-1994								
Philips	21PT165B	AA5-AB	1996								
Philips	21PT1663/05	L7.2E AA	1998								
Philips	21PT1664	L9.2E	2000			OPT 02C8 3891 0400					
Philips	21PT166B	AA5-AB	1995-1997								
Philips	21PT2665/05	L9.2E AA	2000								
Philips	21PT4416/05	L01.2E	2002								
Philips	21PT4424/05	L7.2E AA	1998								
Philips	21PT442B/05	MD1.1E	1995-1996								
Philips	21PT442B/05B	MD1.2E	1997								
Philips	21PT4456	L9.2	2000								
Philips	21PT4457/05	L01.2E	2001								
Philips	21PT4475	L9.2E	2000-2001								
Philips	21PT4494	L6.3	1998								
Philips	21PT522A/05	GR2.2	1993								
Philips	21PT522B/05/25	GR2.4	1994-1995								
Philips	21PT5321/05	GR2.4	1995								

Philips	21PT5322/05	MD1.2E	1996
Philips	21PT5324/05R	A8.0E	1998
Philips	21PT532A/05	GR2.2	1993
Philips	21PT532B/05(25)	GR2.4	1994-1995
Philips	21PT5407/05	L01.1E	2001, Multistandard B/G, D/K, I
Philips	21PT5457/05	L01.2E AA	2002, Multistandard B/G, D/K, I
Philips	21PT5505/05	L9.1E AB	2000-2001
Philips	21PT5507/05	L01.1E AB	2002
Philips	21PT5606/05	L01.1E AB	2002
Philips	21PT6807/05	L01.1E AB	2002
Philips	21PV210	Delta 99, Turbo drive deck	1999
Philips	21PV288/05	MONO98 chassis	
Philips	21PV320	Delta 99, Turbo drive deck	1999
Philips	21PV340	Epsilon 2001, Turbo drive deck	2001
Philips	21PV375/07	Funai MK12 deck	2003
Philips	21PV385/07	Funai MK12 deck	2004
Philips	21PV548	Epsilon 2001, Turbo drive deck	2001
Philips	21PV620/05	STEREO98 chassis	
Philips	21PV688/05	STEREO98 chassis	
Philips	21PV715/07	Delta 2000 chassis	2000
Philips	21PV908 (combi)	Delta 2000 chassis	2000
Philips	21ST1730	GR2.1	1991
Philips	21ST2730	GR2.2	1992
Philips	21ST2731	GR2.2	1992
Philips	2206	CTX	
Philips	2216	CTX	
Philips	2226	CTX	
Philips	22AV3500	CP90	
Philips	22CE2060	2A	
Philips	22CE2061	2A	1986
Philips	22CE2065	2A	1986
Philips	22CE2261	2A	1986
Philips	22CE2267	2A	1986
Philips	22CE2561	2A	1986
Philips	22CE2565	2A	1986
Philips	22CE2567	2A	1986
Philips	22CS1002	K30	1980
Philips	22CS1201	K30	1980
Philips	22CS1205	K30	
Philips	22CS1234	K30	1982
Philips	22CS3040	K35	1983
Philips	22CS3245	K35	1982
Philips	22CS3745	K35	1983
Philips	22CS3761	K35	1982
Philips	22CS3850	K35	1982
Philips	22CS3880	K35	
Philips	22CS4360	K40 SYSTEM 4	1983
Philips	22CS4860	K40 SYSTEM 4	1984
Philips	22CS4861	K40 SYSTEM 4	1985
Philips	22CS5240	K40 SYSTEM 4	1984
Philips	22CS5350	K40 SYSTEM 4	1984
Philips	22CS5735	K40 SYSTEM 4	1985
Philips	22CS5740	K40 SYSTEM 4	1984
Philips	22CS5744	K40 SYSTEM 4	1984
Philips	22CS5748	K40 SYSTEM 4	1985
Philips	22CS5750	K40 SYSTEM 4	1984
Philips	22CS5751	K40 SYSTEM 4	1985
Philips	22CT2226	CTX-E	
Philips	23BC2001	TIC2	1982
Philips	24CE2370	2A	1986
Philips	24CE2670	2A	1986
Philips	24CE3270	CP110	1987
Philips	24CE3271	CP110	1987
Philips	24CE3570	CP110	1987
Philips	24CE3578	CP110	1988
Philips	24CE3588	CP110	1998
Philips	24CE4570	2B	1986
Philips	24CE4579	2B	1987
Philips	24CE7570	3A	1987
Philips	24PW6005	A10E	2000-2001
Philips	24PW6006/05	L01.1E	2001-2002 around £285
Philips	24PW6322	MD1.2E	1997
Philips	24PW6324/05R	A8.0E	1999
Philips	24PW6407	L01.1E	2002-2003 around £375
Philips	25CE5574	2B	1988
Philips	25CE6270	CP110	1989
Philips	25CE6570	CP110	1989
Philips	25GR5560	G110	1989
Philips	25GR5762	G110	1990
Philips	25GR5763	G110	1990
Philips	25GR5764	G110	1990
Philips	25GR6771	G111-S	1990
Philips	25GR9762	G110	1989
Philips	25GR9763	G110	1990
Philips	25GR9768	G110	1990
Philips	25HT5403/05Z	L9H.2E AA	2001
Philips	25ML8300	FL1.7	1992
Philips	25ML8500	FL1.6	1992
Philips	25MN1550/05	GR2.1	1991
Philips	25MN1550/25	GR2.2	1992
Philips	25PT4101/05	AA5. AB	1995-1996
Philips	25PT4103/05	L6.2AA	1997-1998
Philips	25PT410A	GR2.1	1993
Philips	25PT4423	L6.2	1997-1998
Philips	25PT4456/25	L9.1E	2000
Philips	25PT4457/05	L01.1E AA	2001-2002
Philips	25PT4475	L9.1E	2000
Philips	25PT4494/05	L6.3	1998
Philips	25PT4501	MD1.1E	1995-1996
Philips	25PT4521	MD1.1E	1995
Philips	25PT4523	MD1.2E	1996-1997
Philips	25PT482A/05	GR2.2 AA	1993-1994
Philips	25PT5324/05R	A8.0E	1998
Philips	25PT532A/05	GR2.2	1993
Philips	25PT532B/05	GR2.4	1994
Philips	25PT6322/05	MD1.2E	1997
Philips	25PT632A/05	GR2.4	1995
Philips	25PV720	Delta 99, Turbo drive deck	1999
Philips	25ST1724	GR2.1	1991
Philips	25ST1760/25	GR2.1	1991
Philips	25ST1761/25	GR2.1	1991
Philips	25ST2760	GR2.2	1992
Philips	25ST2761	GR2.2	1992
Philips	26C797	K12	1979
Philips	26CE2080	2A	1985
Philips	26CE2081	2A	1986
Philips	26CE2281	2A	1986
Philips	26CE2581	2A	1986
Philips	26CP2601	K12	1980
Philips	26CS1009	K30	1980
Philips	26CS1205	K30	1981
Philips	26CS1250	K30	1982
Philips	26CS3070	K35	1983
Philips	26CS3275	K35	1982
Philips	26CS3775	K35	1983
Philips	26CS3880	K35	1982
Philips	26CS3890	K35	1983
Philips	26CS3895	K35	1983
Philips	26CS4880	K40 SYSTEM 4	1983
Philips	26CS4895	K40 SYSTEM 4	1984
Philips	26CS5770	K40 SYSTEM 4	1984
Philips	26CS5774	K40 SYSTEM 4	1984
Philips	26CS5793	K40 SYSTEM 4	1985
Philips	27CE2390	2A	1986
Philips	27CE2690	2A	1986
Philips	27CE3290	CP110	1987
Philips	27CE3590	CP110	1987
Philips	27CE3598	CP110	1988
Philips	27CE4695	2B	1987

Philips	27CE7590	3A	1986					
Philips	27CE7593	3A	1988					
Philips	27CE7690	3A	1986					
Philips	27CE7790	3A	1987					
Philips	27CS6895	K40 SYSTEM 4	1985					
Philips	28777SIR	G110 NICAM	1989					
Philips	28CE5594	2B	1989					
Philips	28CE6590	CP110	1989					
Philips	28CL6770/05	FL1.0	1992					
Philips	28CL6770/25Z	FL1.10 AA	1993-1994					
Philips	28DC2070	D16-111	1990					
Philips	28DW6734/25 (05)	MD1.2E AA +digibox	1998-1999					
Philips	28DW9625/05	MG4.1E	2000-2001					
Philips	28GR5772	G110	1990					
Philips	28GR9772	G110	1989					
Philips	28HT5403/05Z	L9H.2E AA	2001					
Philips	28ML8600	FL1.7	1992					
Philips	28ML8605	FL1.7	1992					
Philips	28ML8762	FL1.2	1992					
Philips	28ML8770	FL1.1	1991					
Philips	28ML8800	FL1.6	1992					
Philips	28ML8916	FL12	1992					
Philips	28PT4457/05	L01.1E AB	2001-2003		RCLE014			
Philips	28FT4475	L9.1E	2000					
Philips	28FT4494	L6.3	1998					
Philips	28FT4523	MD1.2E	1996-1998					
Philips	28PT5107	L01.1E	2001					
Philips	28PT510A	GR2.2	1993					
Philips	28PT510B	GR2.2	1994-1995					
Philips	28PT512A	GR2.2	1993-1994					
Philips	28PT532A/05	GR2.2	1993					
Philips	28PT532B/05	GR2.4	1994					
Philips	28PT902A/05	FL2.16 AA	1993					
Philips	28PW532A/05	A8.0E	1999					
Philips	28PW6005	A10E	2000-2001					
Philips	28PW6006/05	L01.1E	2001					
Philips	28PW6305/05	A10E_painter IC A10EP1 (most troublesome)	2000-2001					
Philips	28PW6315/05	A10E	2000-2001					
Philips	28PW6322/05	MD1.2E	1996-1997					
Philips	28PW6324/05R	A8.0E	1998-1999					
Philips	28PW6332/05	MD1.2E AA	1997-1998					
Philips	28PW6506/05	L01.1E	2002					
Philips	28PW6515/05	A10E_painter IC A10EP1 (most troublesome)	2000-2001		RC2563/01			
Philips	28PW6526/05 (01)	A10E	2001					
Philips	28PW6615/05	MG1.1E AA	1999		RC2592/01B			
Philips	28PW6816/05	A10E AA TV+DVD	2001					
Philips	28PW6826/05	A10E AA TV+DVD	2001		RC2563/01			
Philips	28PW8608/05	EM2E	2003					
Philips	28PW8717/05	EM2E	2001					
Philips	28PW8719/05	A02E AA	2004					
Philips	28PW9512/05	MD2.12	1996					
Philips	28PW9513/05	MD2.25	1998		RC2030/01			
Philips	28PW9515/05	MG2.1E	1999		RC2008/01B or RC2030/01			
Philips	28PW9525/05 (05L)	MG7.1E	2000-2001		RC2033/01B			
Philips	28PW9527/05	EM5E	2002, Multistandard B/G, D/K, I		RC2042			
Philips	28PW9536/05	MG7.1E	2000		RC2031/01B or RC2033/01B			
Philips	28PW9615/05	MG2.1E	1999		RC2031/01B			
Philips	28PW9615/05	MG3.1E	1999		RC2030/01			
Philips	28PW9616/05	MG3.1E	2000-2001		RC2033/01B			
Philips	28PW9623/05	MD2.25AA	1998					
Philips	28PW9631/05	GFL2.30E AA	1995-1996					
Philips	28ST1781	GR2.1	1991					
Philips	28ST2781/05	GR2.2	1992					
Philips	29PT632A/05	GR2.4	1995					
Philips	29PT6433/05	MD1.2EAA	1997					
Philips	29PT6773/05	MD1.2E	1997					
Philips	29PT727B/05	GR2.4	1995-1996					
Philips	29PT822B/05	FL4.27 AA	1994					
Philips	29PT828C	GFL2.20E	1994-1996					
Philips	29PT8306	EM2E	2000					
Philips	29PT8412/05	MD2.12	1996					
Philips	29PT8413/05	MD2.22	1997					
Philips	29PT8413/25	MD2.25 (MID2.25)	1998					
Philips	29PT9021	GFL2.20E	1995					
Philips	29PT9113	MD2.22E AA	1997					
Philips	29PT9413	MD2.25	1998					
Philips	31BX2013	TX2	1982					
Philips	31BX2016	TX2	1982					
Philips	31BX3025	TX3	1984					
Philips	31BX3033	TX3	1984					
Philips	31BX3112	TX3	1984					
Philips	31BX3115	TX3	1984					
Philips	3205	KT3						
Philips	3215	KT3						
Philips	3245	K35						
Philips	3275	K35						
Philips	32DW6834	MD1.2EAA +digibox	1998-1999					
Philips	32DW9625/05	MG4.1E	2000-2001					
Philips	32PW6005	A10E	2000-2001					
Philips	32PW6006/05	L01.1E	2001-2002					
Philips	32PW6305	A10E_painter IC A10EP1 (most troublesome)	2000-2001					
Philips	32PW6322	MD1.2E	1997-1999					
Philips	32PW6324/05	A8.0E	1999-2000					
Philips	32PW6332/05	MD1.2E	1998-1999					
Philips	32PW6506	L01.1E	2002					
Philips	32PW6515/05	A10E_painter IC A10EP1 (most troublesome)	2000-2001		RC2563/01			
Philips	32PW6526/05 (01)	A10E	2001					
Philips	32PW6615/05 (25)	MG1.1E AA	1999		RC2592/01B			
Philips	32PW6826/05	A10E AA TV+DVD	2001		RC2563/01			
Philips	32PW8506/12	EM2E AA	2000, from Germany but has UK sound via		RC2592/01B			
Philips	32PW8608/05	EM2E	2003					
Philips	32PW8717/05	EM2E	2001					
Philips	32PW8718/05	EM2E	2003					
Philips	32PW9515/05	MG2.1E	1999		remote varies with this mode: RC2008/01B (482221910695) or RC2030/01			
Philips	32PW9523/05	MD2.25	1998-1999		RC7541			
Philips	32PW9523/05M	MG2.1E	1999		RC2033/01B			
Philips	32PW9523/25	MD2.25E AA	1998-1999		Options 00129 29007 11651 00000 02827 00063 19486 00000			
Philips	32PW9525/05R	MG7.1E AA	2000-2002					
Philips	32PW9527/05	EM5E	2002, Multistandard B/G, D/K, I		RC2042			
Philips	32PW9534/05	MD2.25E	1999					
Philips	32PW9534/05M	MG2.1E AA	1999					
Philips	32PW9536/05	MG7.1E	2000		RC2031/01B			
Philips	32PW9544/05	MD2.25E	1999					
Philips	32PW9544/05M	MG2.1E AA (or MG7.1E ??)	2000					
Philips	32PW9545/05	MG2.1E AA	1999		RC2031/01B			
Philips	32PW9566	MG2.1E	2000-2001					
Philips	32PW9576/05E	EM3	it has virtual dolby feature.					
Philips	32PW9576/05R	MG2.1	has no virtual dolby, only 'incredible sound' feature.					
Philips	32PW9611	GFL2.30E AA	1995					
Philips	32PW9615/05	MG3.1E	1999		RC2030/01			
Philips	32PW9616/05	MG3.1E	2000-2001		RC2033/01B			
Philips	32PW962B	FL2.24	1994					
Philips	32PW9631/05	GFL2.30E AA	1995-1996					
Philips	32PW9631/25	5GFL2.30E	1997					
Philips	32PW9713	MD2.22E AA	1997					
Philips	32PW9763/05	MD2.22E	1997					
Philips	32PW9763/25	MD2.25E	1998					
Philips	32PW9768/05	EM6	2004, £1200-£1500		RC4303/101			
Philips	33CE7533	3A	1988					
Philips	33DC2080	D16-111	1990					
Philips	33ML8990	FL1.1	1991					
Philips	35BX1045	TX14	1982					
Philips	35BX2045	TX2	1982					
Philips	3715	KT3						
Philips	3745	K35						
Philips	3775	K35						
Philips	37CS5600	K40 SYSTEM 4	1986					
Philips	37K6225	KT2	1977					
Philips	37KT2040	CTX-E	1984					



Philips	37KV1240	GR1-AX	1990						
Philips	37KV1242	GR1-AX	1990						
Philips	37KV2225	G90B	1990						
Philips	37TR210	Epsilon 2001 , Turbo drive deck	2001						
Philips	37TR215	Delta 99, Turbo drive deck	1999						
Philips	37TVB50	Delta 99, Turbo drive deck	1999						
Philips	37TVB60	Epsilon 2001 , Turbo drive deck	2001						
Philips	3850	K35							
Philips	3880	K35							
Philips	3890	K35							
Philips	3895	K35							
Philips	38KV2325	G90AE	1989						
Philips	41GR8840	G110-PTV	1989						
Philips	41GR8841	G110-PTV	1989, PROJECTION						
Philips	4206	KT4							
Philips	42CT2142	CTX-E							
Philips	4360	K40							
Philips	43KV2425	G90AE	1989						
Philips	4418	KT4							
Philips	4526	KT4							
Philips	4616	KT4							
Philips	46ML0985	FL1.PTV	1992						
Philips	46PP912A/05	FL1.PTV	1993						
Philips	4718	KT4							
Philips	4728	KT4							
Philips	4980	K40							
Philips	4980	K40							
Philips	51BE2080	E2	1983						
Philips	51BL7205	L7	1982						
Philips	51BL7215	L7	1982						
Philips	51TR225	Delta 99, Turbo drive deck	1999						
Philips	51TR300	Epsilon 2001 , Turbo drive deck	2001						
Philips	51TVB60	Delta 99, Turbo drive deck	1999						
Philips	51TVB70	Epsilon 2001 , Turbo drive deck	2001						
Philips	52KE2406	2A	1986						
Philips	52KV1528	GR1-AX	1990						
Philips	52KV2523	G90AE	1989						
Philips	52KV2525	G90AE	1989						
Philips	52KV2529	G90AE	1991						
Philips	52ZY3535	ANUBIS B AA	1992						
Philips	52ZZ3523/25G	ANUBIS A AB	1991						
Philips	56KE2600	2A	1985						
Philips	56KE2610	2A	1986						
Philips	56KS5487	K40 SYSTEM 4	1985						
Philips	59KE3702	CP110	1987						
Philips	60CP2605	K12Z	1983						
Philips	61BL7245	L7	1982						
Philips	63KV9637	G110	1989						
Philips	6620	KT4							
Philips	6720	K40							
Philips	6820	K40							
Philips	68KE7827	3A	1988						
Philips	9TC2000	TC2	1982						
Philips	9TC2100	TC2	1982						
Philips	CTV105	CP90							
Philips	CTV111	CP90							
Philips	CTV114	CP110							
Philips	CTV117	CP110							
Philips	CTV121	CP90							
Philips	D14GY1	NC3-CR							
Philips	D14KP3	CP90							
Philips	D14KP4	NC3-CR							
Philips	D36EP1	CP90							
Philips	D36FY5	CP90							
Philips	D36GP5	CP90							
Philips	D36GP6	G90AE							
Philips	D41FP2	CP90							
Philips	D51EP2	CP90							
Philips	D51EP4	CP90							
Philips	D51EP5	CP90							
Philips	D51FP3	CP90							
Philips	D51FP4	CP90							
Philips	D51FP5	CP90							
Philips	D51FP6	CP90							
Philips	D51GP2	G90AE	1989						
Philips	D51GP5	G90AE	1989						
Philips	D51GY4	G90AE	1989						
Philips	D51HY2	G90AE							
Philips	D51JP4	G90AE							
Philips	D51KP6	CP90							
Philips	D59EP2	2B							
Philips	D59EP3	CP110							
Philips	D59EP6	CP110							
Philips	D59EPC	CP110							
Philips	D59FP2	CP110							
Philips	D59FP3	CP110							
Philips	D59FP4	CP110							
Philips	D59FP5	CP110							
Philips	D59FP6	CP110							
Philips	D59FY5	CP110							
Philips	D59GP4	CP110							
Philips	D59HY5	CP110							
Philips	D59JP4	CP110							
Philips	D59JP6	GR2.1							
Philips	D66EP4	CP110							
Philips	D66EP5	CP110							
Philips	D66EP6	CP110							
Philips	D66FY5	CP110							
Philips	G20657	G11							
Philips	G20C560	G8							
Philips	G20C655	G11							
Philips	G22C566	G11							
Philips	G22C567	G11							
Philips	G22C569	G11							
Philips	G22C655	G11							
Philips	G22C657	G11							
Philips	G22C660	G11							
Philips	G22C661	G11							
Philips	G22C662	G11							
Philips	G22C663	G11							
Philips	G22C664	G11							
Philips	G22C665	G11							
Philips	G22C666	G11							
Philips	G22C667	G11							
Philips	G22C700	G11							
Philips	G22C701	G11							
Philips	G22C702	G11							
Philips	G22C703	G11							
Philips	G22C705	G11							
Philips	G22C706	G11							
Philips	G22C707	G11							
Philips	G22C708	G11							
Philips	G26C672	G11							
Philips	G26C674	G11							
Philips	GR2330	G90AE							
Philips	KE3715	CP110							
Philips	KT2040	CTX-E							
Philips	KT2366	CTX-E							
Philips	KT4146	KT4							
Philips	KV2523	G90AE							
Philips	STC2100	TC2							
Philips	TX3303	TX3							
Philips	V6600	KT3	1984						
Philips	V6620	KT4 SYSTEM 4	1983						
Philips	V6621	KT4 SYSTEM 4	1985						
Philips	V6651	KT4 SYSTEM 4	1985						
Philips	V6720	K40 SYSTEM 4	1983						
Philips	V6721	K40 SYSTEM 4	1985						
Philips	V6820	K40 SYSTEM 4	1983						





Roadstar	CTV552	Goodmans Compact-110			
Roadstar	TLV1081	Orion chassis, OVD-6 deck	PCB marked TM9415C, video VM9155C	Micro OEC0076A	
Roadstar	TLV1085	Orion chassis, OVD-6S deck	PCB marked TMX482A, video VMX207A	Micro OEC0093B, option codes	EEPROM address 0F0h
Saba	SB9221	Ferguson ICC7			
Saisho	CM145R				
Saisho	CM159TX	Bush 2020	Matsui 1580		
Saisho	CM16R				
Saisho	CM16TT				
Saisho	CM2080				
Saisho	CM20TT				
Saisho	CM250R				
Saisho	CM260TT	Fidelity ZX5000			
Saisho	CM2880TX	Matsui 2890			
Saisho	CT1400	Amstrad CTV1401	Matsui 1410	Orion 14PS	
Saisho	CT141	Matsui 1420	Orion 14DS		
Saisho	CT141X	Matsui 1420A	Orion 14DR		
Saisho	CT142R	Matsui 1440			
Saisho	CT142RX	Matsui 1440A	PCB marked TM0130B		
Saisho	CT144R (CT144B)	Orion 14A chassis			
Saisho	CT147R	Boots CTV1414R	Dansai CTV1477		
Saisho	CT147R	Matsui 1450	Binatone 01/9014		
Saisho	CT149	Matsui 1480			
Saisho	CT149TX	Matsui 2080			
Saisho	CT149X	Matsui 1480A	Orion 14DT		
Saisho	CT14R	Amstrad CTV1409	Orion 14PR		
Saisho	CT14R	Triumph CTV820			
Saisho	CT162R	Matsui 1640	Orion 14BR		
Saisho	CT1800	Matsui 1810	Orion 18PS		
Saisho	CT204	Logik 690	Orion 20LS		
Saisho	CT208	Logik 698	Orion 20LT		
Saisho	CT208TT				
Saisho	CT20S	Panasonic U4/W			
Saisho	CT22S	Panasonic U4/W			
Saisho	CX14R	Orion CTV144	Triumph CTV8212		
Saisho	CX16R	Triumph CTV8312	Orion CTV164		
Saisho	FST210R	Matsui 2160			
Saisho	FST212T	Matsui 2180TT			
Saisho	FST2130TX	Matsui 2190			
Saisho	FST2530TX	Matsui 2590			
Salora	14MP50	Mono Plus 2 (MP2)			
Salora	16R19	ITT PICO S2			
Salora	20MP50	Mono Plus 2 (MP2)			
Salora	21C5	ITT CORE 2 90DEG			
Salora	21C60	ITT CORE 2 90DEG			
Salora	21D61	ITT CORE 2 90DEG			
Salora	21M8	M80			
Salora	21MP50	Mono Plus 2 (MP2)			
Salora	21N6	Eurostereo 1			
Salora	21N6F	Eurostereo 2 B-F			
Salora	21N6U	ITT EUROSTEREO 1			
Salora	21N81	Eurostereo 2 B-F			
Salora	21S5U	ITT EUROMONO 1 & 2			
Salora	22J40	Hitachi CPT2050			
Salora	25C51	ITT CORE 2 110DEG			
Salora	25C81	ITT CORE 2 110DEG	ITT CORE 90		
Salora	25C81	ITT CORE 2 110DEG			
Salora	25D81 LUK FX	Compact DE 110deg	Micro IC1451 SAA1282C-R686, PSU IC70	LOPTx D064/37, equiv HR6284, FAT30033	
Salora	25M87	M80			
Salora	25M9C	M2 DIGI STEREO			
Salora	25M6	Eurostereo 1			
Salora	25N6F	Eurostereo 2 B-F			
Salora	25N6U	ITT EUROSTEREO 1			
Salora	25N8C	Eurostereo 2 B-F			
Salora	25N8S	Eurostereo 2 B-F			
Salora	25S5U	ITT EUROMONO 1 & 2			
Salora	28F8	ITT EURODIGI 16:9			
Salora	28M87	M80			
Salora	28M9C	M90			
Salora	28MZ100	Nokia/Salora/Luxor MZ-chassis			
Salora	28N8C	Eurostereo 2 B-F			
Salora	28N8S	Eurostereo 2 B-F			
Salora	32F8	ITT EURODIGI 16:9			
Salora	32F9C	ITT EURODIGI 16:9			
Salora	32MZ110	Nokia/Salora/Luxor MZ-chassis			
Salora	33E7S	E			
Salora	33M9C	ITT M2 DIGI STEREO			
Salora	36F8	ITT EURODIGI 16:9			
Samsung	BT110	Alba PTC9C	Goodmans Q9001		
Samsung	BT309K	UWA 12/14" Mono			
Samsung	BT510	Goodmans Q9001	Alba PTC9C	5" Mono with radio	
Samsung	CB14F12(T)(Z)	KS1A			
Samsung	CB14F1T	S15A			
Samsung	CB14Y52T	KS1A			
Samsung	CB20792T	KS1A			
Samsung	CB20F12(T)(Z)	KS1A			
Samsung	CB20F42(T)(Z)	KS1A			
Samsung	CB20H12T	KS1A			
Samsung	CB20H32T	KS1A			
Samsung	CB21F12T	KS1A			
Samsung	CB21H12T	KS1A			
Samsung	CF14Y5Z	KS1A			
Samsung	CF20F4Z	KS1A			
Samsung	CI125	Goodmans GTV9200	5" Col portable with radio		
Samsung	CI14F1T	S15A (marked CI14F1T5X near barcode)	1999, manual 3S15A-1402		
Samsung	CI14F1TS	S15A (marked CI14F1TS0X near barcode)	2001, manual 3S15A-SA14-01		
Samsung	CI14F1Z	S15A (marked CI14F1Z5X near barcode)	1999, manual 3S15A-1402		
Samsung	CI14Y42T	KS1A Rev.1(marked CI14Y42TSX near barcode)	2002, manual 3KS1A-SIEL-0910		
Samsung	CI14Y42Z	KS1A Rev.1(marked CI14Y42ZSX near barcode)	2002, manual 3KS1A-SIEL-0910		
Samsung	CI14Y4T	S15A (marked CI14Y4T6X near barcode)	2001, manual 3S15A-SIEL-2101		
Samsung	CI14Y4Z	S15A (marked CI14Y4Z6X near barcode)	2001, manual 3S15A-SIEL-2101		
Samsung	CI14Y5Z	KS1A (marked CI14Y5ZBX near barcode)	2001, manual 3KS1A-SEH-0917		
Samsung	CI14Y5Z	S15A (marked CI14Y5ZS5X near barcode)	2001, manual 3S15A-SEH-1403		
Samsung	CI14Y5Z	S15A (marked CI14Y5ZWSX near barcode)	2001, manual 3S15A-SEH-1403		
Samsung	CI20F12T	KS1A (marked CI20F12TSX)	2001, manual 3KS1A-SEH-0917		
Samsung	CI20F12Z	KS1A (marked CI20F12ZSX)	2001, manual 3KS1A-SEH-0917		
Samsung	CI20F32T(Z)	KS1A(P) Rev.1	2002, manual AA82-00215A		
Samsung	CI20S10BZ	S15A (=CI501FZ5X)	1999, manual 3S15A-1402		
Samsung	CI20S20BT	S15A (=CI501FT5X)	1998, manual 3S15A-0101		
Samsung	CI210R	Nikai Baby 10	Alba CTV10	Boots CTV1010R	
Samsung	CI213	10" portable			
Samsung	CI21F12TS	KS1A (marked CI21F12TSX)	2001, manual 3KS1A-SEH-0917		
Samsung	CI21F32T	KS1A(P) Rev.1	2002, manual 3KS1A-SEH-1104		
Samsung	CI21S20BT	S15A			
Samsung	CI28C7D	S51A	2001, manual 3S51A-SEH-6201		
Samsung	CI3312Z	Portable P58SC			
Samsung	CI3351	Thorn C15012R	Portable P68SC		
Samsung	CI3352	P68			
Samsung	CI3373T	S15A (marked CI3373T0X near barcode)	2001, manual 3S15A-SEH-1403		
Samsung	CI3373T(Z)	SCT11D			
Samsung	CI3373T4C	SCT13B			
Samsung	CI3373Z	S15A (marked CI3373Z5X near barcode)	1999, manual 3S15A-1402		
Samsung	CI3373Z	SCT13B			
Samsung	CI3373Z4C	SCT13B			
Samsung	CI338	P50	Tashiko 14D971		
Samsung	CI338G	P50F			
Samsung	CI338Z	P36A			
Samsung	CI340ZA	P50			
Samsung	CI347	P50F			
Samsung	CI347F	P50F			
Samsung	CI347FF	P50F			
Samsung	CI348	P50			
Samsung	CI3482				
Samsung	CI5012	P58SC			
Samsung	CI5013T	P58SC	Akai CT2115		
Samsung	CI501FT	S15A (marked CI501FT0X near barcode)	2001, manual 3S15A-SEH-1403		
Samsung	CI501FT	S15A (marked CI501FT5X near barcode)	1998, manual 3S15A-0101		
Samsung	CI501FZ	S15A (marked CI501FZ5X near barcode)	1999, manual 3S15A-1402		
Samsung	CI5030AN	US60AN			
Samsung	CI5052	P68SW	Osaki C15013T		

Samsung	CI5052A	P68AT-SA							
Samsung	CI5052AT	P68SA							
Samsung	CI5052X	P68	Osaki CI5013T						
Samsung	CI5052XT	P68SC-M							
Samsung	CI5061	P68SA							
Samsung	CI5079	SCT13B							
Samsung	CI5079TZ	SCT11B							
Samsung	CI5103	P58SC							
Samsung	CI5103T	P58SC							
Samsung	CI514	P36A							
Samsung	CI514	P50							
Samsung	CI514Z	P36A							
Samsung	CI517	P50							
Samsung	CI5312	U88MT							
Samsung	CI5322XT	P68T							
Samsung	CI5322Z	P58SC							
Samsung	CI5330AN	US60A							
Samsung	CI5337AN	US60A							
Samsung	CI533CN	S51A (CI533CN3X)	1999, manual 3S51A-4417						
Samsung	CI533CN	S51A (CI533CNG3X)	2001, manual 3S51A-SEH-6201						
Samsung	CI5344N	S51A (marked CI5344NG3X near barcode)	2001, manual 3S51A-SE53-03						
Samsung	CI5344N	S51A (marked CI5344N3X near barcode)	1999, manual 3S51A-4417						
Samsung	CI5361AT	P68AT							
Samsung	CI537	P55							
Samsung	CI5373T	S15A (marked CI5373T5X near barcode)	1998, manual 3S15A-7349						
Samsung	CI5373T	SCT11B							
Samsung	CI5373T	SCT13B (marked CI5373T4X near barcode)	1998, manual 3SCT13B-7310						
Samsung	CI537V	P56							
Samsung	CI541	P58SH							
Samsung	CI541ZG	P58SH							
Samsung	CI5913	U88MT							
Samsung	CI5933	U88MT							
Samsung	CI5935T	P70							
Samsung	CI5935Z	P70							
Samsung	CI5937AN	Z68							
Samsung	CI593CN	KS2A (marked CI593CN8X near barcode)	2001, manual 3KS2ATSE-2501						Micro SIM806EW1
Samsung	CI593CN	KS3A (marked CI593CN8X near barcode)	2000, manual 3KS3A-2801						Micro SDA555x
Samsung	CI593CN	S51A (marked CI593CN3X near barcode)	1999, manual 3S51A-4417						Micro SAA5297M1A
Samsung	CI593CN	S51A (marked CI593CNG3X near barcode)	2001, manual 3S51A-SE53-03						Micro SAA5553PS/M3/0029
Samsung	CI593CN	SCT12B (marked CI593CNX near barcode)	1998, manual 3SCT12B-9301						Micro SAA5297PS/230
Samsung	CI5944N	SCT12B							
Samsung	CI6229T	P72 / U88MT							
Samsung	CI6230	P72							
Samsung	CI6230WWM	U88MT							
Samsung	CI6813	U88MT							
Samsung	CI6835	P70							
Samsung	CI6835T	P70							
Samsung	CI6835Z	P70							
Samsung	CI6837AN	Z68							
Samsung	CI683CN	S51A (marked CI683CN3X near barcode)	1999, manual 3S51A-4417						
Samsung	CI683CN	S51A (marked CI683CNG3X near barcode)	2001, manual 3S51A-SE53-03						
Samsung	CI683CN	SCT12B (marked CI683CNX near barcode)							
Samsung	CI6844N	SCT12B							
Samsung	CI703CN	SCT12B	1998, manual 3SCT12B-9301						
Samsung	CI7230	U88MT							
Samsung	CK5341	P68							
Samsung	CS6818	Z66/RM11							
Samsung	CW21443N	KS3A(P) Rev.2	2001						
Samsung	CW21A83NS	KS3A							
Samsung	CW21C33N	KS3A(P) Rev. 2	2001						
Samsung	CW21C33W	KS3A(P) Rev. 4 50Hz							
Samsung	CW21D83NS	KS1A(P) Rev.1	2002, manual 3KS1A-SEH-0819						
Samsung	CW21M63N	KS3A(P) Rev. 4 50Hz	2002						
Samsung	CW25C33N	KS3A(P) Rev.2							
Samsung	CW25D83NS	KS3A(P) Rev. 4 50Hz							
Samsung	CW28C33N	KS3A(P) Rev. 2	2001, manual 3KS3A-SEH28C7-04						
Samsung	CW28C33W	KS3A(P)	2001, manual 3KS3A-SEH21C7-01						
Samsung	CW28C93V	KS3A(P) Rev. 4 50Hz							
Samsung	CW28D83N	KS3A(P) Rev. 4 (marked CW28D83NS8X)	2002						
Samsung	CW28D83N	S56A(P) Rev.1 (marked CW28D83NSPX)	2003						
Samsung	CW28D85V	KS3A(P) Rev. 4 50Hz							
Samsung	CW29A6HA	SCT53A							
Samsung	CW29M66VS	K55A (marked CW29M66VSGXXEC)	2003, manual AA82-00696A						
Samsung	CW29M66VS	KS3A(P) Rev. 4 (marked CW29M66VS8XXEC)	2002, manual 3KS3A_50-SEH-0508						
Samsung	CW30A80SA	SCT53A	= CW764AHA						
Samsung	CW30A90SD	SCT53A	= CW767AHD						
Samsung	CW5012	P54							
Samsung	CW533CNG	KS3A (Rev.2)							
Samsung	CW533CNS	KS3A (Rev.2)							
Samsung	CW533CW	KS3A (Rev.2)							
Samsung	CW5344NG	KS3A (Rev.2)							
Samsung	CW683CN	KS3A (marked CW683CNG8X)	2000						
Samsung	CX683CN	KS3A (marked CX683CN8X near barcode)	2000, 3KS3A-2801						
Samsung	CX683CN	S51A (marked CX683CN3X near barcode)	1999, 3S51A-3306						
Samsung	CX683CN	S51A (marked CX683CNG3X near barcode)	2001, 3S51A-SEH-6801						
Samsung	CX683CW	S51A (marked CX683CWG3X near barcode)	2001, 3S51A-SEH-6801						
Samsung	CX683CW3XXEG	S51A							
Samsung	CZ1432T	KS1A							
Samsung	CZ20F12T	KS1A							
Samsung	CZ20H32T	KS1A							
Samsung	CZ21A083N	KS1A(P) Rev2	2003, AA82-00760B						
Samsung	CZ21F12T	KS1A							
Samsung	SP403JHAX	PLT51A							
Samsung	SP42W5HFX	J52A (projection)	LCD projection TV						
Samsung	SP43W6HFX	J54A							
Samsung	SV421	DX5-R							
Samsung	SV821	DX5-R							
Samsung	TI14B3 (TI14B33X)	C15C Combi	2001						
Samsung	TI14B3DF (TI14B3DF3X)	C15C Combi	2001						
Samsung	TI14B3F (TI14B3F3X)	C15C Combi	2001						
Samsung	TI14B7 (TI14B73X)	C15C (Rev.1) Combi	2001, 3C15C-SESA-2125						
Samsung	TI14B9 (TI14B93X)	C15C Combi							
Samsung	TI14C5 (TI14C52X)	C15C							
Samsung	TI14N3 (TI14N34X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819						
Samsung	TI14N5 (TI14N53X)	C15C Rev. 2 Combi	2000, 3C15C-SESA-2035						video TDA8842/N2
Samsung	TI14N5 (TI14N54X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819						video TDA9361PS
Samsung	TI14P1 (TI14P14X)	C17A (TS10) Combi	2002, 3C17A-SEH-14P1						
Samsung	TI14P1DF (TI14P1DF4X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819						
Samsung	TI14P1F (TI14P1F4X)	C17A (TS10) Combi	2002,						
Samsung	TI14P7 (TI14P74X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819						
Samsung	TI14P9 (TI14P94X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819						
Samsung	TI20C5DF	E260							
Samsung	TI20P1DF (TI20P1DF4X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819						
Samsung	TI20P5DF (TI20P5DF4X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819						
Samsung	TI21B4DF	C17A (TS10) Combi	2002						
Samsung	TI21B5DF (TI21B5DF4X)	C17A (TS10) Combi	2002, 3C17A-SEH-0911						
Samsung	TI331	combi SCV11F							
Samsung	TI601	combi SCV11F							
Samsung	TO-62X	Z66/RM11							
Samsung	TVP3350I	SCV11F							
Samsung	TVP3370	PS14							
Samsung	TVP5050	SCV11A/SCV11D							
Samsung	TVP5050IST	SCV11F							
Samsung	TVP5070IT	PS14B (combi)							
Samsung	TVP5350	SCV11A/SCV11D							
Samsung	TVP5370	PS14							
Samsung	Voyager 10								
Samsung	VT306K	Tashiko 12D971							
Samsung	WI24W6VD	S51A (marked WI24W6VD3X near barcode)	2001, manual 3S51A-SEH-6801						
Samsung	WI28W5VN	S51A (marked WI28W5VN3X)							
Samsung	WI28W6VD	S51A	1999, manual 3S51A-W2802						
Samsung	WI28W6VN	S51A	1999, manual 3S51A-W2802						
Samsung	WS24V53N	KS3A Rev.5 (marked WS24V53NS8XXEU)	2003, manual AA82-00327A						
Samsung	WS24V53V	KS3A Rev.5 (marked WS24V53VS8XXEU)	2003, manual AA82-00327A						
Samsung	WS24W63N	KS3A Rev.2 (marked WS24W63NS8XXEU)	2001, manual 3KS3A-SEH-2810						
Samsung	WS24W63V	KS3A Rev.5 (marked WS24W63NS8XXEC)	2002, manual 2KS3A-SEH-1104						
Samsung	WS24W64N	KS3A Rev.2 (marked WS24W64NS8XXEC)	2001, manual 3KS3A-SEH32W6-04						
Samsung	WS24W6VN	KS3A(P) Rev. 2 (marked WS24W6VNG8XXEU)	2000, manual 3KS3A(P)-W2401						
Samsung	WS28M64NS	KS3A(P) Rev. 4 50Hz	around £399						



Sanyo	CE14A2-GB	EC7-A	2001		
Sanyo	CE14AT2-GB	EC7-A	2001 (=14AT2)		
Sanyo	CE14AT3-GB	EC7-C	2003. E75	remote 0600123608	
Sanyo	CE14M2B-03	EC5-A	1998	remote JXYA	
Sanyo	CE14M2B-04	EC5-A	1999		
Sanyo	CE14M3B-00	EC5-A	2000		
Sanyo	CE14M4B-00	EC8-A	2001		
Sanyo	CE14M4SLB-00	EC8-A	2001		
Sanyo	CE14MT2SLB-03	EC5-A	1999	remote JXYC	
Sanyo	CE14MT3B-00	EC5-A	2000		
Sanyo	CE14MT4B-00	EC8-A	2001	remote JXMKE	
Sanyo	CE14MT4MB-00	EC8-A	2001		
Sanyo	CE14MT4SLB-00	EC8-A	2001	remote JXMKE	
Sanyo	CE17AT3-GB	EC7-B	2002		
Sanyo	CE21DG1B-04	EB4-A	1998		
Sanyo	CE21DN1	EB4-A			
Sanyo	CE21DN2	EB4-A			
Sanyo	CE21DN4B-01(02)	EB4-A	1999		
Sanyo	CE21DN5B-00(01,03)	EB6-A	2000		
Sanyo	CE21DN5B-04	EB6-A	2001		
Sanyo	CE21DN5B-05	EB6-A	2002		
Sanyo	CE21DN6B-00	EB6-A	2001		
Sanyo	CE21DN6B-01	EB6-D	2001		
Sanyo	CE21DN6MDB-00	EB6-B	2001		
Sanyo	CE21DN7B-00	EB6-D	2002		
Sanyo	CE21DN8B-00	EB7-B	2003		
Sanyo	CE21DN8B-00(01)	EB8-A	2004		
Sanyo	CE21EF55B	EC1-B	=CB5146		
Sanyo	CE21MT3B-00	EC5-A	2000		
Sanyo	CE21MT4B-00	EC8-A	2001	remote JXMKE	
Sanyo	CE21MT4B-00	EC8-A	2001	remote JXMKE	
Sanyo	CE21MT4HB-00	EC8-A	2001	remote JXMKE	
Sanyo	CE21MT4HB-01	EC8-A	2002		
Sanyo	CE21MT4HRB-00	EC8-A	2002		
Sanyo	CE21MT4MB-00	EC8-A	2001		
Sanyo	CE24FVN5B-00	EB8-A	2004		
Sanyo	CE24FVN5BKB-00	EB8-A	2004		
Sanyo	CE24WN4B-00(01)	EB6-A	2000		
Sanyo	CE24WN5B-00(01)	EB6-A	2001		
Sanyo	CE24WN5B-03(04,05)	EB7-A	2002		
Sanyo	CE24WN6B-00	EB7-A	2003		
Sanyo	CE24WN7B-01	EB8-A	2004		
Sanyo	CE25BM1B-00	EC5-A	2000	remote JXMKE	
Sanyo	CE25BM2B-00	EC5-A	2001	remote JXMKE	
Sanyo	CE25BN2B-00(01)	EB4-A	2000		
Sanyo	CE25DN1B	EB4-A			
Sanyo	CE25DN2B-03	EB4-A			
Sanyo	CE25DN3B-01(03,04,07,12)	EB4-A (MKII)	1998		
Sanyo	CE25DN5B-00(01,02,03,04)	EB6-A	2000		
Sanyo	CE25DN6B-00	EB6-A	2001		
Sanyo	CE25DN6B-01	EB6-D	2001		
Sanyo	CE25DN6MDB-00	EB6-B	2001		
Sanyo	CE25DN7B-00(01)	EB6-D	2002		
Sanyo	CE25DN8B-00	EB7-B	2003		
Sanyo	CE25DN9B-00	EB7-B	2004		
Sanyo	CE25DN9B-01	EB8-A	2004		
Sanyo	CE25MT3B-00	EC5-A	2000		
Sanyo	CE25MT3B-01	EC5-A	2001		
Sanyo	CE25MT3B-02(03)	EC5-A	2002		
Sanyo	CE25MT4B-00	EC8-C	2003	remote JXMTA	
Sanyo	CE25MT4MB-00	EC8-C	2003		
Sanyo	CE25XP2B-00(01)	EB4-A (MKII)	1998/1999		
Sanyo	CE27LD3B-00	UB4-B LCD TV	2004		
Sanyo	CE28BN2B-00(02)	EB4-A	2000		
Sanyo	CE28BN2B-01	EB4-A	2001		
Sanyo	CE28DFN1B-00	WB5-D	2002		
Sanyo	CE28DFN2B-00	EB7-D	2003		
Sanyo	CE28DN1B	EB4-A			
Sanyo	CE28DN4B-01(02)	EB4-A (MKII)	1999		
Sanyo	CE28DN5B-00(01,02,03)	EB6-A	2000		
Sanyo	CE28DN6B-00	EB6-A	2001		
Sanyo	CE28DN6B-01	EB6-D	2001		
Sanyo	CE28DN7B-00(01)	EB6-D	2002		
Sanyo	CE28DN8B-00(01)	EB7-B	2003		
Sanyo	CE28DN9B-00(01)	EB8-A	2004		
Sanyo	CE28DWN1B-00	EB7-D	2004		
Sanyo	CE28FVN4B-00	WB6-A	2003	remote JXMTA	
Sanyo	CE28FVN1B-00	WB5-B	2000		
Sanyo	CE28FVN2B-00	WB5-B	2001		
Sanyo	CE28FVN2B-01	EB6-C			
Sanyo	CE28FVN3B-00(01)	EB6-C	2002		
Sanyo	CE28FVN3B-02(03)	EB7-A	2002		
Sanyo	CE28FVN4B-00(01)	EB7-A	2003		
Sanyo	CE28FVN4BKB-00	EB7-A	2003		
Sanyo	CE28FVN5B-00	EB7-A	2004		
Sanyo	CE28FVN5B-01	EB8-A	2004		
Sanyo	CE28FVN5BKB-00	EB8-A	2004		
Sanyo	CE28FWP2B-00	WB5-B	2001	remote JXMFE	
Sanyo	CE28MT3B-00	EC5-A	2000		
Sanyo	CE28MT4B-00	EC8-C	2003	remote JXMTA	
Sanyo	CE28WN3B-01	EB5-W	1999		
Sanyo	CE28WN4B-00(01)	EB6-A	2000		
Sanyo	CE28WN4B-04	EB6-A	2001		
Sanyo	CE28WN4JB-00	EB7-A	2003		
Sanyo	CE28WN5B-00(01,02,03)	EB6-A	2001-2002		
Sanyo	CE28WN5B-04(05,06)	EB7-A	2002		
Sanyo	CE28WN6B-00(01)	EB7-A	2003		
Sanyo	CE28WN7B-00	EB7-A	2004		
Sanyo	CE28WN7B-01	EB8-A	2004		
Sanyo	CE28WP1B	WB2-A		remote SXMR	
Sanyo	CE28WP2B-00	WB2-A		remote SXMR	
Sanyo	CE28WP3B-01(02)	WB2-A	1999		
Sanyo	CE28WP4B-00(01,02,03,04)	EB6-A	2000		
Sanyo	CE28WP5B-00(01,02,03)	EB6-A	2001-2002		
Sanyo	CE28XP2B-01	EB4-A (MKII)	1998		
Sanyo	CE28XP2B-04	EB4-A	1999		
Sanyo	CE30LD3B-00	UB4-B LCD TV	2004		
Sanyo	CE32DFN1B-00	WB5-D	2002	remote JXMSA	
Sanyo	CE32DFN2B-00	EB7-D	2003		
Sanyo	CE32DFN2BKB-00	EB7-D	2003		
Sanyo	CE32FVN4B-00(01)	WB6-A	2003/2004	remote JXMTA	
Sanyo	CE32FVN2B-00	WB5-B	2001		
Sanyo	CE32FVN2B-01	EB6-A	2002		
Sanyo	CE32FVN3B-00	WB5-B	2002	remote JXMTA	
Sanyo	CE32FVN3B-01	EB6-C	2002		
Sanyo	CE32FVN3B-02(03)	EB7-A	2002		
Sanyo	CE32FVN4B-00(01)	EB7-A	2003		
Sanyo	CE32FVN4BKB-00	EB7-A	2003		
Sanyo	CE32FVN5B-00	EB7-A	2004		
Sanyo	CE32FVN5B-01	EB8-A	2004		
Sanyo	CE32FVN5BKB-00	EB8-A	2004		
Sanyo	CE32FWP2B-00	WB5-B	2001	remote SXMR	
Sanyo	CE32WN2B-00	WB2-B	1998		
Sanyo	CE32WN3B-01	EB5-W	1999		
Sanyo	CE32WN4B-00(01,02,03)	EB6-A	2000		
Sanyo	CE32WN4B-04	EB6-A	2001		
Sanyo	CE32WN4JB-00(01)	EB7-A	2003		
Sanyo	CE32WN5B-00(01)	EB6-A	2001		
Sanyo	CE32WN5B-02(03)	EB6-A	2002		
Sanyo	CE32WN5B-04(05,06)	EB7-A	2002		
Sanyo	CE32WN6B-00(01)	EB7-A	2002		
Sanyo	CE32WN7B-00	EB7-A	2004		
Sanyo	CE32WN7B-01	EB8-A	2004		
Sanyo	CE32WP2B-00	WB2-A		remote SXMR	
Sanyo	CE32WP3B-00(01)	WB2-A	1999/2000		
Sanyo	CE32WP4B-00(01,02,03)	EB6-A	2000		
Sanyo	CE32WP5B-00(01,02,03)	EB6-A	2001-2002		
Sanyo	CMX2100	83S-C21			
Sanyo	CPB2552	E4-A25			

Sanyo	CPB2558	E3							
Sanyo	CTP3101	B5C-31021							
Sanyo	CTP3104	79P-BBZ							
Sanyo	CTP3105	79P							
Sanyo	CTP3106	80P-B14							
Sanyo	CTP3131	80P-B14							
Sanyo	CTP3132	80P-B14							
Sanyo	CTP3134	83P-D14							
Sanyo	CTP3141	83P-C14	Tashiko 14D961						
Sanyo	CTP3144	E2-A14	Tashiko 14D962						
Sanyo	CTP3246	80P							
Sanyo	CTP4100	79P							
Sanyo	CTP4132	80P-G16							
Sanyo	CTP4144	E2-A16							
Sanyo	CTP6112	B5A-61120							
Sanyo	CTP6113	B5A-61130							
Sanyo	CTP6124	80P-A20							
Sanyo	CTP6130	80P-D20							
Sanyo	CTP6131	80P-D20							
Sanyo	CTP6132	80P-D20							
Sanyo	CTP6133	80P-D20							
Sanyo	CTP6134	83P-D20							
Sanyo	CTP6135	83P-D20							
Sanyo	CTP6143	E2-B20							
Sanyo	CTP6144	E2-B20							
Sanyo	CTP6229	80P							
Sanyo	CTP7130	80P-F22							
Sanyo	CTP7131	80P-F22							
Sanyo	CTP7132	80P-F22							
Sanyo	CTP7133	80P-F22							
Sanyo	CTP7135	80P-F22							
Saville	XMP25	Goldstar P58A							
Schneider	70222	TV9.1	Multistandard Pal/SECAM I, B/G, D/K						
Schneider	Scenario 215	11AK19E-3							
Schneider	Scenario 216	11AK19E-3							
Schneider	Scinema 2817UK	TV9.3 Multi	2000, Philips "Made in Germany" CRT	LOPTx 1372.0031 (FBT40715, HR8409)					
Schneider	STV1401	11AK20M							
Schneider	STV1402T	CTN AA							
Schneider	STV1405T	CTN BB							
Schneider	STV2003T	CTN BB							
Schneider	STV2007T	CTS AA	2001, serv.mode see Pacific PTV5102	LOPTx 40337-54, LOPTr BUT11AF					
Schneider	STV2801T	TV9							
Schneider	STV2802T	TV9.1							
Schneider	STV2804T	Beko 14.2							
Schneider	STV360	11AK20							
Schneider	STV365	11AK20							
Schneider	STV510	11AK19E-3							
Schneider	STV515	11AK19E-3							
Schneider	STV5187.1	11AK19E-3							
Schneider	STV5197.1	11AK19E-3							
Schneider	STV550	11AK19E-3							
Schneider	STV5501 ("STV5501")	11AK19-8A	1999-	AK19 prod.code: 10000360					
Schneider	STV552	11AK19E-3							
Schneider	SVTV1451	Orion chassis	PCB marked VMA230A, PSU VPA150A	Micro OEC0107B, option codes EEPROM 0B4h (0B4->0B4h)					
SEG	CT1402A(UK)	11AK36	2002-2003	prod.code: 10015412					
SEG	CT1402S(UK)	11AK36	2002-2003	prod.code: 10015414					
SEG	CT2102a UK	11AK30	2002-2003	prod.code: 10014287					
SEG	CT2102UK	11AK30	2002-2003	prod.code: 10014288					
SEG	CT2103A	11AK30							
SEG	CT2801UK	11AK19P5	micro SDA5555-A041						
SEG	CT2820a	11AK28-7							
SEG	CT7800	11AK19E-3							
SEG	CT7951GB	11AK19P							
Sentra	GX9200	Nikkai TLG0101							
Sentra	STX600	Nikkai NT20	Susumo FX20						
Sharp	15JF25H	GA1E	2002						
Sharp	15JF26H	GA1E	2002						
Sharp	21HS50H	GA1E	2001						
Sharp	21HT15H	GA1E	2001						
Sharp	21KF80H	GA1E	2003						
Sharp	21LF90H	11AK44 (Vestel)	2004						
Sharp	28HW53H	DA50W	2001						
Sharp	28JF73H	GA20	2002/2003						
Sharp	28JF74H	GA20	2002/2003						
Sharp	28JW73H	GA20 100Hz	2002, around £330, Pal I						
Sharp	28JW74H	GA20	2002/2003						
Sharp	28JW76E	GA200 100Hz	2002/2003, Multisystem Pal/SECAM B/G, D/K	ERRMCG1073BMSA					
Sharp	28KF84H	GA200 100Hz	2003						
Sharp	28LF92H	11AK45 (Vestel)	2004, £300						
Sharp	28LW92H	11AK45 (Vestel)	2004						
Sharp	32HW53H	DA50W							
Sharp	32HW57E	DA100W 100Hz	2001, Multisystem Pal/Secam I, B/G, D/K						
Sharp	32JF73H	GA20	2002/2003						
Sharp	32JF74H	GA20	2002/2003						
Sharp	32JF77H	GA200 100Hz	2003						
Sharp	32JW73H	GA20 100Hz	2002, Pal I						
Sharp	32JW74H	GA20	2002/2003						
Sharp	32JW76E	GA200 100Hz	2002/2003, Multisystem Pal/SECAM B/G, D/K, I						
Sharp	32KF84H	GA200 100Hz	2003						
Sharp	32LF92H	11AK45 (Vestel)	2004						
Sharp	32LW92H	11AK45 (Vestel)	2004						
Sharp	37AM12H	5BSA							
Sharp	37AM23H	5BSA							
Sharp	37AT25H	5BSA							
Sharp	37DM23H	CA1							
Sharp	37DT25H	CA1							
Sharp	37EM33H	CA1							
Sharp	37ES33H	CA1							
Sharp	37ET35H	CA1							
Sharp	37FM11H	CA1							
Sharp	37FT15H	CA1							
Sharp	37GQ20H	Squad	2000						
Sharp	37GT25H	GA1	2000/2001						
Sharp	37GT27H	SQUAD-T	2002						
Sharp	37VT12H	VP3							
Sharp	37VT24H	VP5							
Sharp	37VT26H	VP8	1999						
Sharp	51AT15H	5BSA							
Sharp	51CS03H	CS							
Sharp	51CS05H	CS							
Sharp	51DS02H	CA10							
Sharp	51DS03H	CA10							
Sharp	51DS05H	CA10							
Sharp	51DT25H	CA1							
Sharp	51FSS1H	CA10							
Sharp	51GT25H	GA1	2000						
Sharp	56FW53H	DA100 50Hz chassis (aka DA50W)	1999/2000						
Sharp	59CS03H	CS							
Sharp	59CS05H	CS							
Sharp	59CS08H	CS							
Sharp	59DS03H	CA10							
Sharp	59DS06H	CA10							
Sharp	59ES03H	CA10							
Sharp	59ES05H	CA10							
Sharp	59ESD7H	DA100							
Sharp	66AS05H	4BSC							
Sharp	66AS06H	BCTV-A							
Sharp	66CS03H	CS							
Sharp	66CS05H	CS							
Sharp	66CS08H	CS							
Sharp	66DS03H	CA10							
Sharp	66DS05H	CA10							
Sharp	66DW18H	CW100	1999						
Sharp	66ES03H	CA10							
Sharp	66ES05H	CA10							
Sharp	66ESD7H	DA100							
Sharp	66FW53H	DA100 50Hz chassis (aka DA50W)	1999/2000						
Sharp	66FW54H	DA100 50Hz	1999/2000						
Sharp	66GF63H	DA50W	2000						



Sharp	66GF64H	DA50W	2000								
Sharp	66GS62H	GA10 50Hz	2001								
Sharp	70FW53E	DA50W 50Hz	2002								
Sharp	70GS64S	DA100 (nonUK model)									
Sharp	76DW18H	CW100	1999								
Sharp	76EF19H	DA100W , 100Hz ,not Dolby, only NICAM	1999								
Sharp	76EF20H	DA100W , 100Hz, Dolby sound	1999								
Sharp	76FW53H	DA100 50Hz chassis (aka DA50W)	1999/2000								
Sharp	76FW54H	DA100 50Hz	1999/2000								
Sharp	76GF63H	DA50W									
Sharp	76GF64H	DA50W	2000								
Sharp	81GF66E	DA100W									
Sharp	C1407	no chassis type									
Sharp	C1410HW	4PS									
Sharp	C1411H	4PSR1									
Sharp	C1412										
Sharp	C1415	no chassis type									
Sharp	C1420H	7PS									
Sharp	C1421H	7PSR1									
Sharp	C1430	8PS									
Sharp	C1431H	8PSR									
Sharp	C1480	TAP-812									
Sharp	C1491	Rediffusion Mk5									
Sharp	C1493										
Sharp	C1495										
Sharp	C1871										
Sharp	C1881										
Sharp	C2002										
Sharp	C2072										
Sharp	C2082										
Sharp	C2085										
Sharp	C3703H	7PS									
Sharp	C3703H BK	7PS									
Sharp	C3704	8PS									
Sharp	C3705	4PSR1									
Sharp	C3705H	4PS									
Sharp	C3706H	14B									
Sharp	C3709	7PS									
Sharp	C3710H	8PSR									
Sharp	C3720H	14A									
Sharp	C3730H	14B									
Sharp	CV2121H	7PSR1									
Sharp	CV2123H	7PSR1									
Sharp	CV2131	8PSR									
Sharp	CV2133H	8PSR									
Sharp	CV3707	5P-SR1									
Sharp	CV3707H	5PS									
Sharp	CV3709H	7PS									
Sharp	CV3730										
Sharp	CV3745	14B									
Sharp	CV4833	14B									
Sharp	CV5407	5PS									
Sharp	DV1512	Euro DS1									
Sharp	DV1600	no chassis type									
Sharp	DV1620										
Sharp	DV2120	4PSR2									
Sharp	DV2121	4PS									
Sharp	DV3750H	S3B									
Sharp	DV3751H	S3B									
Sharp	DV3760H	4BSA									
Sharp	DV3761H	4BSC									
Sharp	DV3770H	4BSA									
Sharp	DV4205	4PS									
Sharp	DV5101H	EURO-DS									
Sharp	DV5103H	EURO-DS									
Sharp	DV5105H	DECO-4									
Sharp	DV5107H	DECO-5									
Sharp	DV51083H	D3000									
Sharp	DV5131H	S3B									
Sharp	DV5132H	DECO-5									
Sharp	DV5135H	DECO-5									
Sharp	DV5150H	S3B									
Sharp	DV5161H	4BSA									
Sharp	DV5165H	4BSB									
Sharp	DV5180H	4BSB									
Sharp	DV5903H	D3000									
Sharp	DV59083H	D3000									
Sharp	DV5932H	BCTV-A									
Sharp	DV5935H	BCTV-A									
Sharp	DV5937H	BCTV-A									
Sharp	DV5940H	4BSC									
Sharp	DV6603H	D3000									
Sharp	DV66083H	D3000									
Sharp	DV6632H	4BSC									
Sharp	DV6635H	BCTV-A									
Sharp	DV6640H	4BSC									
Sharp	SV2189	8PLS									
Sharp	SV257	NC-7									
Sharp	SV258H	8PLS									
Sharp	SV2588H	8PLS									
Sharp	SV2589	8PLS									
Sharp	SV2589H	8PLS									
Sharp	SV287	NC-7									
Sharp	SV288H	8PLS									
Sharp	SV2888H7	8PLS									
Sharp	SV2889	8PLS									
Sharp	SV3320	8PLP1									
Sharp	VT3700	VP1						TV/VCR			
Sharp	VT3705	VP1						TV/VCR			
Skantic	3781	180									
Skantic	5111	BC									
Skantic	5114	BC									
Skantic	5601	BC									
Skantic	5608	BC									
Skantic	6711	BC									
Skantic	6718	BC									
Skantic	18051919	B2									
Solarvox	142TT										
Solarvox	14R19	CVC1110/12									
Solarvox	14S09	CVC1110/12									
Solarvox	14S19	ITT PICO S/2									
Solarvox	16R19	ITT PICO S/2						CVC1110/12			
Solarvox	20R09	ITT MINI 2 ST2/2									
Solarvox	20S09	ITT CVC1175									
Solarvox	20S19	ITT PICO S/2									
Solarvox	20T09	ITT CVC1200/1									
Solarvox	20T19	ITT MINIZ									
Solarvox	22R09	ITT CVC1215									
Solarvox	22S19	ITT CVC1200/1						CVC1210/15			
Solarvox	22S19	ITT COMPACT 80/R									
Solarvox	22T09	ITT CVC1215									
Solarvox	22T09TX	ITT CVC1210									
Solarvox	26R09	ITT CVC1212/17									
Solarvox	26SR09	ITT CVC1212/17									
Solarvox	26ST09	ITT CVC1212/17									
Solarvox	26T09	ITT CVC1212/17									
Solarvox	CML 14	Hinari CT4 / 5						Nikkai TlG0909			
Solarvox	CML14RC	Nikkai TlG0101									
Sony	CKV2760							TV/MONITOR			
Sony	FDL390							1991			
Sony	KD28DL10U	FE2D, 50Hz, Dolby Surround	2003, RM933, £430								
Sony	KD28DL11U	FE2D	2004, RM949								
Sony	KD28DX200U	AE6D	2004, RM933								
Sony	KD28DX40U	FE2D	2001, RM933, around £540								
Sony	KD28DX50U	FE2D	2003, RM933								
Sony	KD28DX51U	FE2D	2004, RM949								
Sony	KD32DX100U	AE6D	2001, RM933								
Sony	KD32DX150U	AE6D	2003, RM933								
Sony	KD32DX200U	AE6D	2004, RM933								

Sony	KD32DX40U	FE2D	2002, RM933				
Sony	KD32DX50U	FE2D	2003, RM933				
Sony	KD32DX51U	FE2D	2004, RM949				
Sony	KD32NS100B	AE6D	2001, nonUK, RM935				
Sony	KD32NX100U	AE6D	2001, RM935				
Sony	KD32NX200U	AE6D	2002, RM939				
Sony	KD36NX200U	AE6D	2002, RM939				
Sony	KD51DS1U	RE2D	2000, RM892				
Sony	KDEP42MRX1D	MRX1 (LCD TV)	2004, RMY1013				
Sony	KDEP50MRX1D	MRX1 (LCD TV)	2004, RMY1013				
Sony	KDEP61MRX1D	MRX1 (LCD TV)	2004, RMY1013				
Sony	KDLL32MRX1D	MRX1 (LCD TV)	2004, RMY1013				
Sony	KDLL42MRX1D	MRX1 (LCD TV)	2004, RMY1013				
Sony	KF42SX200U	LE3A (LCD TV, Multistandard B/G, D/K, I, L)	2003, RM905				
Sony	KF42SX300U	LE4A	2004, RM906				
Sony	KF50SX100U	LE3	2000, RM903				
Sony	KF50SX200U	LE3A (LCD TV, Multistandard B/G, D/K, I, L)	2002, RM905				
Sony	KF50SX300U	LE4A	2003, RM906				
Sony	KF60SX300U	LE4A	2003, RM906				
Sony	KL37W1U	LE1	1996, RM838				
Sony	KL37W2U	LE1	1998, RM838				
Sony	KL40WA1U	LEZ (LCD Projector)	1997, RM862				
Sony	KL50W1U	LE1	1996, RM838				
Sony	KL50W2U	LE1	1997, RM838				
Sony	KLV15SR1	AS1 (LCD TV, Multi-standard)	2002, RM932				
Sony	KLV15SR2	? (LCD TV, Multi standard)	2003, RMY1101				
Sony	KLV17R1	AS1 (LCD TV, Multi-standard)	2002, RM932				
Sony	KLV23HR2	? (LCD TV, Multi standard)	2003, RMY1103				
Sony	KLV30MR1	? (LCD TV, Multi standard)	2003, RM972				
Sony	KP41DS1U	RE2D (based on BE3D)	1999, RM892				
Sony	KP41S3U	RE1	1996, RM831				
Sony	KP41S4U	RE2 (based on BE3D)	1998, RM862				
Sony	KP41S5U	RE2	1999, RM862				
Sony	KP44DX2	AE6X	2003, RM948				
Sony	KP44PS2	RE3W	2001, RM903				
Sony	KP44PX2U	AE6X	2002, RM938				
Sony	KP44PX3U	AE6Y	2004, RM945				
Sony	KP46S4U	RX1E	1997, RM831				
Sony	KP48PS1	RE3	2000, RM892				
Sony	KP53PS1	RE3	2000, RM892				
Sony	KP53S4U	RX1E	1997, RM831				
Sony	KP61PS1	RE3	2000, RM892				
Sony	KPS4112	AP1E	1995, RM831				
Sony	KT-X1420UB	SCC-603-A					
Sony	KV1201UB	SCC23A-A					
Sony	KV1310		1974				
Sony	KV1320		1972				
Sony	KV1330		1974				
Sony	KV1340		1975				
Sony	KV1352E	P-2E					
Sony	KV1400		1978				
Sony	KV1412UB	XE3	1984, RM636				
Sony	KV1430UB	XE3	1983				
Sony	KV1434M3	GP1A (nonUK, brought from abroad)	RM687B				
Sony	KV1440UB	XE5	1985				
Sony	KV1442UB	XE5	1988, RM651				
Sony	KV1460UB	GP1	1987				
Sony	KV1462UB	GP1	1987, RM655				
Sony	KV14CT1U	BX1	2003, RMW100				
Sony	KV14FV1U	BC5	2000, RMC815	around £350			
Sony	KV14LM1U	FE2	2000, RM889				
Sony	KV14LT1U	FE2	2000, RM887				
Sony	KV14M1U	BE4	1996, RM836				
Sony	KV14T1U	BE4	1996, RM836				
Sony	KV14V4U	TE1	1996, RMC802				
Sony	KV14V5U	BC4	1997, RMC811				
Sony	KV14V6U	BC4	1997, RMC811				
Sony	KV1612UB	XE3	1979, RM604B	SCC-251A			
Sony	KV16WS1U	BE5	1996, RM836				
Sony	KV16WT1U	BE4	1995, RM836				
Sony	KV16XMTU	GP2	1987, RM654				
Sony	KV1800		1972				
Sony	KV1810		1973				
Sony	KV1820	SCC-132B-B	ALSO SCC-155A-A	MADE1976			
Sony	KV1822UB	SCC-146C-B	1978				
Sony	KV1882UB	XE3	1984, RM636	SCC-521C-A			
Sony	KV19XMTU	GP2	1987, RM654				
Sony	KV19XMU	GP2	1987, RM652				
Sony	KV2000UB		1975				
Sony	KV2000UB-II/1820	SCC-132A-A & B	ALSO SCC-99A-A	1977			
Sony	KV2020		1979				
Sony	KV2022		1979, RM604B				
Sony	KV2029						
Sony	KV2040		1981				
Sony	KV2052U	PE2	1982, RM621				
Sony	KV2056UB	PE2	1982, RM615				
Sony	KV2060	XE3	1983				
Sony	KV2062	XE3	1983, RM632				
Sony	KV2066	XE3	1983, RM632				
Sony	KV2075						
Sony	KV2090	XE4	1985				
Sony	KV2092	XE4	1985, RM641				
Sony	KV2096UB	XE4	1985, RM641				
Sony	KV20WS1U	BE5	1997, RM836				
Sony	KV211XMTU	AE1	1989, RM670				
Sony	KV211XMU	AE1	1989, RM671				
Sony	KV2121U	AE1					
Sony	KV2153MT						
Sony	KV2170U	BE4A					
Sony	KV2171U	BE4A					
Sony	KV21CL10U	BX1, 50Hz	2003, RMW100, £215				
Sony	KV21CT1U	BX1, 50Hz	2003, RMW100, £170				
Sony	KV21FT1U	FE2	2000, RM887				
Sony	KV21FV1U	BC5	2000, RMC815	around £450			
Sony	KV21FX20	FE1A	nonUK				
Sony	KV21FX30	FE2	nonUK				
Sony	KV21LS30U	FE2	2000, RM887				
Sony	KV21LT1U	FE2	2000, RM887				
Sony	KV21M1U	BE4A	1996, RM836				
Sony	KV21M3U	BE4A	1997, RM836				
Sony	KV21M5	FE1	1998, nonUK				
Sony	KV21T1U	BE4A	1996, RM836				
Sony	KV21T3U	BE4A	1997, RM836				
Sony	KV21V4U	TE1	1996, RMC802				
Sony	KV21V5U	BC4	1997, RMC811				
Sony	KV21V6U	BC4	1997, RMC811				
Sony	KV21X1U	BE5	1996, RM836				
Sony	KV21X4U	BE5	1997, RM836				
Sony	KV21X5U	FE1	1998, RM883				
Sony	KV21XMTU	AE1	1987, RM670				
Sony	KV21XMU	AE1	1987, RM671				
Sony	KV21XRTU	SX	1986, RM661				
Sony	KV21XRU	SX	1986, RM661				
Sony	KV2200		1978				
Sony	KV2201	YE2	1981				
Sony	KV2202		1978				
Sony	KV2204UB	SCC-244A-A	1979, RM604B				
Sony	KV2206		1980				
Sony	KV2207		1980				
Sony	KV2212UB	YE2	1982, RM615				
Sony	KV2212UBII	YE2	1984, RM632				
Sony	KV2215UB	YE2	1985, RM632				
Sony	KV2216UB	YE2	1982, RM615				
Sony	KV2216UBII	YE2	1984, RM632				
Sony	KV2217UB	YE2	1985, RM632				
Sony	KV2252UB	PE3 (chassis depends on year)	1983, RM632				
Sony	KV2252UB	RX (chassis depends on year)	1985, RM632				
Sony	KV2256UB	PE3 (chassis depends on year)	1983, RM632				
Sony	KV2256UB	RX (chassis depends on year)	1985, RM632				

Sony	KV24L335U	FE2	2001, RM932, around £410						
Sony	KV24WS1U	BE3B	1995, RM837						
Sony	KV24WS2U	BE3D	1996, RM862						
Sony	KV24WX1U	BE3D	1996, RM839, A board	part number A-1632-538-A					
Sony	KV2511	AE1							
Sony	KV2521U	AE1							
Sony	KV2562	AE2							
Sony	KV25F1U	BE3D	1996, RM862, A board 1-659-826-14	part number A-1632-398-A					
Sony	KV25F2U	BE3D	1996, RM862						
Sony	KV25F3U	BE3D	1997, RM862, A board 1-659-826-14	part number A-1632-608-A					
Sony	KV25FX20U	FE1A							
Sony	KV25FX30	FE2	nonUK						
Sony	KV25K1U	AE4	1996, RM862						
Sony	KV25K5U	FE1	1998, RM883, RM887						
Sony	KV25T1U	BE3B	1996, RM837, A board	part number A-1632-407-A					
Sony	KV25T2U	FE1	1998, RM883						
Sony	KV25X1U	BE3D	1996, RM839, A board	part number A-1632-400-A					
Sony	KV25X5U	FE1	1999, RM883						
Sony	KV2704		1980						
Sony	KV2705	QE1	1982, RM615						
Sony	KV2706	QE1	1982, RM615						
Sony	KV2715UB	YE2							
Sony	KV2752UB	PE3 (chassis depends on year)	1983, RM632						
Sony	KV2752UB	RX (chassis depends on year)	1985, RM632						
Sony	KV2756UB	PE3 (chassis depends on year)	1983, RM632						
Sony	KV2756UB	RX (chassis depends on year)	1985, RM632						
Sony	KV2762UB	PE3 (chassis depends on year)	1984, RM632						
Sony	KV2762UB	RX (chassis depends on year)	1985, RM632						
Sony	KV2764EC	PE3	RM635						
Sony	KV2766UB	PE3 (chassis depends on year)	1984, RM632						
Sony	KV2766UB	RX (chassis depends on year)	1985, RM632						
Sony	KV27VX	VX							
Sony	KV27XRTU	SX	1986, RM661						
Sony	KV27XRU	SX	1986, RM661						
Sony	KV28CL10U	FE_2_50Hz	2003, RM946, £360						
Sony	KV28CS70U	AE6B	2004, RM932						
Sony	KV28DS20U	BE3E	1999, RM888, A board 1-673-314-12	part number A-1632-854-A					
Sony	KV28DS60U	GE1A	1999, RM891						
Sony	KV28DS65U	GE1A	2001, RM892						
Sony	KV28DX20U	BE3E	1999, RM888, A board 1-673-314-12	part number A-1632-852-A					
Sony	KV28DX30U	BE3E	2000, RM888, A board 1-673-314-13	part number A-1632-909-A					
Sony	KV28EW20U	FE2	2002, RM887						
Sony	KV28FC60Z	AE5	1999, RM892						
Sony	KV28FD1E	GE1 (nonUK model but has UK sound)	1997, RM864						
Sony	KV28FQ70U	AE6B, 100Hz, virtual surround sound	2003, RM938, £540-£700						
Sony	KV28FQ75U	AE5A	2000, RM893						
Sony	KV28FQ86	AE6BA (nonUK)	2004, RM945						
Sony	KV28FS20U	BE3E	1999, RM887, A board 1-673-314-12	part number A-1632-881-A					
Sony	KV28FX20U	BE3E	1999, RM887, A board 0-673-313-03	part number A-1632-850-A					
Sony	KV28FX60U	AE5	1999, RM891						
Sony	KV28FX65U	AE5	2000, RM887						
Sony	KV28FX66U	AE6B	2002, RM937						
Sony	KV28FX68U	AE6B, 100Hz	2003, RM932, around £500						
Sony	KV28HX15U	FE2	2004, RM947						
Sony	KV28L335U	FE2	2001, RM932						
Sony	KV28L336U	FE2W, 50Hz	2003, RM932, (2003 around £599; 2004 around £400)						
Sony	KV28L360U	AE6B	2002, RM932						
Sony	KV28WF1U	BE3D	1997, RM839, A board 1-659-826-15	part number A-1632-676-A					
Sony	KV28WS1U	BE3B	1995, RM837						
Sony	KV28WS2U	BE3D	1996, RM862, A board 1-659-826-17	part number A-1632-515-A					
Sony	KV28WS3U	AE3 100Hz	1995, RM838						
Sony	KV28WX1U	BE3D	1996, RM839, A board	part number A-1632-501-A					
Sony	KV2922U	AE1C and SCC-E23B-A							
Sony	KV29CL10U	FE2	2003, RM946						
Sony	KV29F1U	BE3D	1996, RM862, A board 1-659-826-14	part number A-1632-398-A					
Sony	KV29F2U	BE3D	1996, RM862, A board 1-659-826-12	part number A-1632-438-A					
Sony	KV29F3U	BE3D	1997, RM862, A board 1-659-826-14	part number A-1632-398-A					
Sony	KV29FC20	FE1A	nonUK						
Sony	KV29FQ76	AE6A	nonUK, RM938						
Sony	KV29FS60U	AE5	1998, RM891						
Sony	KV29FS70U	AE5/AE5A							
Sony	KV29FX11U	BE3D	1998, RM886, A board 1-659-826-16	part number A-1632-781-A					
Sony	KV29FX20U	FE1A	1999, RM887						
Sony	KV29FX30	FE2	nonUK						
Sony	KV29FX66	AE6B	2001, nonUK, RM934						
Sony	KV29K1U	AE4	1996, RM862						
Sony	KV29K5U	FE1	1998, RM883						
Sony	KV29LS30	FE2	2002, RM887						
Sony	KV29LS35	FE2	2002, nonUK, RM932						
Sony	KV29LS60	AE6B	nonUK, RM932						
Sony	KV29X1U	BE3D	1996, RM839, A board	part number A-1632-400-A					
Sony	KV29X2	AE3							
Sony	KV29X5U	FE1	1998, RM883						
Sony	KV32CS70U	AE6B	2004, RM932						
Sony	KV32DS20U	BE3E	1999, RM888, A board 1-673-314-12	part number A-1632-854-A					
Sony	KV32DS60U	GE1A	1999, RM891						
Sony	KV32DS65U	GE1A	2001, RM892						
Sony	KV32DX20U	BE3E	1999, RM888, A board 1-673-314-12	part number A-1632-852-A					
Sony	KV32DX30U	BE3E (LOPTx 145330841, SM incorrect)	2000, RM888, A board 1-673-314-13	part number A-1632-909-A					
Sony	KV32FC60Z	AE5	1999, RM892						
Sony	KV32FD1E	GE1 (nonUK model but has UK sound)	1997, RM864						
Sony	KV32FQ70U	AE6B, 100Hz	2003, RM938, £650-£900						
Sony	KV32FQ75U	AE5A	2000, RM893						
Sony	KV32FQ80U	AE6A	2002, RM936						
Sony	KV32FQ86U	AE6BA	2004, RM945, £700-£800						
Sony	KV32FS60	AE5 nonUK	1998, RM891						
Sony	KV32FX20U	BE3E	1999, RM887, A board 0-673-313-03	part number A-1632-850-A					
Sony	KV32FX60U	AE5	1999, RM891						
Sony	KV32FX65U	AE5	2000, RM887						
Sony	KV32FX66U	AE6B	2002, RM937						
Sony	KV32FX68U(S)	AE6B	2003, RM932, around £600						
Sony	KV32HX15U	FE2	2004, RM947						
Sony	KV32L335U	FE2	2001, RM932						
Sony	KV32L336U	FE2W, 50Hz	2003, RM932						
Sony	KV32L360U	AE6B	2002, RM932						
Sony	KV32WF1U	BE3D	1997, RM839, A board 1-659-826-15	part number A-1632-676-A					
Sony	KV32WS2U	BE3D	1998, RM862, A board 1-659-826-17	part number A-1632-515-A					
Sony	KV32WS3U	AE3 100Hz	1995, RM838						
Sony	KV32WS4U	AE4	1996, RM862						
Sony	KV32WX2U	AE4	1996, RM862						
Sony	KV32WX4U	AE4	1996, RM862						
Sony	KV34WX2U	AE4	1996, RM862						
Sony	KV36FQ80	AE6A	2002, RM936						
Sony	KV36FS70U(S)	AE5A	2000, RM892, Multistandard I, B/G, D/K						
Sony	KV36FS76U	AE6A, 100Hz	2002, RM938, £1270						
Sony	KV36HQ100		2004, £1500						
Sony	KVA2112	AE1C	1991, RM816						
Sony	KVA2122U	AE1C	1992, RM816						
Sony	KVA2123	AE1C							
Sony	KVA2131	AE2A							
Sony	KVA2132U	AE2A	1993, RM831						
Sony	KVA2133	AE2A							
Sony	KVA2511	AE1C							
Sony	KVA2512	AE1C	1991, RM816						
Sony	KVA2513	AE1C							
Sony	KVA2522	AE1C	1992, RM816						
Sony	KVA2523	AE1C							
Sony	KVA2532	AE2A	1993, RM831						
Sony	KVA2533	AE2A							
Sony	KVA2542	AE2B	1994, RM831						
Sony	KVA2912	AE1C	1991, RM816						
Sony	KVA2913	AE1C							
Sony	KVA2922	AE1C	1992, RM816						
Sony	KVA2923	AE1C							
Sony	KVA2932	AE2A	1993, RM831						
Sony	KVA2933	AE2A							
Sony	KVA2942U	AE2B	1994, RM831						
Sony	KVA3412	DE2	1991, RM816						
Sony	KVA3413	DE2							



Sony	KVX2102U	BE3B	1994, RM833						
Sony	KVX2121U	AE1	1989, RM670						
Sony	KVX2129	AE1	1990, RM670						
Sony	KVX2131	AE1C							
Sony	KVX2132U	AE1B	1990, RM689, NICAM						
Sony	KVX2133	AE1B							
Sony	KVX2142	AE1C	1991, RM816						
Sony	KVX2152	AE1C	1992, RM816						
Sony	KVX2153	AE1C							
Sony	KVX2162U	AE2	1993, RM830						
Sony	KVX2163	AE1C							
Sony	KVX217	AE2B							
Sony	KVX2172	AE2B	1994, RM831						
Sony	KVX2173	AE2B							
Sony	KVX2182U	BE3B	1995, RM833						
Sony	KVX21TU	AE1	1988, RM670						
Sony	KVX2502	BE3B	1994, RM833						
Sony	KVX2503	BE3B							
Sony	KVX2521	AE1	1989, RM670						
Sony	KVX2529U	AE1	1990, RM670						
Sony	KVX2531	AE1C							
Sony	KVX2532	AE1B	1990, RM689						
Sony	KVX2533	AE1B							
Sony	KVX2542	AE1C	1991, RM831						
Sony	KVX2545	AE1C	1991, RM824						
Sony	KVX2552	AE1C	1992, RM816						
Sony	KVX2553	AE1C							
Sony	KVX2560	AE2							
Sony	KVX2561	AE2							
Sony	KVX2562U	AE2	1993, RM830						
Sony	KVX2563	AE2							
Sony	KVX257	AE2B							
Sony	KVX2572	AE2B	1994, RM831						
Sony	KVX2573	AE2B							
Sony	KVX2582U	BE3B	1995, RM833						
Sony	KVX25TU	AE1	1988, RM670						
Sony	KVX2902	BE3B	1994, RM833, A board			part number A-1632-199-A			
Sony	KVX2903	BE3B							
Sony	KVX2910	AE1							
Sony	KVX2931	AE1C							
Sony	KVX2932	AE1B	1990, RM689						
Sony	KVX2933	AE1B							
Sony	KVX2942	AE1C	1991, RM816						
Sony	KVX2952	AE1C	1992, RM816						
Sony	KVX2962	AE2	1993, RM830						
Sony	KVX2963	AE2							
Sony	KVX297	AE2B							
Sony	KVX2972	AE2B	1994, RM831						
Sony	KVX2973	AE2B							
Sony	KVX2982U	BE3B	1995, RM833, A board 1-655-470-11			part number A-1632-275-A			
Sony	KX14CP1		1985						
Sony	KX20PS1	HF	1982						
Sony	KX27PS1	HF	1982						
Sony	KZ32TS1	??	2002, RM932						
Sony	KZ32TS2	??	2003, RM932						
Sony	KZ42TS1	??	2002, RM932						
Sony	KZ42TS2	??	2003, RM932						
Sony	PVM-1440OM	SCC-C57A-A							
Sony	PVM-1442OM	SCC-C66A-A							
Sony	PVM-1444OM	SCC-C55A-A							
Sony	TV9-90UB	D/S MONO							
Susumu	FX1400R	Murphy CTV3500							
Susumu	FX14S	Murphy CTV3500							
Susumu	FX20	Nikkai NT20	Senra STX600						
Susumu	GT20	Hinari CT5							
Tandy	CTV1402	Decca 140							
Tandy	CTV1601	Decca 160							
Tandy	CTV2102	Decca 160							
Tashiko	12D971	Samsung VT306K							
Tashiko	14D961	Sanyo CTP3141							
Tashiko	14D962	Sanyo E2	Sanyo CTP3144						
Tashiko	14D971	Samsung CI339F							
Tashiko	14E881	Nikkai TLG0101							
Tashiko	14F891	Decca 160	Tatung VN1671						
Tashiko	16E891	Decca 160	Tatung DP8655						
Tashiko	20E911	Jackson 20R	Matsui CTV2055						
Tashiko	20E912	Jackson 20R	Matsui CTV2055						
Tashiko	20F862	ITT Pico S/3							
Tashiko	45E881	Nikkai TLG010							
Tashiko	51E941	Finlandia/Salora/Granada	C51E24						
Tashiko	51E942	Finlandia/Salora/Granada	C51E24						
Tatung	D14DT90S	TV/DVD PT90 chassis	2003			remote 631020001381			
Tatung	D14DT91S	TV/DVD PT90 chassis							
Tatung	D14RFG5	F Series							
Tatung	D14RFG6	F Series							
Tatung	D14RFG7	F Series							
Tatung	D14RKD5	K Series (chassis KAT00-W, Cabinet 14CX4)	2002, nonTEXT			chassis marked 200-100-TV2K			
Tatung	D14RKG5	K Series (chassis KAT00-W, Cabinet 14CX7)	2002, nonTEXT			chassis marked 200-100-TV2K			
Tatung	D14RKG7LS	K Series (TV3K chassis)							
Tatung	D14TFG5	F Series							
Tatung	D14TFG6	F Series							
Tatung	D14TKD5	K Series (chassis KAT00-I, Cabinet 14CX4)	2002, TEXT			chassis marked 200-100-TV2K			
Tatung	D14TKG5	K Series (chassis KAT00-I, Cabinet 14CX7)	2002, TEXT			chassis marked 200-100-TV2K			
Tatung	D14TKG6LS	K Series (TV3K chassis)							
Tatung	D14TT92S	PT92							
Tatung	D20NDE5	D4N Series							
Tatung	D20RFG5	F Series							
Tatung	D20RKG5	K Series (chassis KBT00-W, Cabinet 20CX7)	2002, nonTEXT			chassis marked 200-100-TV2K			
Tatung	D20TFG6	F Series							
Tatung	D20TKG5	K Series (chassis KBT00-I, Cabinet 20CX7)	2002, TEXT			chassis marked 200-100-TV2K			
Tatung	D21NDE5	D4N Series							
Tatung	D21NF91S	PT90							
Tatung	D21NT90S	PT90							
Tatung	D21NT92S	PT92							
Tatung	D21RDF6	D Series (D4N Series)							
Tatung	D21TFG5	F Series							
Tatung	D21TFG6	F Series							
Tatung	D21TKG5LS	K Series							
Tatung	D25N440	4400 chassis							
Tatung	D28DGH5S	G Series							
Tatung	D28N440 (28BKD)	4400 chassis							
Tatung	D28N441	4400							
Tatung	D28NGH5S	G Series							
Tatung	D28NT92S	PT92							
Tatung	D28W441 (28ZKR)	4400 chassis				LOPTx S065621350 1372.0030 (Wills Grove LT-838 £14.95), equiv HR8624, FBT40824			
Tatung	D28WHH5S	H Series (H3N)							
Tatung	D28WHH6S	H Series							
Tatung	D28W792S	PT92							
Tatung	D32W441S	4400 chassis							
Tatung	DP9855	160	Decca			Tashiko 16E891			
Tatung	DVC763	Orion chassis	PCB marked TM9450A, video VM9162D			Micro OEC0078C, option codes EEPROM address 100H			
Tatung	DVC764	Orion chassis				Micro OEC0096B			
Tatung	DVT466S	Orion chassis				Micro OEC0107B, option codes EEPROM address 0B4h (0B4->0B4h)			
Tatung	RS5188	170Q	Decca						
Tatung	T14DT90S	TV/DVD PT90 chassis	2003			remote 631020001381			
Tatung	T14DT91S	TV/DVD PT90 chassis							
Tatung	T14RF70	F Series							
Tatung	T14RF71	F Series							
Tatung	T14RK40	K Series (chassis KAT00-W, Cabinet 14CX4)	2002, nonTEXT			chassis marked 200-100-TV2K			
Tatung	T14RK70	K Series (chassis KAT00-W, Cabinet 14CX7)	2002, nonTEXT			chassis marked 200-100-TV2K			
Tatung	T14TD40	D Series							
Tatung	T14TF70	F Series							
Tatung	T14TF71	F Series							
Tatung	T14TK40	K Series (chassis KAT00-I, Cabinet 14CX4)	2002, TEXT			chassis marked 200-100-TV2K			
Tatung	T14TK70	K Series (chassis KAT00-I, Cabinet 14CX7)	2002, TEXT			chassis marked 200-100-TV2K			
Tatung	T20TD50	D Series							
Tatung	T20TF70	F Series							
Tatung	T20TK70	K Series (KBT00-I, Cabinet 20CX7)	2002, TEXT			chassis marked 200-100-TV2K			

Tatung	T21NA21	Orion chassis			
Tatung	T21NT90S	PT90			
Tatung	T21NT92S	PT92	2002		
Tatung	T21TF70	F Series			
Tatung	T21TK70	K Series (chassis KCT00-I, Cabinet 21CX7)	2002, TEXT		
Tatung	T21TT92S	PT92			
Tatung	T24WF255S	2550 chassis	2003, realflat CRT		
Tatung	T25N250S	2500 chassis			
Tatung	T25N255S	2550 chassis	2003		
Tatung	T25N440	4400 chassis			
Tatung	T25NE61	E1 SERIES			
Tatung	T25T395	3960 chassis	remote		
Tatung	T28DG80S	G series			
Tatung	T28DG82S	G Series	2003		
Tatung	T28N440	4400 chassis			
Tatung	T28NE51	E SERIES			
Tatung	T28NG80S	G series			
Tatung	T28NT92S	PT92	2003		
Tatung	T28W440	4400 chassis			
Tatung	T28W441S	4400 chassis			
Tatung	T28W730	7300 chassis			
Tatung	T28WF255S	2550 chassis	2003, realflat CRT		
Tatung	T28WG82S	G Series (G5N)			
Tatung	T28WH81S	H Series (H3N)			
Tatung	T28WH82S	H Series (H3N)	2003		
Tatung	T28WH91S	PT90F-I	2004		
Tatung	T32W250S	2500 chassis			
Tatung	T32W255S	2500 chassis	2003		
Tatung	T32W440 (32KBD)	4400 chassis			
Tatung	T32W441S	4400 chassis			
Tatung	T32WF255S	2550 chassis	2003, realflat CRT		
Tatung	TN1201	120/130	Decca		
Tatung	TN1401	140	Decca		
Tatung	TN1441	140	Decca		
Tatung	TN1601A	160	Decca		
Tatung	TN1616	160	Decca		
Tatung	TN1621	160	Decca		
Tatung	TN8402	140	Decca		
Tatung	TN8422	145A	Decca		
Tatung	TN8432	145	Decca		
Tatung	TN8904	190	Decca		
Tatung	TN9201	120/130	Decca		
Tatung	TNC50	C SERIES			
Tatung	TNC52	C SERIES			
Tatung	TO8632	165	Decca		
Tatung	TO8682	165	Decca		
Tatung	TP1207	120/130	Decca		
Tatung	TP1403	10	Decca		
Tatung	TP1603A	160	Decca		
Tatung	TP1623	160	Decca		
Tatung	TP8404	140	Decca		
Tatung	TP8424	145A	Decca		
Tatung	TP8434	145	Decca		
Tatung	TP9207	120/130	Decca		
Tatung	TP9424	145A	Decca		
Tatung	TP9434	145	Decca		
Tatung	TT1202	120/130	Decca		
Tatung	TT1405	140	Decca		
Tatung	TT1409	140	Decca		
Tatung	TT1605	160	Decca		
Tatung	TT1607	160	Decca		
Tatung	TT1625	160	Decca		
Tatung	TT1627	160	Decca		
Tatung	TT1905	190	Decca		
Tatung	TT8406	140	Decca		
Tatung	TT8409	140	Decca		
Tatung	TT8416	145A	Decca		
Tatung	TT8426	145A	Decca		
Tatung	TT8436	145	Decca		
Tatung	TT8906	190/195	Decca		
Tatung	TT9202	120/130	Decca		
Tatung	TT9205	120/130	Decca		
Tatung	TT9206	120/130	Decca		
Tatung	TT9406	140	Decca		
Tatung	TT9409	140	Decca		
Tatung	TT9416	145A	Decca		
Tatung	TT9426	145A	Decca		
Tatung	TT9436	145	Decca		
Tatung	TU3D53	D SERIES			
Tatung	TU8620M	165	Decca		
Tatung	TU8638	165	Decca		
Tatung	TU9711	170	Decca		
Tatung	TUN0A51	A SERIES (A3N)			
Tatung	TUV2C52	C SERIES			
Tatung	TUV3A51	A SERIES			
Tatung	TUV9705	170	Decca		
Tatung	TUV9731	170	Decca		
Tatung	TUV9734	170	Decca		
Tatung	TV1203	120/130	Decca		
Tatung	TV1301	120/130	Decca		
Tatung	TV1303	120/130	Decca		
Tatung	TV1407	140	Decca		
Tatung	TV1410	140	Decca		
Tatung	TV8408	140	Decca		
Tatung	TV8410	140	Decca		
Tatung	TV8418	145A	Decca		
Tatung	TV8428	145A	Decca		
Tatung	TV9201	120/130	Decca		
Tatung	TV9203	120/130	Decca		
Tatung	TV9305	120/130	Decca		
Tatung	TV9306	120/130	Decca		
Tatung	TV9308	120/130	Decca		
Tatung	TV9408	140	Decca		
Tatung	TV9410	140	Decca		
Tatung	TV9418	145A	Decca		
Tatung	TV9428	145A	Decca		
Tatung	TV9501	150	Decca		
Tatung	TVC562	Orion chassis	Aiwa VXG142K		
Tatung	TVC563	Orion chassis, see Bush BTV17	PCB marked TM9423A	Micro OEC0078A, option codes EEPROM address 100H	
Tatung	TVC565	Orion chassis	PCB marked VMA230A		
Tatung	TVC864	Orion chassis		Micro OEC0096B	
Tatung	TVT566S	Orion chassis		Micro OEC0107B, option codes EEPROM address 0B4h (0B4->0B4h)	
Tatung	TX1302	120/130	Decca		
Tatung	TX9302	120/130	Decca		
Tatung	TYN9B01P	B Series			
Tatung	TY98624	180	Decca		
Tatung	TY9821M	180	Decca		
Tatung	TZ9307	120/130	Decca		
Tatung	TZ9308	120/130	Decca		
Tatung	V14RPD1W	D Series			
Tatung	V14RFG1G(O)(P)	F Series			
Tatung	V14TDDO	D Series			
Tatung	V21NDF0	D4N series			
Tatung	V25NEF0	E Series			
Tatung	VN1671	160	Decca	Tashiko 14F891	
Tatung	VU3DF3	D Series			
Tatung	VUV2CC2	C Series			
Techwood	14RM1	11AK36	2003-2004, £80	AK30 prod.code: 10023092	
Techwood	14TVDVD1	11AK46 +DVD	2003-2004, £109	AK46 prod.code: 10023094	
Techwood	21RM1	11AK30	2003-2004, £143	AK30 prod.code: 10023093	
Techwood	TWD28RF1		2004 E250		
Telefunken	417	ICC4		Ferguson	
Telefunken	517	ICC5		Ferguson	
Telefunken	518	ICC5		Ferguson	
Telefunken	617	ICC5		Ferguson	
Telefunken	618	ICC5		Ferguson	
Telefunken	638	Decca 80			
Telefunken	389	ICC9		Ferguson	
Telefunken	418A	IKC2		Ferguson	

 


 
Thomson	32WR101	JTC008		2004, 50Hz, 16:9	RC111TA1G				
Thomson	32WR25UG	ICC17		2003, 50Hz	MB100				
Thomson	32WS23UJ	ICC17							
Thomson	32WS850D	ICC19							
Thomson	32WS83KP	ICC19							
Thomson	32WS95UF	Plasma		50Hz					
Thomson	32WT45US	ICC20 +DVD		100Hz	RCV400				
Thomson	32WX211S	ICC17		50Hz	RCT2100S				
Thomson	32WX35US	ICC17		50Hz	RCT4170				
Thomson	32WX401T	ICC20		2003, 100Hz, Stereo Nicam	RC111TA1G				
Thomson	32WX411T(S)	ICC20		100Hz	RCT2100S				
Thomson	32WX610S	ICC21		100Hz	RCT4130S				
Thomson	32WX65US	ICC19							
Thomson	32WZ413S	ETC210		2003, 100Hz, Dolby Surround	RCT311TAM1				
Thomson	32WZ611S	ICC21		100Hz	RCT4130S				
Thomson	32WZ841W	ICC21		100Hz	RCT4157W				
Thomson	33MS24UG(EG)	ICC17		2003, 50Hz	RCT2100S				
Thomson	34DC430	ETC210		2004, 100Hz, 4:3	RCT311TAM1				
Thomson	34DF220	JTC008		2004, 50Hz, 4:3	RCT311TM1G				
Thomson	36MK48CRU	TX91							
Thomson	36WT611T(S)	ICC21 +DVD		100Hz	RCV400				
Thomson	36WX87UT(US)	ICC21		100Hz	RCT4157S				
Thomson	37MG73J	ICC9			RCT3002				
Thomson	37MH44E	ICC19-IM		100Hz	RCT4130				
Thomson	37PB220S4U	Plasma		2004, 100Hz	RCS815TCLM1				
Thomson	40JW611S	ICC21		100Hz	RCT4130S				
Thomson	40KW613	ETC210		2004, 100Hz, 16:9	RCT311TAM1				
Thomson	40KW61S	ICC21		100Hz	RCT2100S				
Thomson	40KW613S	JTC222		2003, 100Hz, Dolby, Multistandard	RCT311TAM1				
Thomson	40TW611S	ICC21 +DVD		100Hz	RCV400				
Thomson	42JH67E	ICC21		100Hz	RCT4130S				
Thomson	42JH68US(E)	ICC21		100Hz	RCT2100S				
Thomson	42KH413S	ETC210		2003, 100Hz High Focus	RCT311TAM1				
Thomson	42PB120B4	Plasma		2004	RCS615TCLM1				
Thomson	42PB220S4U	Plasma		2004	RCS615TCLM1				
Thomson	42PM03LF	Plasma		2003, 50/60Hz progressive	TBD				
Thomson	42WB02SU	Plasma		2003, 50/60Hz progressive	RCT4157S				
Thomson	42WM02LU	Plasma		2003, 50/60Hz progressive	RCT120TA				
Thomson	42WM02ST	Plasma		2003, 50/60Hz progressive	RCT4157S				
Thomson	42WM03LU	Plasma		2003, 50/60Hz progressive	RCT120TA				
Thomson	42WM03ST	Plasma		2003, 50/60Hz progressive	RCT4157S				
Thomson	42WM04ST	Plasma		2004	RCT4157S				
Thomson	42WP94U(E)	Plasma		2003	RCT4147				
Thomson	42WS94UF	Plasma		2003	RCT4147				
Thomson	42WS95UF	Plasma		50Hz	RCT4147				
Thomson	44CW413	ETC210 (Projection TV)		2004	RCT615TDM1				
Thomson	44DLP541	DLP		2003, 300Hz progressive scan	RCS615THLM1				
Thomson	44DLY645	JTC250 (DLP)		2004,	RCS615TCLM1				
Thomson	44JW611S	ICC21		100Hz	RCT4130S				
Thomson	44JW611S2	ICC21		100Hz	RCT311TAM1				
Thomson	44JW613S	JTC222		2004, 100Hz, 16:9	RCT615TDM1				
Thomson	44JW643S	JTC222		2003, 100Hz, Dolby, Multistandard	RCS615TCLM				
Thomson	44RW65US	ICC19-MM		100Hz	RCT4130S				
Thomson	44RW67US	ICC21		100Hz	RCT4130S				
Thomson	44TW611S	ICC21 +DVD		100Hz	RCT4130S				
Thomson	46JH67E	ICC21		100Hz	RCT4130S				
Thomson	46JH69E(US)(U)	ICC21		2003, 100Hz	RCT2100S				
Thomson	46KH413S	ETC210		2003, 100Hz High Focus	RCT311TAM1				
Thomson	50DL Y645	JTC250 projection		2004, progressive scan, 16:9	RCS615TCLM1				
Thomson	50DSZ645	JTC250 (DLP)		2004	RCS615TCLM1				
Thomson	50WB03PU	Plasma		2003, 50/60Hz progressive	RC4157S				
Thomson	50WS94UF	Plasma		50Hz	RCT4147				
Thomson	50WS95UF	Plasma		2003, 50Hz	RCT4147				
Thomson	52BW613	JTC222		2004	RCT615TDM1				
Thomson	52JW641S	ICC21		2003, 100Hz	RCT4157S				
Thomson	52JW643S	JTC222		2003, 100Hz, Dolby, Multistandard	RCS615TCLM				
Thomson	52RW611S	ICC21		100Hz	RCT4130S				
Thomson	52RW87E(US)(ES)	ICC21		100Hz	RCT4157S				
Thomson	61DLY645	JTC250		2004	RCS615TCLM1				
Thomson	61DSZ645	JTC250		2004	RCS615TCLM1				
Thomson	61JW643S	JTC222		2004, 100Hz, Dolby, Multistandard	RCS615TCLM				
Thomson	61TW611S	ICC21 +DVD		2003, 100Hz	RCV456				
Thomson	72MK89DU	ICC11			RCT702				
Thomson	Digital2	EUTVD2001 TV+DVD		50Hz	RCV300				
Thomson	HTM14117	TX807C		2003, 50Hz	HRC102				
Thomson	HTM20117	TX807C		2003, 50Hz	RCT100				
Thomson	HTM21117	TX807C		2003, 50Hz	RCT100				
Thomson	M5115UT	TX807							
Thomson	RP52UK	ICC9							
Thomson	Smooth2	TX807C		50Hz	RCT102				
Thomson	Style2	TX807C		50Hz					
Thomson	Sugar2	TX807C		2003, 50Hz	RCT315				
Thomson	Tekno2	Combo 99 Mono		50Hz	RCV100S				
Thomson	Xinox	TX807C		50Hz	RCT315				
Thomson	Xinox2	TX807C		50Hz	RCT315				
Thorn	3788	Ferguson TX10							
Thorn	37140	Ferguson TX90							
Thorn	38020	Thorn 1790							
Thorn	38030	Thorn 1790							
Thorn	CT5122T	Tatung D							
Thorn	CT514TN	Daewoo CP365							
Thorn	P1465R	Decca 190							
Thorn	P1470R	GR1-AX							
Thorn	P1480R	Daewoo DMQ1454							
Thorn	P1482T	Tatung D							
Toshiba	1480	C80							
Toshiba	2563								
Toshiba	1400TBT			1991					
Toshiba	1400TBZ								
Toshiba	140E4B			1984					
Toshiba	140R3B								
Toshiba	140R4B								
Toshiba	141E3B								
Toshiba	143R4BR								
Toshiba	1440RB	C4							
Toshiba	1440TB	C4							
Toshiba	1450TB	C4ER							
Toshiba	145E7B								
Toshiba	145R7B								
Toshiba	14N21B2	Orion chassis, 2002			PCB marked TMC571A	Micro OECF012A	remote RC-GX010		
Toshiba	14N21BS 14N21BB	Orion chassis, 2002 around £100			PCB marked TMB537A	Micro OECF005A		Serv. Mode: Vol- on set and "9" on R/c for >2 sec	
Toshiba	14N21IS	Orion chassis, 2003			PCB marked TMB537A	Micro OECF005A	remote RC-FK01A		
Toshiba	14R01B	Samsung KS1A			Samsung CI14R01B2				
Toshiba	14R01F	Samsung KS1A							
Toshiba	14T01B	Samsung KS1A			Samsung CI14T01B2				
Toshiba	14T01D	Samsung KS1A							
Toshiba	14T01I	Samsung KS1A							
Toshiba	14T01N	Samsung KS1A							
Toshiba	150R6B								
Toshiba	1510RB								
Toshiba	1510TBT			1991					
Toshiba	155R8B								
Toshiba	155R9B								
Toshiba	156R9B								
Toshiba	159X4Y				Multi std portable				
Toshiba	15V11B	Orion chassis, 2002			PCB marked TMA531A or TMA531C (on n	Micro OECF004A	remote SBKM00032A		
Toshiba	15V31B	Orion chassis, 2002			PCB marked TMC572B	Micro OECF012A	remote RC-GX010		
Toshiba	1720RB								
Toshiba	1721TB								
Toshiba	1722TB	C4							
Toshiba	1752TB	C4ER							
Toshiba	175R9B			1988					
Toshiba	175T9B								
Toshiba	199R4B								
Toshiba	201T4B								
Toshiba	202R5B								
Toshiba	202T5B								
Toshiba	2100RBT								
Toshiba	2100TBT			1990					



Toshiba	2101TB						
Toshiba	2102TB						
Toshiba	2103TB						
Toshiba	210R6B		FST				
Toshiba	210T6B						
Toshiba	2112DB	C915B					
Toshiba	211T4B						
Toshiba	212R4B		1985				
Toshiba	212T4B						
Toshiba	2132DB	C3					
Toshiba	213R4B						
Toshiba	2140RB	C4					
Toshiba	2140TB	C4					
Toshiba	2141RB	C4					
Toshiba	2141TB	C4					
Toshiba	2145DB	C3SSR					
Toshiba	214E7B						
Toshiba	214T7B						
Toshiba	2151TB	C4ER					
Toshiba	2152DB	C5					
Toshiba	215R8B		1988				
Toshiba	215T8B						
Toshiba	2163DB	C6S					
Toshiba	216T9B						
Toshiba	2173DB	C7S					
Toshiba	217D9B						
Toshiba	2180TB	C80					
Toshiba	2181TB	C80					
Toshiba	218D9B		21in set from 1989				
Toshiba	219T9B						
Toshiba	21N21B	Orion chassis, 2003	PCB marked TMB545A	Micro OECF004A	remote R25-1800		
Toshiba	21N21B2	Orion chassis, 2002	PCB marked TMC572A	Micro OECF012A	remote RC-GX010		
Toshiba	21N211	Orion chassis, 2003	PCB marked TMB545A	Micro OECF004A	remote R25-1800		
Toshiba	21R01F	Samsung KS1A					
Toshiba	21S04B	Samsung KS3A					
Toshiba	21S23B	Orion chassis, 2003	PCB marked TMA528C	Micro OECF004A, video STV22	remote SBKM00030A	option data in EEPROM starts from 03H, e.g. INI 01 -> 03H	
Toshiba	21S23B2	Orion chassis, 2002	PCB marked TMC572A	Micro OECF012A	remote CT-849		
Toshiba	21T01B(D,I,N)	Samsung KS1A					
Toshiba	21T01F	Samsung KS1A	Samsung CI21T01F2				
Toshiba	21V13B	Orion chassis, 2003	PCB marked TMA528A	Micro OECF004A	remote SBKM00030A	IC501 TEA1507P, part IOWD015070	
Toshiba	21V33B2	Orion chassis, 2003	PCB marked TMC572B	Micro OECF012B	remote RC-GX020		
Toshiba	221E4B	Matsui 2220					
Toshiba	221T3B						
Toshiba	222T5B						
Toshiba	223B1	Matsui CTV8510					
Toshiba	24W33B	11AK37	2003				
Toshiba	24Z33B	Orion chassis, 2003	PCB marked AMC001A	Micro OECF015A	remote RC-GZ010		
Toshiba	24Z37B	Orion chassis, 2003	PCB marked AMC001A	Micro OECF015A	remote RC-GZ020		
Toshiba	2500TB						
Toshiba	2505DB	C90D					
Toshiba	2512DBT	C915B	Nicam 1991				
Toshiba	251T4B		1984				
Toshiba	2527DB	C2D					
Toshiba	2535DB						
Toshiba	2539DB	C2D					
Toshiba	2545DB	C3 Chassis (C80 chassis)					
Toshiba	2550TB	C4ER					
Toshiba	2552DB	C5					
Toshiba	2555DB	C5					
Toshiba	2557DB	C5SS					
Toshiba	255R7B						
Toshiba	255T7B		1985				
Toshiba	2563DB	C6SR					
Toshiba	2573DB	C7SR					
Toshiba	2577DB	C7SS					
Toshiba	2579DB	C7SS					
Toshiba	258T7B						
Toshiba	259D9B						
Toshiba	2805DBT	C90D					
Toshiba	2812DB	C915B					
Toshiba	2835DB						
Toshiba	284T8B						
Toshiba	2852DB	C5					
Toshiba	2855DB	C5					
Toshiba	2857DB	C5SS					
Toshiba	2857DD	C5SS					
Toshiba	285T5BZ						
Toshiba	285T8B						
Toshiba	2863DB	C6SR					
Toshiba	2873DB	C7SR					
Toshiba	2877DB	C7SS					
Toshiba	2879DB	C7SS					
Toshiba	289T6B						
Toshiba	28H14G	Grundig CUC1837 100hz	2001, multistandard I, B/G, D/K	remote RC150			
Toshiba	28MW7DB/DG	C7SS	1997, DB - Pal I, DG - multistandard B/G, D	remote CT-9888			
Toshiba	28N03B	C0SS	2000	remote CT-90040			
Toshiba	28N04D	CUC2032F					
Toshiba	28N13D2 28N13F2	11AK37					
Toshiba	28N14G	Grundig CUC2130M					
Toshiba	28N23B	11AK37-11	2001, multistandard I, B/G, D/K 2002-2003	remote RC150			
Toshiba	28N33B	11AK37	2003				
Toshiba	28W23B	11AK37-8	2002-2003				
Toshiba	28W27B	11AK37	2003				
Toshiba	28W33B	11AK37	2003				
Toshiba	28W37B	11AK37	2003				
Toshiba	28W8DB	C7SS					
Toshiba	28W93B	C7SS					
Toshiba	28WD98B	C9SS					
Toshiba	28Z05B	C00S	2000	CT-90043			
Toshiba	28Z07B	C00S	2000	CT-90043			
Toshiba	28Z13B	Z13B	2001				
Toshiba	28Z23B	Z23B	2002	CT-90040			
Toshiba	28Z27B	Z23G (similar to Z23B)	2002	CT-90040			
Toshiba	28Z33B	Z33	2003	CT-90179			
Toshiba	28ZD06B	C00S	2000	CT-90042			
Toshiba	28ZD26P	ZD26 (similar to ZH37 chassis)	2002, around £500, Multistandard Pal/SEC	CT-90101			
Toshiba	28ZH36P	ZH37 (similar to ZD26 chassis)	2003 around £499	CT-90101			
Toshiba	28ZH37P	ZH37	2004	CT-90101			
Toshiba	2927DB	C2D					
Toshiba	2939DB	C2D	1993				
Toshiba	2987DB	C8SS					
Toshiba	29N23B	11AK37-11					
Toshiba	29V24B	11AK37	2003				
Toshiba	29VH14P	Samsung KS3A 100Hz					
Toshiba	32MW7DB	C7SS					
Toshiba	32W33B	11AK37	2003				
Toshiba	32W37B	11AK37	2003				
Toshiba	32W8DB	C6SS					
Toshiba	32W8DB	C8SS (same as 28W8DB on C7SS)					
Toshiba	32WD98B	C9SS	1999				
Toshiba	32Z07B	C00S	2000	CT-90043			
Toshiba	32Z13B	Z13B	2001	CT-90040			
Toshiba	32Z17B	C00S	2001	CT-90043			
Toshiba	32Z23B	Z23B	2002, around £800	CT-90040			
Toshiba	32Z27B	Z23G (similar to Z23B)	2002	CT-90040			
Toshiba	32Z33B	Z33	2003	CT-90179			
Toshiba	32ZD06B	C00S	2000	CT-90042			
Toshiba	32ZD09G	C00S					
Toshiba	32ZD26P	ZD26 (similar to ZH37 chassis)	2002 around £750, Multistandard Pal/SEC	CT-90101			
Toshiba	32ZD98B	C9SS					
Toshiba	32ZH36P	ZH37 (similar to ZD26 chassis)	2003 around £650	CT-90101			
Toshiba	32ZH37P	ZH37	2004	CT-90101			
Toshiba	32ZP18P	C00S	2001				
Toshiba	3327DB	C2D					
Toshiba	3339DB	C2D	1993				
Toshiba	3357DB	C5SS					
Toshiba	3377DB	C7SS					
Toshiba	3387DB	C8SS	1999, around £620-£800 depending on the year				
Toshiba	33N23G	11AK37					

Toshiba	34AX9	F1DS	2001, multistandard I, B/G, D/K				
Toshiba	36ZP18P	C00S	2001				
Toshiba	3787DB	C8SS	1999, around £930-£1,400 depending on the year				
Toshiba	38VL14	F0LP					
Toshiba	40PW8DB	C8SS					
Toshiba	40PW8DG	C8SS					
Toshiba	40WH08B	C00P	1999				
Toshiba	42PW23P	C01P	2002				
Toshiba	42PW33P	C03P	2003				
Toshiba	42WH18B	C01P	2001				
Toshiba	42WT29B	C01P	2002		CT-90079		
Toshiba	43PJ93B	C9SS					
Toshiba	46WH08B	C00P	2000				
Toshiba	48PJ6DB	C5SS projection					
Toshiba	50PJ98B	C9SS					
Toshiba	50WH18B	C01P	2001				
Toshiba	50WT29B	C01P	2002		CT-90079		
Toshiba	55PJ6DB	C5SS projection					
Toshiba	56PW8DB	C8SS					
Toshiba	56PW8DG	C8SS					
Toshiba	56WH08B	C00P					
Toshiba	57WT29B	C02P (same as 50WT29B on C01P)	2002		CT-90079		
Toshiba	61PJ98B	C9SS					
Toshiba	67Z24B	Z13B (same as 28Z13B)	2002				
Toshiba	67Z27B	C00S	E499				
Toshiba	82227B	C00S (same as 32Z17B)	2002		CT-90043		
Toshiba	C1695	RANK-T24					
Toshiba	C2085	RANK-T24					
Toshiba	C2090	RANK-T24					
Toshiba	C2095B	Bush-T24					
Toshiba	C2225	RANK-T24					
Toshiba	C2226	RANK-T24					
Toshiba	C2290	RANK-T24					
Toshiba	C2295B1	RANK-T24					
Toshiba	C2625	RANK-T24					
Toshiba	C2625B1	RANK-T24					
Toshiba	VTD1420	Orion chassis TV+DVD, 2004 £150	TV PCB TMC574A, DVD VMC316A	Micro OECF011A	remote		
Toshiba	VTD1431	Orion chassis TV+DVD, 2004 £145	TV PCB TMC574A, DVD BMD004A	Micro OECF017A	remote		
Toshiba	VTD1551	Orion chassis TV+DVD, 2004 £190	TV PCB CMD006A, DVD DMD008A	Micro OECF017A	remote		
Toshiba	VTD2020	Orion chassis TV+DVD, 2004 £230	TV PCB TMC574A, DVD VMC316A	Micro OECF011A	remote		
Toshiba	VTD2031	Orion chassis TV+DVD, 2004 £190	TV PCB TMC574A, DVD BMD004A	Micro OECF017A	remote		
Toshiba	VTV1400	Orion chassis, OVD-7 deck	main PCB VMA240A, PSU VPA153A	Micro OEC0107B, option codes	remote VT1400		
Toshiba	VTV1400S	Orion chassis, OVD-7 deck	main PCB VMA240A, PSU VPA153A	Micro OEC0107B, option codes	remote VT1400		
Toshiba	VTV1401	SCV11F (Samsung)					
Toshiba	VTV1402B	Orion chassis, OVD-6S deck	TV PCB TMX473A, video VMX193A	Micro OEC0093A, option codes	EEPROM address 0F0h		
Toshiba	VTV1402S	Orion chassis, OVD-6S deck	TV PCB TMX473A, video VMX193A	Micro OEC0093A, option codes	EEPROM address 0F0h		
Toshiba	VTV1403B	Orion chassis, OVD-7 deck	main PCB VMA240A, PSU VPA153A	Micro OEC0107B, option codes	remote VT1403		
Toshiba	VTV1403S	Orion chassis, OVD-7 deck	main PCB VMA240A, PSU VPA153A	Micro OEC0107B, option codes	remote TOT201N09090		
Toshiba	VTV1415	Orion chassis, OVD-7 deck, 2004 £130	main PCB VMB291A, PSU VPA153A	Micro OEC0133A	remote VT1403		
Toshiba	VTV1416	Orion chassis, OVD-7 deck, 2004 £120	main PCB VMB291A, PSU VPA153A	Micro OEC0133A	remote VT1403		
Toshiba	VTV1434	Orion chassis, OVD-7 deck	TV PCB TMB536A, video VMB254A	Micro OEC0113B	remote VT1403		
Toshiba	VTV1435	Orion chassis, OVD-7 deck	main PCB VMB291A, PSU VPA153A	Micro OEC0133A	remote VT1403		
Toshiba	VTV1436	Orion chassis, OVD-7 deck, 2004	main PCB VMB291A, PSU VPA153A	Micro OEC0133A	remote VT1403		
Toshiba	VTV1455	Orion chassis, OVD-7 deck	TV PCB TMB536A, video VMC295A	Micro OEC0113B	remote		
Toshiba	VTV1534	Orion chassis, OVD-7 deck	TV PCB TMB536A, video VMB254A	Micro OEC0113B	remote VT1534		
Toshiba	VTV1555	Orion chassis, OVD-7 deck	TV PCB TMB536A, video VMB254A	Micro OEC0113B	remote VT1534		
Toshiba	VTV1934	Orion chassis, OVD-7 deck	TV PCB TMB536A, video VMB254A	Micro OEC0113B	remote VT1403		
Toshiba	VTV2055	Orion chassis, OVD-7 deck	TV PCB TMB536A, video VMC295A	Micro OEC0113B	remote		
Toshiba	VTV2056	Orion chassis, OVD-7 deck, 2004	TV PCB TMB536A, video VMC295A	Micro OEC0113B	remote		
Toshiba	VTV2133	Orion chassis, OVD-6S deck	TV PCB TMX477A, video VMX199B	Micro OEC0096B	remote VT2133		
Toshiba	VTV2134	Orion chassis, OVD-7 deck	TV PCB TMB536A, video VMB254A	Micro OEC0113B	remote VT2134		
Toshiba	VTV2175	Orion chassis, OVD-7 deck	TV PCB TMB536A, video VMC295A	Micro OEC0113B	remote		
Toshiba	VTV21FL3	Orion chassis, OVD-6S deck (nonUK PAL B/G)	TV PCB TMA515A, video VMA223A	Micro OEC0103B	remote VT21FL3		
Toshiba	VTV2185	Orion chassis, TV+DVD+VCR(OVD-7 deck)	TV PCB TMC568A, DVD VMB283B, video	Micro OEC0136A	remote TOT202N73010		
Toshiba	VTV2186	Orion chassis, TV+DVD+VCR(OVD-7 deck)	TV PCB TMC568A, DVD BMD005A, video	Micro OEC0136B	remote		
Triumph	CTV8205	Amstrad CTV1600					
Triumph	CTV8208	Amstrad CTV1409	Saisho CT14R				
Triumph	CTV8209	Jackson Mk 2	Osaki CTV14				
Triumph	CTV8212	Orion CTV144	Saisho CX14R				
Triumph	CTV8312	Orion CTV164	Saisho CX16R				
Triumph	TC1670	Hitachi NP8CQ					
Tyne Professor	7287/9	Beko 10.3 chassis					
Ultra	2001	Ferguson TX90					
Ultra	2201	Ferguson TX100					
Ultra	6771	Ferguson TX9					
Waltham	W14BLK		2004 £50 from Currys				
Watson	FA2801TS	11AK19P5					
Watson	FA3201TS	11AK19P4	2001-2002	AK19 prod.code: 10008630	remote 3040 (part 30011943)		
Watson	FA3629	11AK20M-6	1999-	AK20 prod.code: 10001418	remote 930		
Watson	FA3629 (silver)	11AK20M-6	1999-	AK20 prod.code: 10000721			
Watson	FA5139	11AK19-8A, 11AK19P4	1999-2001	AK19 prod.code: 10000896	remote 2040		
Watson	FA5160	11AK19P					
Watson	FA5161T	11AK30					
Watson	FA5471	SM1 stereo					
Watson	FA7039	11AK19-8A	1999-	AK19 prod.code: 10001207			
Watson	FA7040	11AK19E3					
Wharfedale	32PF1	11AK33					
Wharfedale	350	PT11					
Wharfedale	550	Amstrad CTV3128					
Wharfedale	550S (=CTV550S)	PT92	LOPTx 1352.5037 or 40348A.09 (HR8553, FBT40725)				
Wharfedale	850	PT92	LOPTx 1352.5037 or 40348A.09 (HR8553, FBT40725)				
Wharfedale	850S	chassis E9 (Elektronika Velenje (Evelux))	LOPTx 1372.9005 (HR8529, FBT40862)		Serv.mode: press TV, i, STOP withing 5 sec from switching set on. To exit press STOP.		
Wharfedale	890	PT92					
Wharfedale	CTV550S (=550S)	PT92	LOPTx 1352.5037 or 40348A.09 (HR8553, FBT40725)				
Wharfedale	CTV850	chassis E9 (Elektronika Velenje (Evelux))	LOPTx 1372.9005 (HR8529, FBT40862)	Micro SDA5255-B001(EV E9 7F)	Serv.mode: press TV, i, STOP withing 5 sec from switching set on. To exit press STOP.		
Wharfedale	M10	PT92	LOPTx 4033749 (HR8545, FBT40784)				
Wharfedale	M8	PT92					
Wharfedale	T2101	PT92					
Wharfedale	T2102S	PT92					
Wharfedale	T2801	PT92					
Wharfedale	T2802S	PT92					
Wharfedale	T2811WS	PT92					
York	B52T	PT92 (14" set)					
York	X5 Junior	PT92					
Zanussi	16ZB312	BS665					
Zanussi	16ZT505	BS465					
Zanussi	16ZT506	BS565					
Zanussi	20ZA374	BS665					
Zanussi	20ZA374-16B	BS700					
Zanussi	20ZT505	BS465					
Zanussi	20ZT506	BS565					
Zanussi	20ZT509	BS500					
Zanussi	22ZA374	BS665					
Zanussi	22ZA377	BS665					
Zanussi	22ZA577	BS665					
Zanussi	22ZC454	BS665					
Zanussi	22ZT505	BS400					
Zanussi	22ZT506	BS500					
Zanussi	22ZT507	BS400					
Zanussi	22ZT616	BS500					
Zanussi	22ZT905	BS400					
Zanussi	22ZT906	BS500					
Zanussi	22ZT907	BS400					
Zanussi	26ZA374	BS665					
Zanussi	26ZT905	BS400					
Zanussi	26ZT906	BS500					

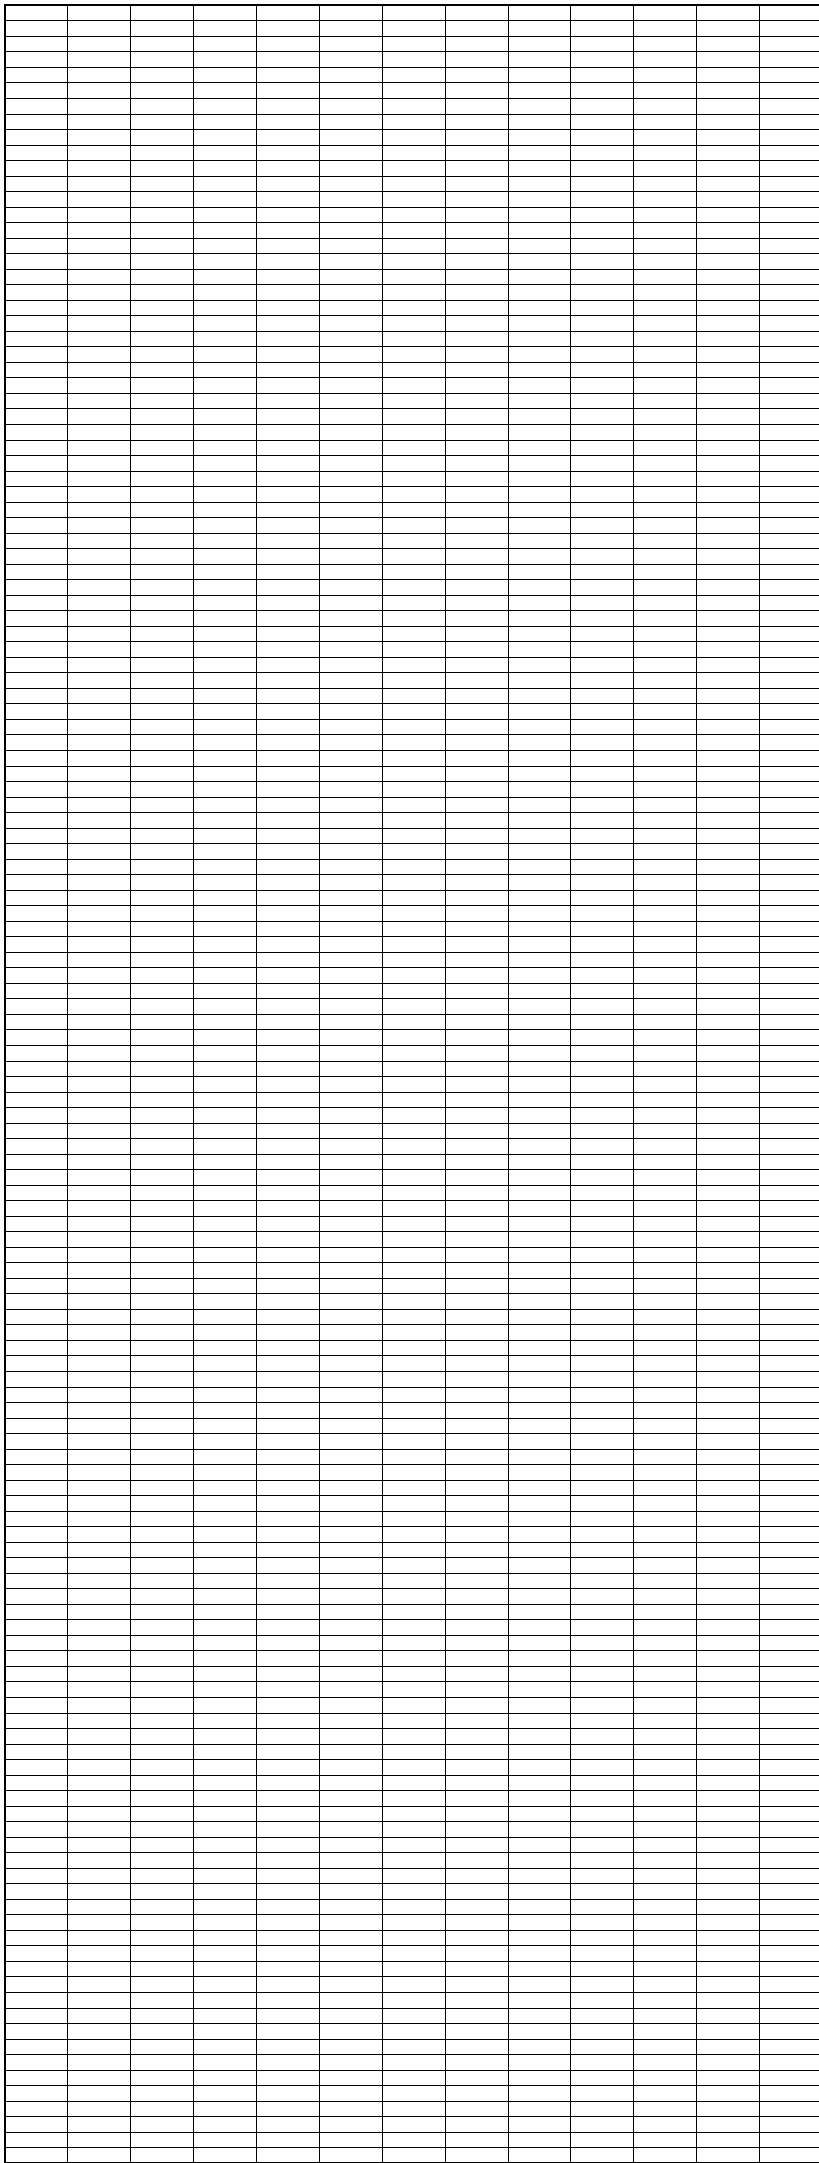

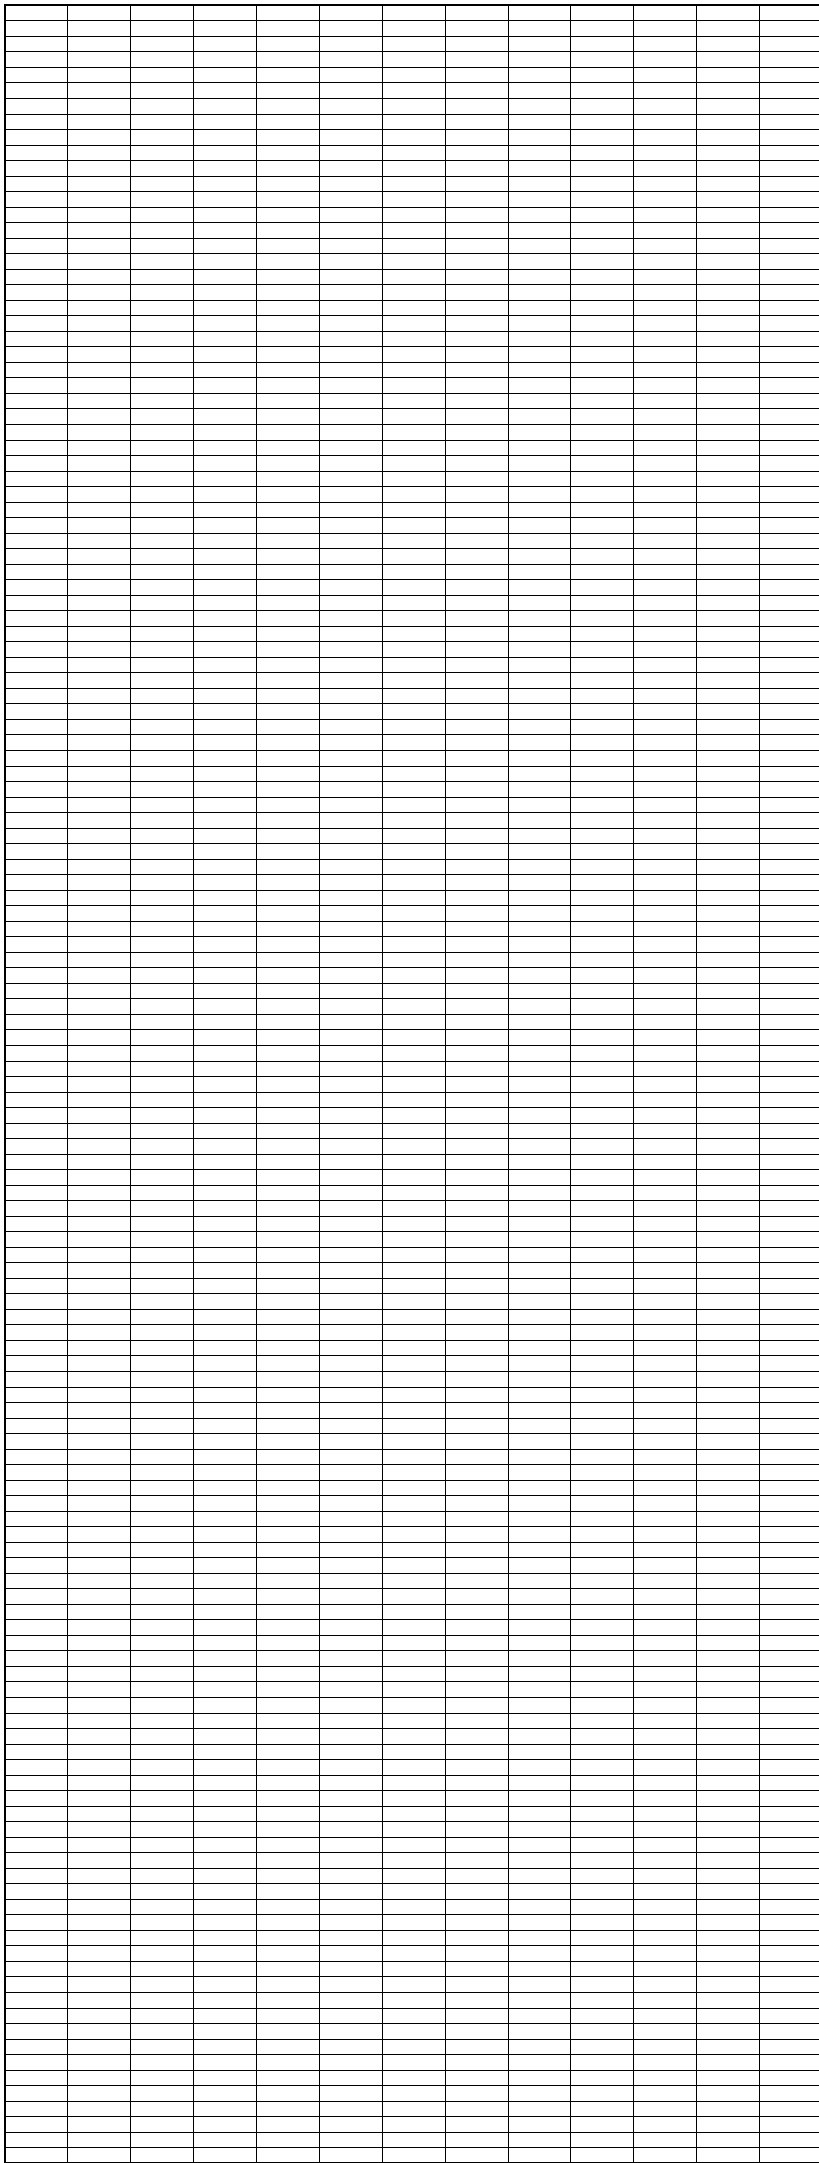


ART LG W66QBD240X11


9B-1)


and pressing [TV] (aka text off) gives the same code as RED+BLUE.

    
0+/- to adjust, OK to store, PP to exit.

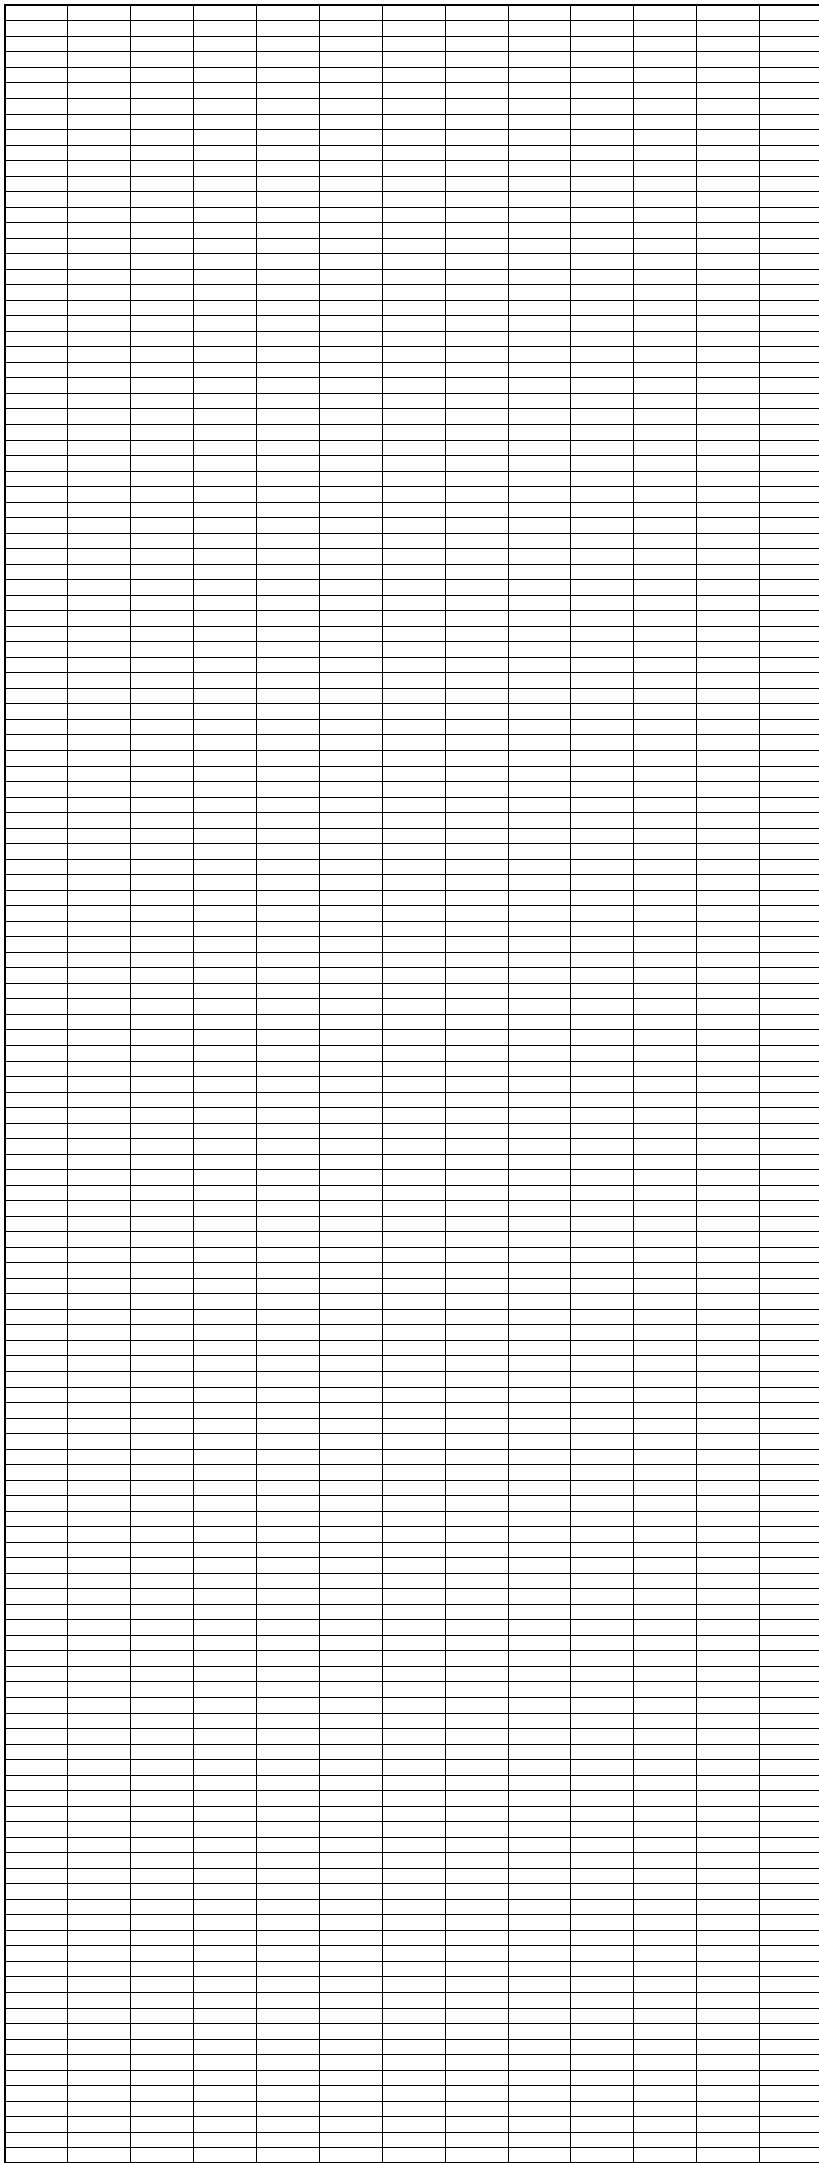 


 


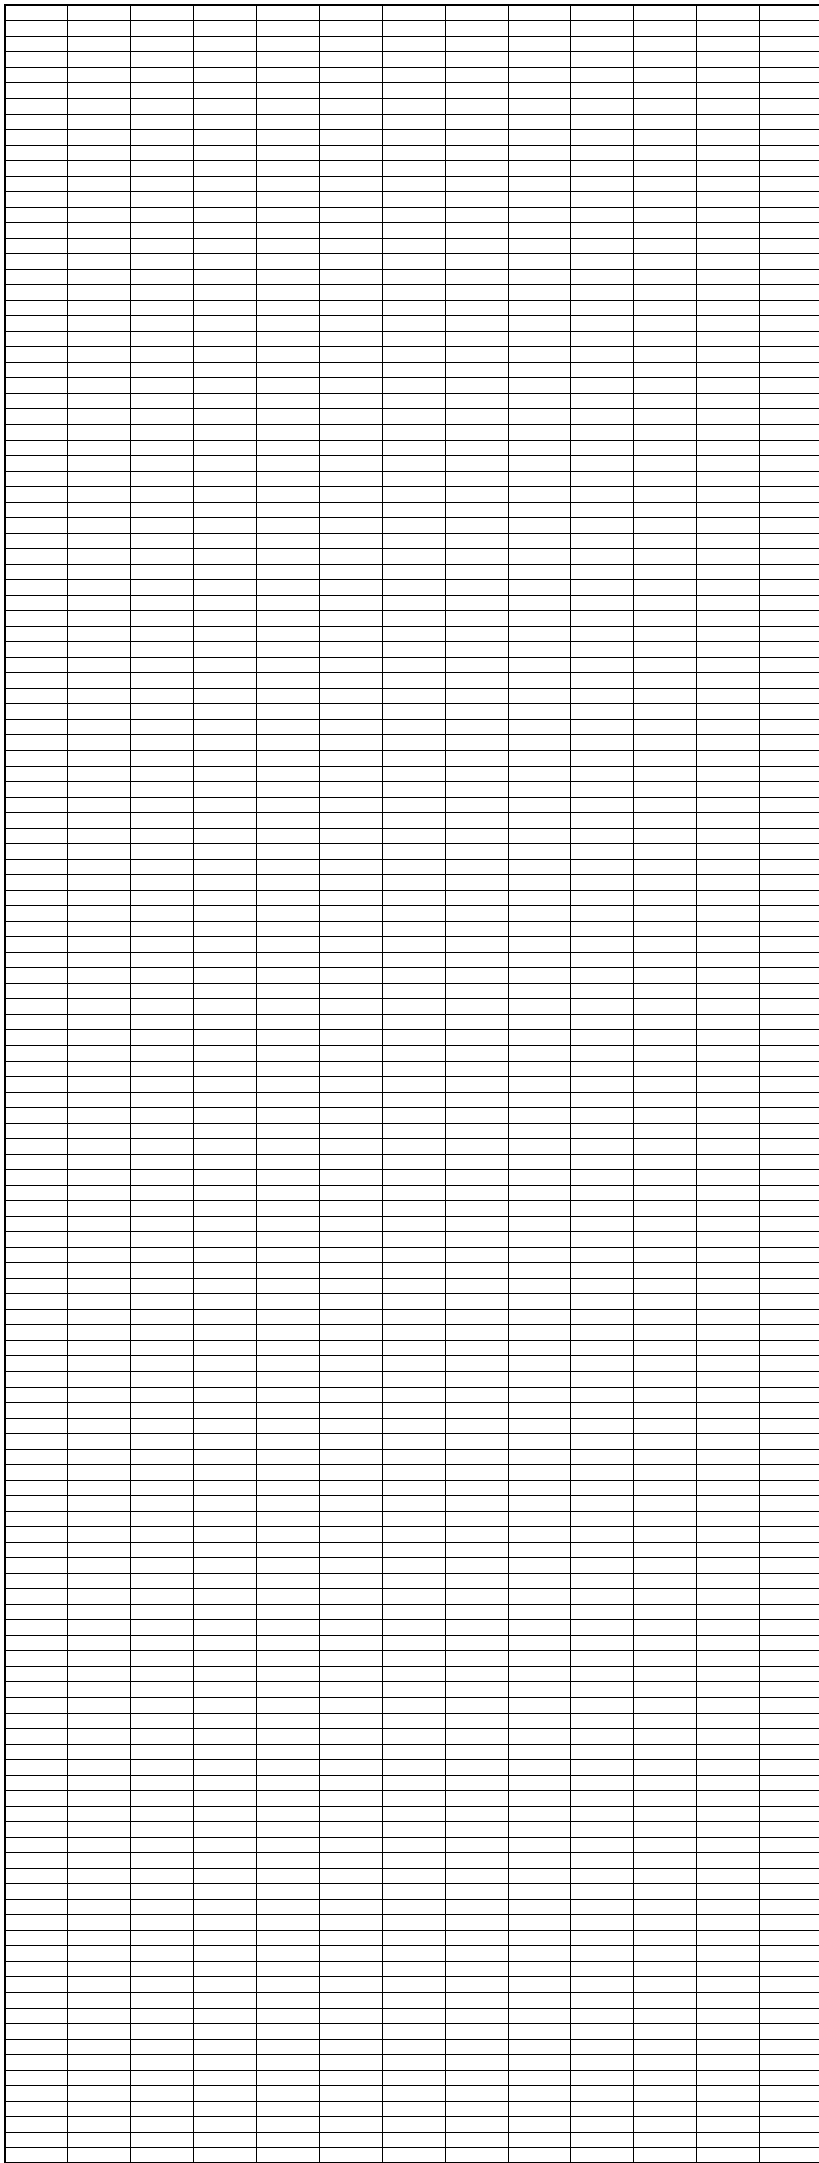 


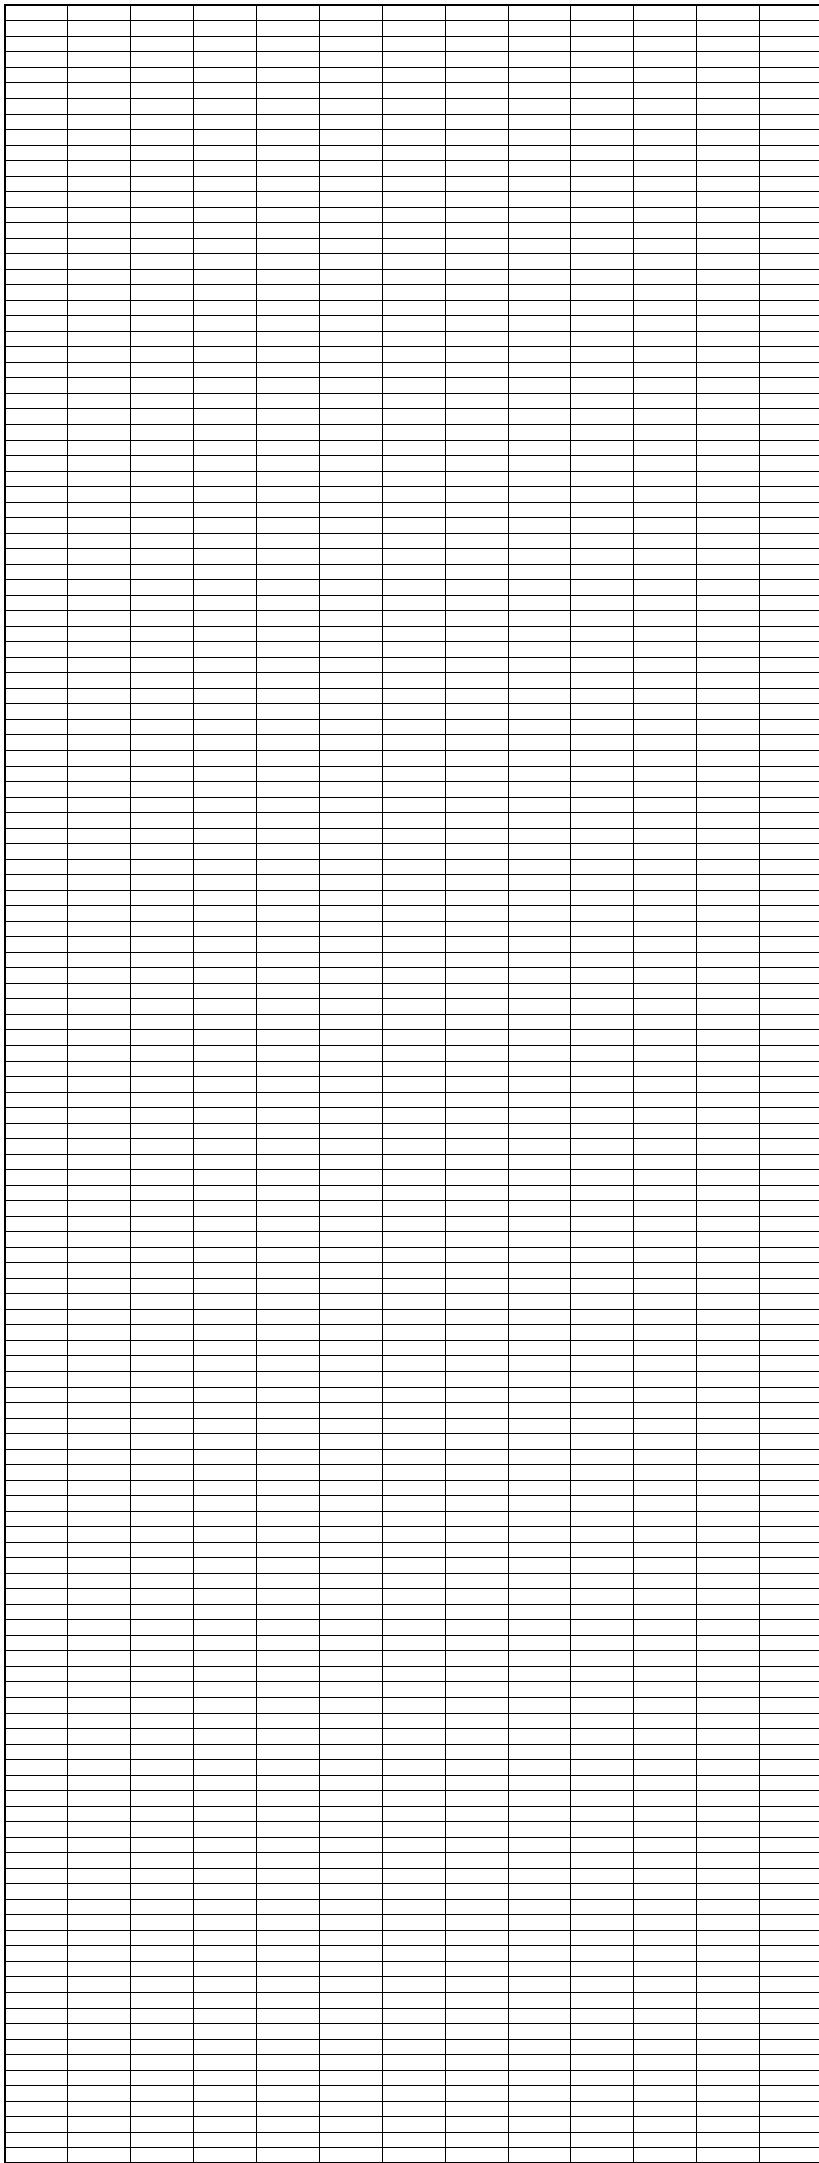 


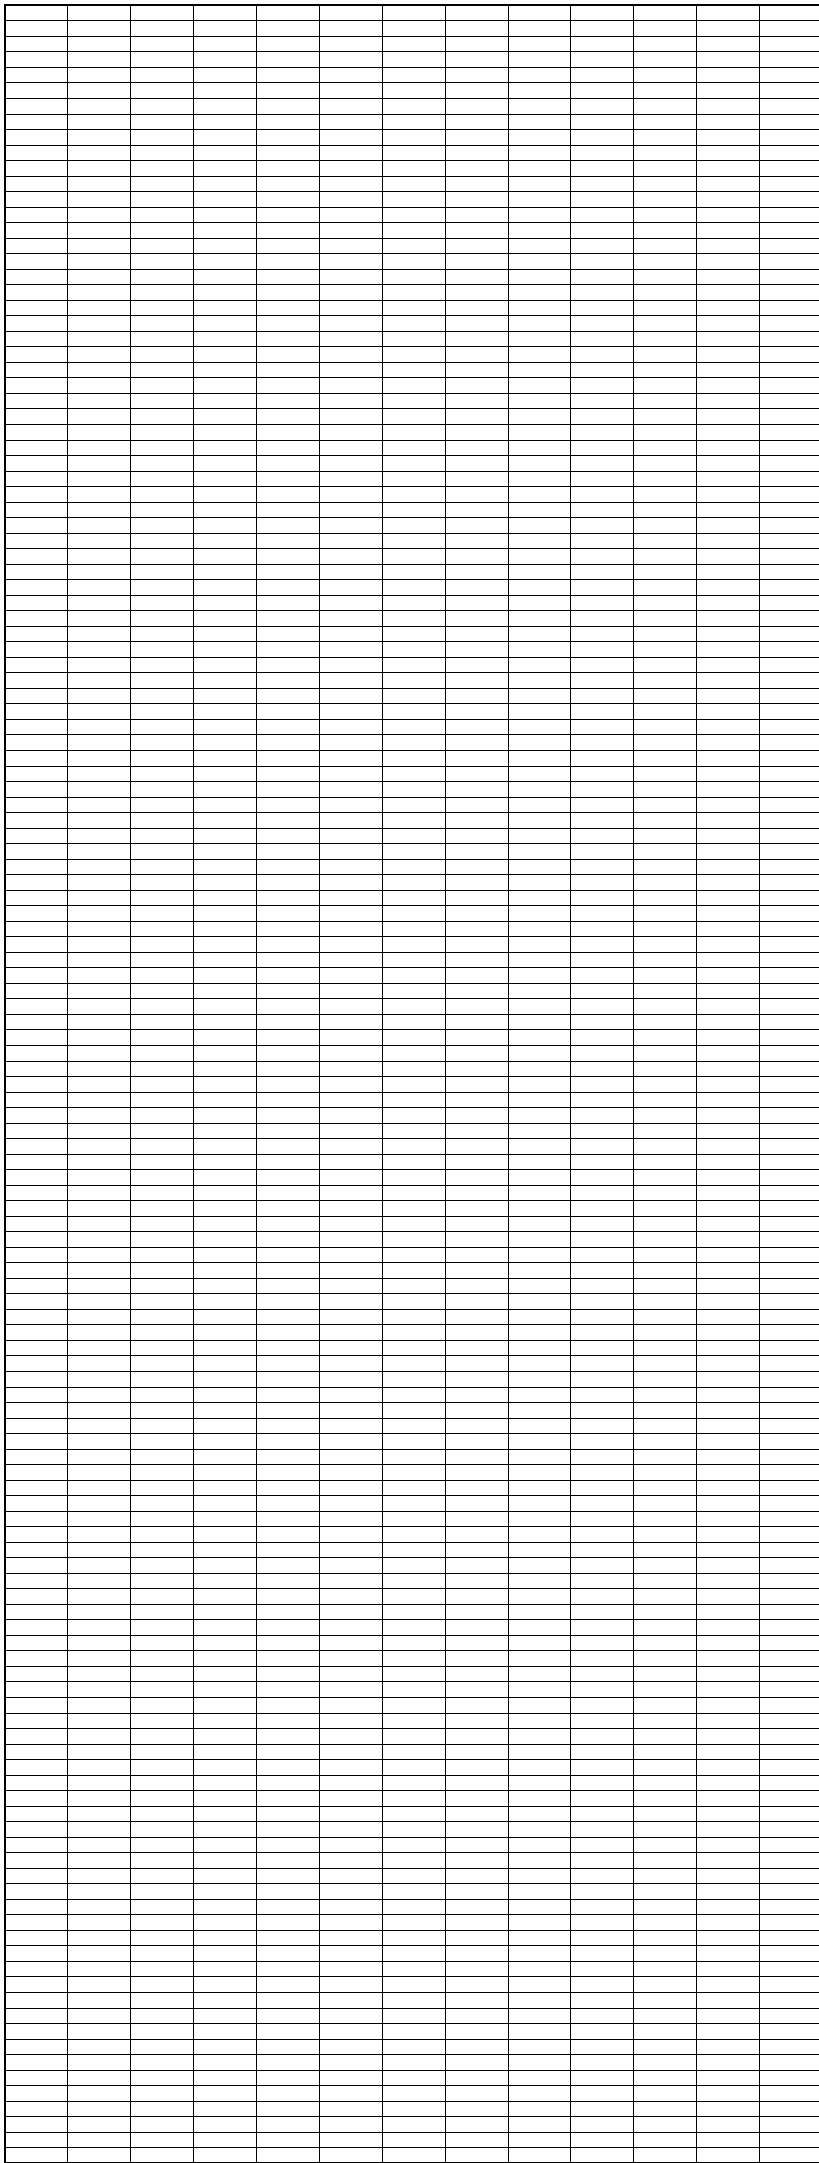

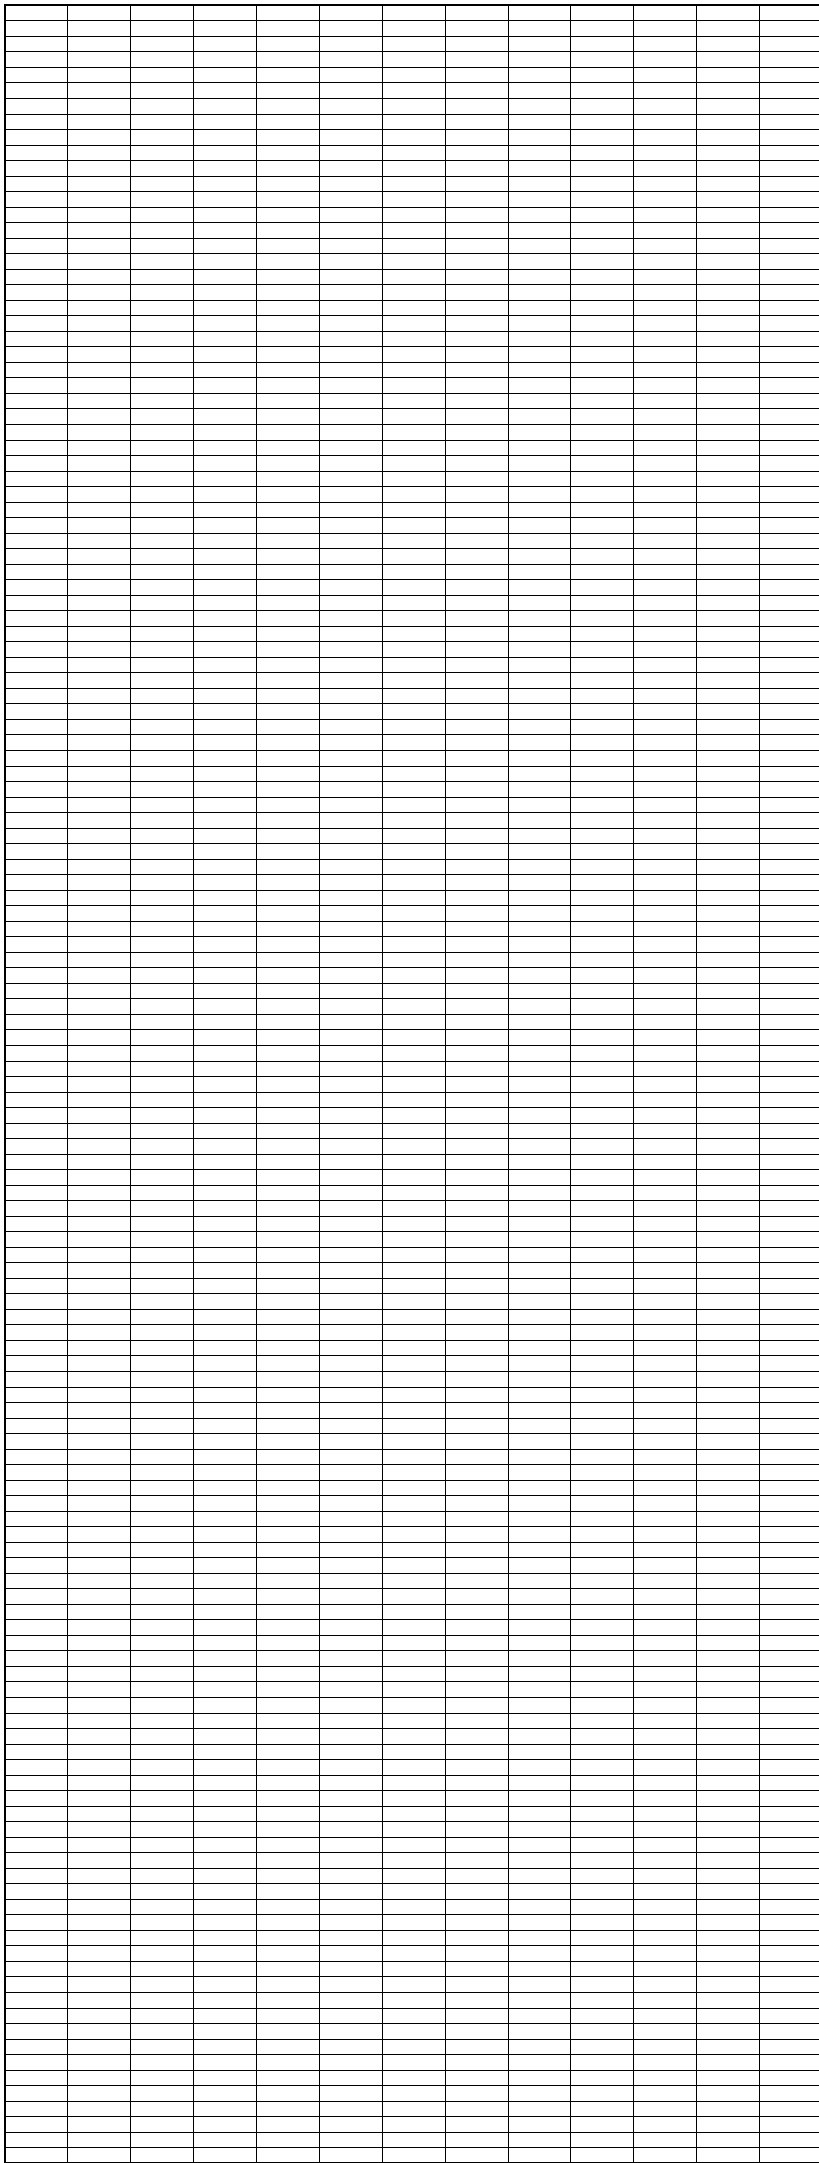

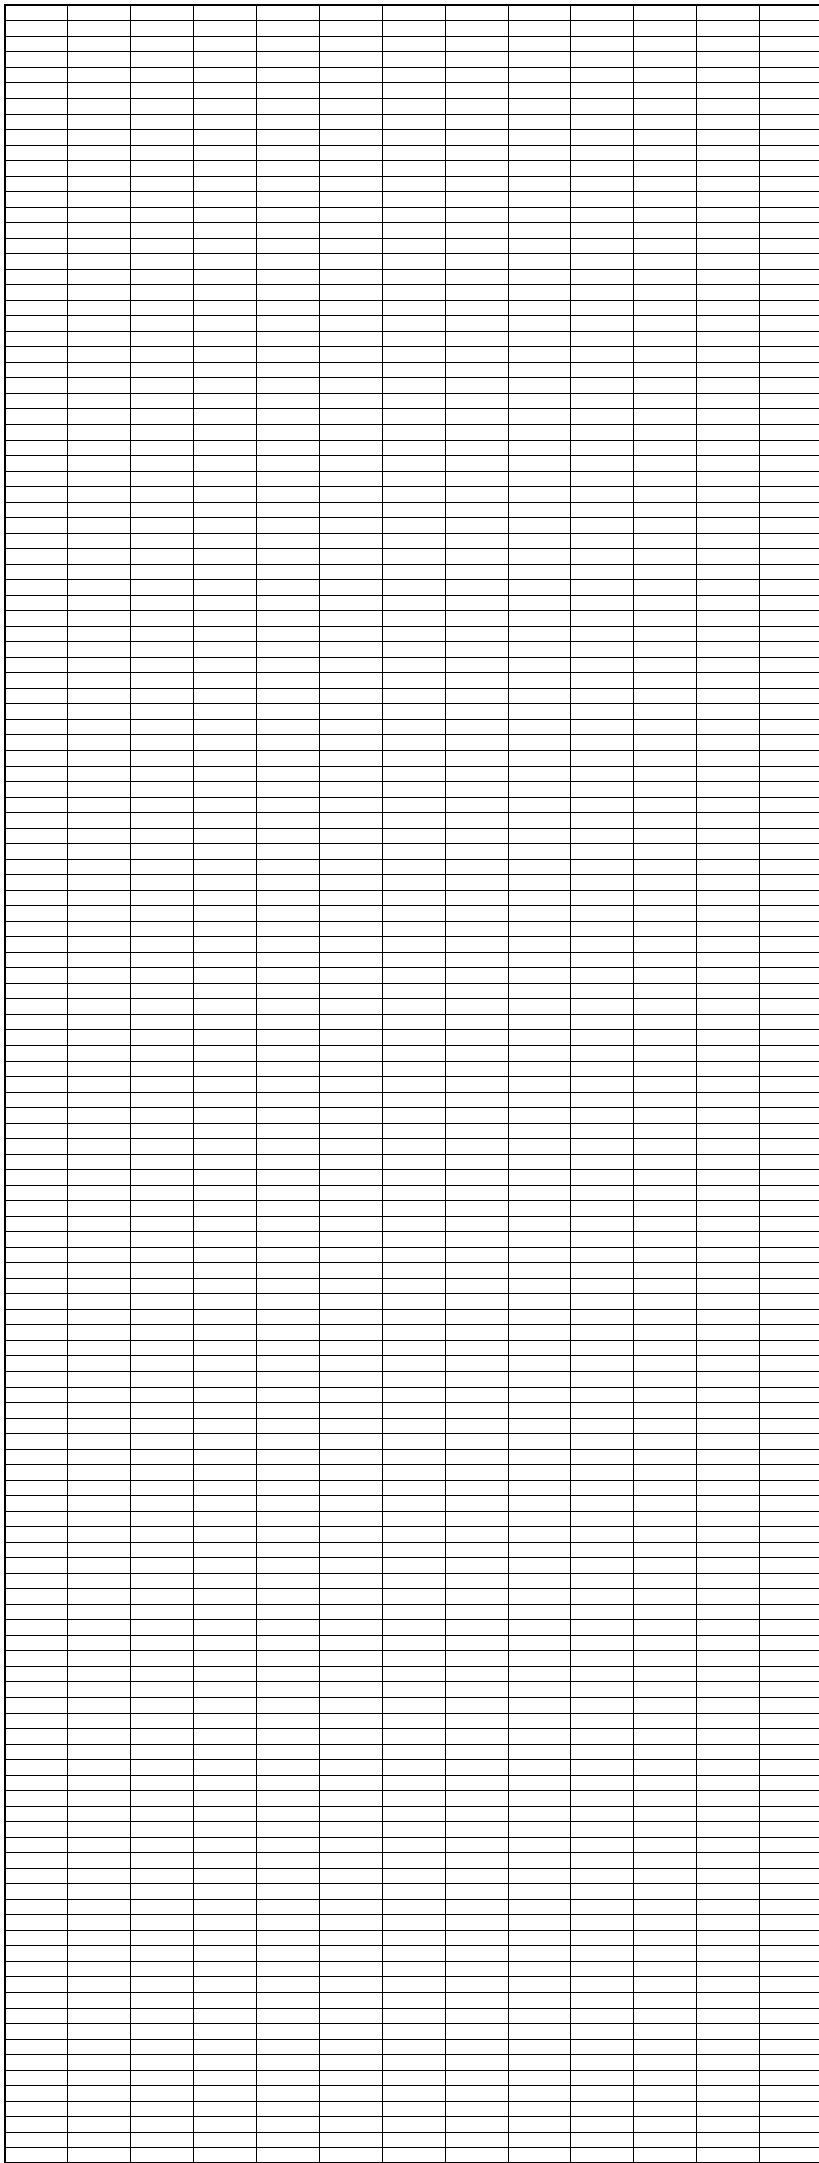


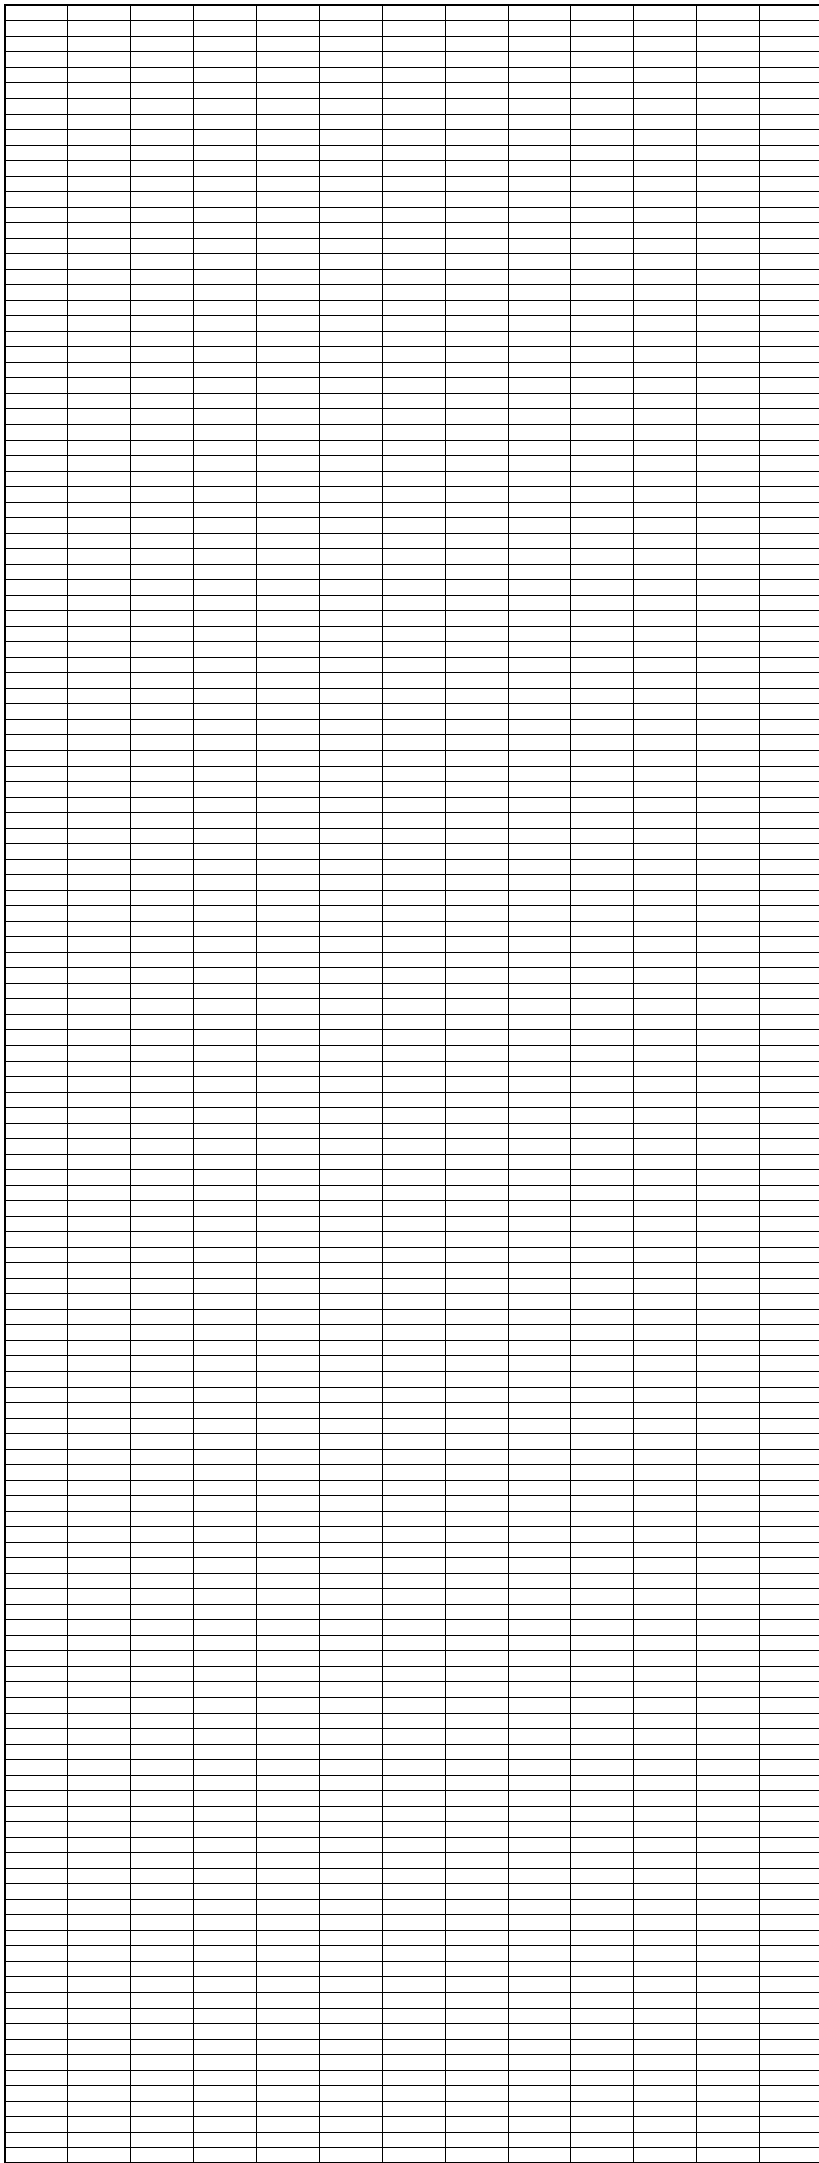


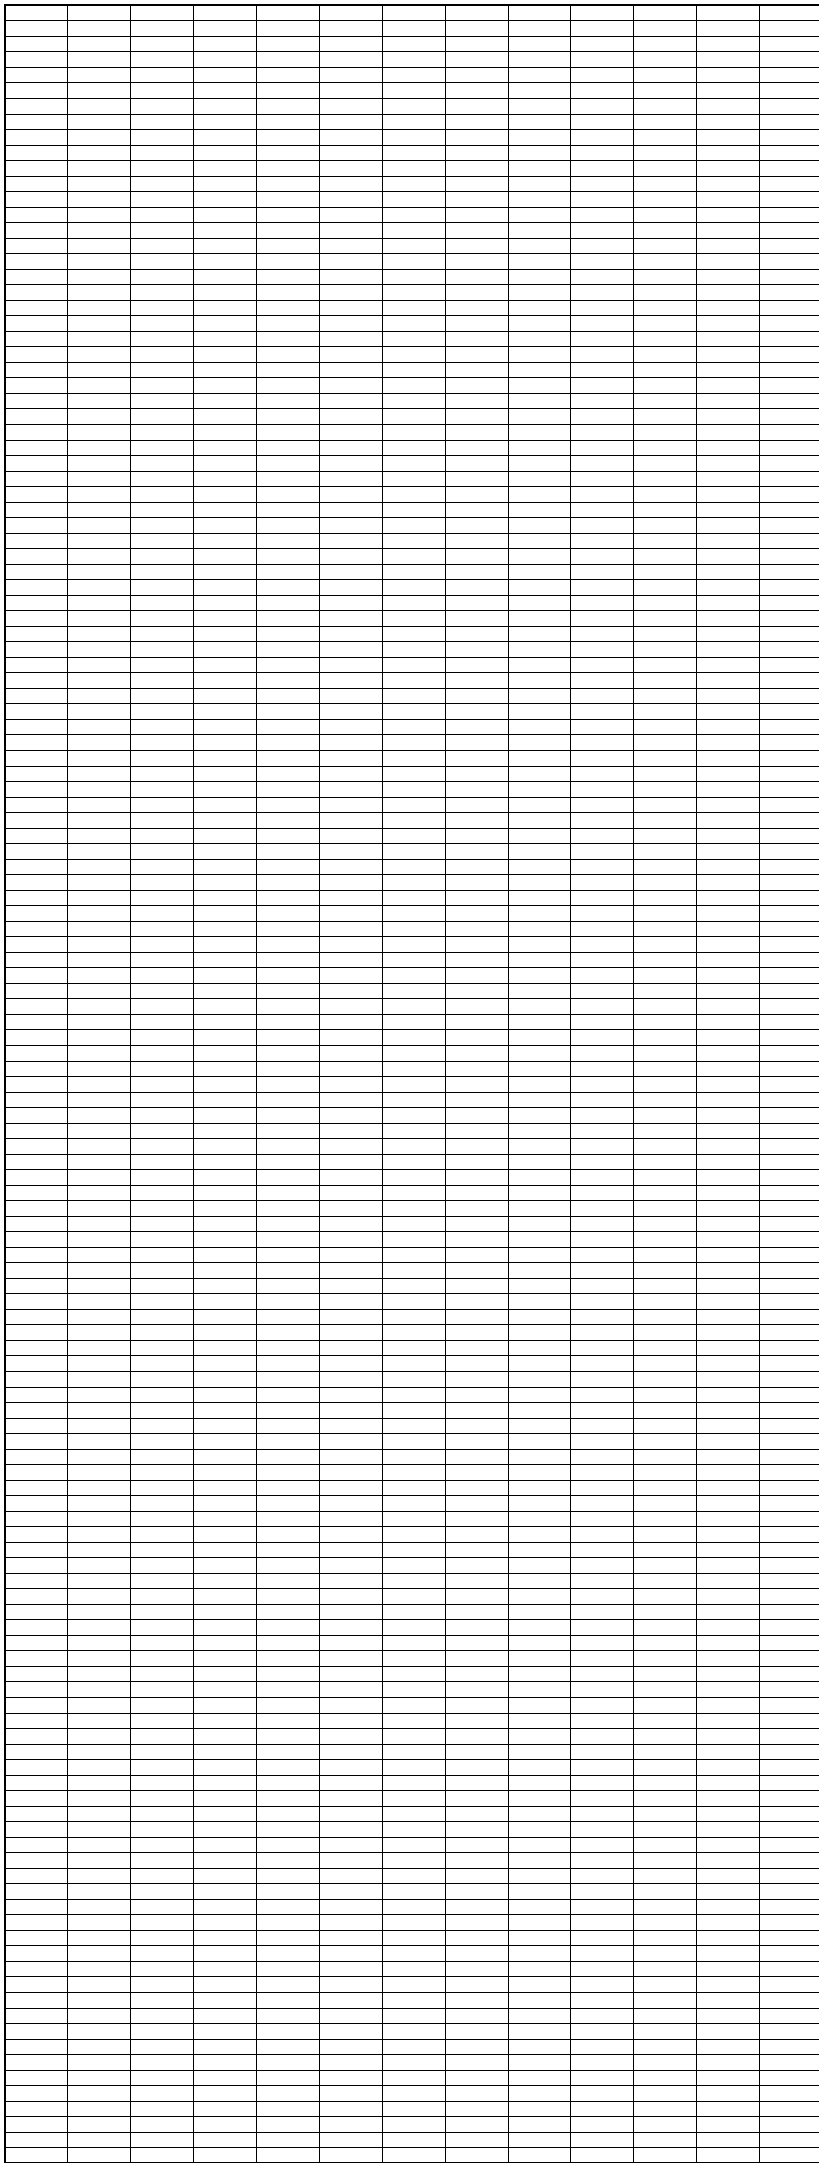



B41P/524)




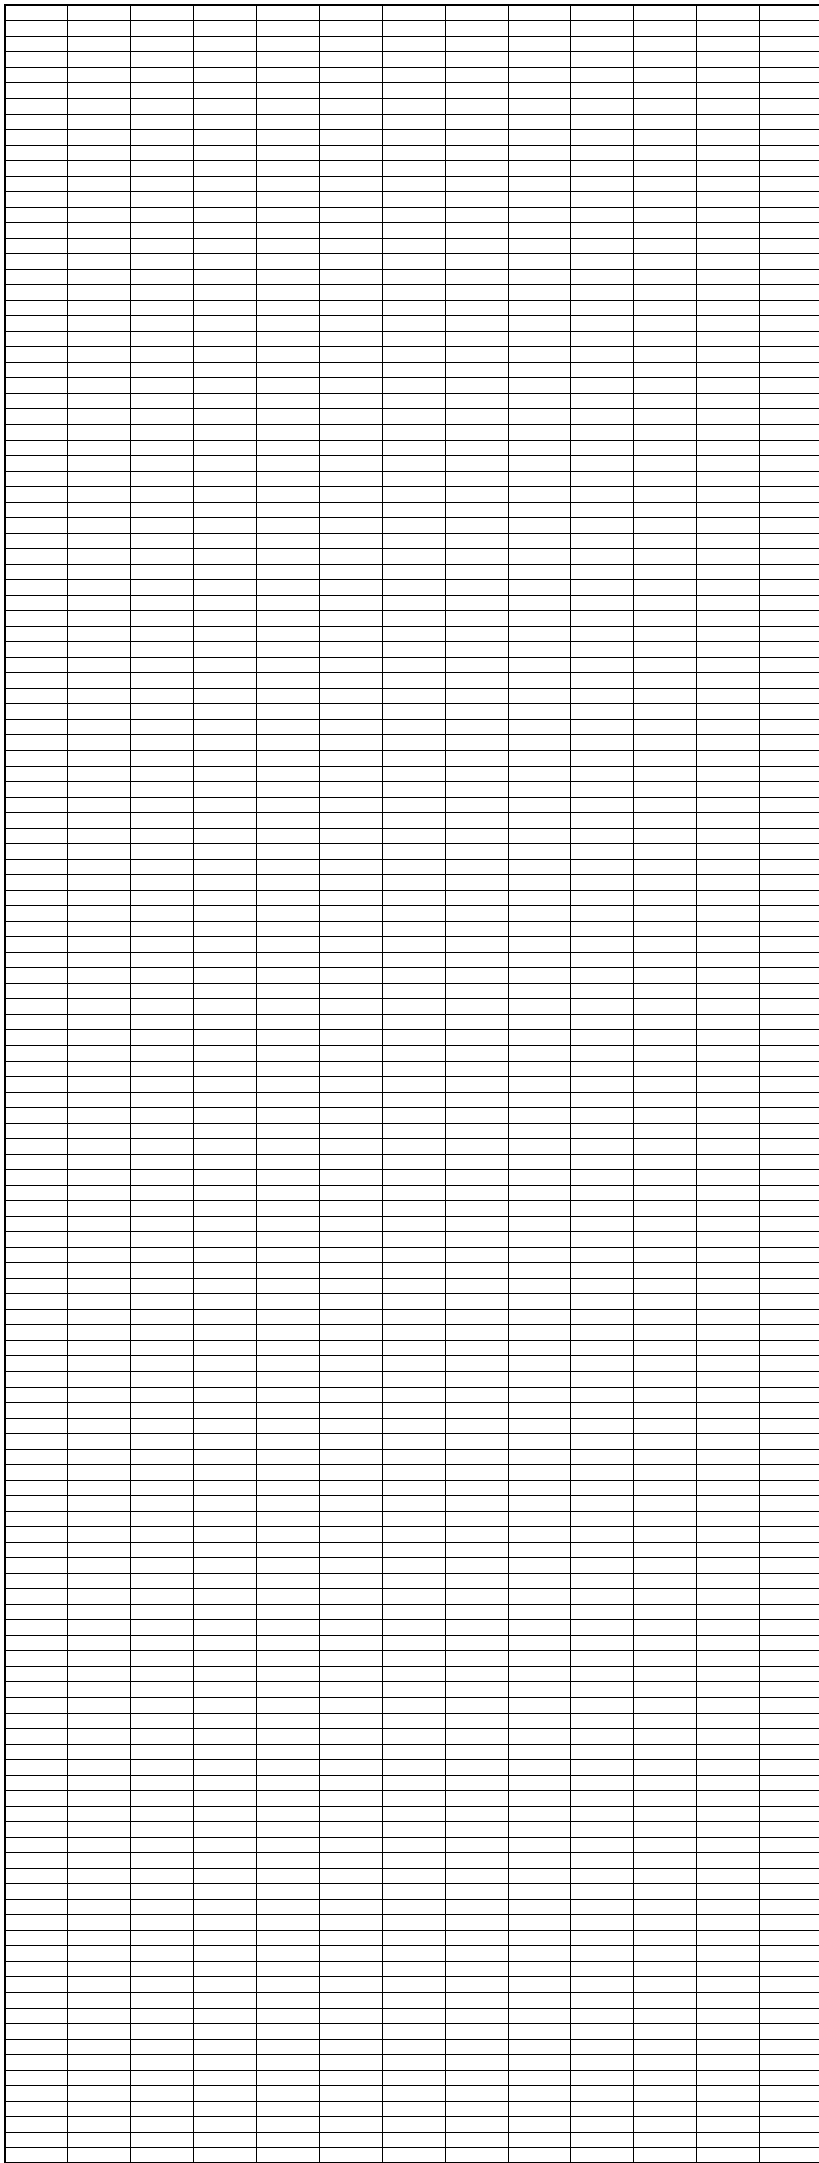 


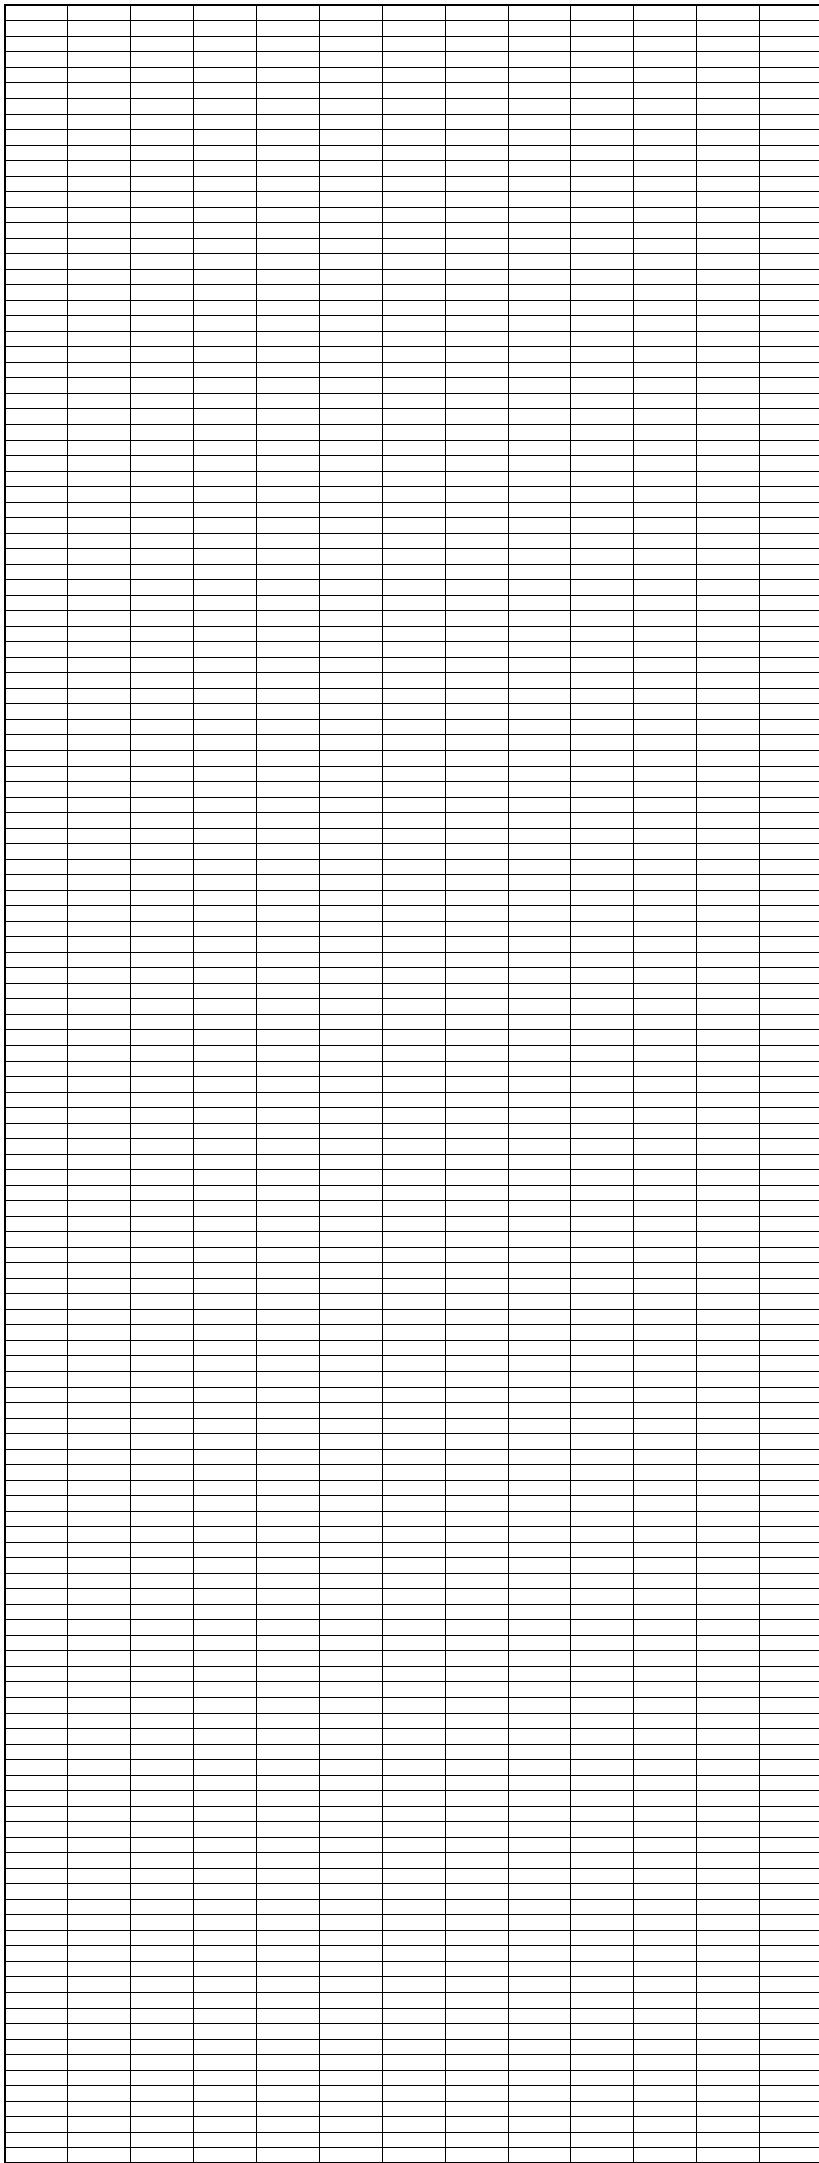 

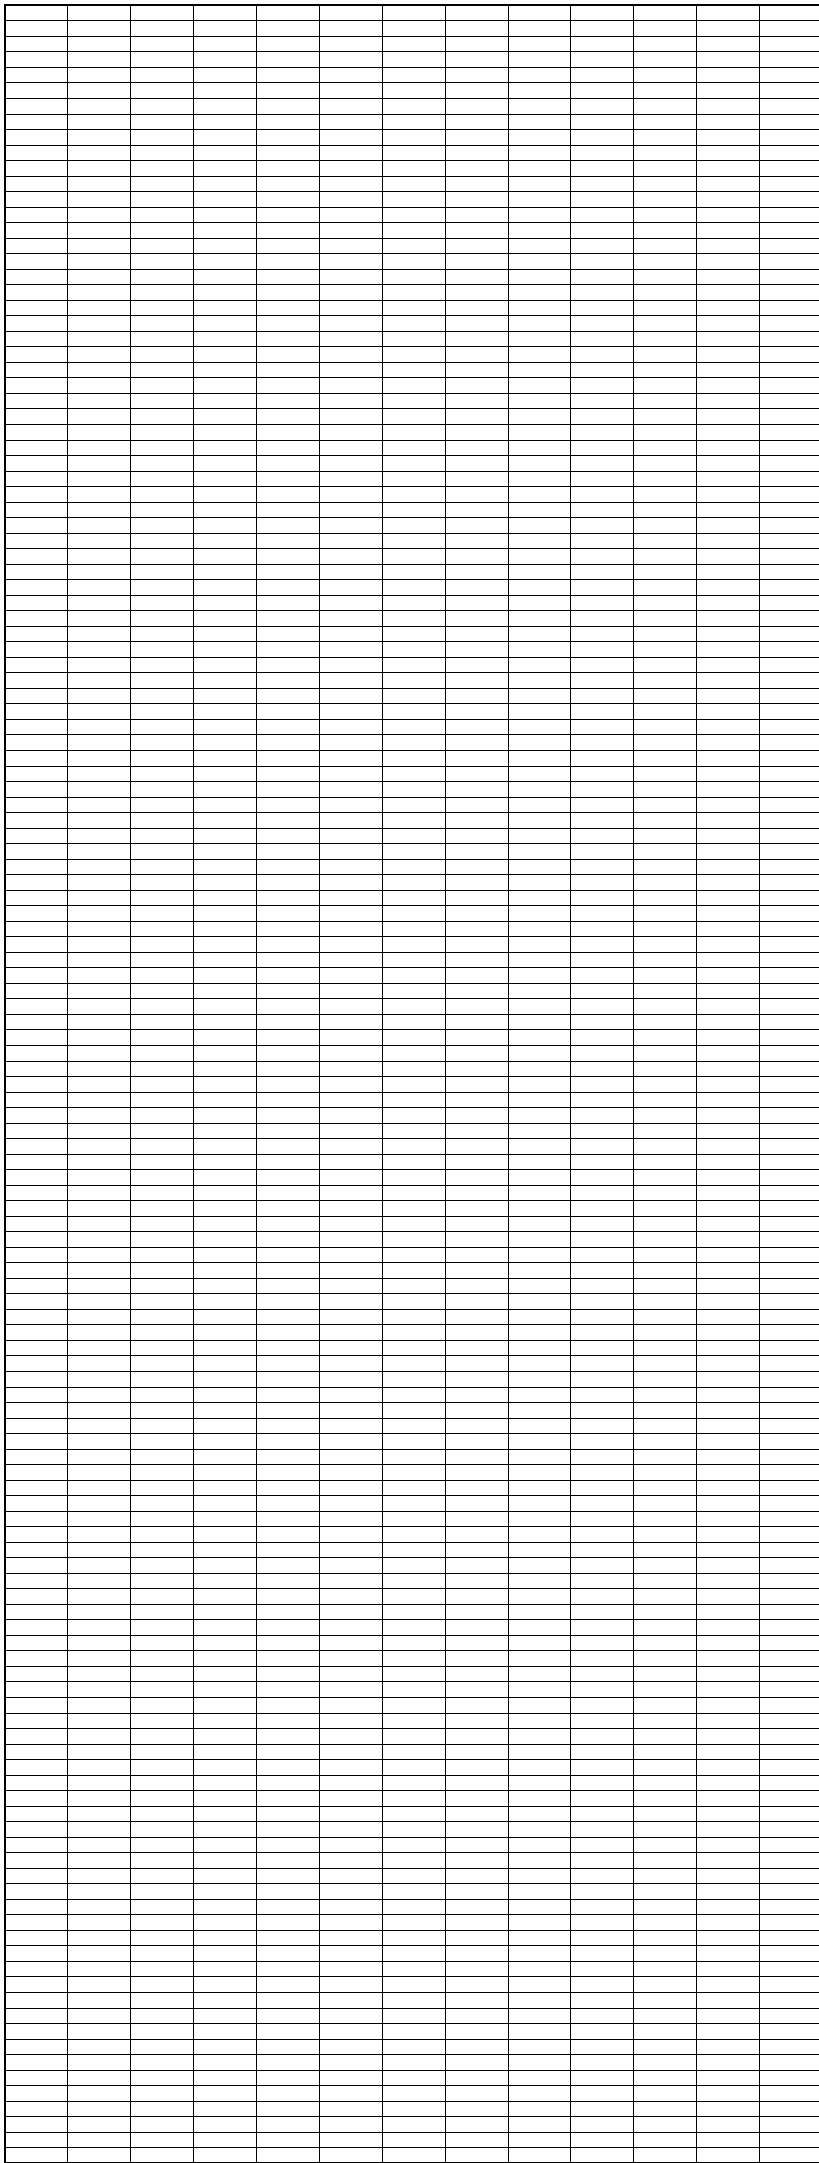 

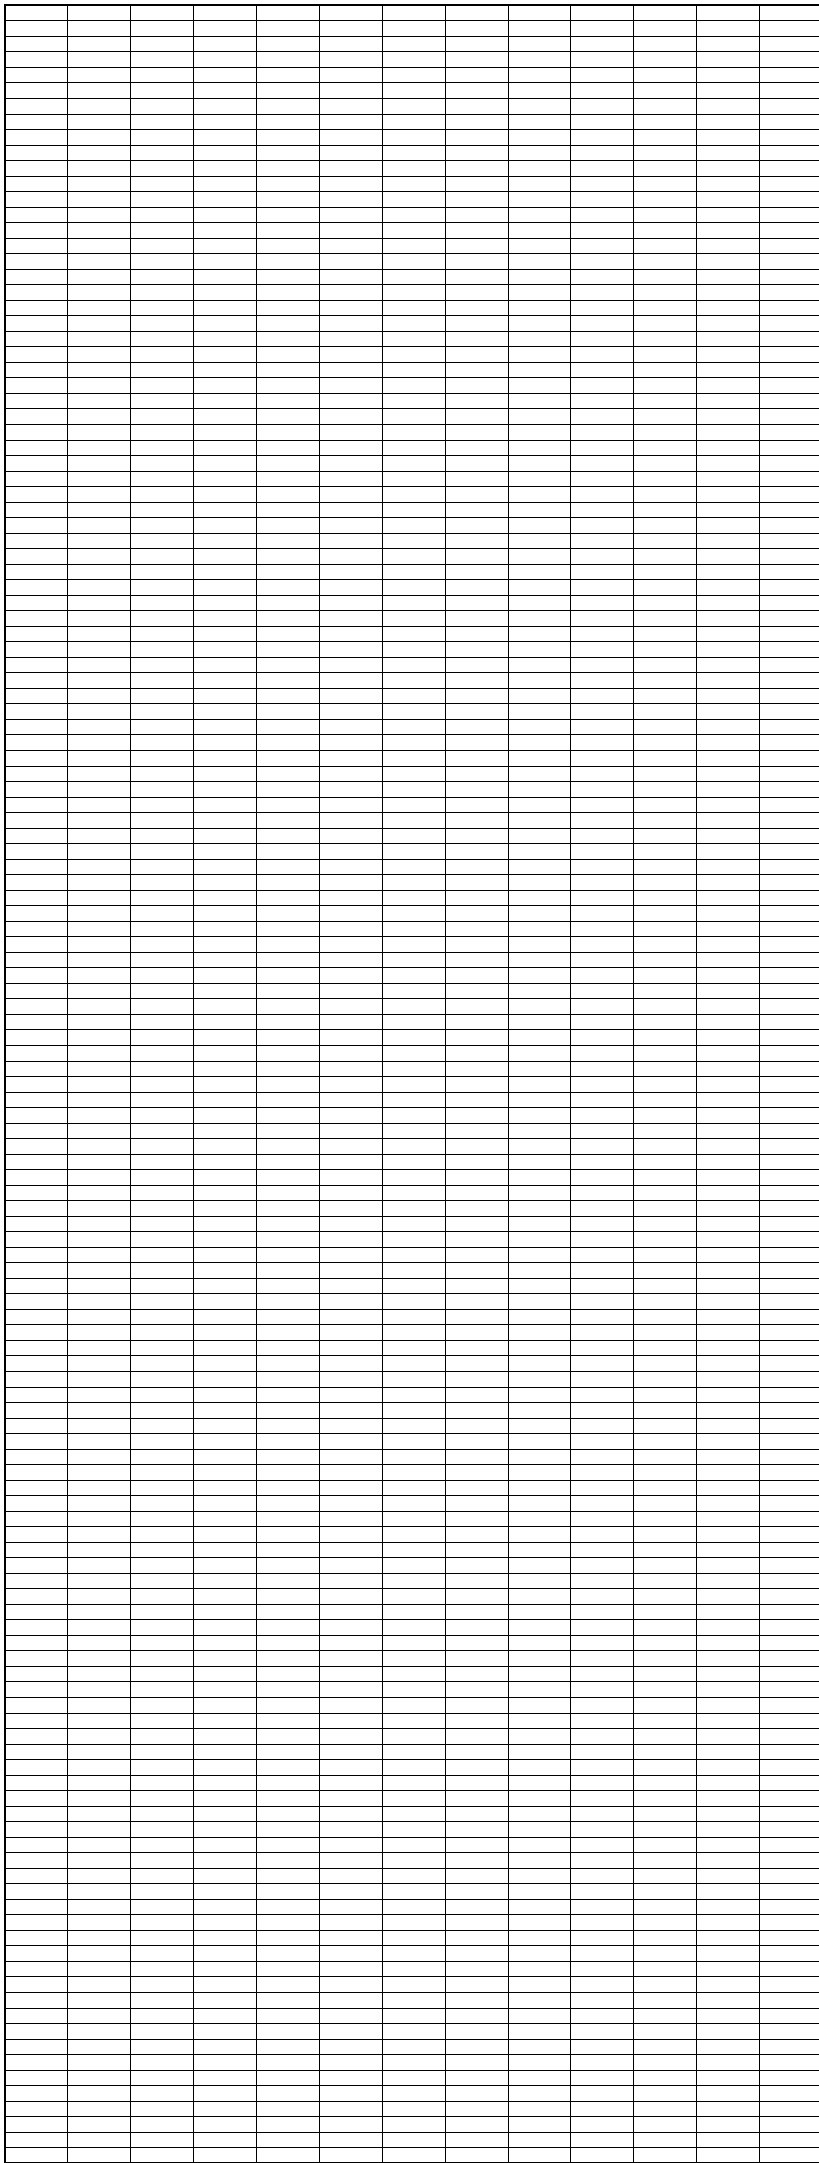   

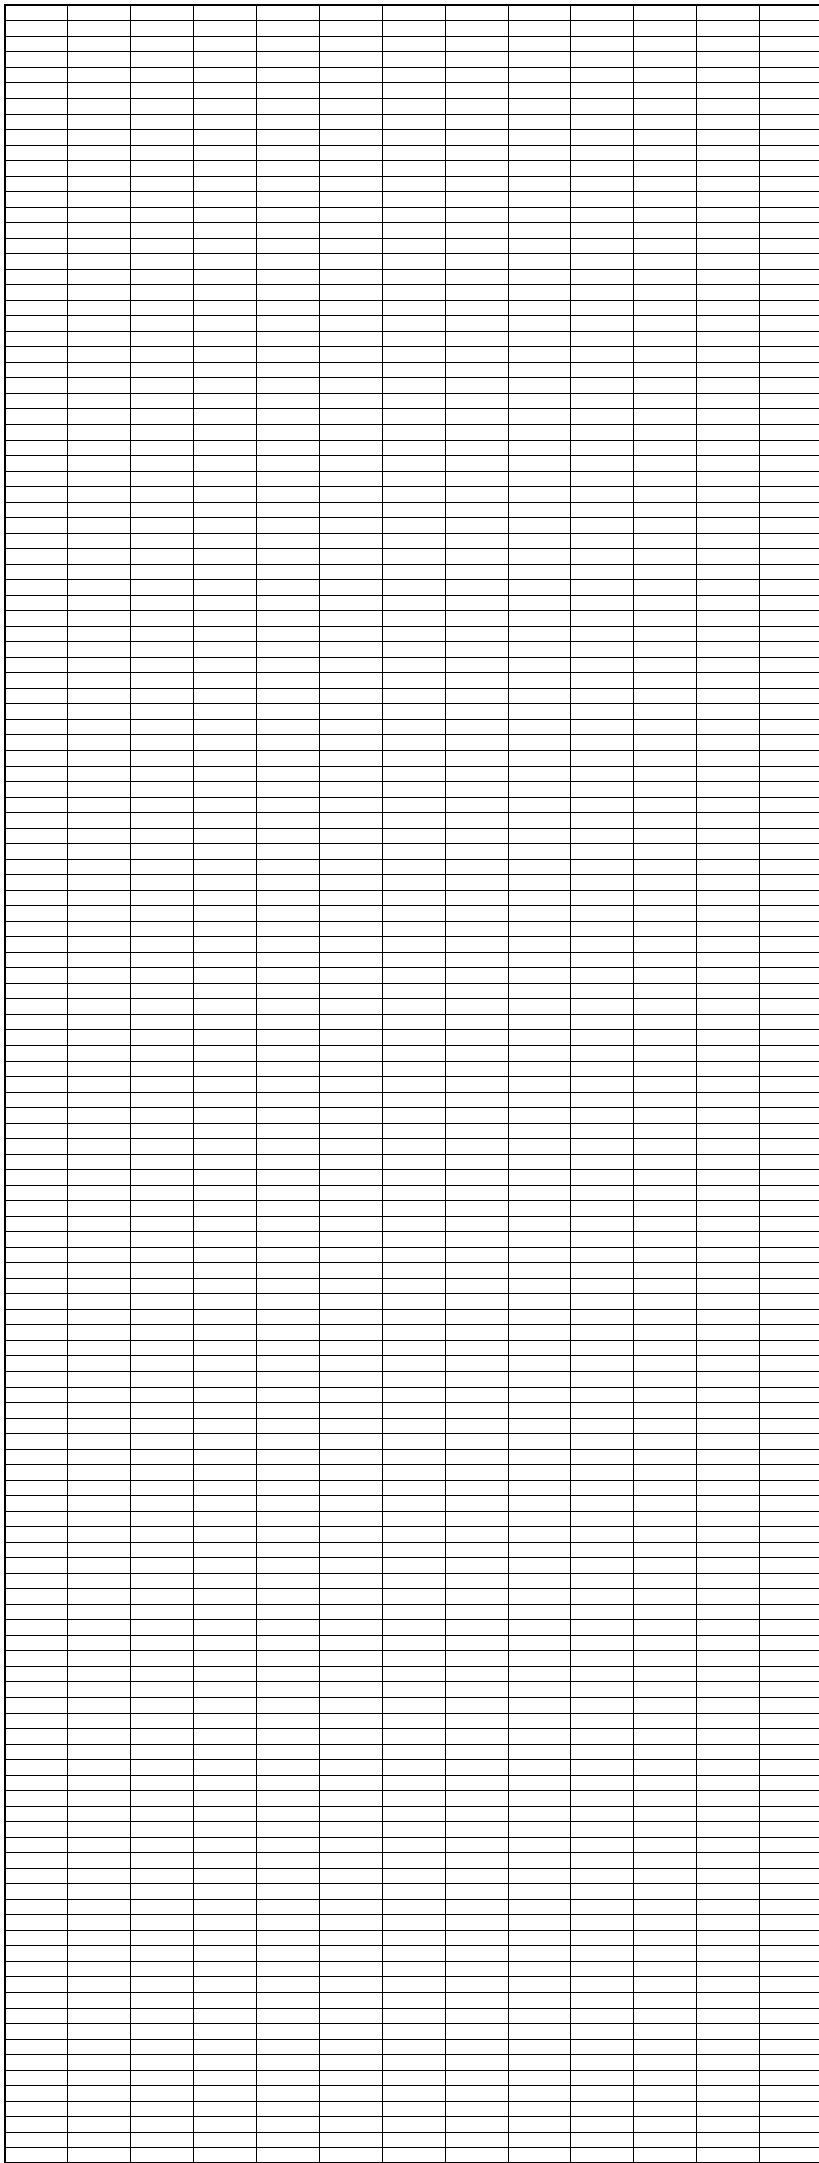

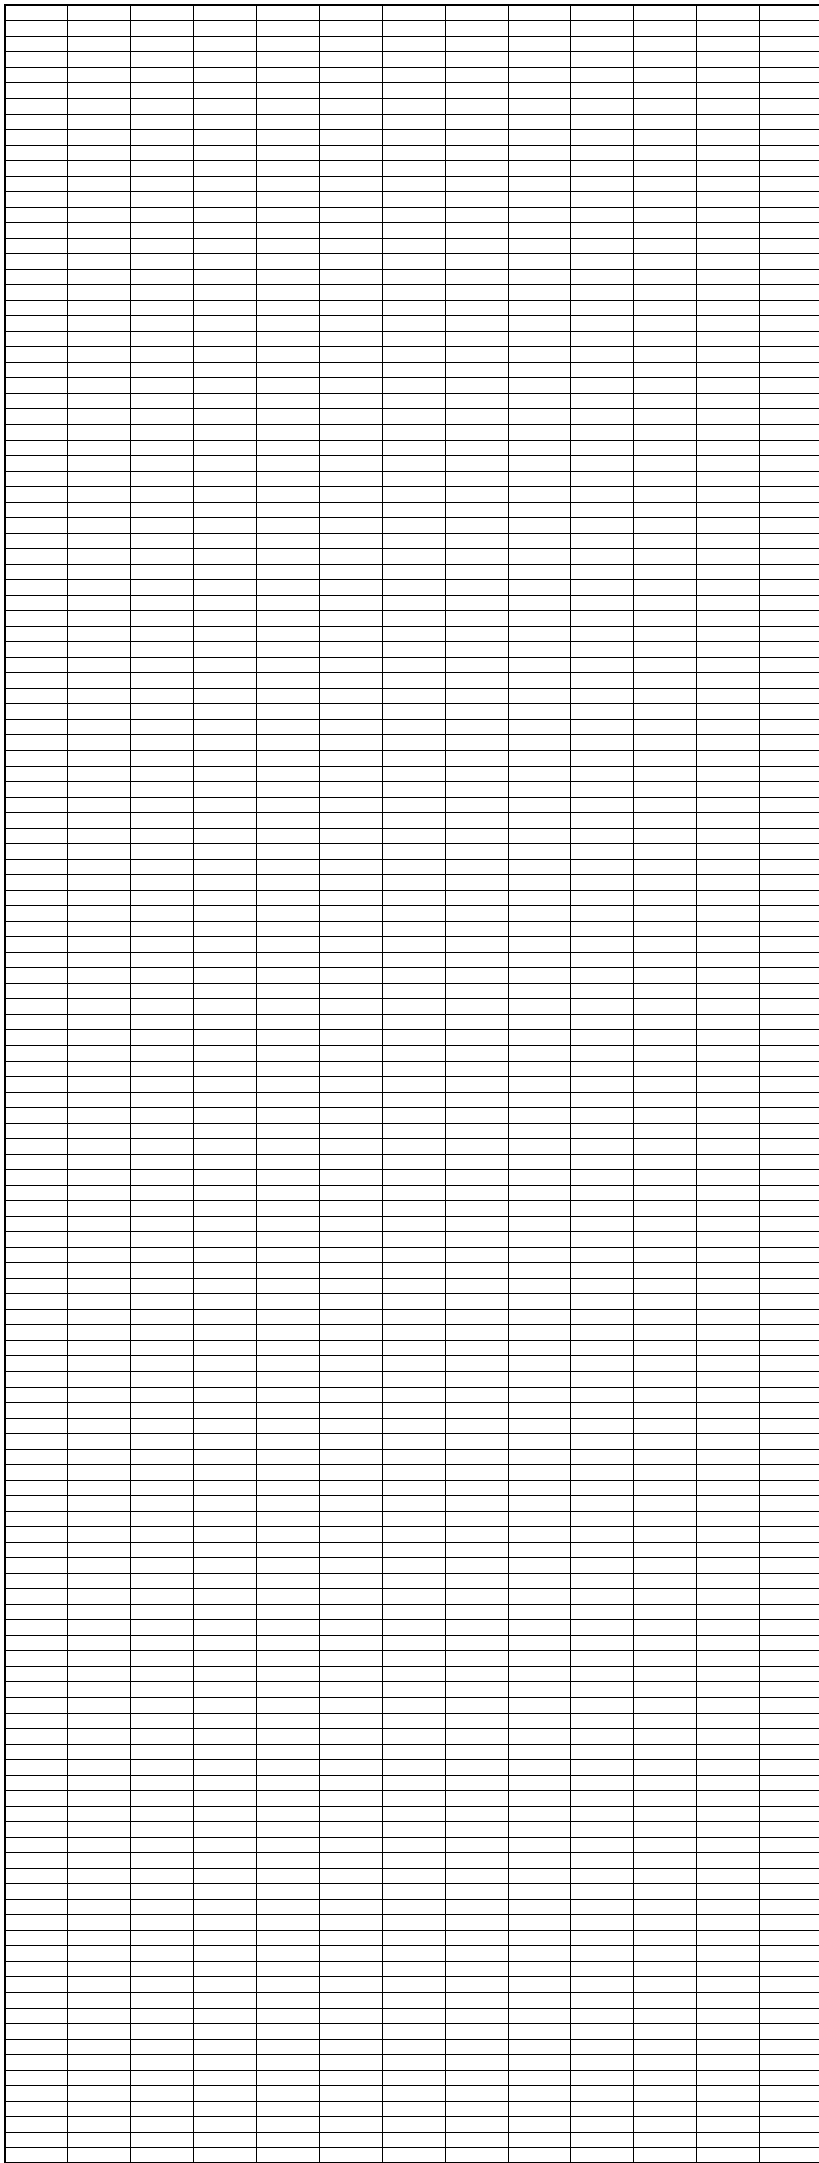




interchangeable.  
when you move to the next item using Pr+/-.


together for >3 sec.


points on the keyboard control unit for a short period, switch the unit off and disconnect it from the mains.

    
when you move to the next item using Pr+/-.

 


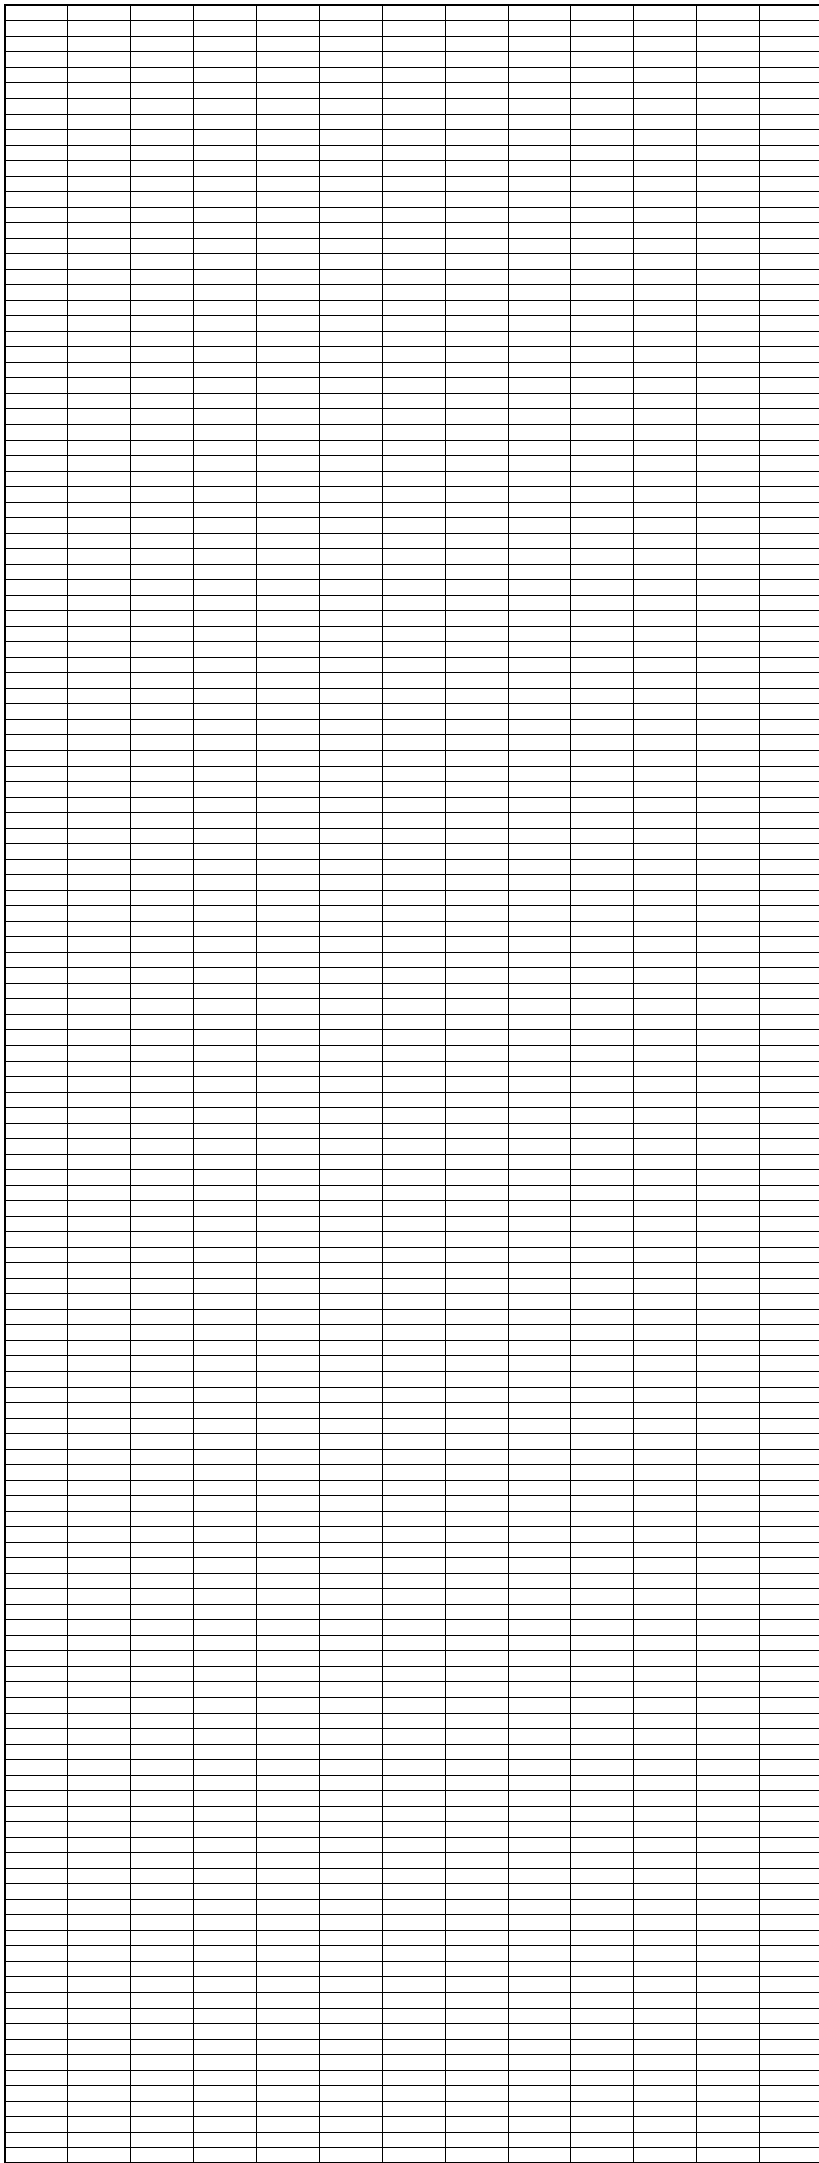 


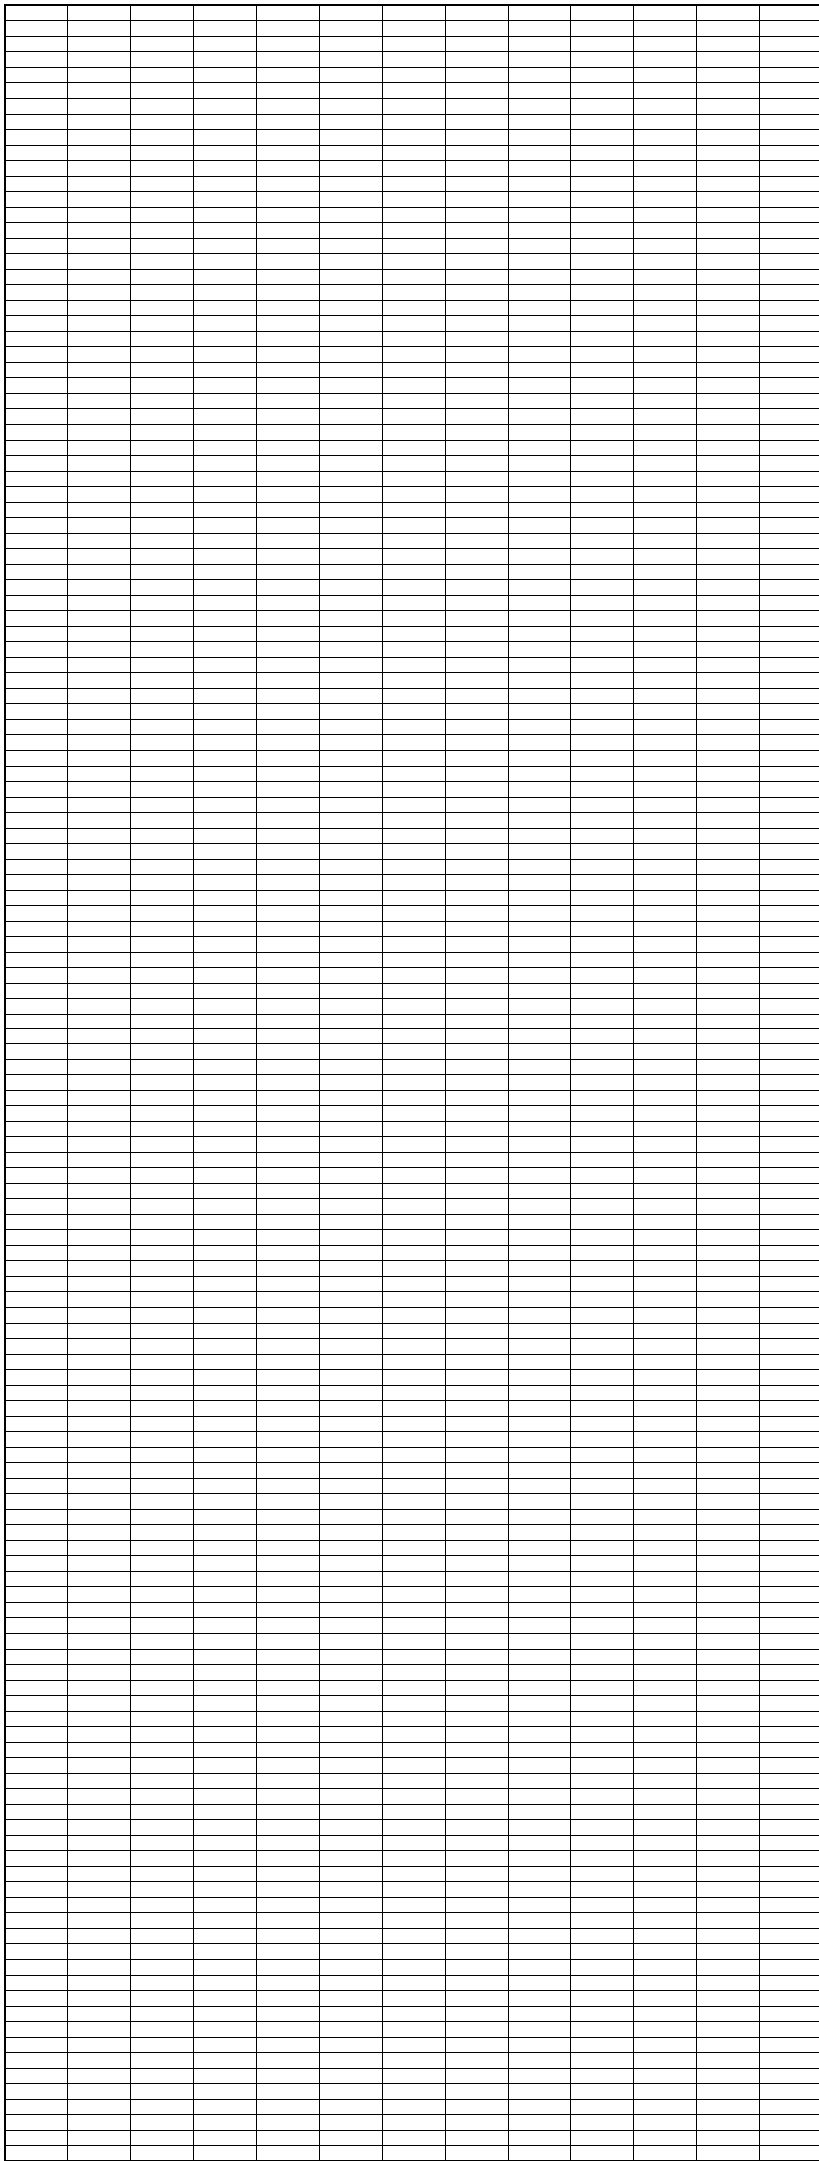

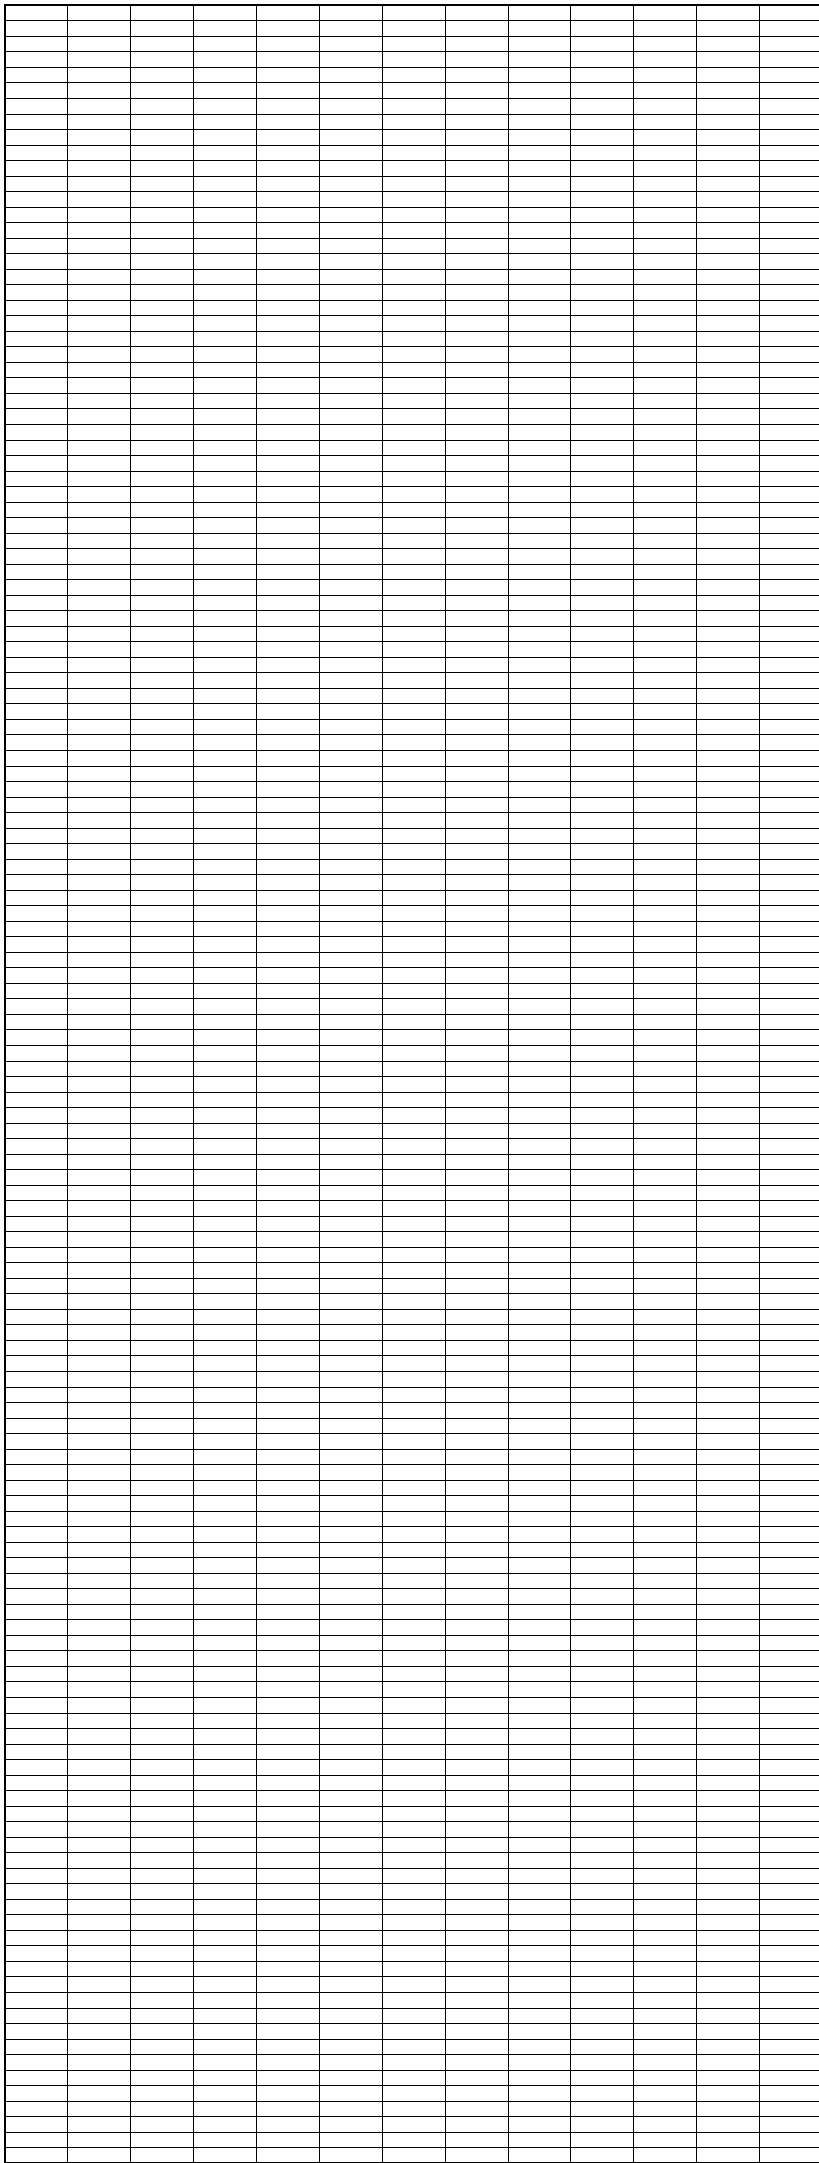

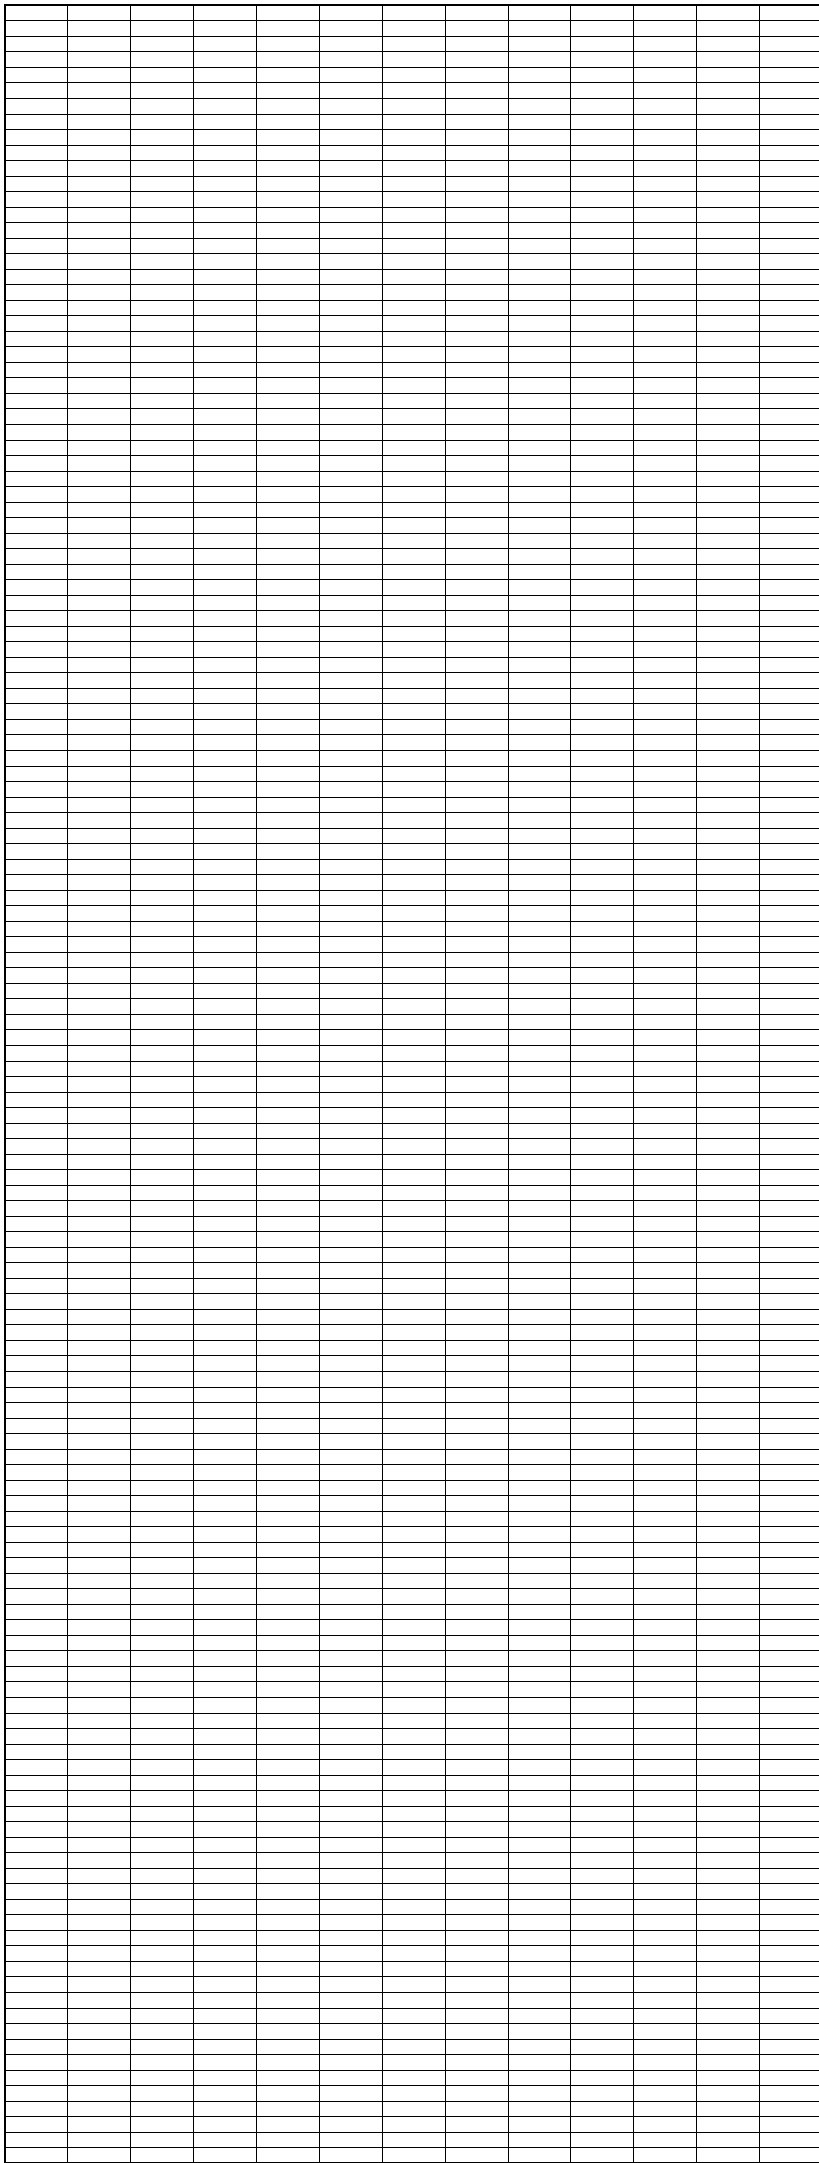

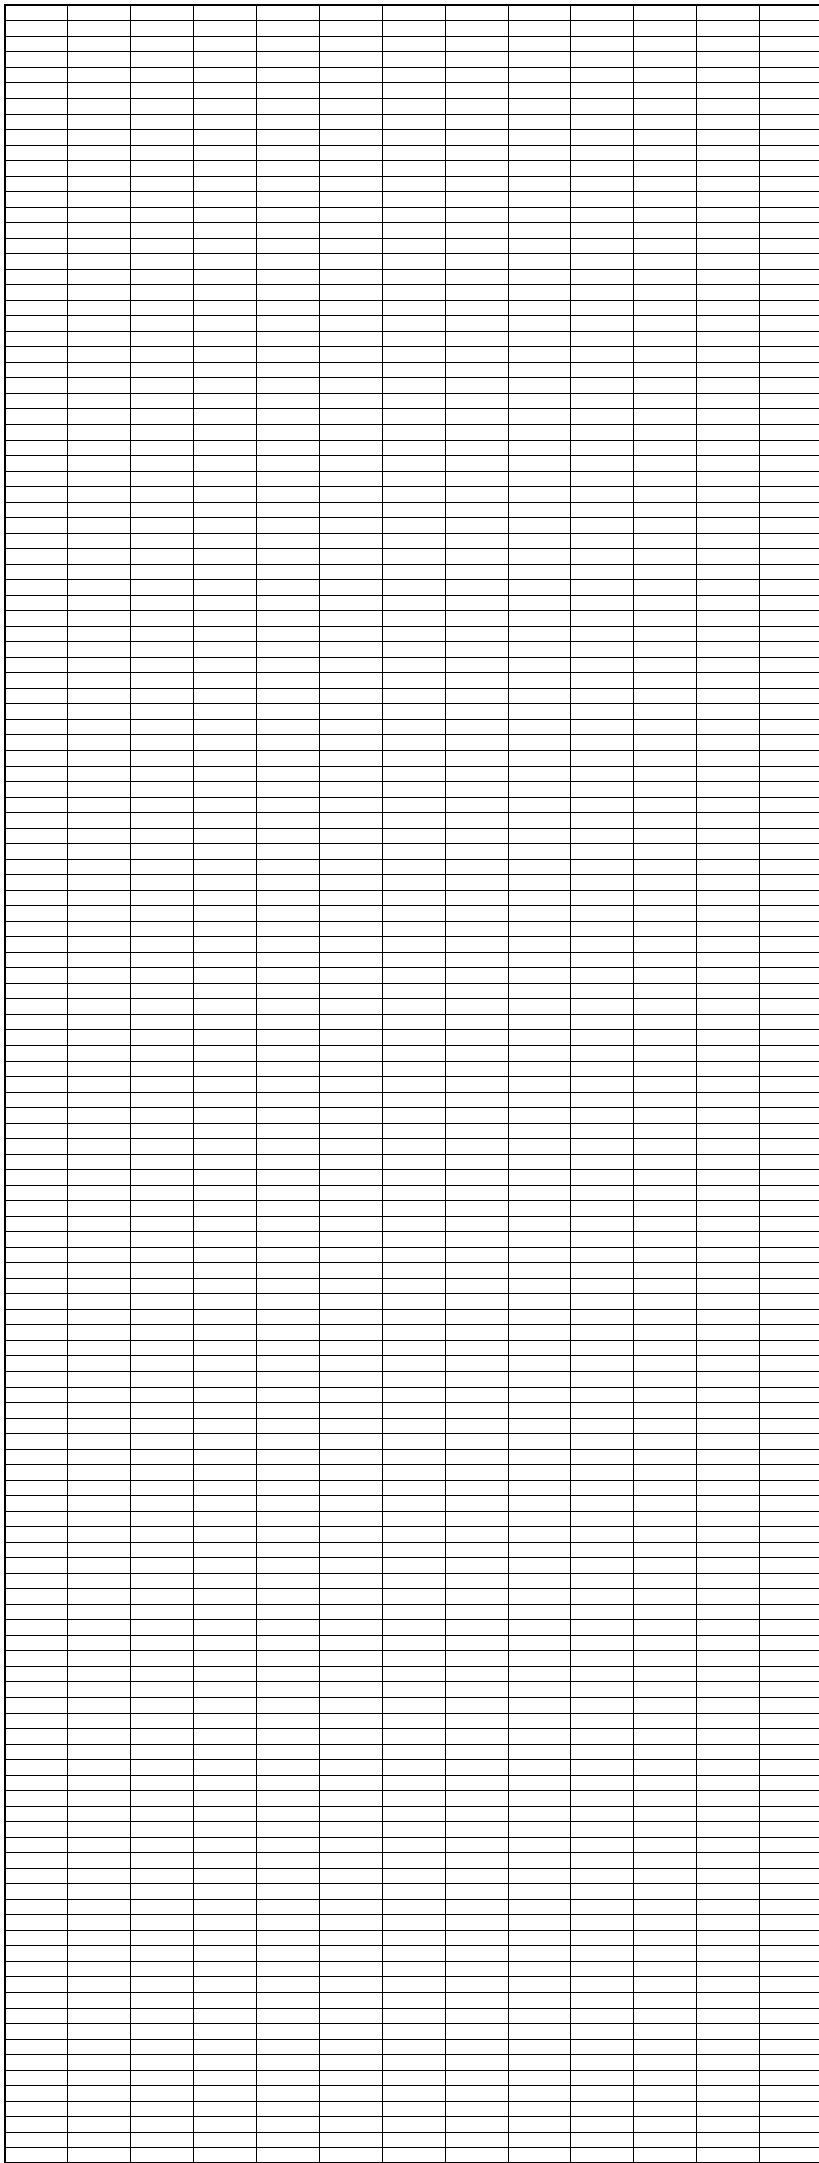


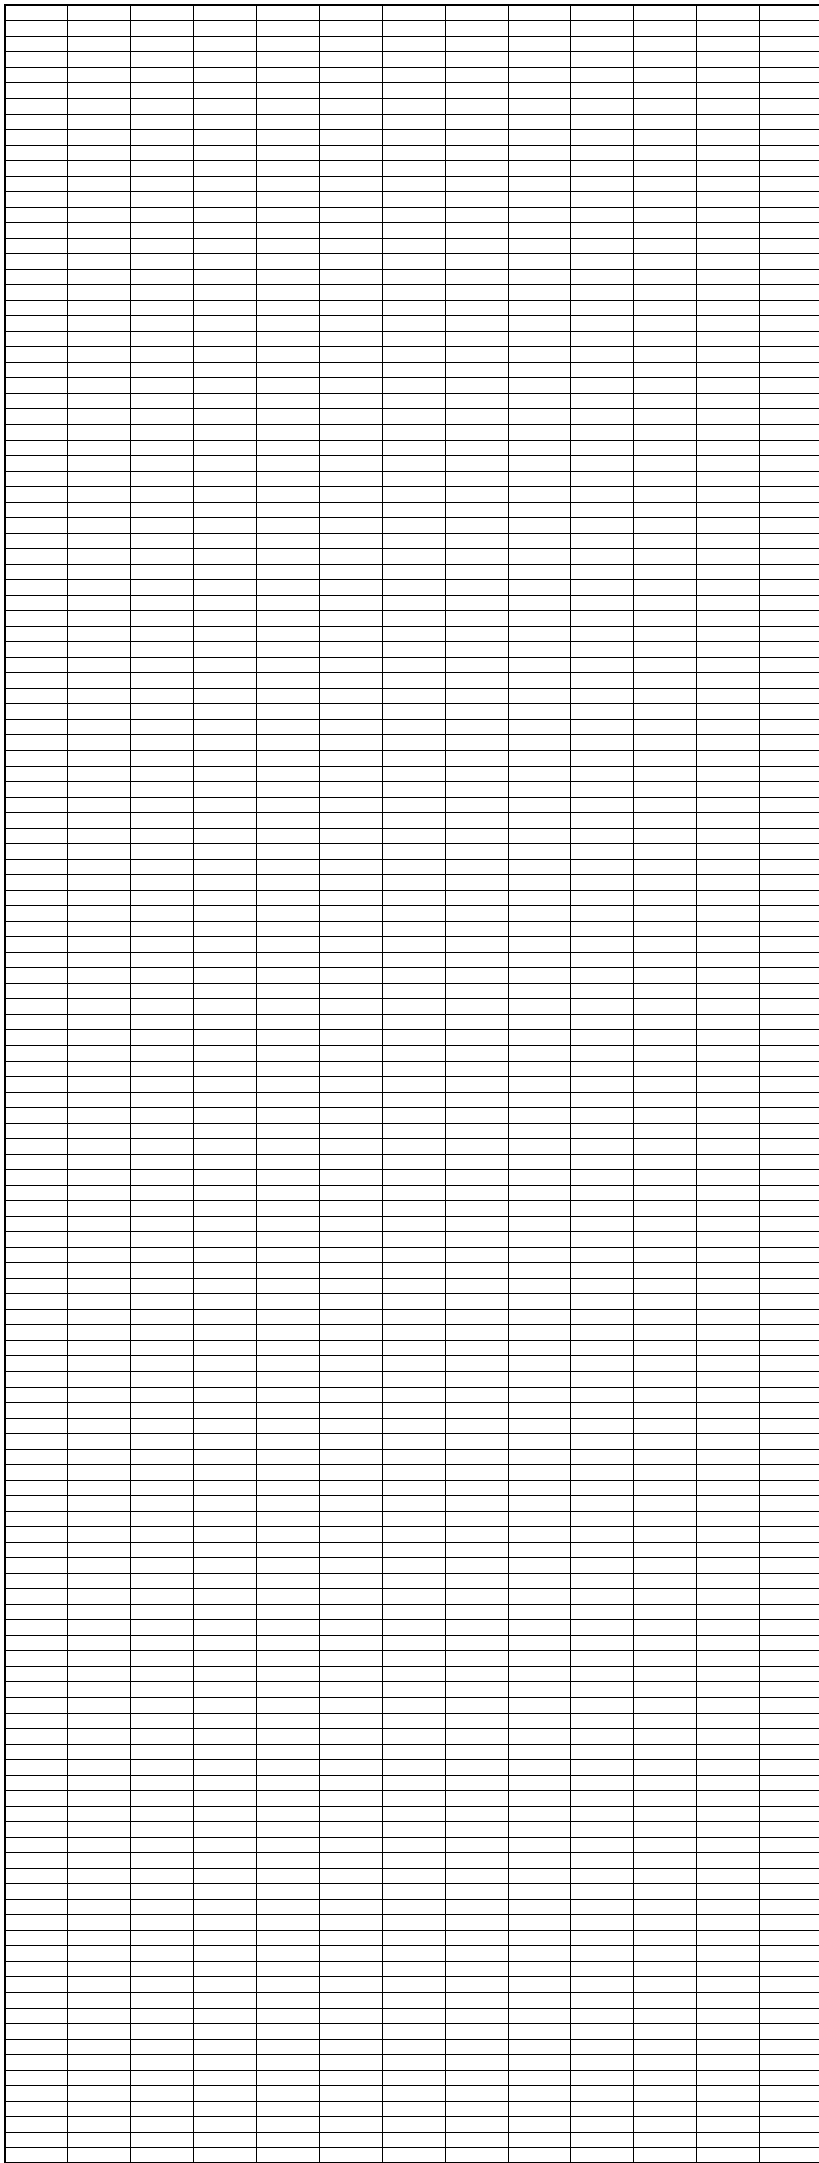


  exit press '8' on remote control. PIN CODE: enter any pin 3 times, then press Vol- on TV and '7' on R/C.

 




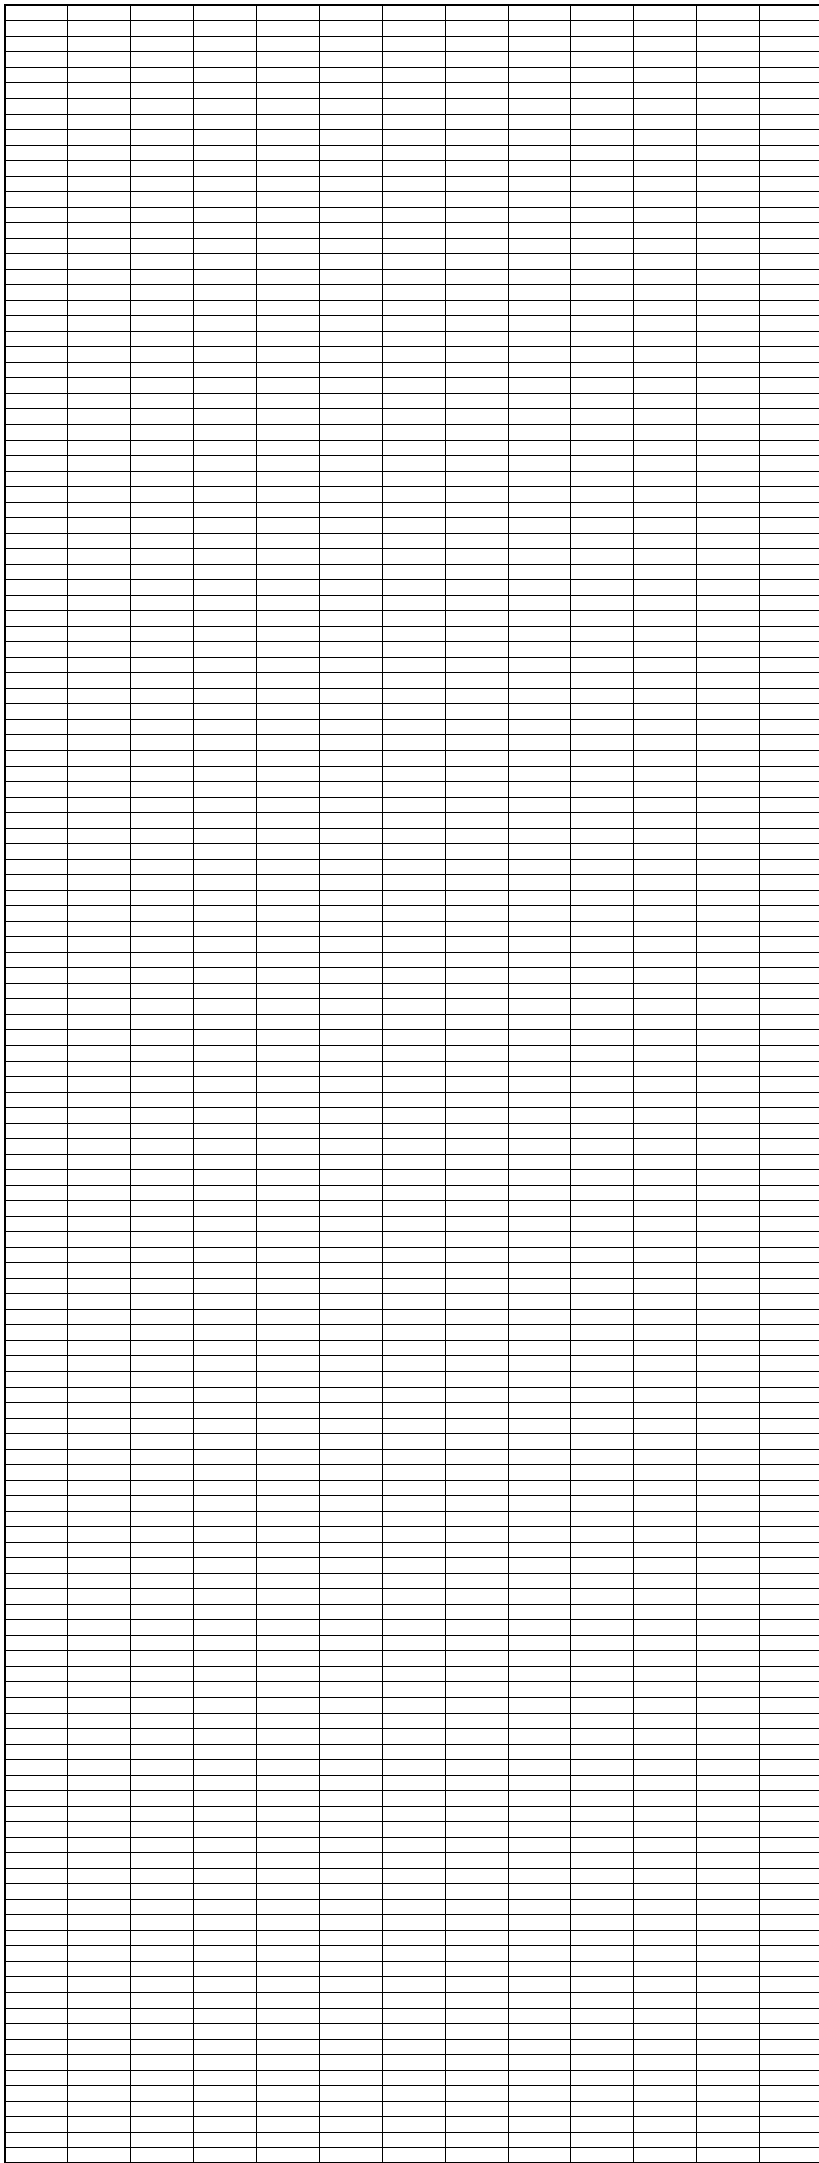 


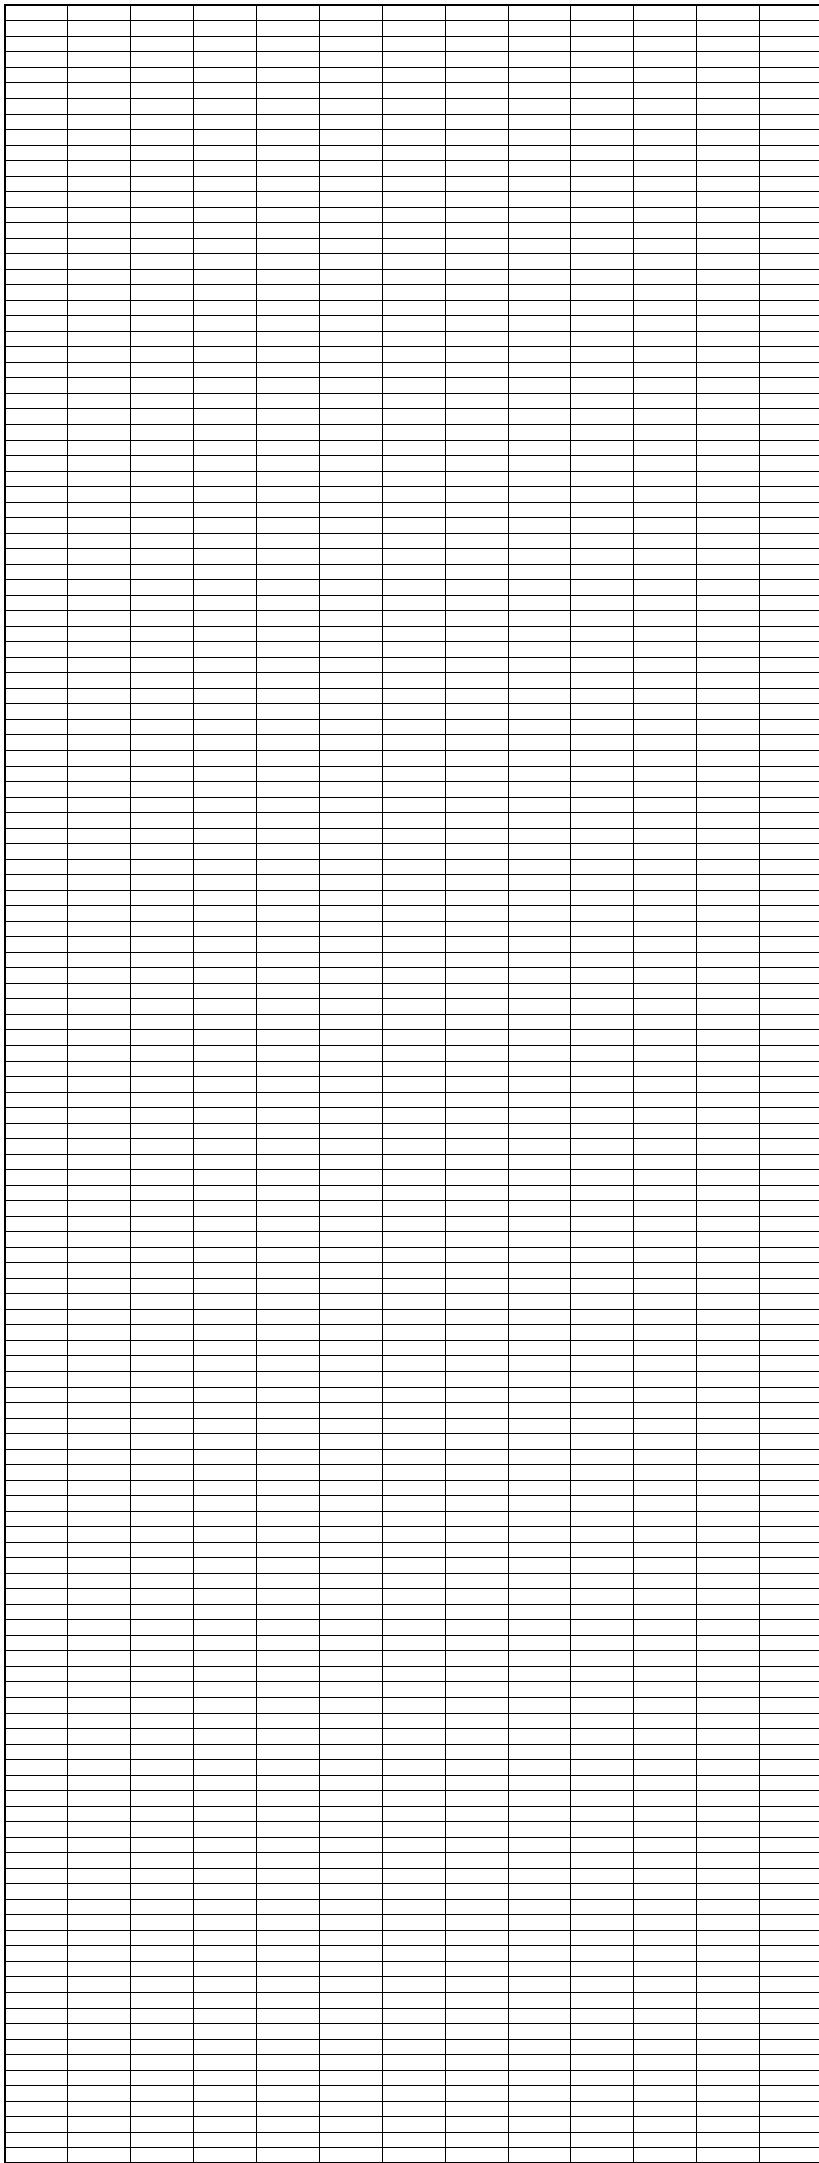 


 


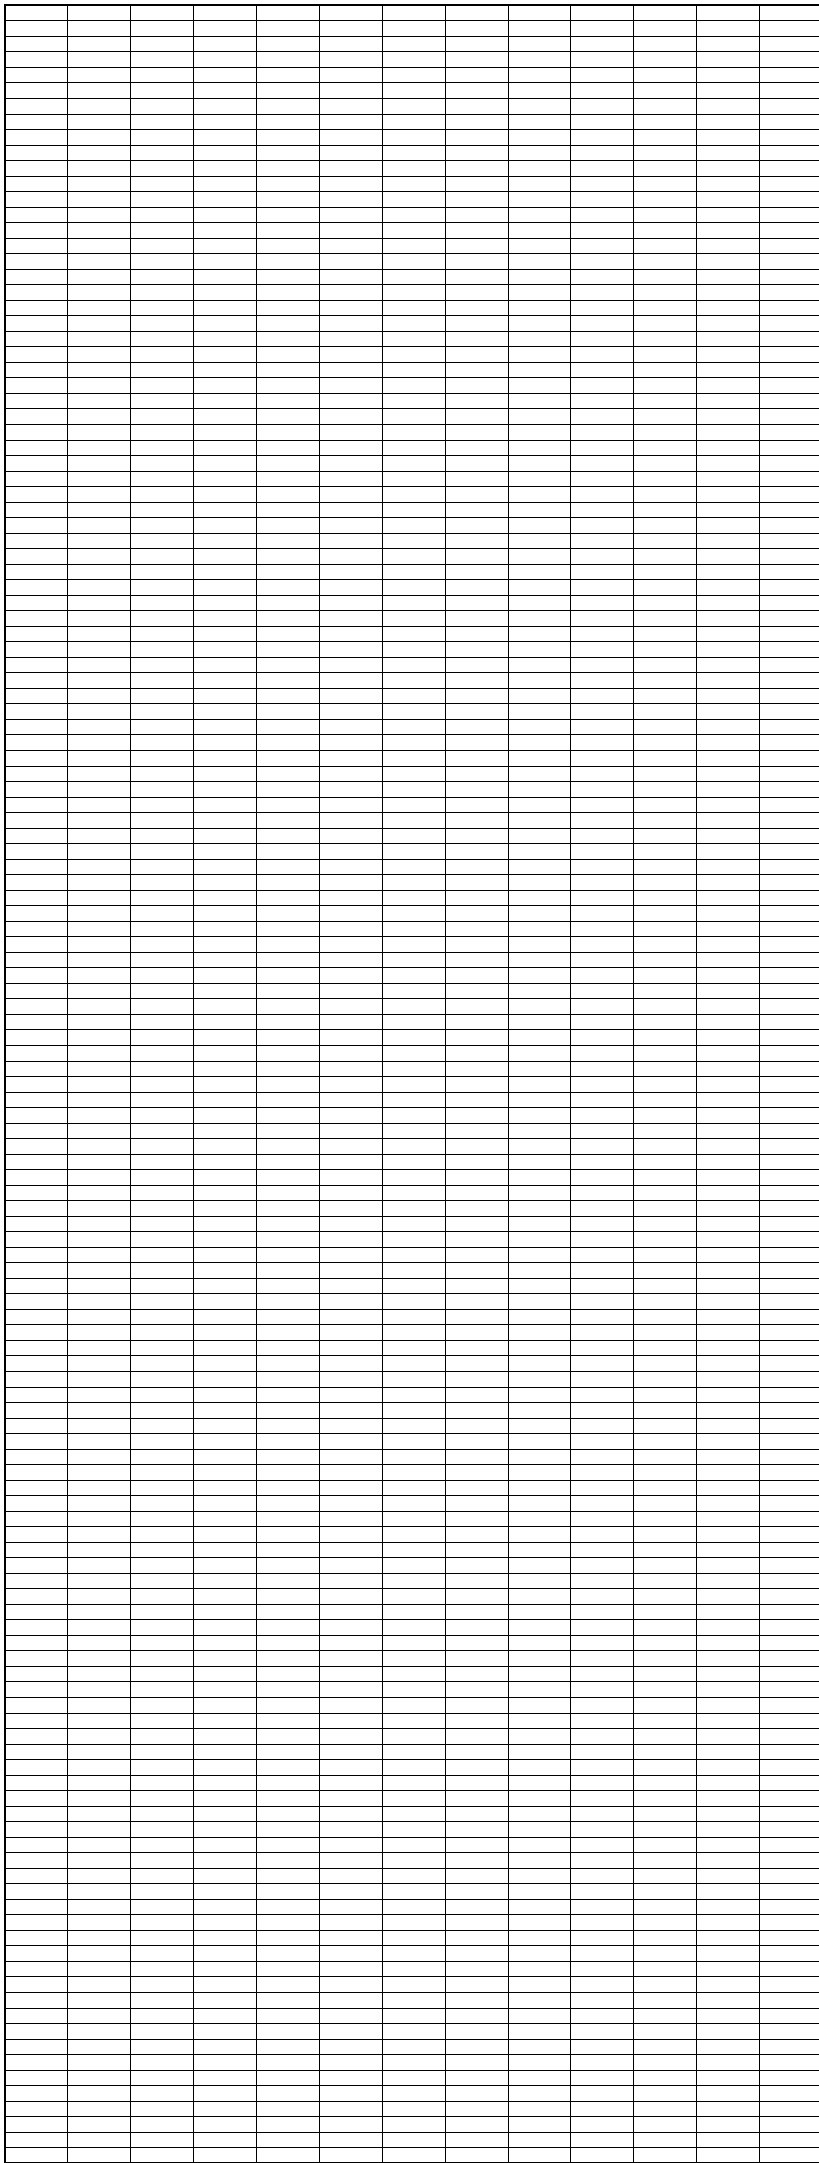

 


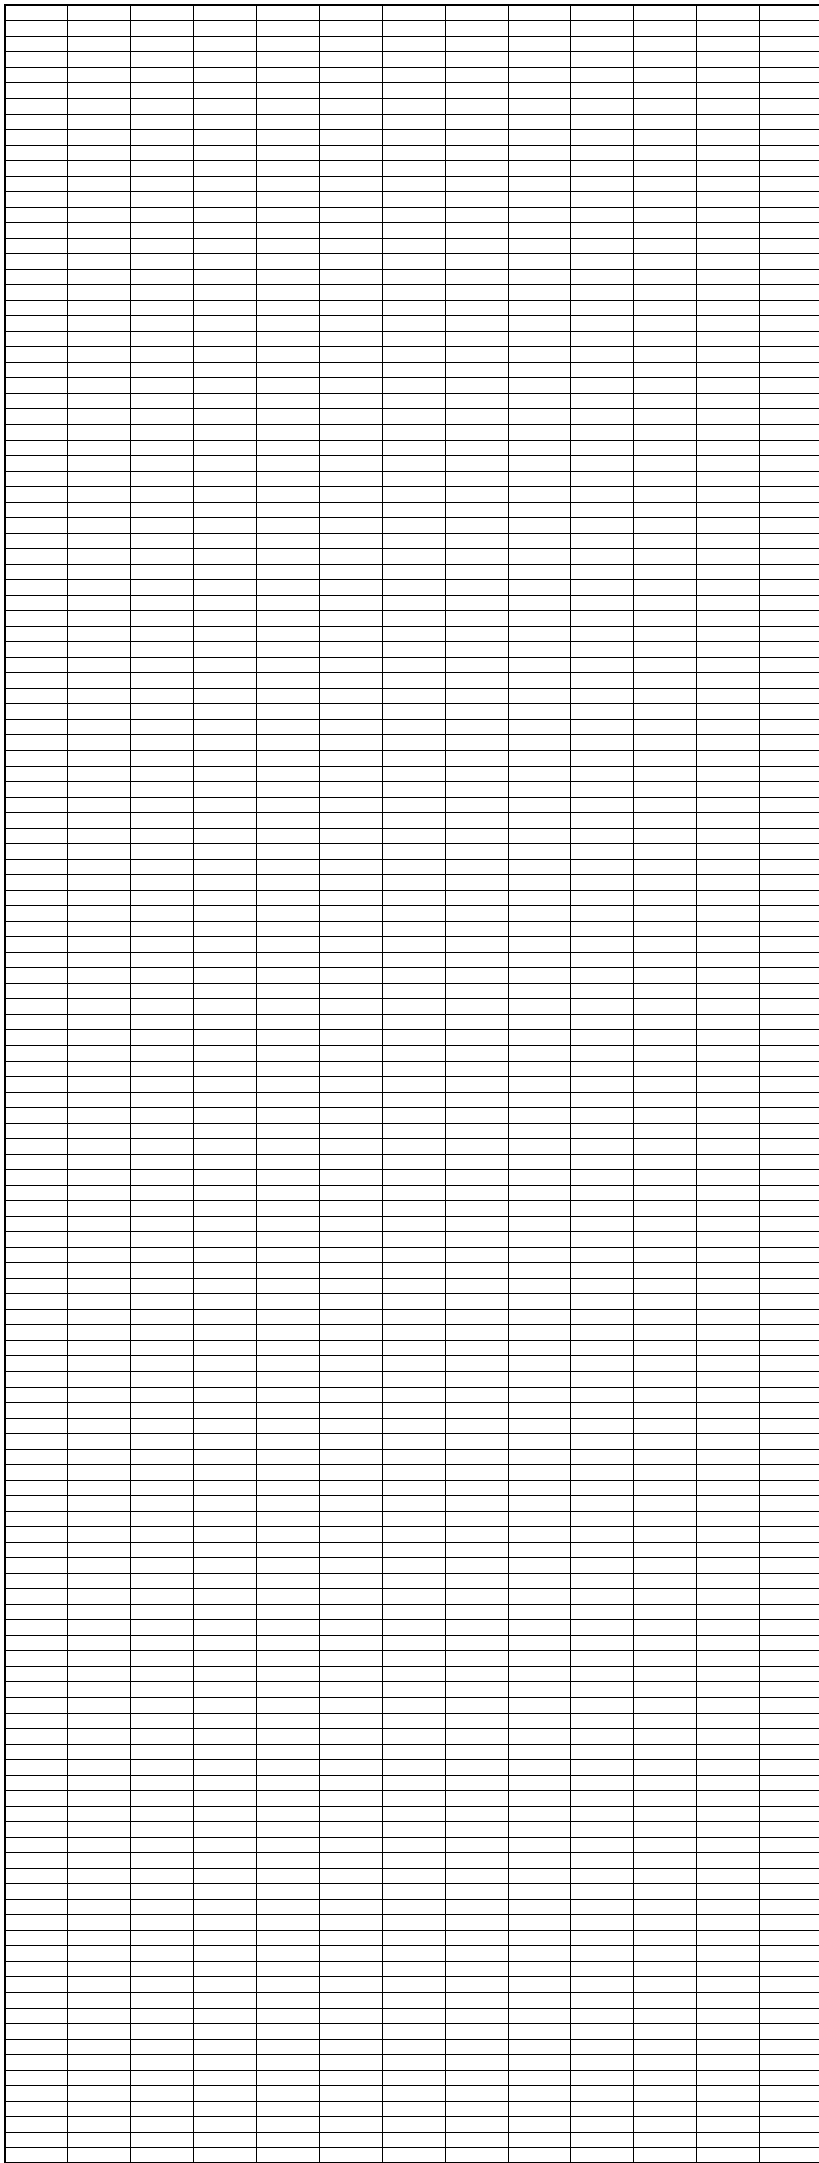 


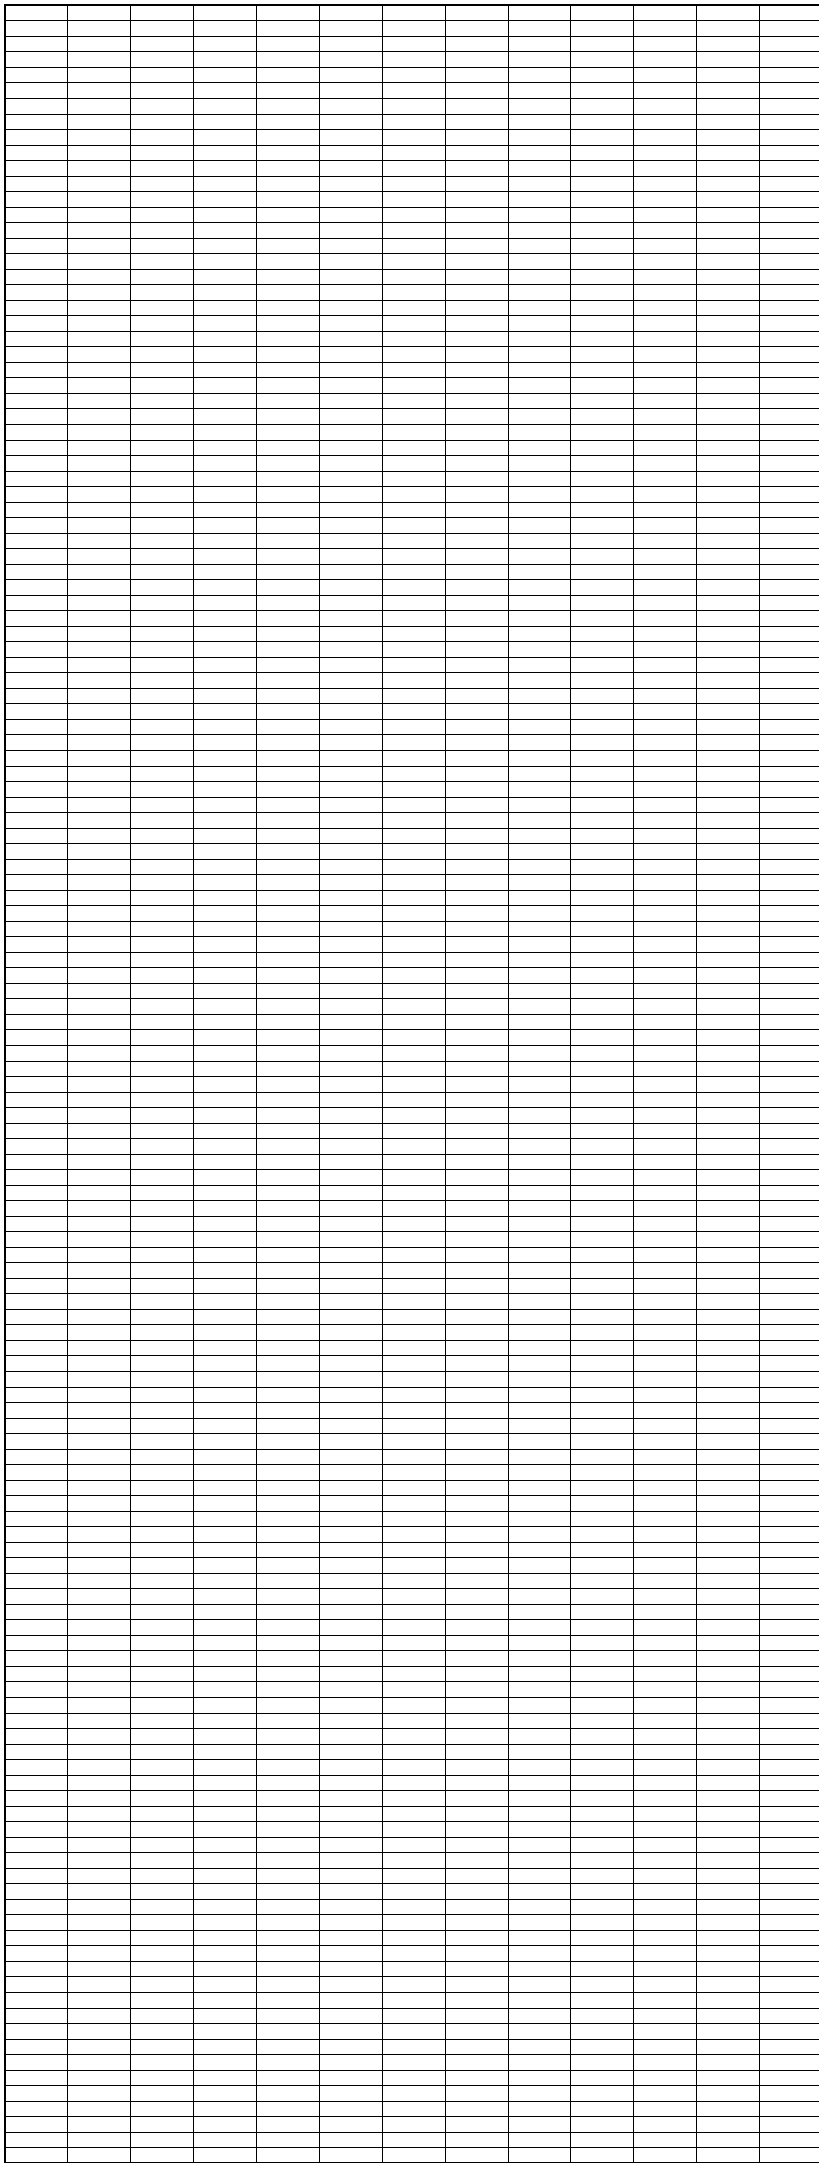 


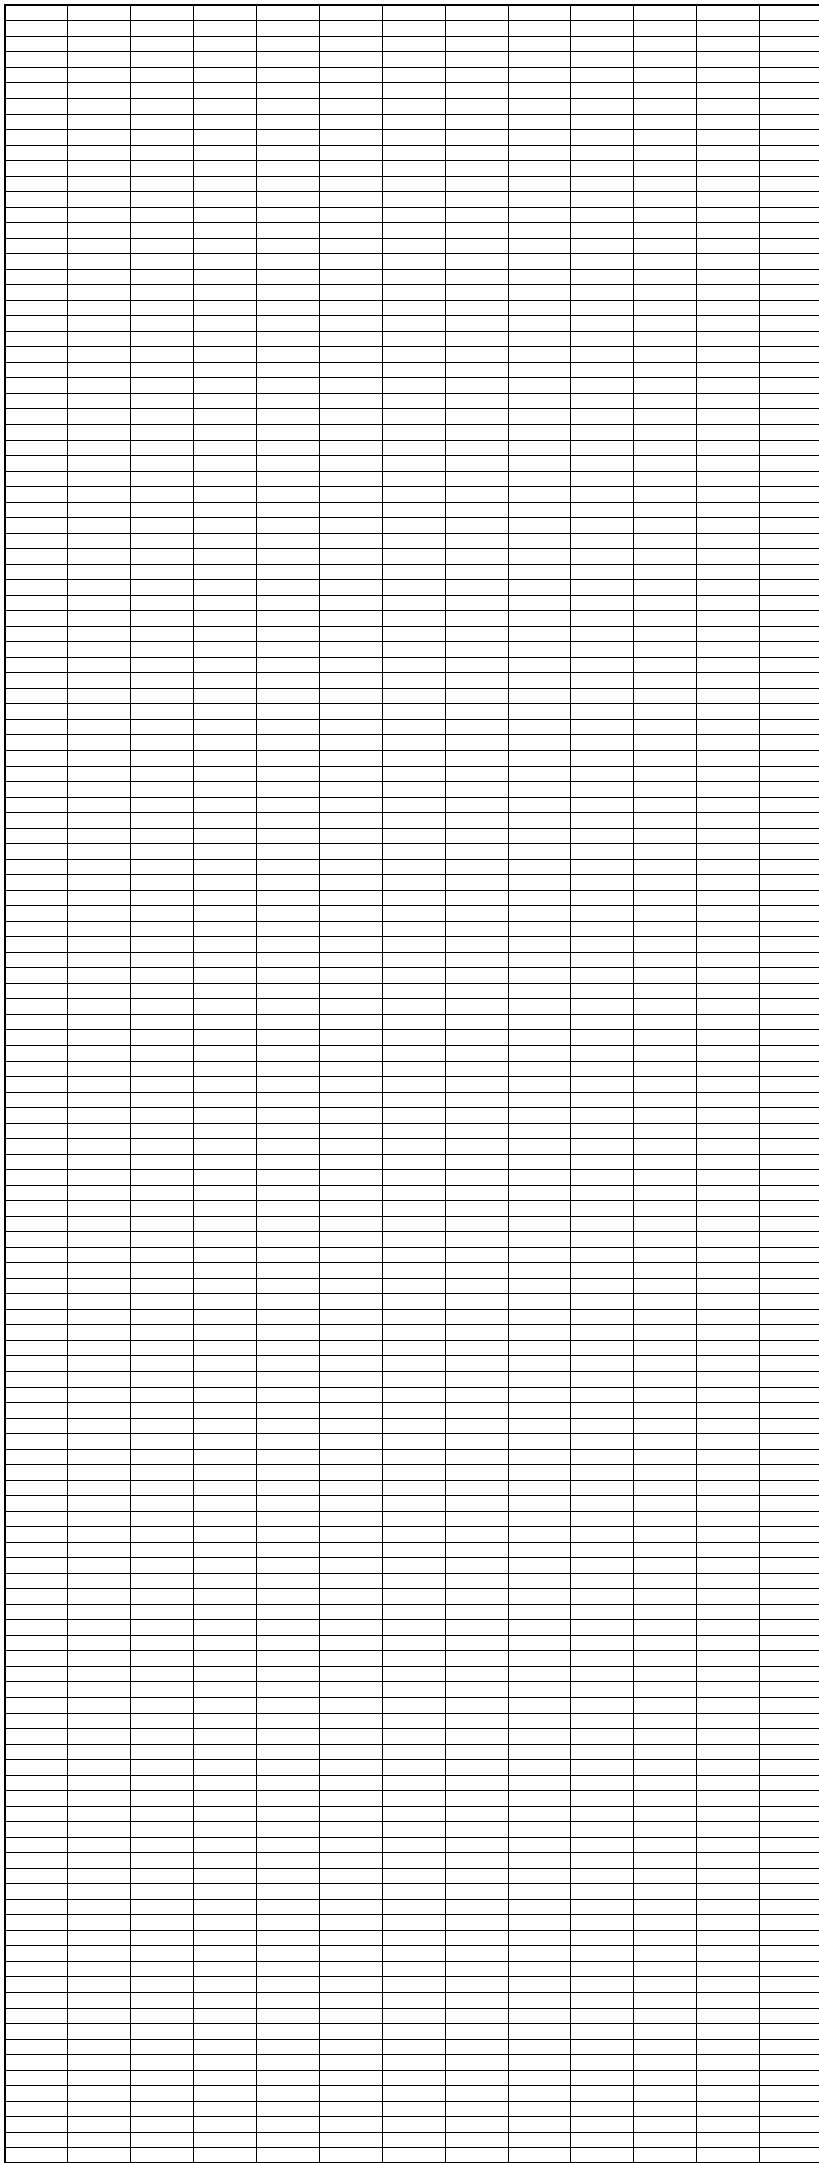 


 


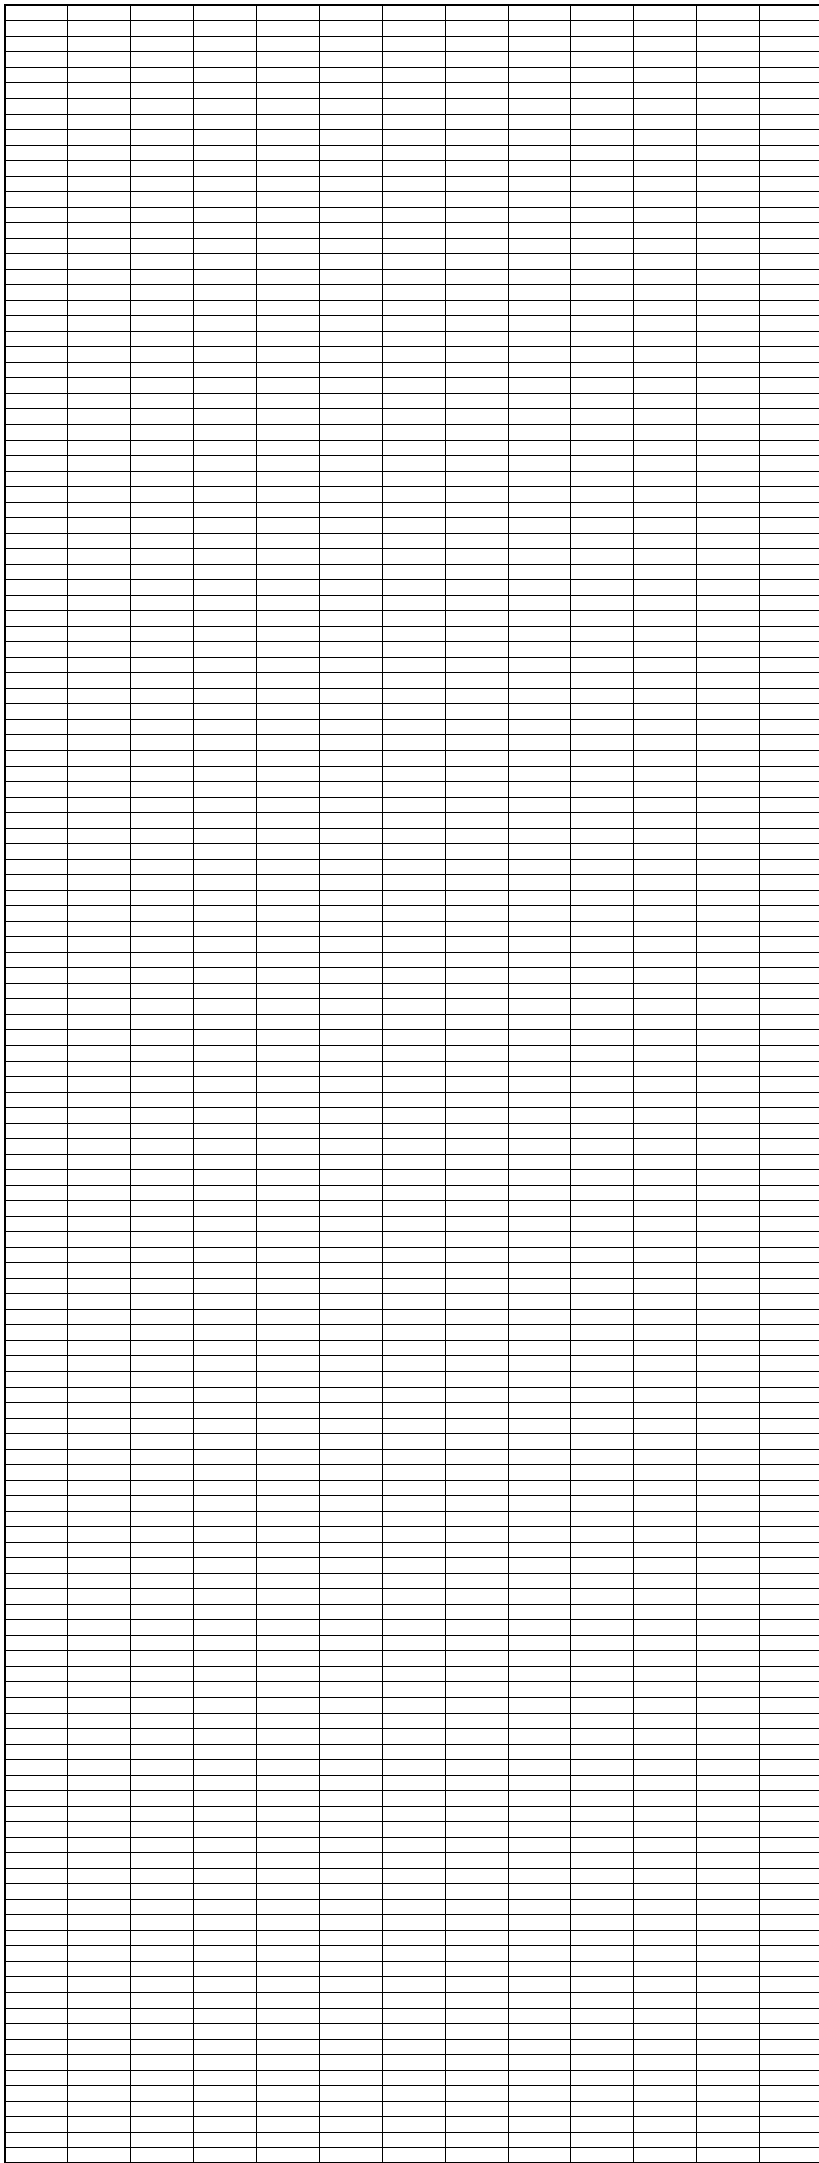 


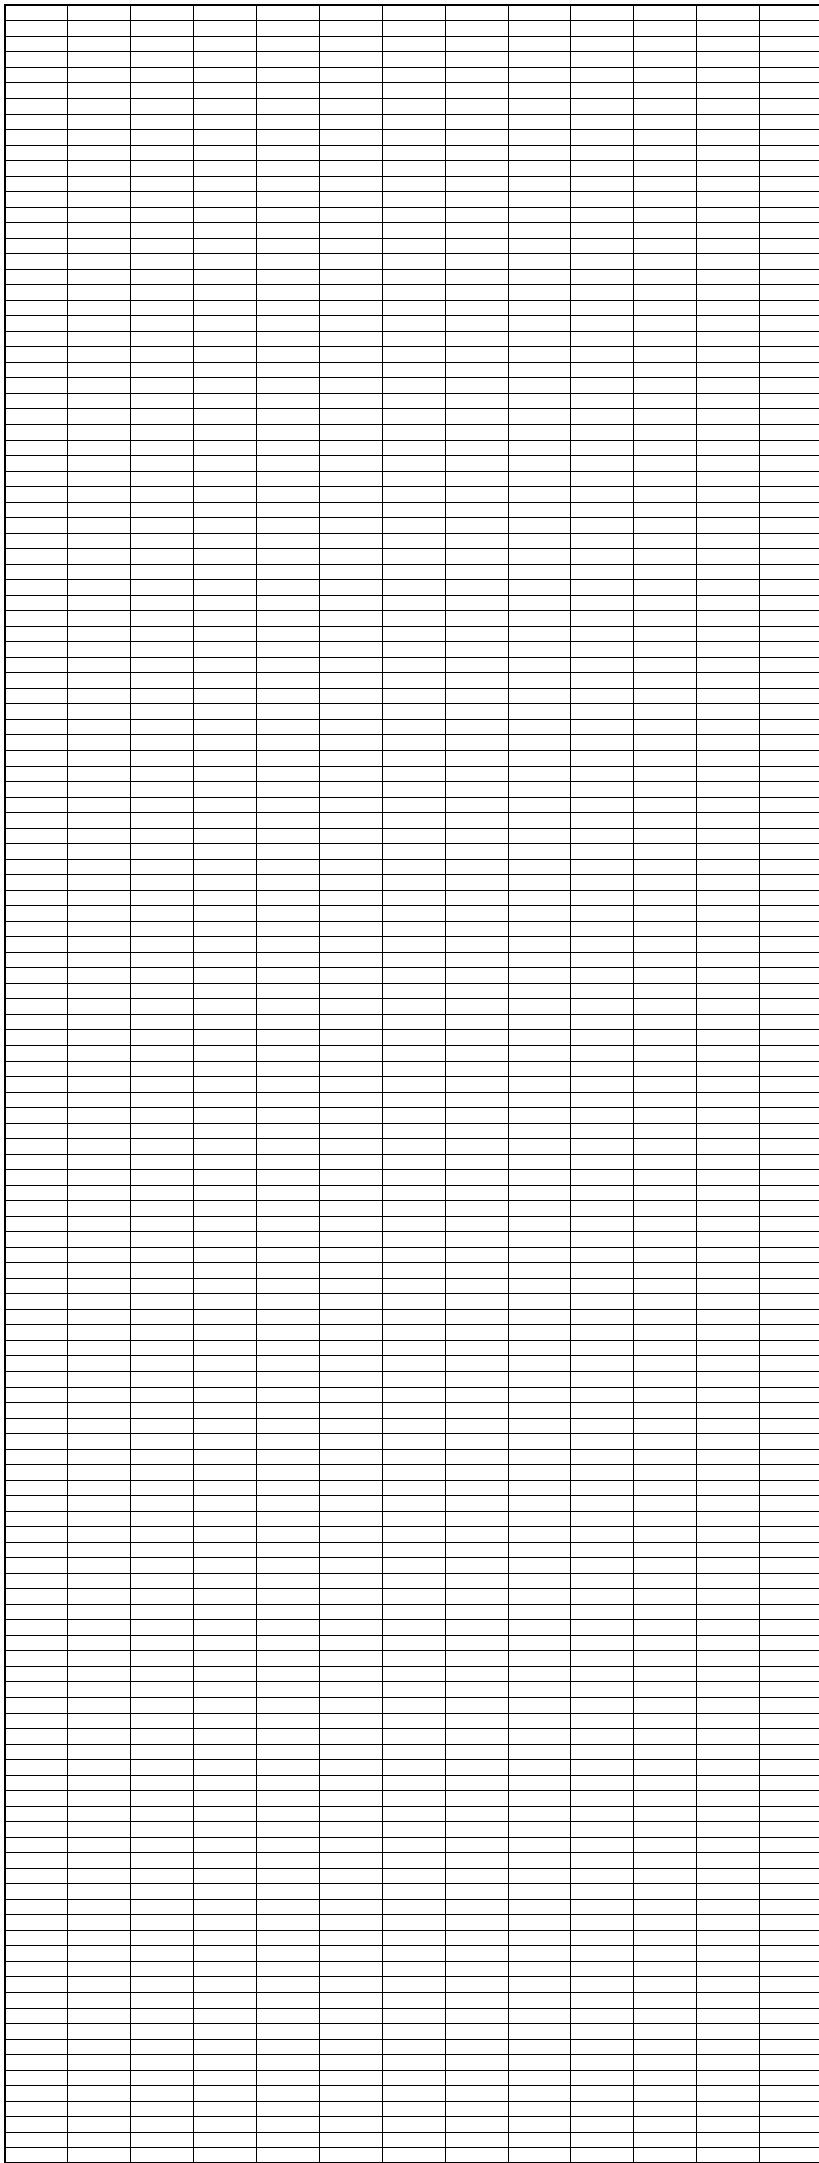 


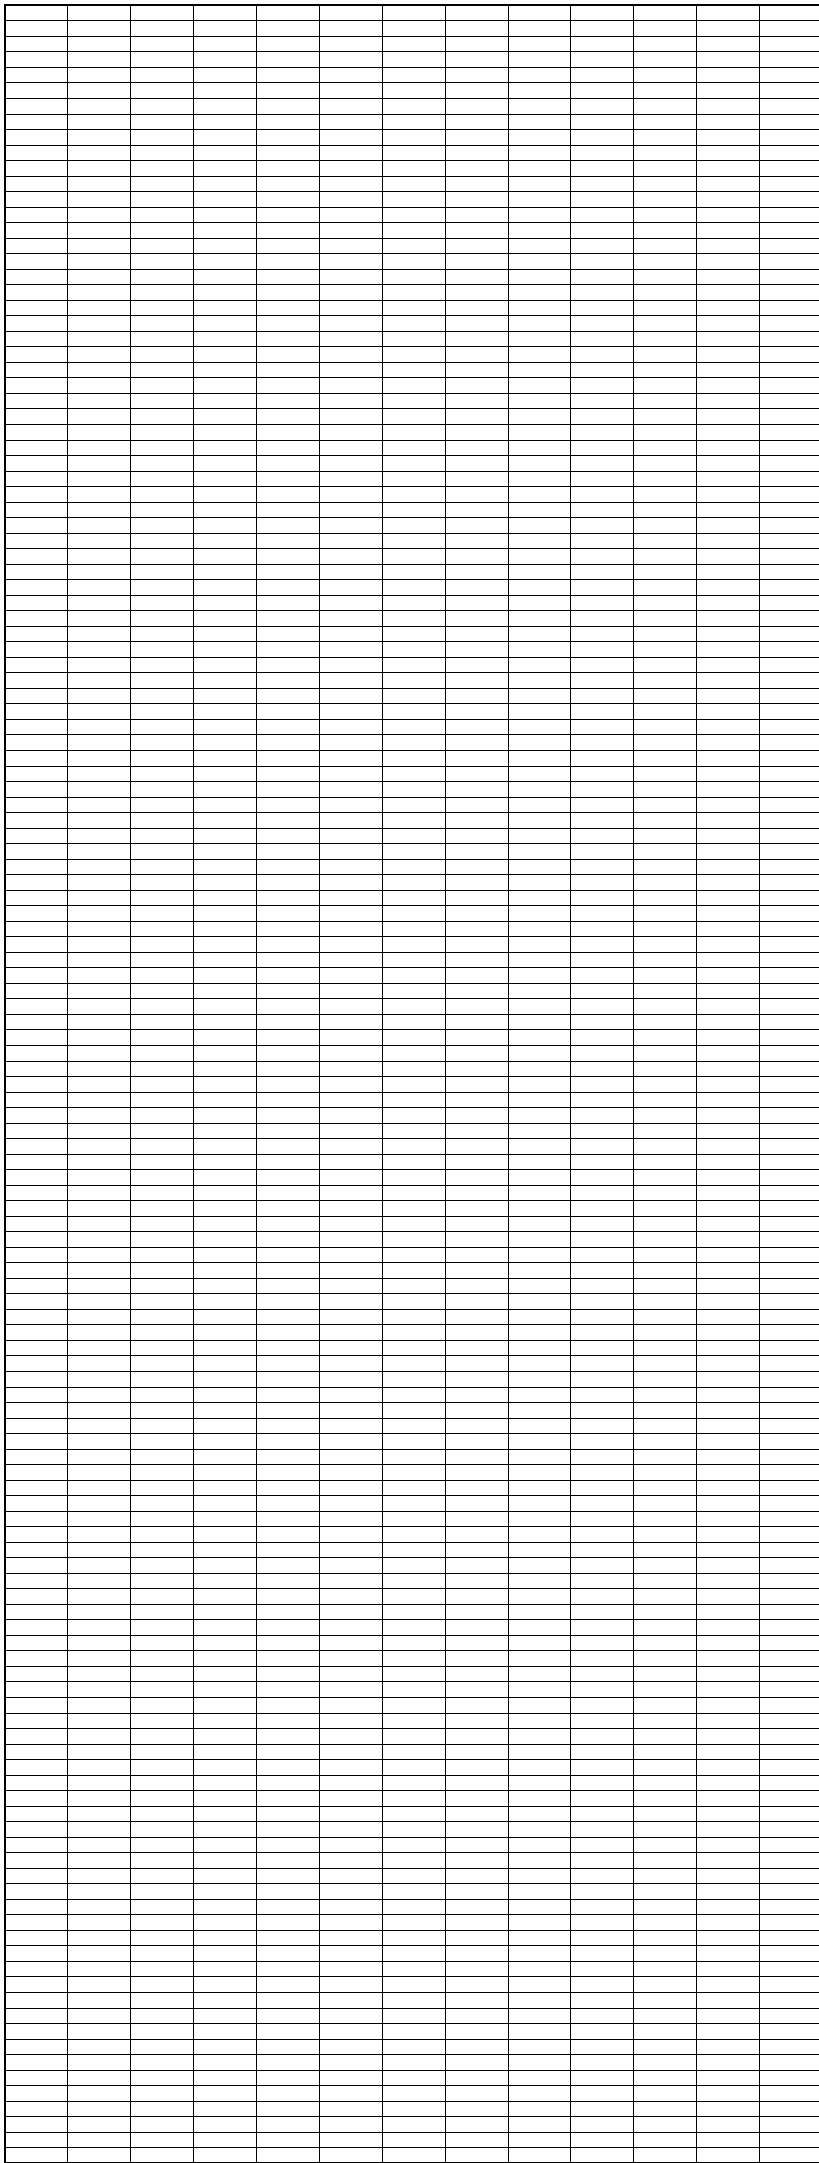 


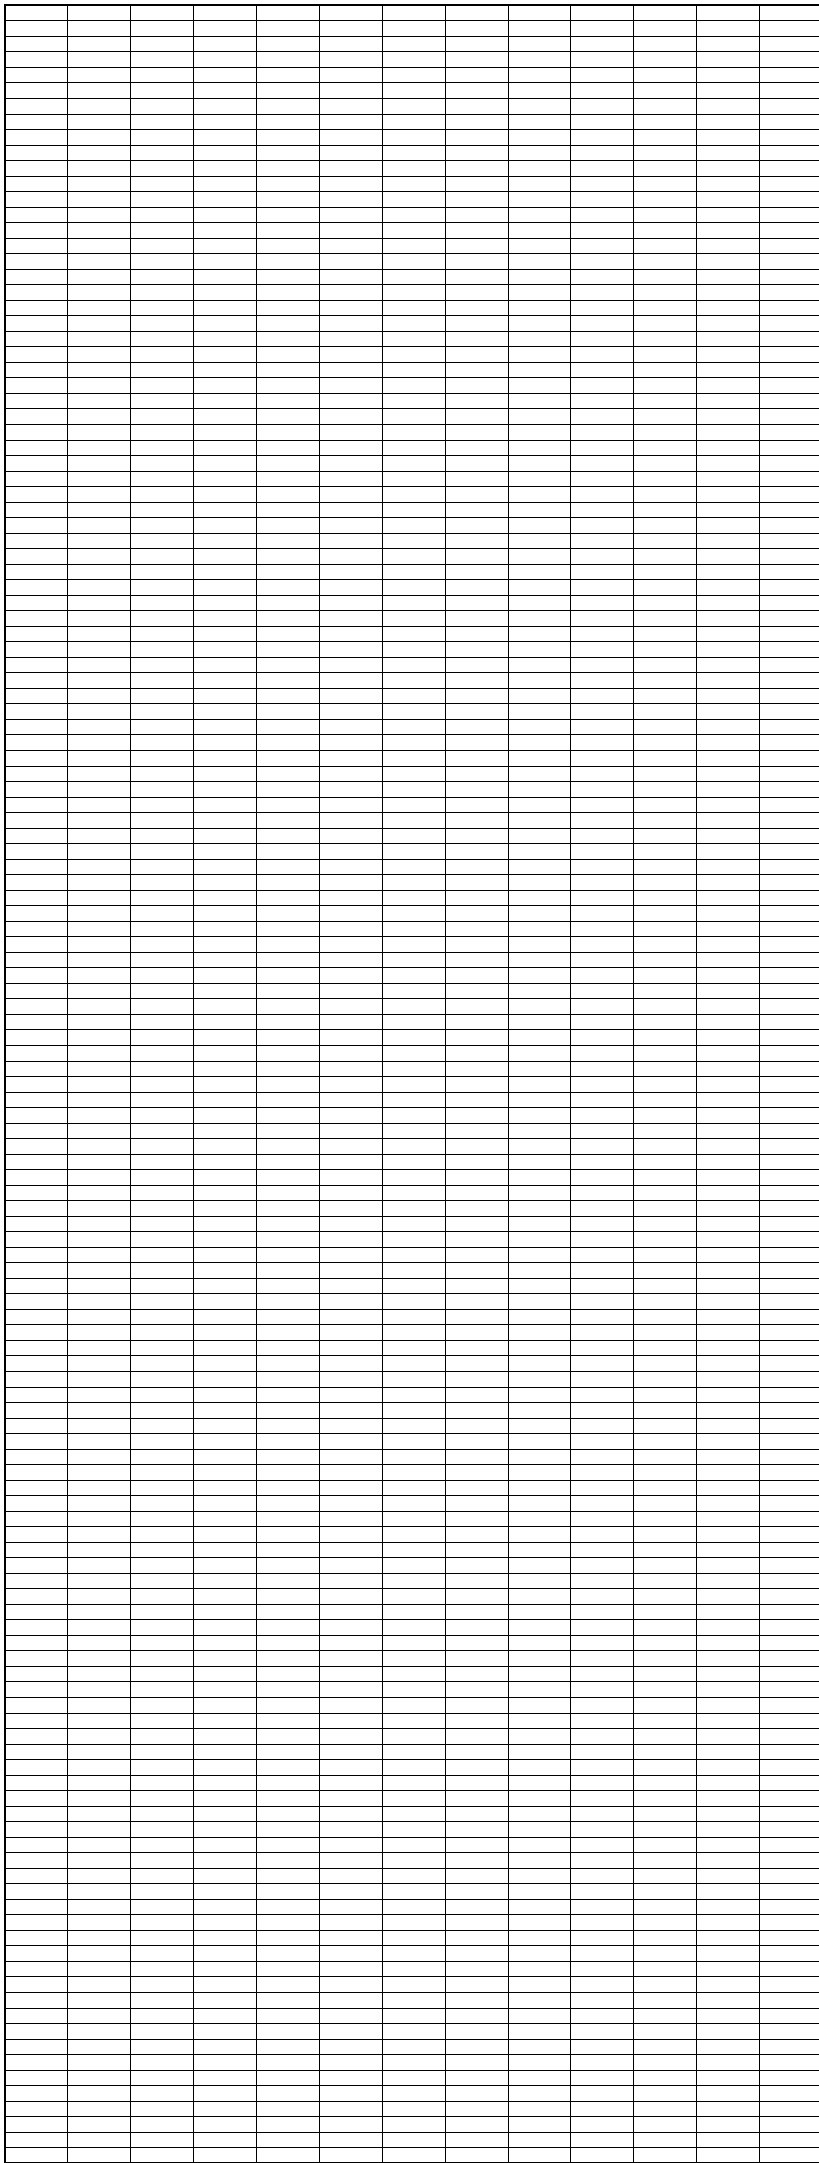

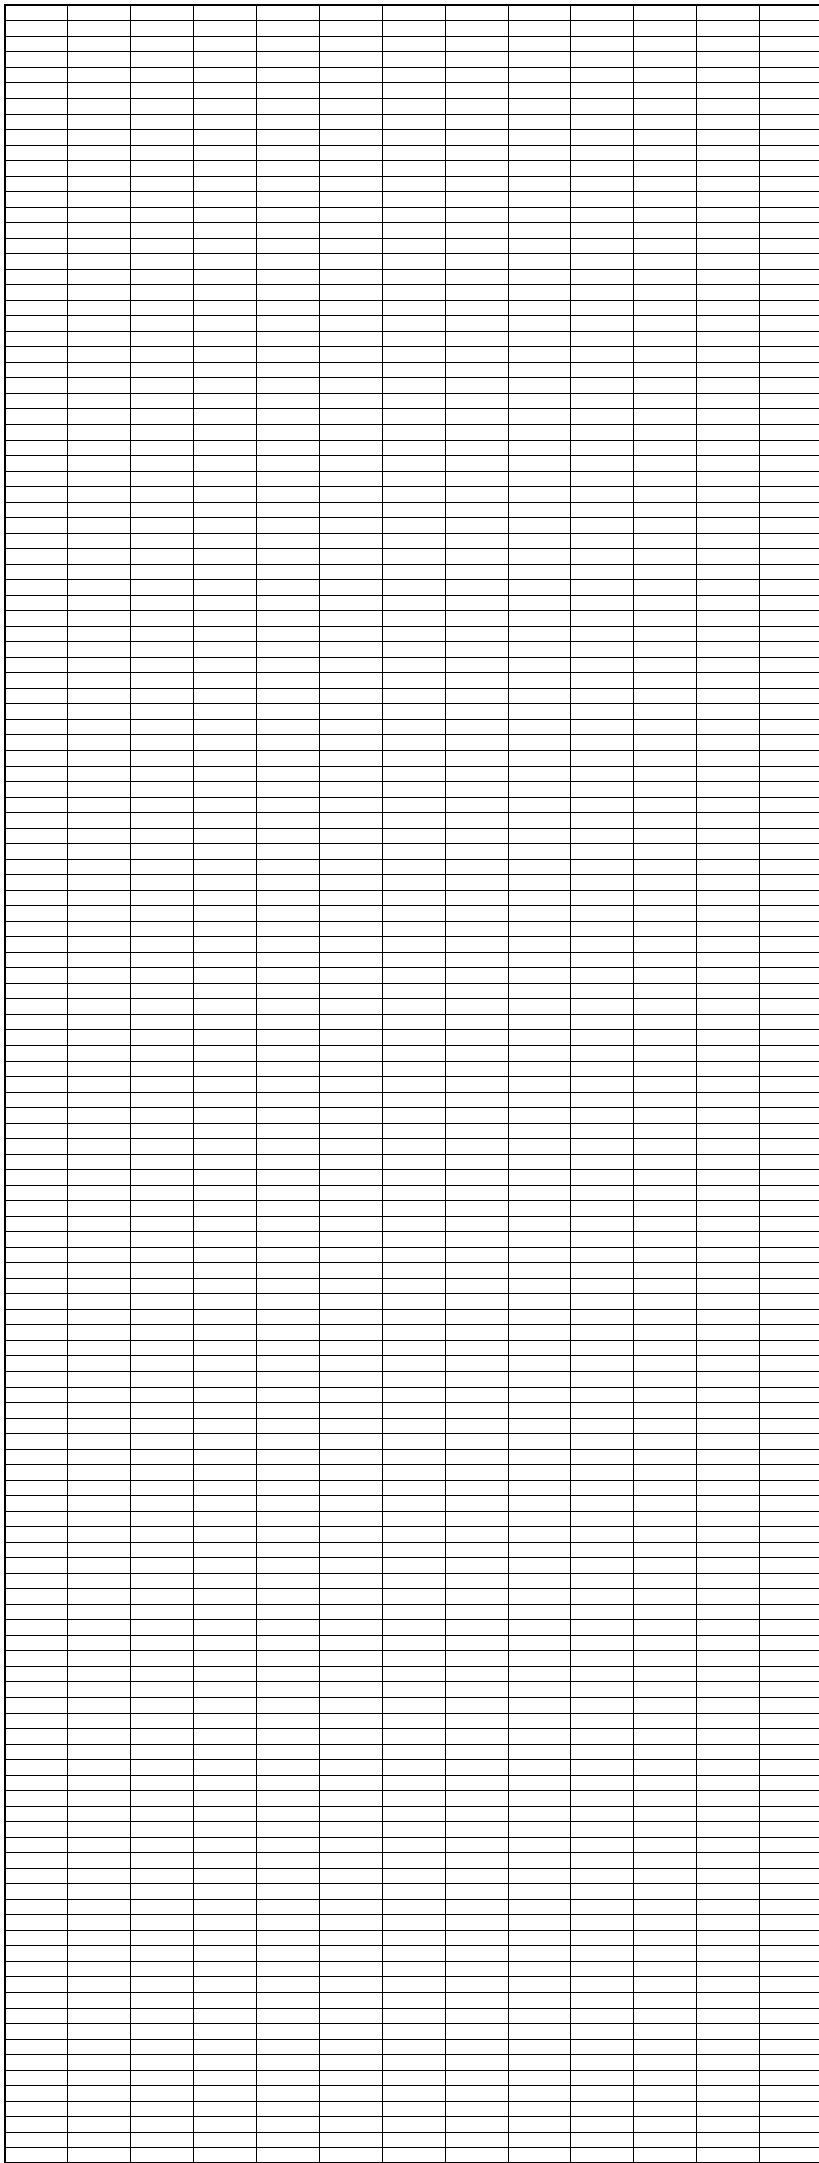 


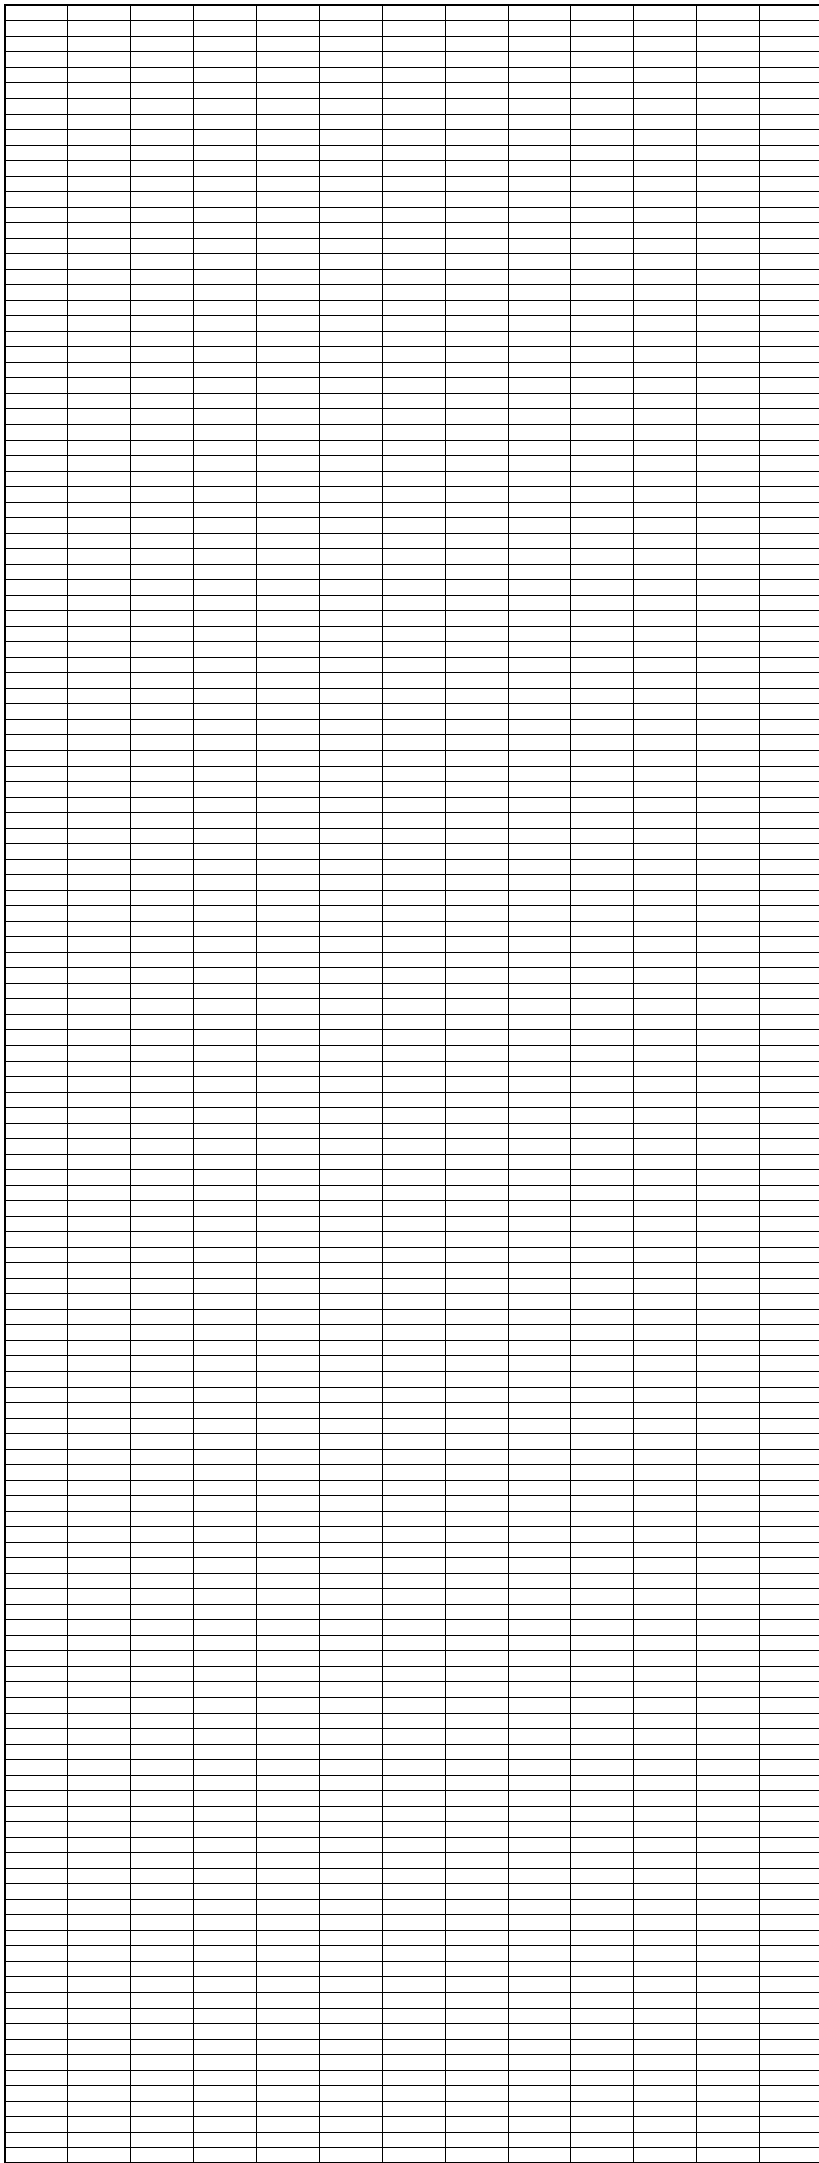 


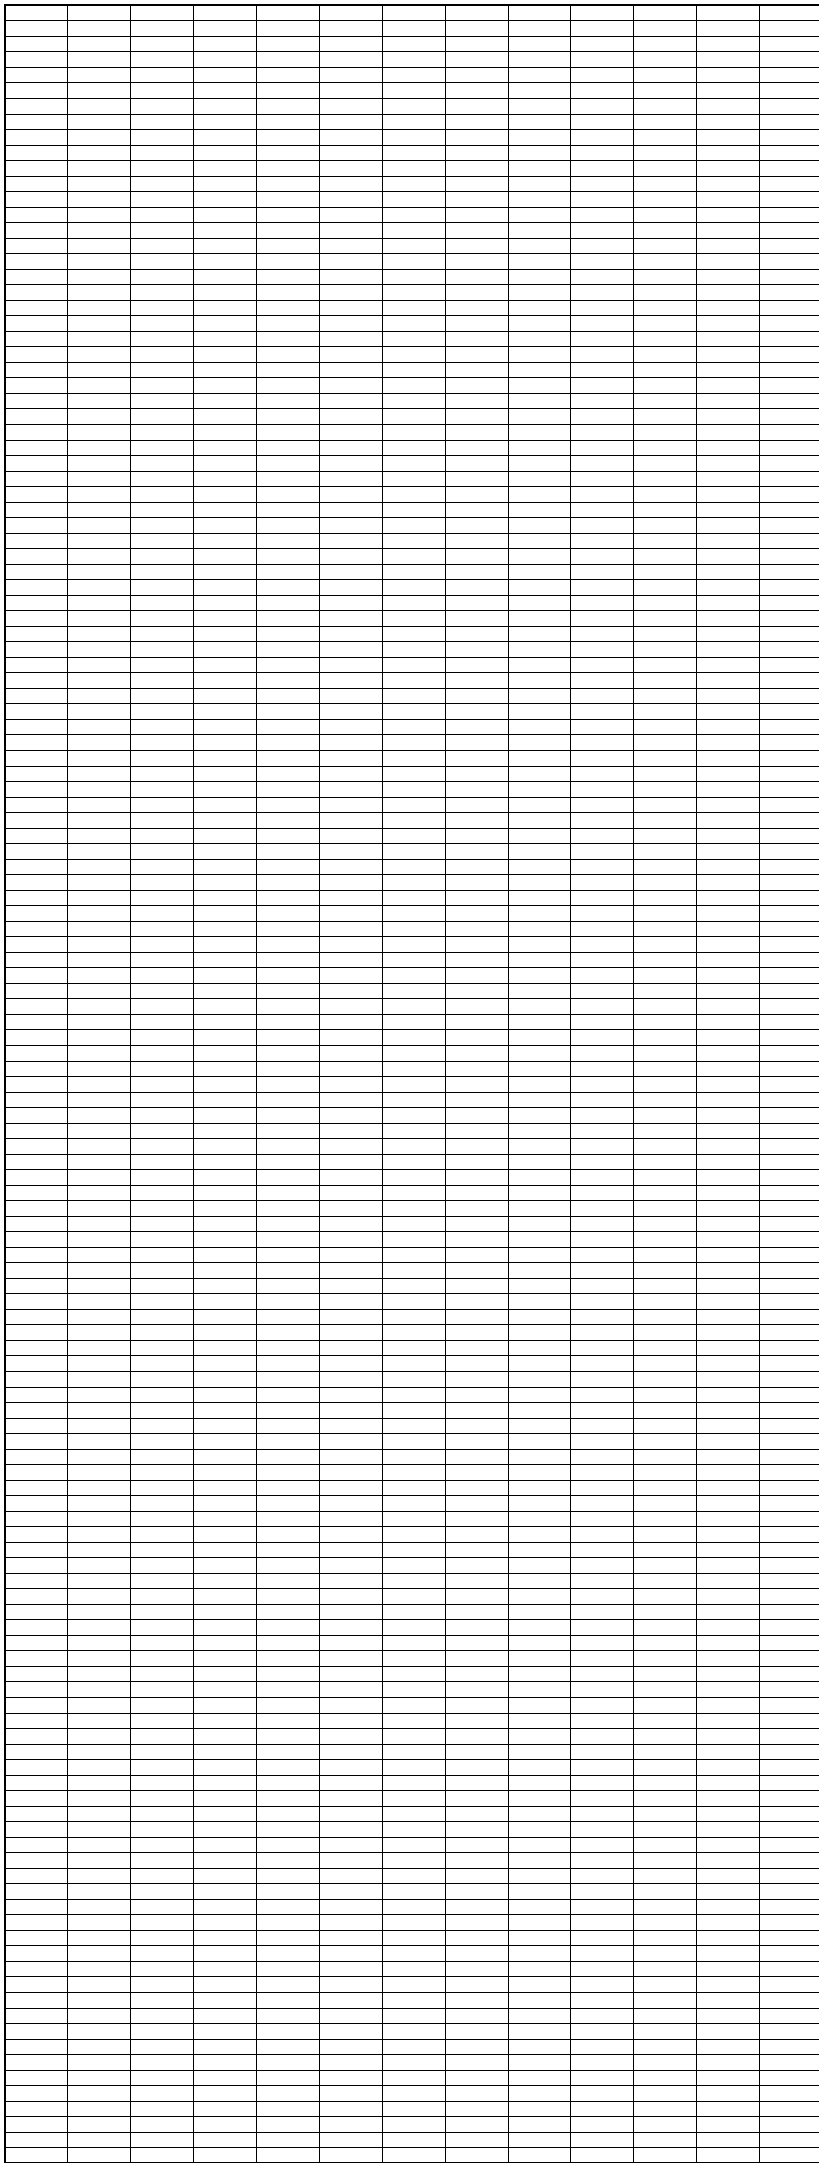 


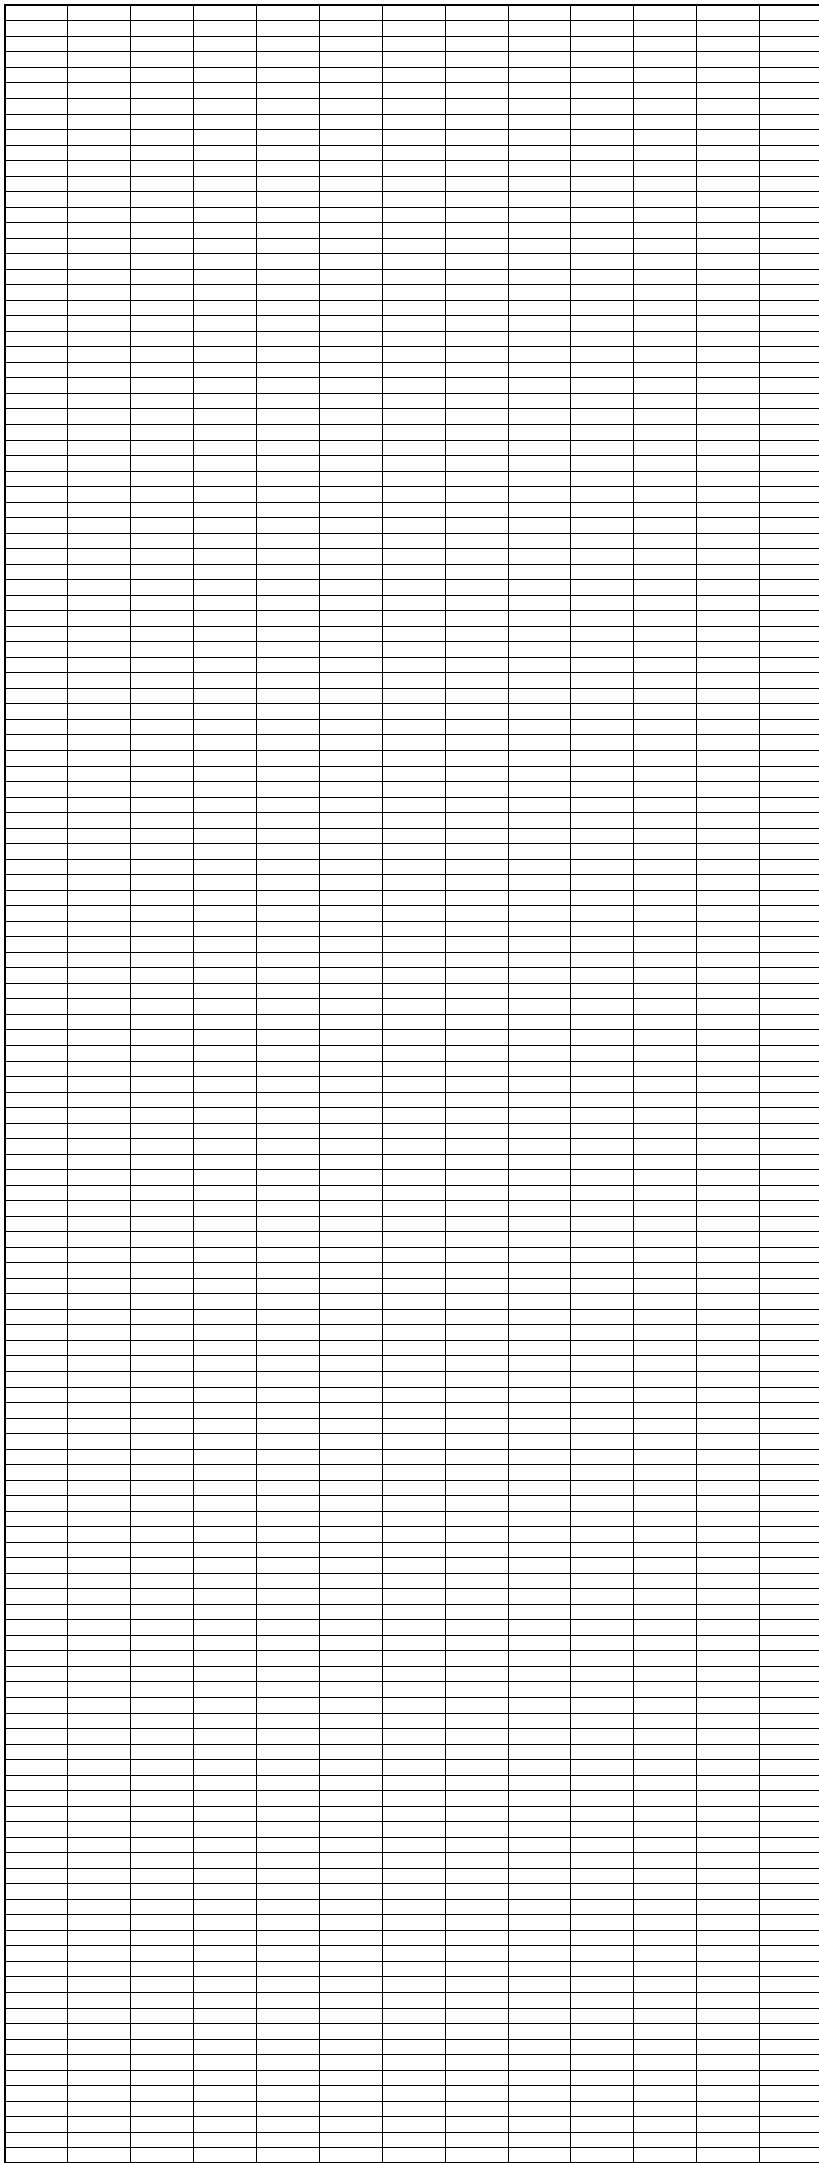 


 


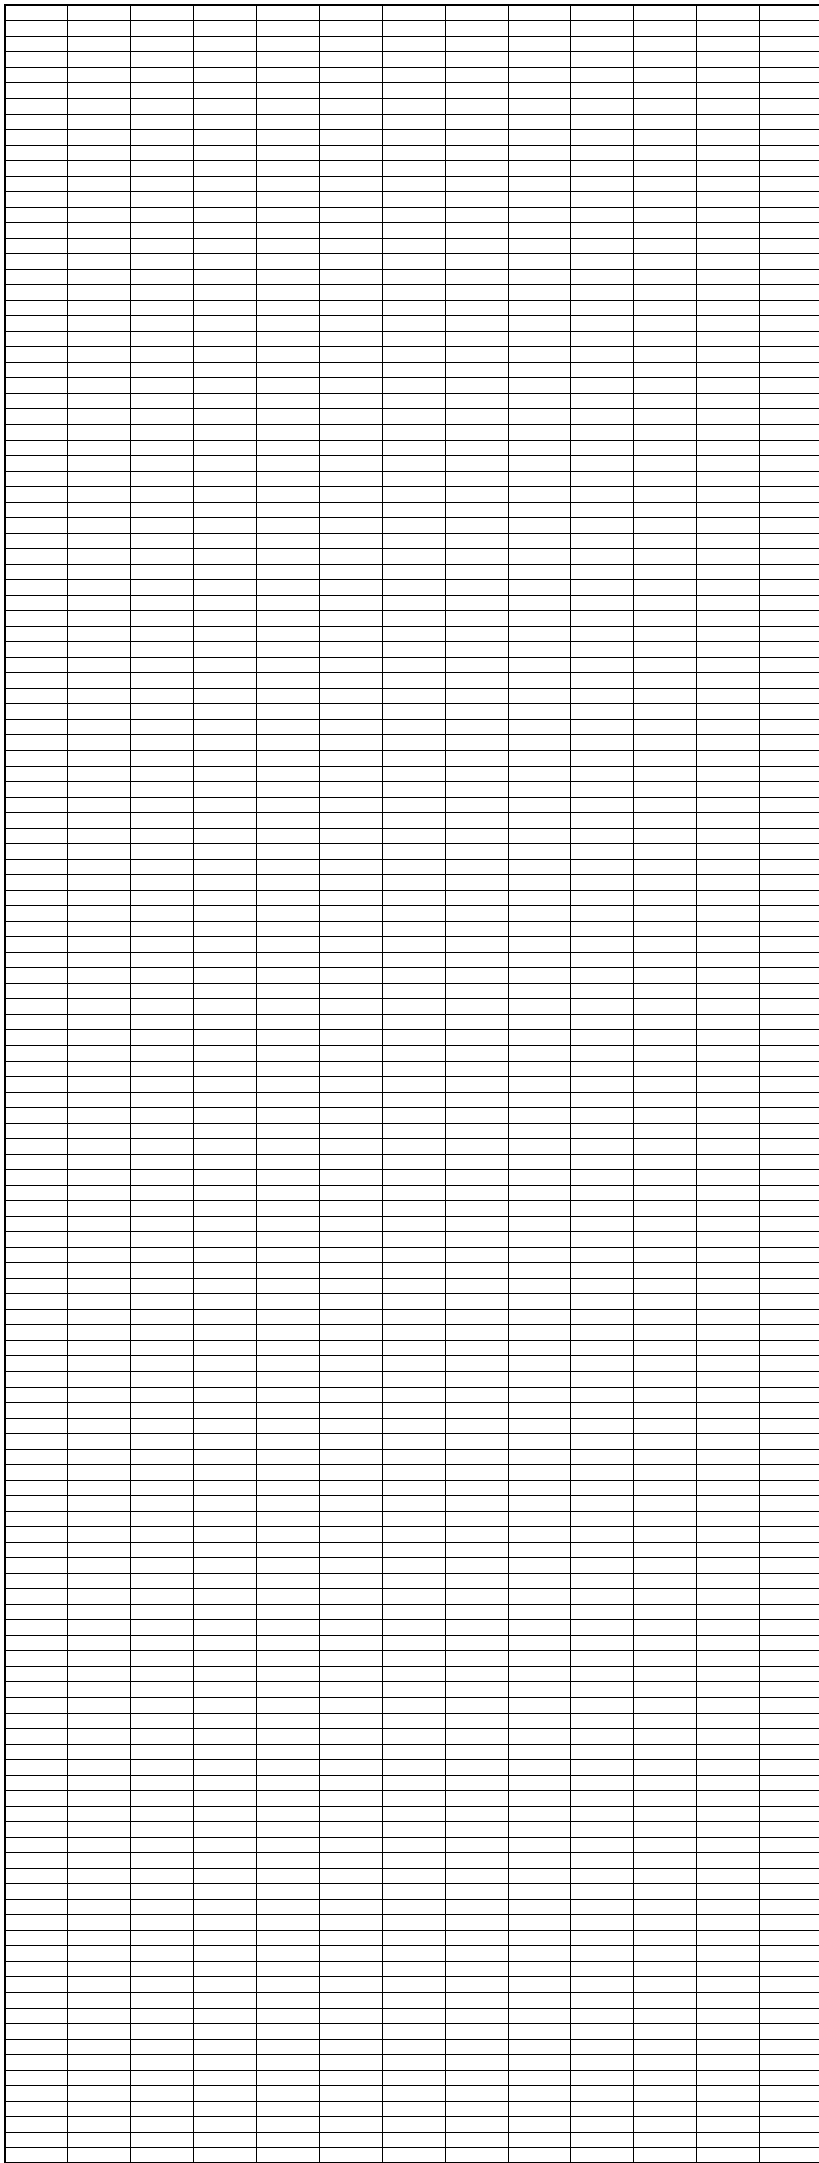 


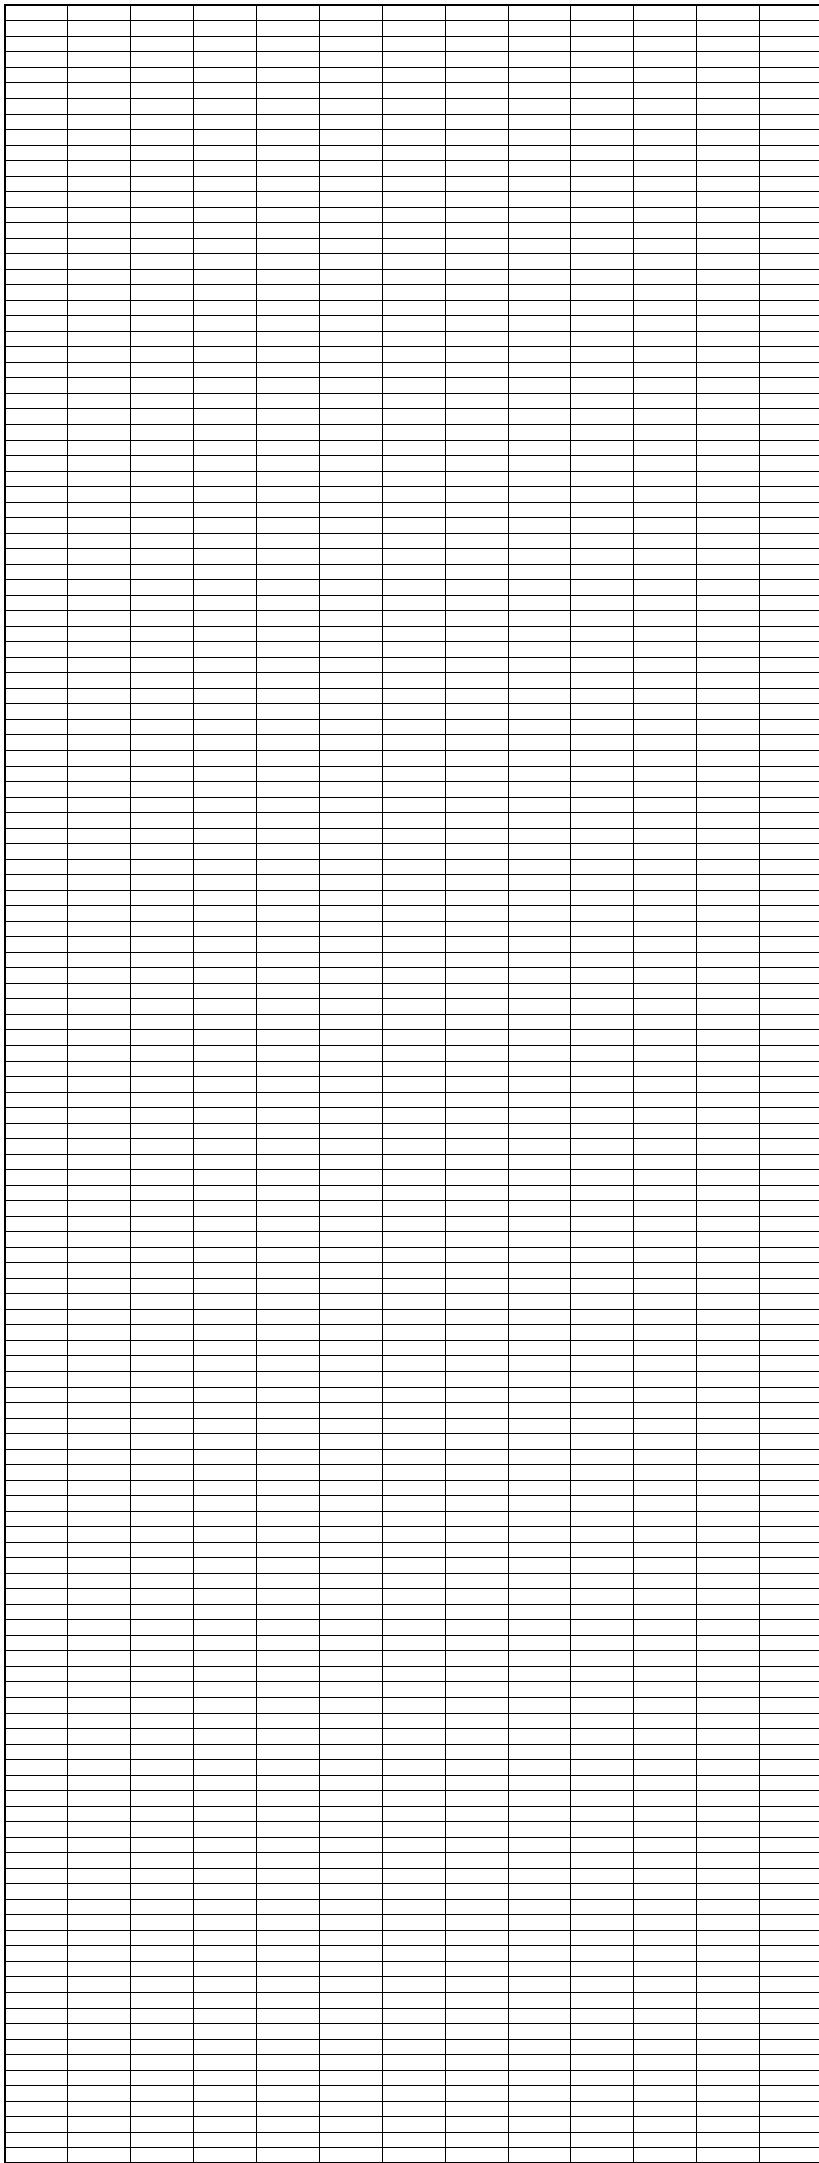 


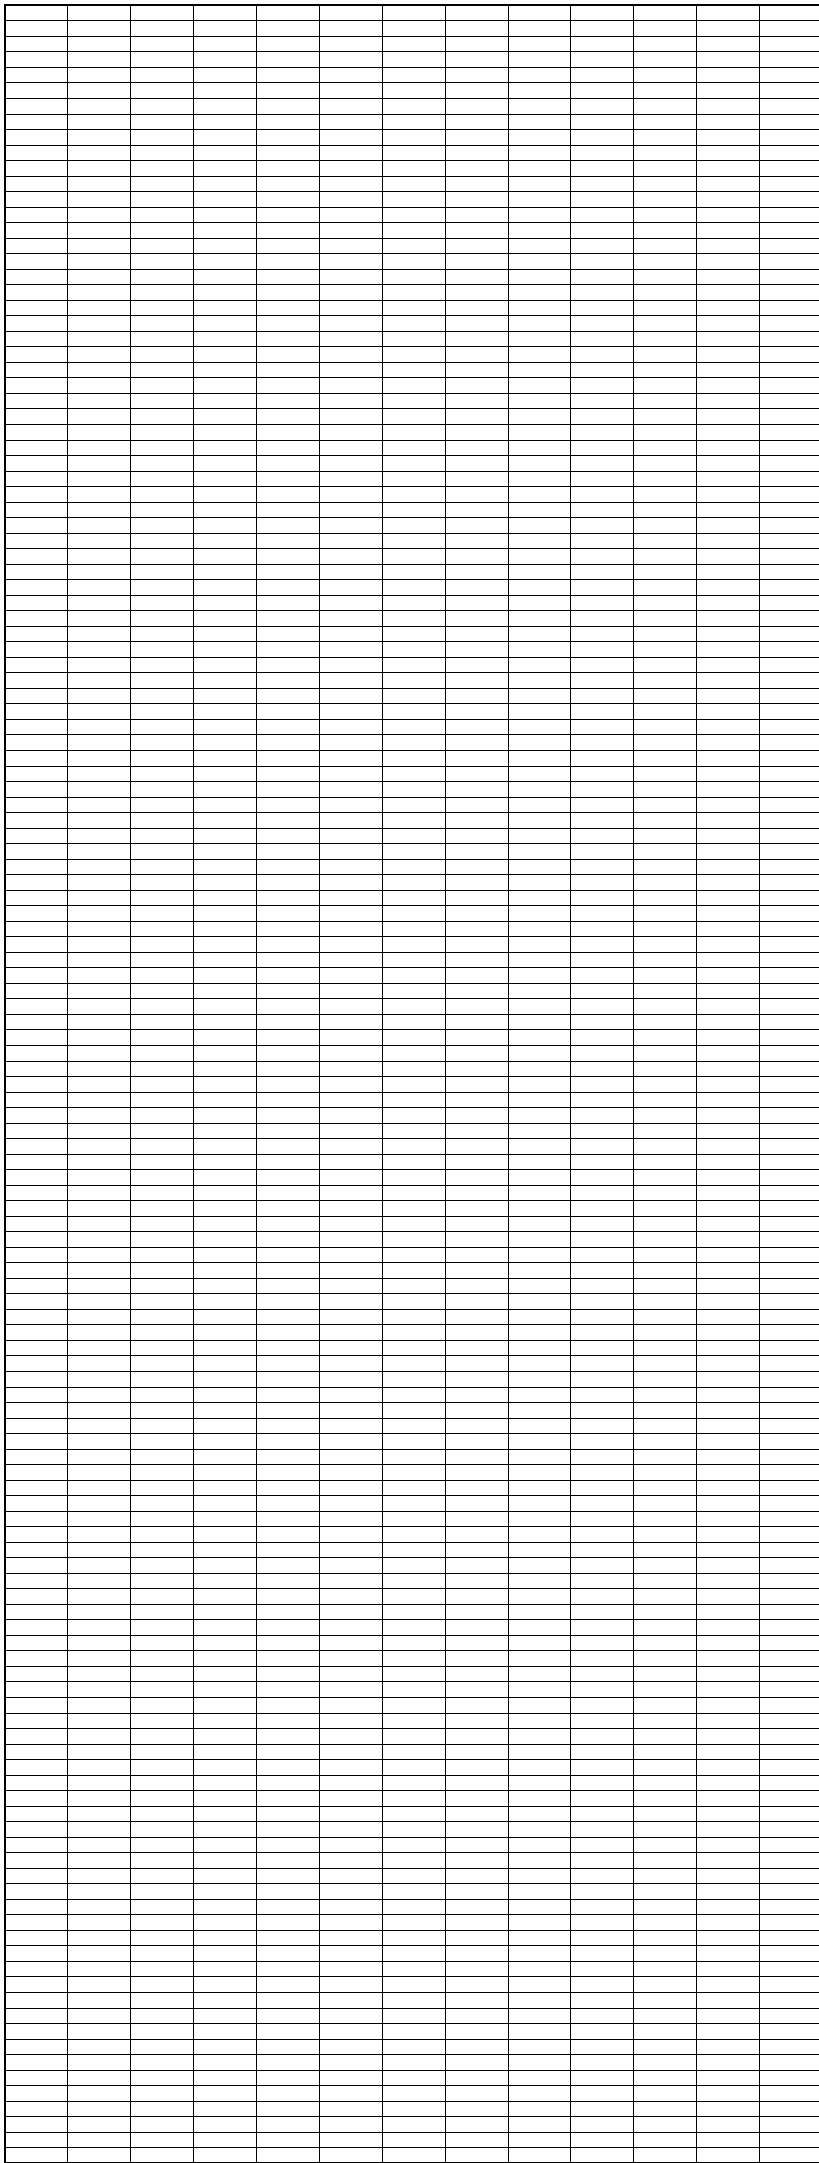 


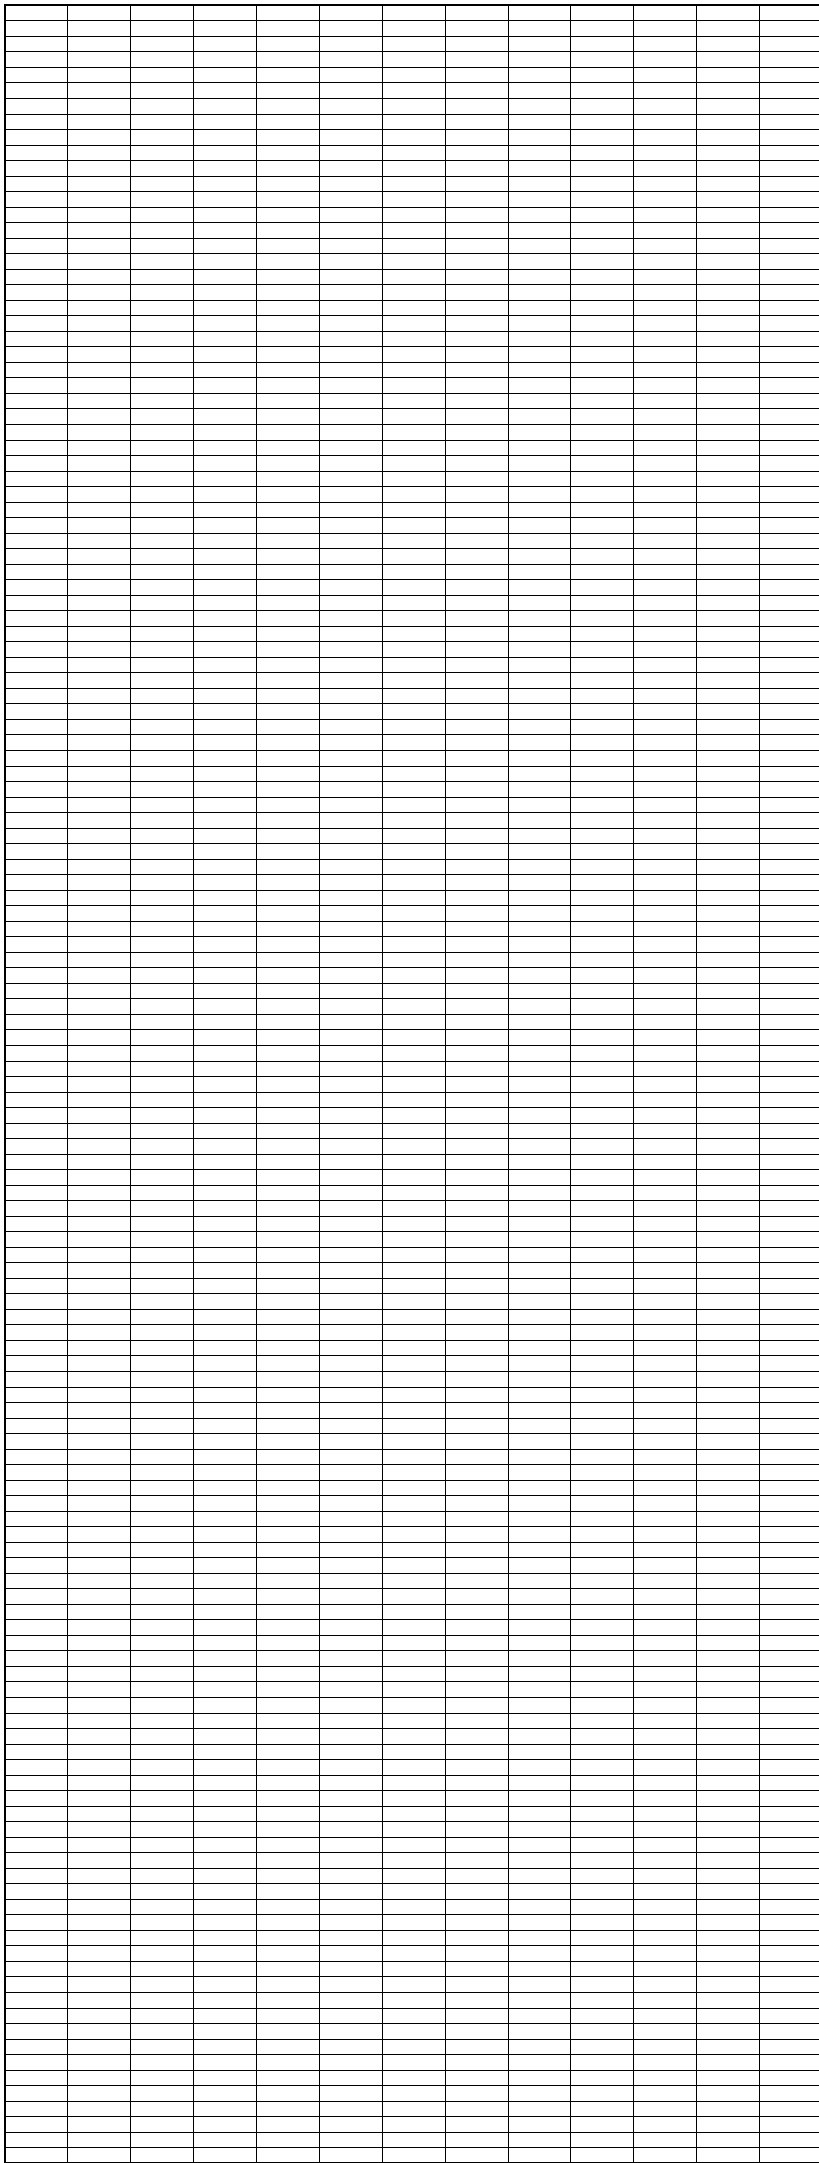

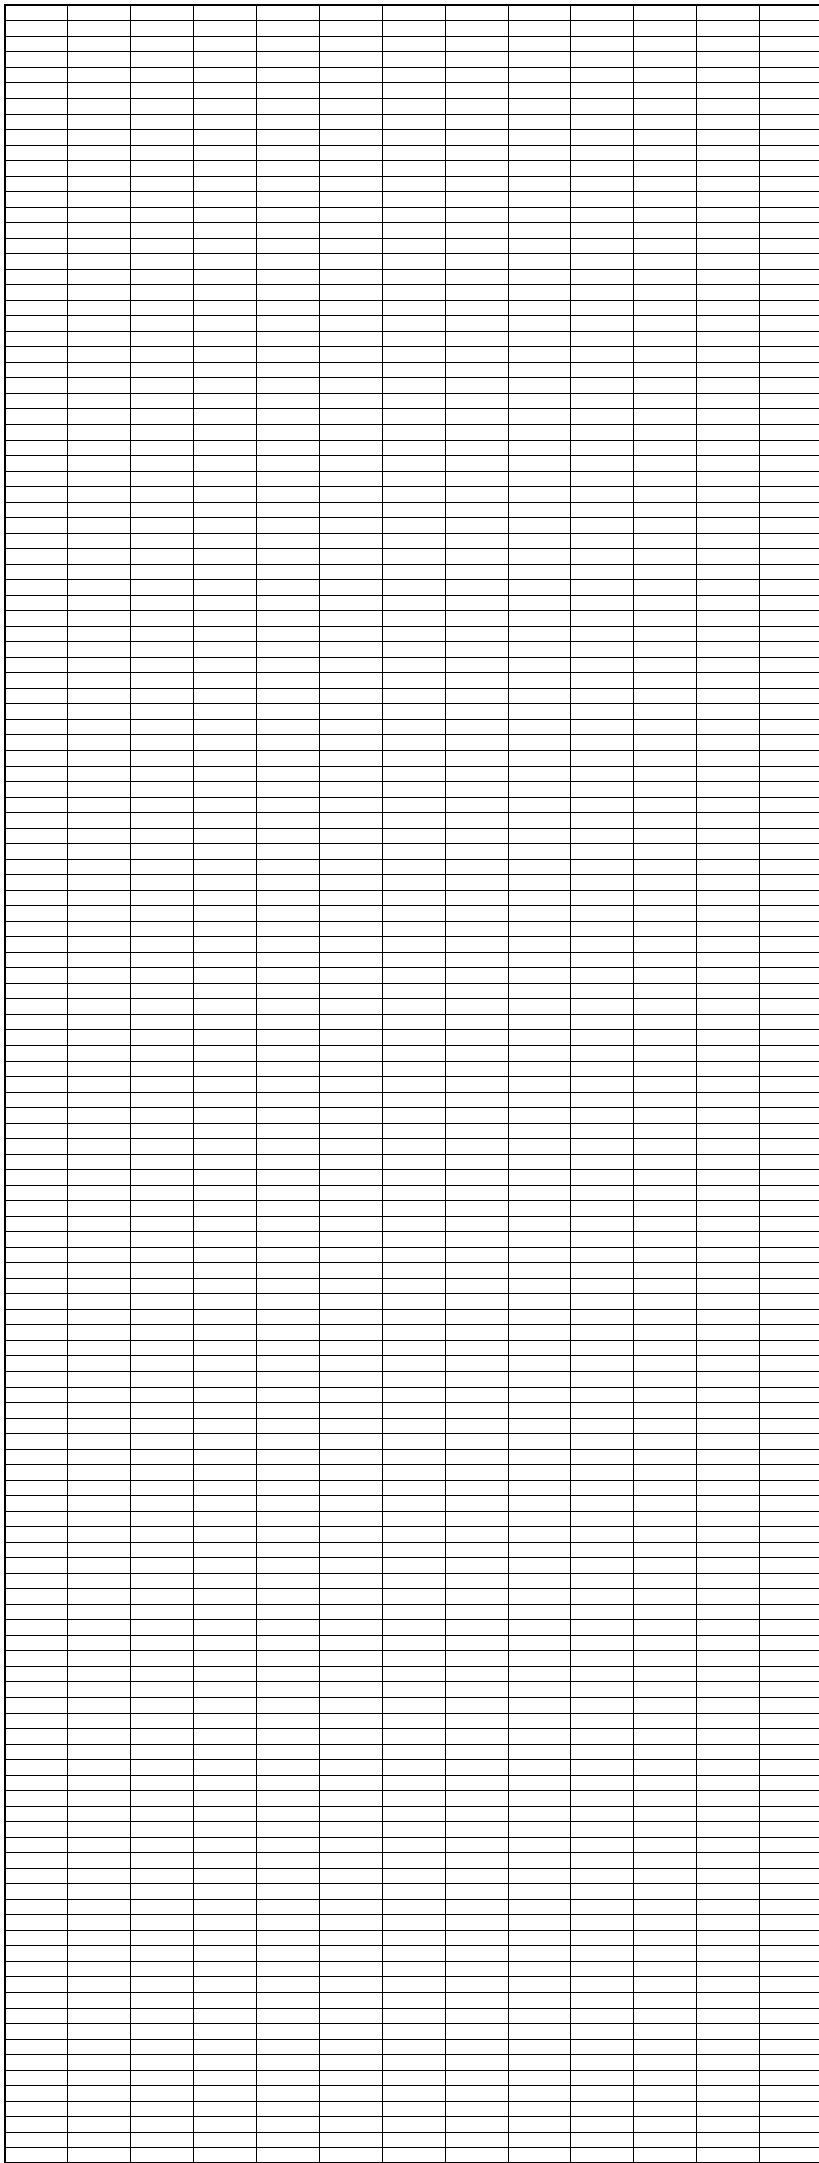 


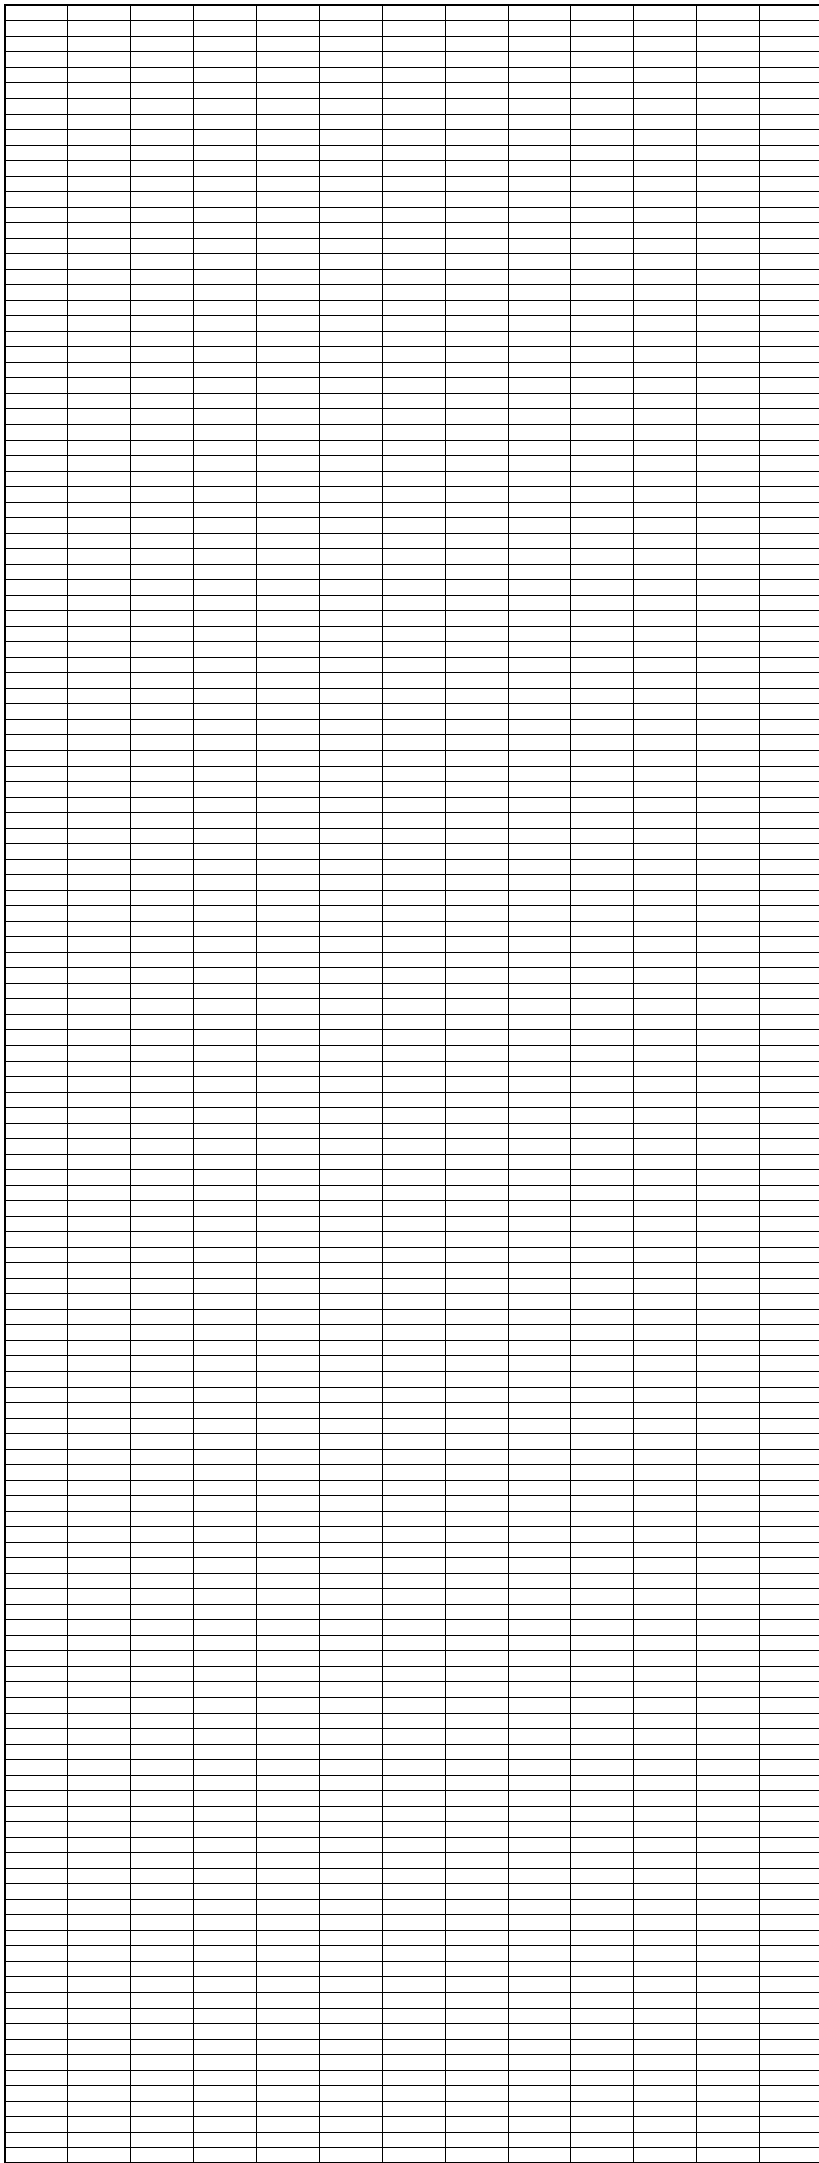 


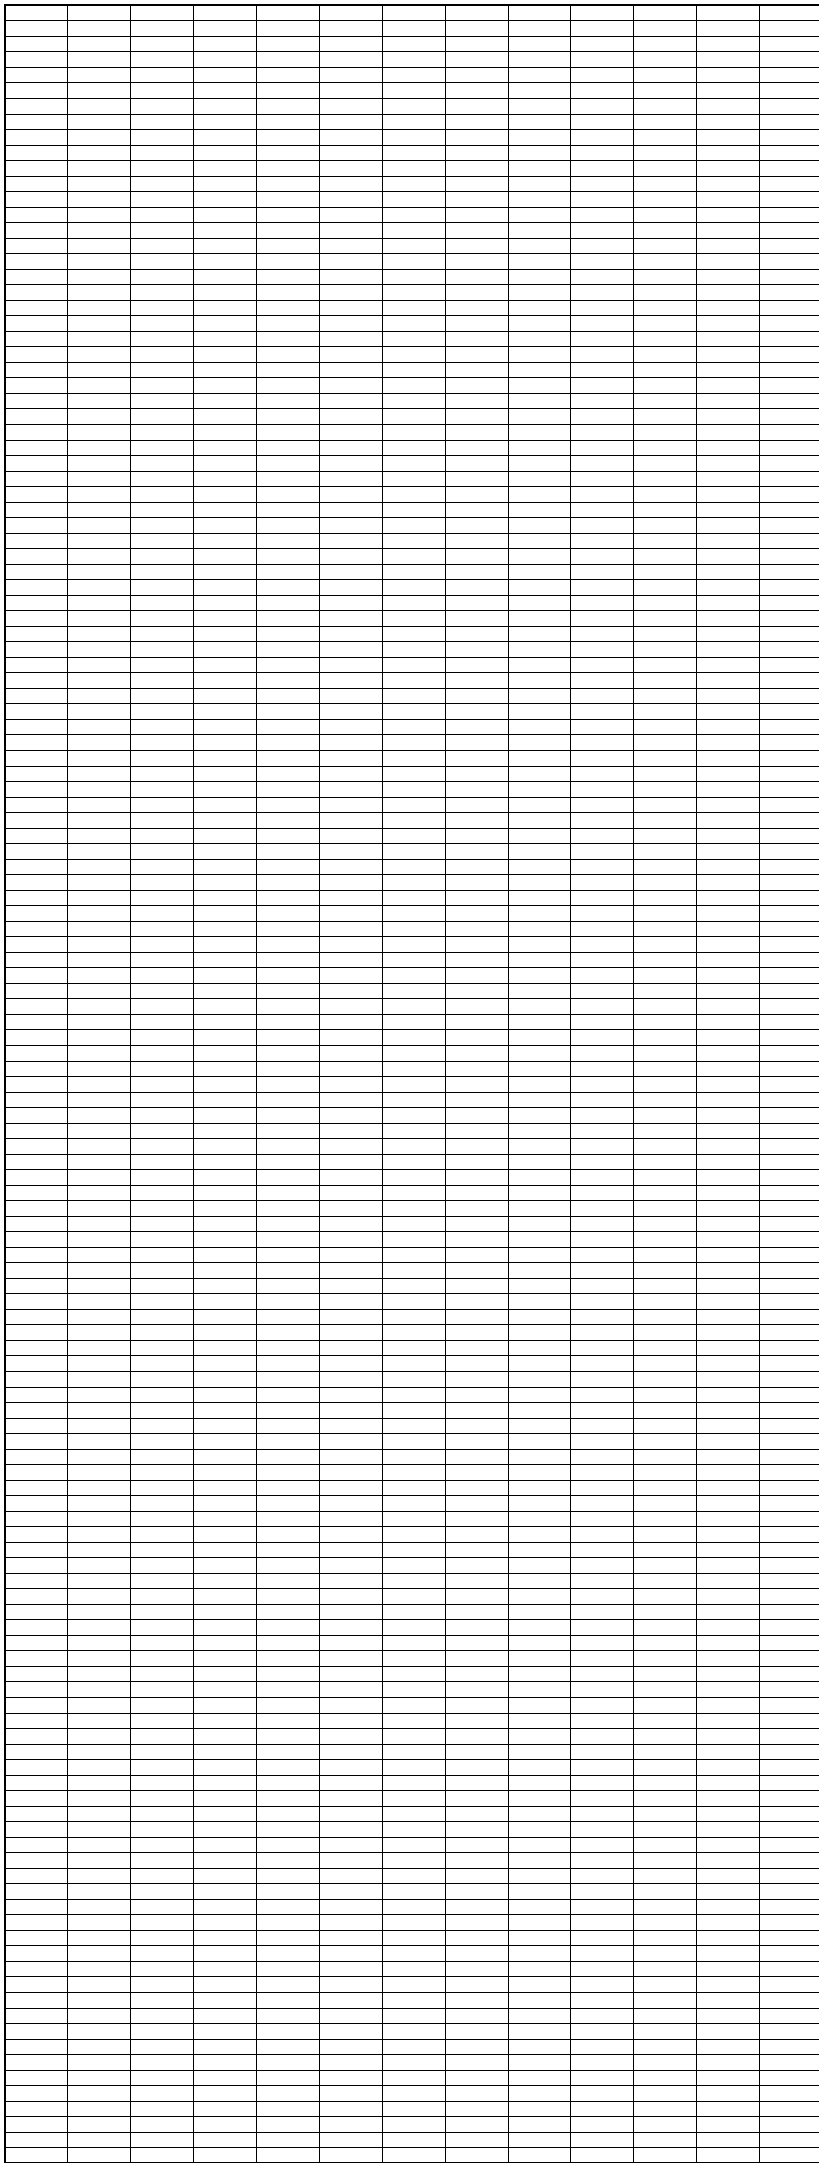

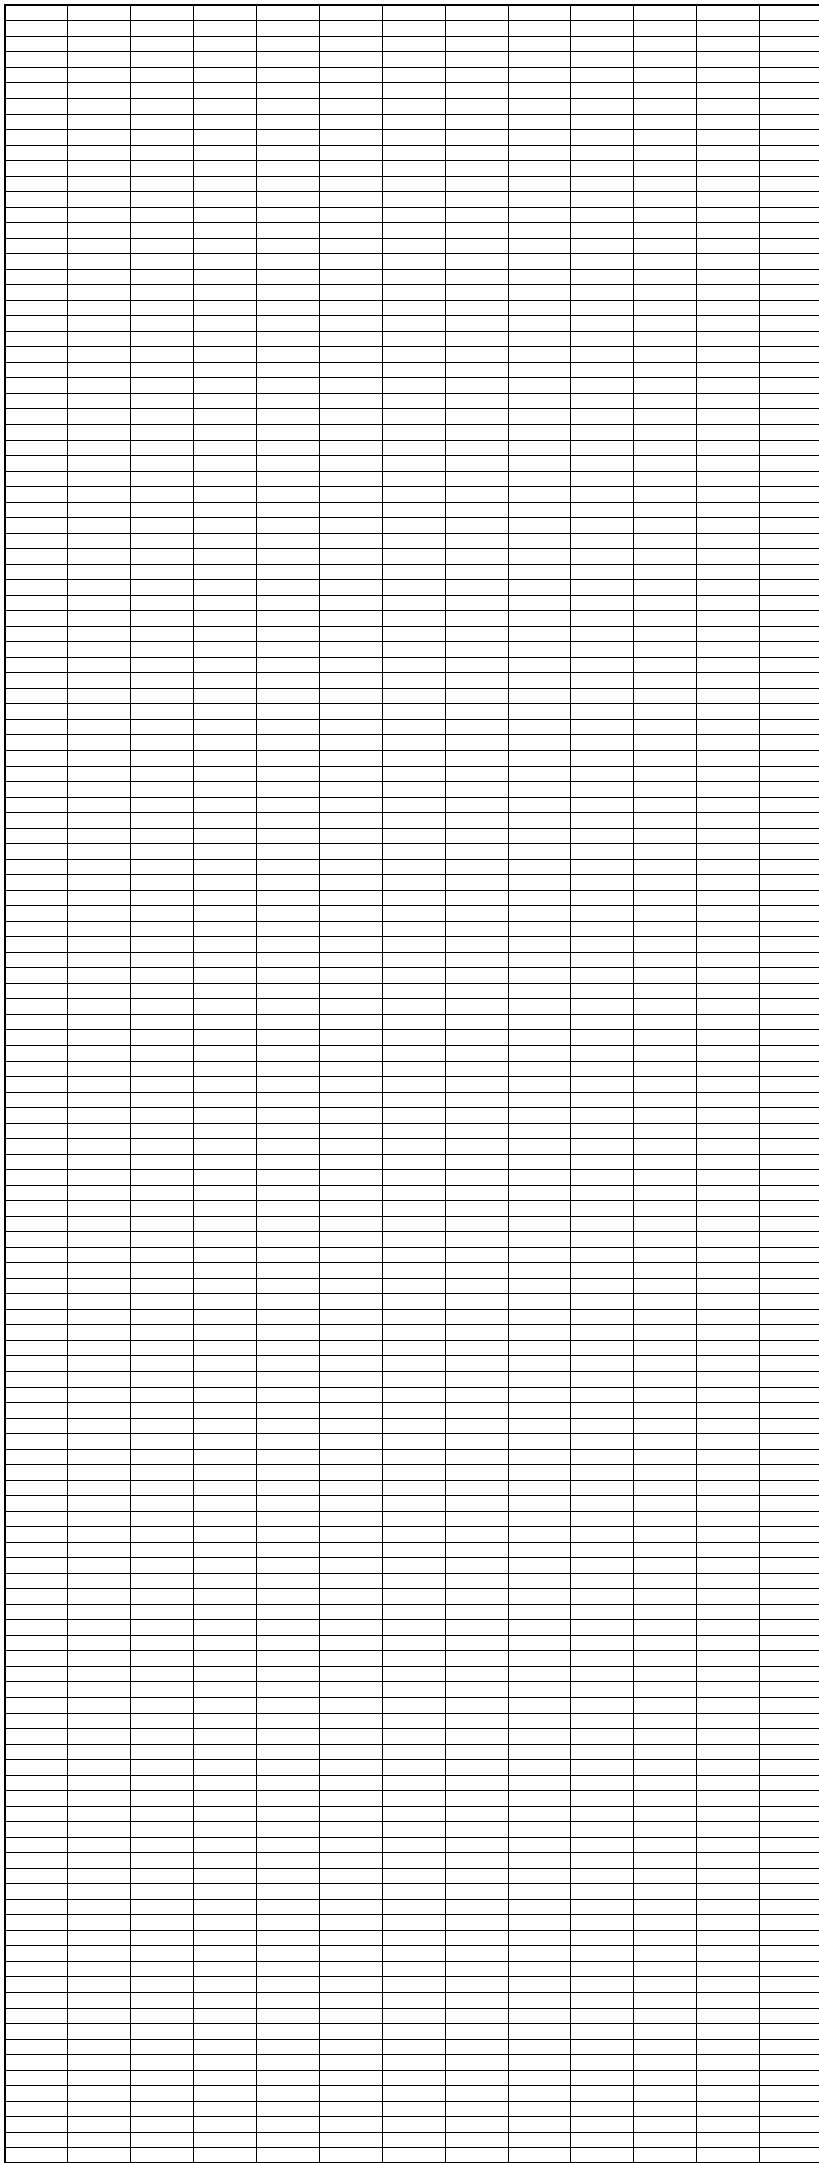



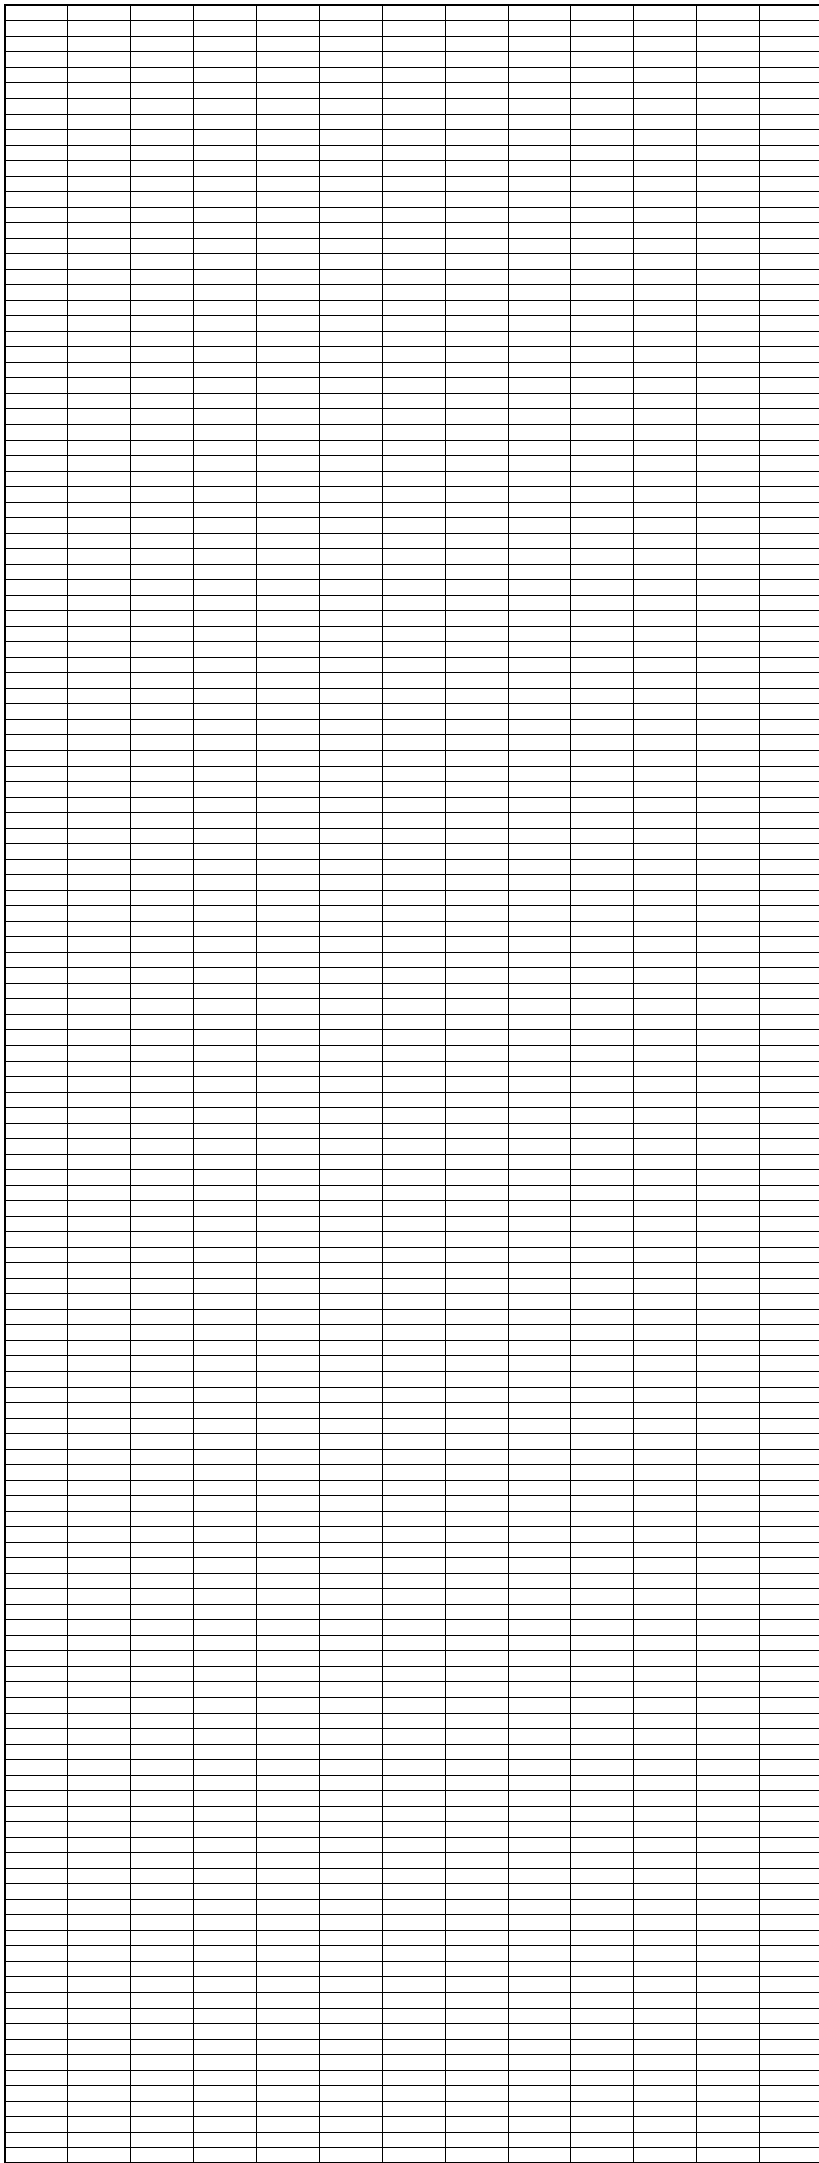

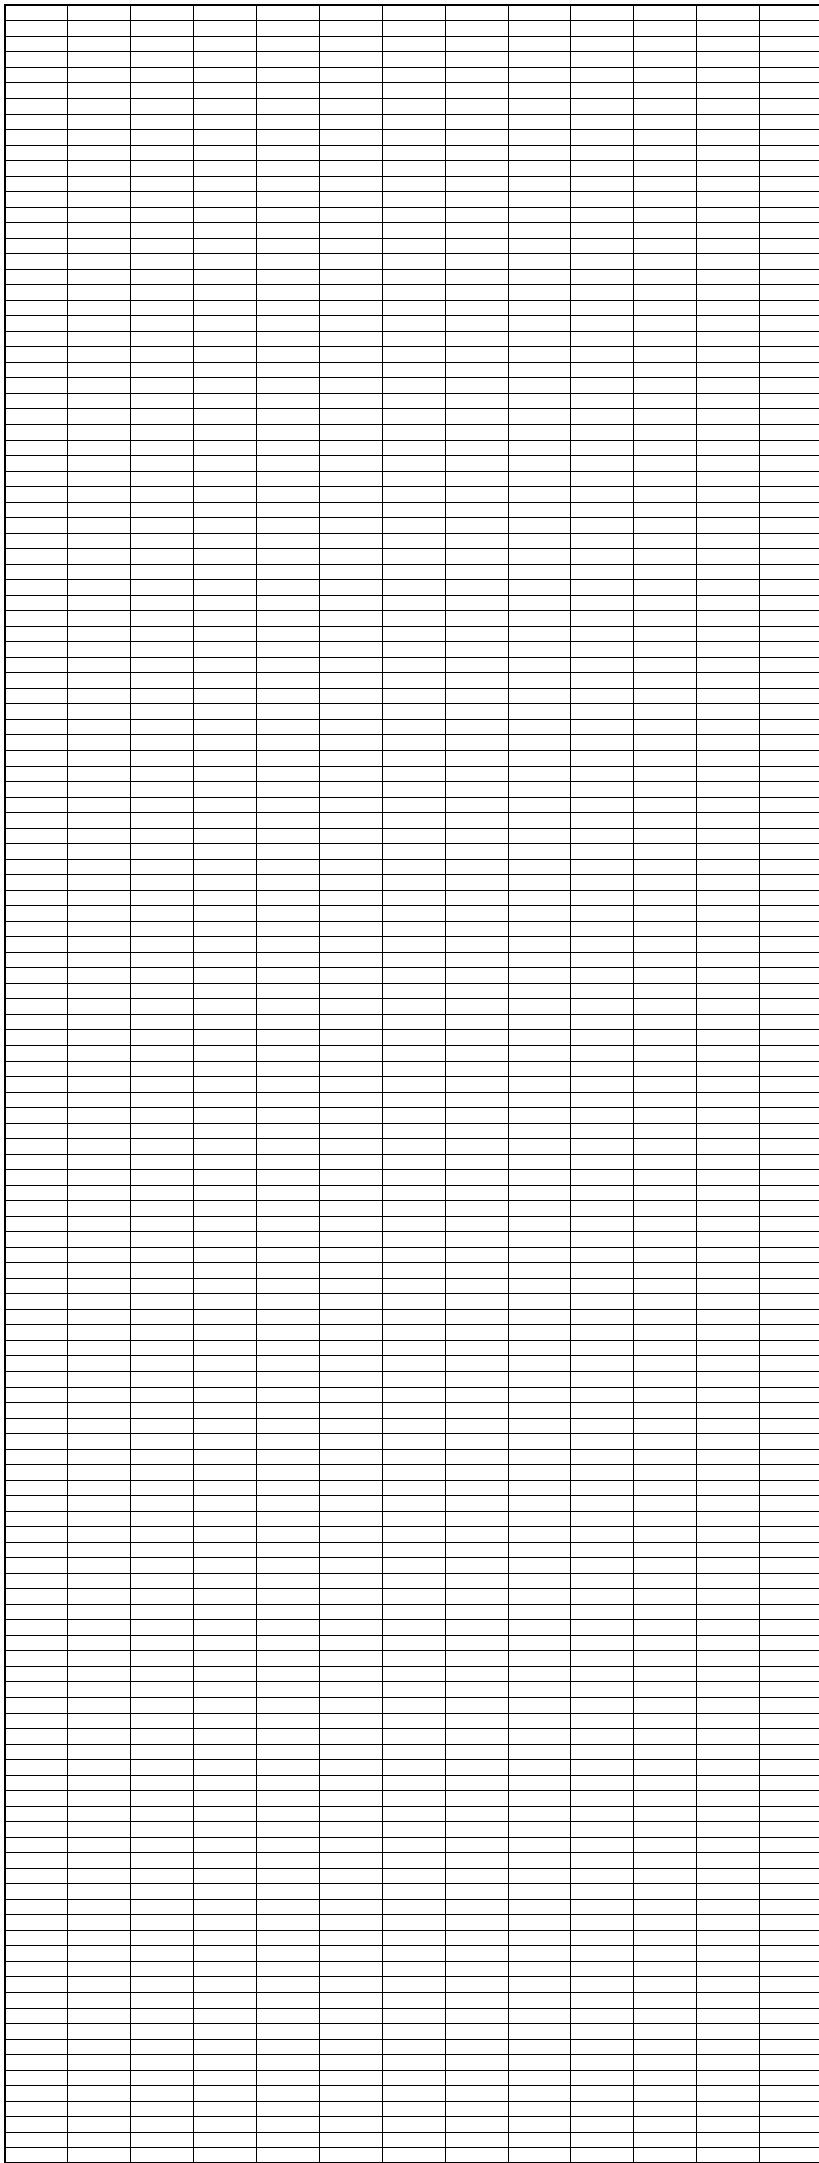

INI 02 -> 04H, INI 03 -> 05H

