

MAKE	MODEL	CHASSIS/EQUIVALENT	COMMENTS	COMMENTS	COMMENTS	COMMENTS
Aiwa	TV14MT11		2004, £90-£110			
Aiwa	TV21MT11		2004, £165			
Aiwa	TVF21TS1U	Sony BX1 chassis		remote RMZ5200		
Aiwa	TVSE1430K	Daewoo CP385	2003, £199			
Aiwa	TVSE2130K	Daewoo CP385				
Aiwa	VX14MW1U	CP082S (Daewoo CP082)	2003			
Aiwa	VX21MW1U	CP082S (Daewoo CP082)	2003			
Aiwa	VXD1420K	combi Orion chassis, deck OVD-6S	PCB marked TM9423A, video VM9171B	Micro OEC0085B, option codes	LOPTr Q406 2SD2599	
Aiwa	VXD1450K	combi Orion chassis, deck OVD-7				
Aiwa	VXD2120K	combi Orion chassis, deck OVD-6S	PCB marked TM9450A, video VM9171B	Micro OEC0085B, option codes in	EEPROM address 100H	
Aiwa	VXD2121K	combi Orion chassis, deck OVD-6S	PCB marked TMA523A, video VMA239A	Micro OEC0113B		
Aiwa	VXD2150K	combi Orion chassis, deck OVD-7	PCB marked TMA523A, video VMA239A	Micro OEC0113B		
Aiwa	VXF2121K	combi Orion chassis, deck OVD-6S	PCB marked TMX477A, video VMX199A	Micro OEC0096A		
Aiwa	VXG140K	combi Orion chassis, deck OVD-5	PCB marked TM7379, video VM7125	Micro OEC6044D		
Aiwa	VXG142K	combi Orion chassis, deck OVD-5A	PCB marked TM7379B, video VM7125	Micro OEC6044D		
Aiwa	VXG143K	combi Orion chassis, deck OVD-6	PCB marked TM9423A, video VM9162D	Micro OEC0078C, option codes	EEPROM address 100H	
Aiwa	VXG143KAL (has "A" circled)	combi Orion chassis, deck OVD-6S	PCB marked TMX473A, video VMX193B	Micro OEC0093B		
Aiwa	VXG145K	combi Orion chassis, deck OVD-7	main PCB VMA230A, PSU PCB VPA150A	Micro OEC0107B, option codes	EEPROM address 0B4h (0B4->0B4h)	
Aiwa	VX11410K	combi Orion chassis, deck OVD-4A		Micro OEC6018		
Aiwa	VX11420K	combi Orion chassis, deck OVD-4A	PCB marked TM4316, video VM4079	Micro OEC6025A		
Aiwa	VX1145K	combi Orion chassis, deck OVD-5	PCB marked TM8395A, video VM7125D	Micro OEC6044D		
Aiwa	VX1147K	combi Orion chassis, deck OVD-5A	PCB marked TM8395B, video VM7125	Micro OEC6044D	PSU IC501 STRF6653	
Aiwa	VX11480K	combi Orion chassis, deck OVD-5	PCB marked TM7379A, video VM7125A	Micro OEC6044A		
Aiwa	VX1149K	combi Orion chassis, deck OVD-6	PCB marked TM9423A, video VM9162D	Micro OEC0078C, option codes	EEPROM address 100H	
Aiwa	VX1149KAL (has "A" circled)	combi Orion chassis, deck OVD-6S	PCB marked TMX473A, video VMX193B	Micro OEC0093B		
Aiwa	VX2910K	combi, deck TN9300	1992			
Akai	CT1417	Onwa				
Akai	CT2115UK	Samsung P58SC				
Akai	CT2125	Samsung P58SC				
Akai	CT2137	Akai CT2157				
Akai	CT2157	Akai CT2137				
Akai	CT2158	Sanyo E4-A21				
Akai	CT2159U	Onwa				
Akai	CT2161	Stereo plus				
Akai	CT2162UNT	Onwa				
Akai	CT2185	Sanyo A5-A21				
Akai	CT2565	Stereo plus				
Akai	CT2567	Stereo plus	Goodmans 285DPL			
Akai	CT2570	Compact D2	ITT			
Akai	CT2579N	Nokia Compact D-E				
Akai	CT2585N	Eurostereo2				
Akai	CT2820	Compact D2	ITT			
Akai	CT2862UNT	Onwa K9228				
Akai	CT2865	Stereo plus				
Akai	CT2867	Stereo plus				
Akai	CT2870N	Nokia Compact D2-E				
Akai	CT2879N	Nokia Compac D-E				
Akai	CT2885N	Eurostereo2				
Akai	MP237H1 (MP2 37 H1)	Mono Plus 2 (MP2)	=TV1420UK			
Akai	MZ82R1	Nokia/Salora/Luxor MZ-chassis				
Akai	SN63B6	Stereo Plus-2, same as TV2551TN	Nokia TV2881T			
Akai	SN71B6	Stereo Plus-2, same as TV2851TN	Nokia TV2881T			
Akai	SW72B2	Stereo Plus-2, same as TV2881T	Nokia TV2881T			
Akai	TV2551TN	Stereo Plus-2 (SN/SW chassis)	Nokia TV2881T			
Akai	TV2835T	Schneider TV9.7				
Akai	TV2851TN	Stereo Plus-2 (SN/SW chassis)	Nokia TV2881T			
Akai	TV2852TN	Stereo Plus-2 (SN/SW chassis)	Nokia TV2881T			
Akai	TV2881T	Stereo Plus-2 (SN/SW chassis)	Nokia TV2881T			
Akai	TV2891T	Nokia/Salora/Luxor MZ-chassis				
Akai	TV3291T	Nokia/Salora/Luxor MZ-chassis				
Akai	WSP28NTFSFDGB	PT92 +DVD				
Akai	WSP32NTFSFDGB(S)	PT92 +DVD				
Akai	TV1420UK (TV1420TUK)	Mono Plus 2 (MP2)	remote RCN622			
Akai	TV1421(T)	Mono Plus 2 (MP2)				
Akai	TV2020(T)UK	Mono Plus 2 (MP2)				
Akai	TV2021(T)	Mono Plus 2 (MP2)				
Akai	TV2120(T)	Mono Plus 2 (MP2)				
Akai	TV2121(T)	Mono Plus 2 (MP2)				
Akashi	1450	Elron EC142				
Akura	ATPTV028FT	PT92 ??				
Akura	ATPTV028WSS	PT92				
Akura	AVTV028WSS	PT92 or 11AK19Pro				
Akura	CX10	Boots CTV10R	Alba CTV10			
Akura	CX10	Nikkai Baby 10	Tourer			
Akura	CX10	Osaki P10R	Thorn P10R			
Akura	CX10	Samsung C1210R				
Akura	CX12	Thorn P14BT				
Akura	CX1400T	CX26				
Akura	CX1400T	Minoka MK 1495T				
Akura	CX18	Thorn P146R				
Akura	CX24					
Akura	CX25					
Akura	CX26	Digital Chassis				
Akura	CX30					
Akura	CX32	Thorn CT51R				
Akura	CX33	Thorn CT51T				
Akura	CX35					
Akura	CX4	Osaki P142	Thorn P142			
Alba	CS1919	Rank A823				
Alba	CTV10	Nikkai Baby 10				
Alba	CTV100	Matsui 1436	Bush 2004			
Alba	CTV1400	Hanwood HTV3604R				
Alba	CTV144R	Nikkai TLG14R				
Alba	CTV3309	11AK20M-6	1999-	AK20 prod.code 10000107		
Alba	CTV3359	11AK20M-6	1999-	AK20 prod.code: 10000813	remote 930	
Alba	CTV3409	11AK08-13/14 or 11AK20M-3	11AK20 after 1999	AK20 prod.code 10000112		
Alba	CTV3410	Bush 2007 2033T 2167NTX 2169NTX				
Alba	CTV3411	Orion chassis	PCB marked TMX466B	LOPTr Q401 2SD2599	remote 076R0DG040	
Alba	CTV3418	11AK20M-6	1999, remote 930	AK20 prod.code 10000114		
Alba	CTV3418BLK	11AK36	remote 1940			
Alba	CTV3419SIL	11AK36	remote 1940			
Alba	CTV3451TXT	Orion chassis	PCB marked TMA504A	Micro OECF001A		
Alba	CTV3455	CTV841				
Alba	CTV3458	Bush 2007 2033T 2167NTX 2169NTX				
Alba	CTV3459	11AK08 or 11AK20M-6	11AK20 after 1999	AK20 prod.code 10000113		
Alba	CTV3469	11AK20 or 11AK36	chassis depends on the year			
Alba	CTV3481	Orion chassis	Micro PCJ195C30ECF009A (OECF009A)	Remote 076N0GE030		
Alba	CTV4805	Matsui 1455	Onwa			
Alba	CTV4808	11AK19E3				
Alba	CTV4809	11AK10(older) or 11AK19-5, 11AK19-8A, 11AK19E3 (after 1997)		AK19 prod.code: 10000233		
Alba	CTV4851	11AK19				
Alba	CTV4855	Onwa				
Alba	CTV4856	11AK10				
Alba	CTV4858SIL	11AK19E3 or 11AK30(2002-2003)	chassis depends on the year	11AK30 - 10014185		
Alba	CTV4859	11AK19-8A	1999-	AK19 prod.code: 10000234		
Alba	CTV4861SIL	Beko 12.7 chassis, PCB marked G70.190-10				
Alba	CTV4866	NEW ONWA (Bush 2060NTX)	1997	Micro C69609Y, PSU IC STRS6309		
Alba	CTV4889	11AK10-15, 11AK19-8A	AK19 after 1999	AK19 prod.code: 10000971		
Alba	CTV501	Onwa				
Alba	CTV5105SIL	Beko 12.7 chassis, PCB marked G70.190-03	2003, £100	LOPTr 058.013-TR7, 1142.1816, 003071095; equiv. HR8484, FBT40962		
Alba	CTV5109SIL	11AK30.2, 11AK30A4	2002-2003	AK30 prod.code: 10014183		
Alba	CTV5165SIL	Beko 12.7 chassis				
Alba	CTV5984	11AK19E3				
Alba	CTV6682	11AK12				
Alba	CTV6682A	11AK19				
Alba	CTV6688	11AK19 or 11AK37-8	11AK37 after 2002			
Alba	CTV701	Onwa				
Alba	CTV703	Alba CTV703 CTV704T CTV713	Bush 2020T 2021 2021T	Hinari HIT51T		
Alba	CTV704	Indiana 100	NEI			
Alba	CTV704T	Alba CTV703 CTV704T CTV713	Bush 2020T 2021 2021T	Hinari HIT51T		
Alba	CTV711	Indiana 100	NEI			
Alba	CTV712	Indiana 100	NEI			
Alba	CTV713	Alba CTV703 CTV704T CTV713	Bush 2020T 2021 2021T	Hinari HIT51T		
Alba	CTV741	Indiana 100	NEI			
Alba	CTV742	Indiana 100	NEI			
Alba	CTV743	C-43 (Bush 2914)				
Alba	CTV744	Indiana 100	NEI			
Alba	CTV747	Orion 14A chassis				

Alba	CTV748	Orion 14A chassis	PCB marked TM0157M, Micro OEG8034	Scan coils YS-60275K					
Alba	CTV752	Indiana 200	NEI						
Alba	CTV840	Onwa	also Bush 1402, Hinary HIT140RC	Goodmans 1404, 1404A					
Alba	CTV841	also Bush 1452T, Goodmans 147TT							
Alba	CTV841	Bush 2114							
Alba	PTV9C	Goodmans Q9001							
Alba	PTV9C	Samsung BT110							
Alba	T1114	Ferguson 3840							
Alba	T14	Bush 2007 2033T 2167NTX 2169NTX							
Alba	VTV10	Orion chassis (Bush BTV10)							
Amstrad	CTV1400	(new) = Crown CTF14R							
Amstrad	CTV1401	Orion 14PS	Saisho CT1400/Matsui 1410						
Amstrad	CTV1409	Orion 14PR	Saisho CT14R						
Amstrad	CTV1409	Triumph CTV8208							
Amstrad	CTV1410	Orion 14LR chassis	Alba CTV840						
Amstrad	CTV1600	Triumph CTV8205							
Amstrad	CTV20T	similar to CTV1400							
Amstrad	CTV2110	Onwa							
Amstrad	CTV280	Bush 2857							
Amstrad	CTV3014F	PT11 chassis							
Amstrad	CTV3021N	PT11 chassis	1998						Micro CTV352/V1.4
Amstrad	CTV3021NF	SM1 chassis	1998						Micro CTV352/V1.4
Amstrad	CTV3028N	SM1 chassis							Micro CTV352/V1.4
Amstrad	CTV3121N	PT11 chassis							
Amstrad	CTV3128N	SM2 chassis							
Amstrad	CTV3228NF	SM2 chassis	1999						
Amstrad	CTV3321NF	PT92 chassis							
Amstrad	STV20		with sat Rx						
Amstrad	TVR1	Funai							
Amstrad	TVR2	Funai							
Amstrad	TVR3	Funai							
Amstrad	WSTV7328N	11AK19P							
Argaro	1401	Fidelity ZX2000							
Autovox	CTR2282GB	Series 1							
Autovox	CTR2283GB	Series 1							
Autovox	CTR2682GB	Series 1							
Autovox	CTR2683GB	Series 1							
B & O	3000	20AX							
B & O	3140	MX3000							
B & O	3141	MX3000							
B & O	3142	MX3000							
B & O	3143	MX3000							
B & O	3144	MX3000							
B & O	3145	MX3000							
B & O	3146	MX3000							
B & O	3147	MX3000							
B & O	3263	Made 1989							
B & O	3300	20AX							
B & O	3502	20AX							
B & O	3602	20AX							
B & O	3702	20AX							
B & O	3703	LX2800							
B & O	3705	LX2800							
B & O	3707	LX2800							
B & O	3712	LX2800							
B & O	3713	LX2800							
B & O	3714	LX2800							
B & O	3715	LX2800							
B & O	3718	LX2800							
B & O	3720	LX2800							
B & O	3741	LX2500							
B & O	3742	LX2500							
B & O	3743	LX2500							
B & O	3745	LX2500							
B & O	3747	LX2500							
B & O	3752	LX2500							
B & O	3753	LX2500							
B & O	3754	LX2500							
B & O	3755	LX2500							
B & O	3758	LX2500							
B & O	3760	LX2500							
B & O	3800	20AX							
B & O	3802	20AX							
B & O	3900	20AX							
B & O	3923	LX4500							
B & O	4002	20AX							
B & O	4402	20AX							
B & O	5000	39XX							
B & O	5102	77XX							
B & O	6000	39XX							
B & O	6002	20AX							
B & O	7702	7XXX							
B & O	8102	71XX							
B & O	9000	33XX							
B & O	311x	MX2000							
B & O	7433	7702							
B & O	L2500	37XX							
B & O	L2502	38XX							
B & O	L2800	37XX							
B & O	L2802	38XX							
B & O	LX2500	37XX							
B & O	LX2502	38XX							
B & O	LX2800	37XX							
B & O	LX2802	38XX							
B & O	M20	31XX							
B & O	MX1500	78XX							
B & O	MX2000	31XX							
B & O	MX3000	314X							
B & O	MX5500	326X							
Baird	6170	Ferguson TX90							
Baird	6171	Ferguson TX90							
Baird	8233	Ferguson TX10							
Baird	RR5188	Tatung 1790							
Baird	RR5190	Sanyo E4-A21							
Baird	RR5191N	ICC7							
Baird	RR5988	Tatung 180							
Baird	RR5990	Sanyo E4-A25							
Baird	RR5991N	ICC5 IMC							
Baird	RR6890N	Sanyo ED1-2B							
Baird	RR6891	ICC5 IMC							
Beko	10214	10.2 (AT2)							
Beko	11214T	10.2 (AT2)							
Beko	11221T	10.2 (AT2)							
Beko	11225(T)	10.2 (AT2)							
Beko	12220(T) (NX)	10.2 (AT2)							
Beko	14212T (R )	12,1							
Beko	14213T (R )	12,1							
Beko	14242-8TDS	12,8							
Beko	14242T (R )	12,4							
Beko	14272TDS	12,7	PCB marked A99.190-16						
Beko	15225 (T) (NX)	10.2 (AT2)	2003 E70, 2004 E85						PCB marked G70.190-03
Beko	16325(NX)(T)	10.3 (AT3)							
Beko	16228 (T) (NX)	10.2 (AT2)							
Beko	16328(NX)	10.3 (AT3)							
Beko	17125(NX)(T)	11,1							
Beko	17325(T) ( R )	10.3 (AT3)							
Beko	18221 (T) (NX)	10.2 (AT2)							
Beko	19221	10.2 (AT2)							
Beko	19321(NX)(T)	10.3 (AT3)							
Beko	19421(T)	10.4 (AT4)							
Beko	20120NX	11,1							
Beko	20212R (T)	12,1							
Beko	20242-8R	12,8							
Beko	20242T ( R )	12,4							
Beko	20272TDS	12,7							
Beko	20320(NX)(T)	10.3 (AT3)	PCB marked G70.190-03						
Beko	20420(T)	10.4 (AT4)							
Beko	21211T	12,1							
Beko	21241T(RD)	12,4							

Beko	21411(ND)	14.1							
Beko	24242TS	12.5							
Beko	25121(T)	11.1							
Beko	25411ND	14.1							
Beko	25421( R )(T)	10.4 (AT4)							
Beko	26114( R ) ( T )	11.1							
Beko	26414( R )(T)	10.4 (AT4)							
Beko	27120	11.1							
Beko	27420(A)( R )	10.4 (AT4)							
Beko	28128(NX)(T)	11.1							
Beko	28328(NX)(T)	10.3 (AT3)							
Beko	28411(ND)	14.1	PCB 7SZ.190-09						
Beko	28412(VND)	14.1							
Beko	28416(ND)	14.1	PCB marked 7SZ.190-16 or 7SZ.190-19	IC601 MC44608P40, fet 2SK25	LOPTx Termal 058.834-TR2	(003311167, HR8700),	chopper 059.834-EL1(2354.0029),		
Beko	28421(NDS)	14.2							
Beko	284216(WNS)	14.2							
Beko	28422(NDS)	14.2	PCB marked U99.190						
Beko	284248(WNS)	14.2							
Beko	28426(NDS)(ND)	14.2							
Beko	29121(NX)	11.1							
Beko	29321(NX)	10.3 (AT3)							
Beko	30128(NX)(T)	11.1							
Beko	30128T	11.1							
Beko	30328(NX)(T)	10.3 (AT3)							
Beko	31114	11.1							
Beko	31414	10.4 (AT4)							
Beko	32120( R ) ( T )	11.1							
Beko	32420( R )	10.4 (AT4)							
Beko	32426(NDS)(ND)	14.2							
Beko	34133ND	11.1							
Beko	35228PD	11.2							
Beko	36233PD	11.2	PCB marked 6SZ.190-11						
Beko	38328NX	10.3 (AT3)							
Binatone	*019014*	Boots CTV1414R							
Binatone	*019014*	Dansai CTV1477							
Binatone	*019014*	Matsui 1450, 1455							
Binatone	*019014*	Saisho CTV147R							
Black Diamond	BD14T	11AK20S							
Black Diamond	BD20T	11AK19-8A, 11AK19P4	1999-2000-2001-						
Black Diamond	BD21L	11AK19-8A	1999-						
Black Diamond	BD21S	11AK19-8A	1999-						
Black Diamond	BD21T	11AK19-8A	1999-						
Black Diamond	BD3251WD	11AK33							
Black Diamond	BD32WS	11AK19P4							
Black Diamond	BD3251WS	11AK19P5							
Black Diamond	BDS1451UK	11AK20SE or 11AK36							
Black Diamond	BDS2051T	11AK30-A4							
Black Diamond	BDS2151S	11AK30							
Black Diamond	BDS21S	11AK19-8A	1999-						
Black Diamond	BDS2851WD	11AK19P, 11AK33J2(2001), 11AK33J3(2002), 1	2000-2004						
Black Diamond	BDS28WS	11AK19P4	(R629=27R)						
Black Diamond	BD29S	11AK19P							
Black Diamond	BDS29S	11AK19P4							
Black Diamond	BDS3251WS	11AK19P5							
Black Diamond	BDS32S	11AK19Pro							
Black Diamond	BDS32WS	11AK19Pro							
Black Diamond	MD2850PFS	11AK33J3							
Black Diamond	MD3250PFS	11AK33J4	2002-2003						
Blaugpunkt	Milano IL32	FM100							
Boots	CTV10R	Akura CX10							
Boots	CTV10R	Nikkai Baby 10							
Boots	CTV1410	Decca 160							
Boots	CTV1411R	Decca 190							
Boots	CTV1412R	Decca 190							
Boots	CTV1414R	Matsui 1450 / Saisho CT147R							
Boots	TV14	Thorn 1690/1691							
Britannia	B10114S	Fidelity ZX4000							
Britannia	B1014R	Fidelity ZX4000							
Britannia	B14M11	Fidelity C14R06							
Bush	1400	Alba CTV1300	Alba CTV1400						
Bush	1402	Orion 14LR chassis	Alba CTV840, Hinary HIT140RC						
Bush	1407	Orion 14LR chassis	Alba CTV840						
Bush	1427T	Alba CTV841							
Bush	1430	Sanyo EC2-B14							
Bush	1431	Grundig G1000							
Bush	1432	Grundig G1000							
Bush	1433 (10000108)	11AK08 (remote 900) or 11AK20 (remote 930)	depends on the year, AK20 after 1999						
Bush	1433AL-BLUE(10000109)	11AK20M-6	1999-						
Bush	1433 (silver)	11AK20M-6	1999-						
Bush	1433 (white) (10001493)	11AK20M-6	1999-						
Bush	1433(yellow)	11AK20M-6	1999-						
Bush	1433BLU3 (10013255)	11AK36-2(2002), 11AK36A2(2003)	2002-2003						
Bush	1433(GRN) (10000809)	11AK20M-6	1999-						
Bush	1433GRN2	11AK20S							
Bush	1433SIL (10013014)	11AK36A2	2002-2003						
Bush	1433/CORN (10000807)	11AK20M-6	1999-						
Bush	1433/LILIAC (10000808)	11AK20M-6	1999-						
Bush	1433/MINT (10000806)	11AK20M-6	1999-						
Bush	1434	11AK08 or 11AK20M-6	depends on the year, AK20 after 1999						
Bush	1435	11AK08, 11AK36							
Bush	1435GTV (silver)	11AK20M-6	1999-						
Bush	1436	11AK08-13 or 11AK20M-6	11AK20 after 1999						
Bush	1438 (10001492)	11AK20D2, 11AK20SE, 11AK20M-6							
Bush	1438SIL (10061680)	11AK20S	2000						
Bush	1438SIL	11AK36A2							
Bush	1439	PT11							
Bush	1442	11AK20S							
Bush	1444 (10008717)	11AK20SE	2001						
Bush	1452T	Same as Alba CTV841	Kong Wah K-91151T						
Bush	1459T	Onwa							
Bush	1470T	1480TS							
Bush	1471T	Grundig G1000							
Bush	1472T	Grundig G1000							
Bush	1473T	11AK08-12 or 11AK20M-6	depends on the year, AK20 after 1999						
Bush	1473T (blue) (10000812)	11AK20M-6	1999-						
Bush	1473T (silver)(10000130)	11AK20M-6	1999-						
Bush	1473T (green)(10000802)	11AK20M-6	1999-						
Bush	1473T (white)(10000804)	11AK20M-6	1999-						
Bush	1473T (yellow)(10000803)	11AK20M-6	1999-						
Bush	1473T/LILIAC (10001491)	11AK20M-6	1999-						
Bush	1473T/MINT (10001490)	11AK20M-6	1999-						
Bush	1474T	11AK08-14 or 11AK20M-6	depends on the year, AK20 after 1999						
Bush	1476T	11AK08							
Bush	1477T	chassis EC							
Bush	1478T	11AK20M-6							
Bush	1478TSIL	11AK36	2003, £69.99						
Bush	147TT	same as Alba CTV841	also Bush 1452T						
Bush	1480TS	1470T							
Bush	1487TV	11AK20S (with Internet access)							
Bush	1587NTX								
Bush	170KA	-Bush 1773T							
Bush	1773T	Orion CTN chassis (label says PT6T)	LOPTX 40337-53, serv. Mode - short Micro						
Bush	2002	Kong Wah K-91151T	Alba CTV841						
Bush	2002	Onwa							
Bush	2004	Matsui 1436	Alba CTV100						
Bush	2004T	Indiana 100							
Bush	2007	2007 2033T 2167NTX 2169NTX	Alba CTV3458						
Bush	2009		Alba CTV601						
Bush	2009B	Onwa							
Bush	2011	11AK19-8A	1999-						
Bush	2017SIL	11AK30-2(2002),11AK30A4(2002-2003),11AK30	2002-2004						
Bush	2020	11AK01	Kong Wah K-91151T, Alba CTV841						
Bush	2020	Matsui 1580	Saisho CM159TX						
Bush	2023T	11AK10-11, 11AK19-8A, 11AK19B-1	AK19 after 1999						
Bush	2027T	PT9601 (Goodmans GTV211)							
Bush	2028T	11AK10-17							
Bush	2030T	11AK19-8A							
Bush	2031T	11AK19-8A	1999-						
Bush	2033T	2007 2033T 2167NTX 2169NTX	Alba CTV3458						

Bush	2034T	11AK19 or 11AK30(2002-2003)		11AK30 - 10014182		
Bush	2037T/SIL	11AK30A4	2002-2003	10014184		
Bush	2038T/SIL	Beko 12.7		PCB marked G70.190-10		
Bush	2052	Kong Wah K-91151T	Alba CTV841	Matsui 2074	Goldstar CIS4441	
Bush	2052T	Onwa				
Bush	2057	Bush 2059	Bush 2157	Bush 2159		
Bush	2059	see Bush 2057				
Bush	2060NTX	NEW ONWA	similar to Alba CTV4886			
Bush	2063NTX	11AK10-8				
Bush	2063NTX/A	11AK10-15		AK10 prod.code: 1000257		
Bush	2067NTX	PT9601 (Goodmans GTV211)				
Bush	2068NTX	11AK10-17				
Bush	2071NTX	11AK19-8A, 11AK19E3(2000), 11AK19P5(2002)	1999-2002	AK19 prod.code: 10000229		
Bush	2077NTX/SIL	11AK30-2 (2002), 11AK30A4 (2002-2003), 11AK30	2002-2004			
Bush	2102	Onwa				
Bush	2114	11AK01	Kong Wah K-91151T, Alba CTV841	Matsui 2074	Goldstar CIS4441	
Bush	2131T/SIL	11AK19P4, 11AK19P5		AK19 prod.code: 10006073		
Bush	2134T/SIL	11AK30	£130			
Bush	2136T/SIL	Beko				
Bush	2137T/SIL	11AK30	2002-2003, £149.99	prod.code: 10015421		
Bush	2138T/SIL	Beko 12.7	2003, £149.99	PCB marked G70.190-6	Micro SDA5535-A062	
Bush	2151(TX)	Indiana 100				
Bush	2152	Kong Wah K-91151T	Alba CTV841	Matsui 2074	Goldstar CIS4441	
Bush	2152T	Onwa				
Bush	2157	see Bush 2057				
Bush	2159	see Bush 2057				
Bush	2160NTX	Grundig G1000				
Bush	2164NTX	11AK19-8A, 11AK19B-1	1999-	AK19 prod.code: 10000364	Micro SDA5255-A059(11AK19-xx), SDA5255-A073(11AK19-8A), SDA5255-A045(11AK	
Bush	2167NTX	2007 2033T 2167NTX 2169NTX	Alba CTV3458			
Bush	2168NTX	2007 2033T 2167NTX 2169NTX	Alba CTV3458			
Bush	2171NTX	11AK19-8A	1999-	AK19 prod.code: 10000363		
Bush	2171NTX/SIL	11AK19P5		AK19 prod.code: 10006101		
Bush	2177NTX/SIL	11AK30-2(2002), 11AK30A4(2002-2003), 11AK30	2002-2004			
Bush	2214	Osume CTV1474R	Alba CTV841			
Bush	2321	11AK01	Kong Wah K-91151T, Alba CTV841	Matsui 2074	Goldstar CIS4441	
Bush	2420 (2420 Mk I)	chassis C600				
Bush	2514T	Indiana 100				
Bush	2515T	Indiana 100				
Bush	2520TX	Indiana 100				
Bush	2521TX	Indiana 100				
Bush	2534T/SIL	11AK19P5				
Bush	2541(TX)	Indiana 100				
Bush	2550NTX	Schneider TV4	Serv. Mode: see Bush 2850NTX			
Bush	2550NTX/A	Schneider TV8				
Bush	2568NTX	11AK19-08				
Bush	2571NTX	11AK19-8A, 11AK19E3	1998-2000	AK19 prod.code: 10001134, 100006102		
Bush	2574NTX/SIL	11AK19P4, 11AK19P5	2001-2002	AK19 prod.code: 10009365		
Bush	2714	11AK03				
Bush	2720	11AK03				
Bush	2721	11AK03				
Bush	2768NTSIL	SM2				
Bush	2814T	11AK03				
Bush	2820T	11AK03				
Bush	2821T	11AK03				
Bush	2850NTX	Schneider TV4	Serv. mode: press RED and BLUE on R/C together then within 5 sec press P- and V+ together on TV. If you do not have original remote, use any Philips RC5 remote			
Bush	2850NTX/A	Schneider TV8				
Bush	2855WD	Schneider TV4				
Bush	2857NTX	Harwood HTV9425RTN	Amstrad CTV280			
Bush	2863NTX	11AK12				
Bush	2863NTX/A	11AK19-8A				
Bush	2868NTX	SM1 Stereo				
Bush	2868NTXSM2	SM2				
Bush	2867NTX	11AK12 or 11AK19				
Bush	2868NTX	11AK19-5, 11AK19-8A	1999-	AK19 prod.code: 10000518		
Bush	2870VPL	11AK19-8A				
Bush	2871NTX	11AK19-8A, 11AK19E3 (from March2000), 11AK19P5 (from Apr2002)		AK19 prod.code: 10000517, 10006103		
Bush	2872NTX	11AK19E3				
Bush	2874NTX	11AK19E3				
Bush	2874NTX/SIL	11AK37-6	2002			
Bush	2876NTX	PT92	2001			
Bush	2877NTX/SIL	11AK19P4, 11AK19P5 or 11AK37-8	2001-2002(11AK19), 2003(11AK37)	AK19 prod.code: 10009515		
Bush	2879	C43 (Alba CTV-743)				
Bush	28ZKA	4400 chassis				
Bush	28ZKF	4400 chassis				
Bush	2914	C43 (Alba CTV-743)				
Bush	2920T	Alba CTV703 CTV704T CTV713	Hinari HIT51T			
Bush	2921	Alba CTV703 CTV704T CTV713	Hinari HIT51T			
Bush	2921T	Alba CTV703 CTV704T CTV713	Hinari HIT51T			
Bush	3114	Orion 14EBS	Saisho CT149X	(TVS 89-90 P231)		
Bush	3114A/AS	Orion 14LR chassis	Matsui 1466, Hinary HIT140RC			
Bush	3114AT		Osaki 3114AT			
Bush	3370VPL	11AK19				
Bush	3463NTX	4400 chassis	around £700-£800			
Bush	3472NTX (34BKD)	4400 chassis				
Bush	6690D	11AK19B1 +digi/box		AK19 prod.code: 10003064		
Bush	6693D	11AK33J4 +digi/box	2003 £349, 2004 £299	10019795		
Bush	7690D	11AK19B1 +digi/box				
Bush	7693D	11AK33J4 +digi/box	2003, 2004 £399	10019794		
Bush	AC5465	Rank T23A				
Bush	BC8004	Murphy MC6124	Murphy 6425			
Bush	BC8268	T22A	BC6238	BC8468		
Bush	BC7100	Saba chassis				
Bush	BC7200	T24E	Murphy MC7240			
Bush	BC7300	T26A				
Bush	BT14	chassis TV14	Bush BTV140T			
Bush	BTV10	Orion chassis (Alba VTV10)				
Bush	BTV140T		Bush BTV14			
Bush	BTV16	similar to BTV20	Serv.mode: MENU-MUTE-PAUSE-MUTE			
Bush	BTV17	Orion chassis, deck OVD-6, same as Goodmans	PCB marked TM9423A, video VM9162A	Micro OEC0078A, option codes	PSU IC STRF6707	
Bush	BTV17/OVD7	Orion chassis, deck OVD-7			PSU IC STRG6653	
Bush	BTV17SIL/OVD7	Orion chassis, deck OVD-7				
Bush	BTV170T/BLK	Orion chassis	PCB marked VMA230A			
Bush	BTV17A	similar to BTV17	PCB marked TM9423A			
Bush	BTV180T/SI		PCB marked VMX193G	Micro OEC0093	PSU IC STRF6707	
Bush	BTV183DVD	TV/VCR/DVD	2004 £99			
Bush	BTV18SIL	Orion chassis, deck OVD-7, 2003 £99	2003, £249, 2004 £199			
Bush	BTV18SIL/A	Orion chassis, deck OVD-7	PSU PCB VPA150A			
Bush	BTV20	similar to BTV16	PCB marked VMB290A	Micro OEC0133A		
Bush	BTV213DVD	TV/VCR/DVD	Serv.mode: MENU-MUTE-PAUSE-MUTE			
Bush	CTV1400	Harwood HTV3604R	2003, £329			
Bush	DVD142RC	11AK46-1 +DVD	Serv.mode: INSTALL-4-7-2-5	remote		
Bush	DVD142TV	11AK46-1, 11AK46-5 +DVD	2003, £170	remote		
Bush	DVD143TVFNT1	PT90 +DVD		remote 631020001381		
Bush	DVD144RC					
Bush	DVD145TV		2004, £99			
Bush	DVD660TV	PT90 +DVD	2003, £140			
Bush	DVD660TVSIL/A	PT92 +DVD		remote 631020001381		
Bush	IBX260	INTERNET Box double scart				
Bush	ITV2100	Beko 14.1				
Bush	ITV2112	Beko 12.4 with Internet access				
Bush	ITV2800	Beko 14.1 with Internet	Micro SDA555x (SB7640-03/TXT), video N	serv.mode: MENU then 7.5.9.2		
Bush	ITV6600	Beko 14.1	PCB 7SZ.190.14, remote KWR2020	Micro SAA5563PS/M3, jungle TDA8843, sound MSP3410D		
Bush	ITV8401	11AK20S with Internet access	PCB 7SZ.190-17			
Bush	M1400	Fidelity ZX3000 Mk2				
Bush	M1500	Fidelity ZX3000 Mk2				
Bush	M20T01	Fidelity ZX4000				
Bush	M22T01	Fidelity ZX4000				
Bush	RF6682VPL	Beko 14.1 or 14.2	2001(14.1); 2002(14.2)	14.1 - PCB marked 7SZ.190-18; 14.2 - PCB marked S99.190-04, S99.190-07		
Bush	RF7682VPL	Beko 14.1 or 14.2	14.2 - PCB marked S99.190-07			
Bush	WS5673SIL (10016197)	11AK37-10, 11AK37-11		AK37 prod.code: 10016197		
Bush	WS5676SIL	11AK37				
Bush	WS5680		2004, £180			
Bush	WS6667 (28ZKA)	4400 chassis				
Bush	WS6668SIL (28ZKV)	4400 chassis	PCB marked B-4411			
Bush	WS6671 (10004932)	11AK19P4, 11AK19P5	in 11AK19P4 Micro is 19V1.OFT-A14	AK19 prod.code: 10004932		
Bush	WS6671SIL (10006104)	11AK19P4, 11AK19P5		AK19 prod.code: 10006104		
Bush	WS6671SIL (10014467)	11AK37-8		AK37 prod.code: 10014467		
Bush	WS6672	PT92				
Bush	WS6673	11AK19P5				

Bush	WS6673 (10014458)	11AK37-8	2002-	AK37 prod.code: 10014458					
Bush	WS6673SIL (10008659)	11AK19P4, 11AK19P5	2001-2002	AK19 prod.code: 10008659					
Bush	WS6673SIL (10014469)	11AK37-8	2002-	AK37 prod.code: 10014469					
Bush	WS6674	PT92	2002/2003, £199						
Bush	WS6677	11AK19							
Bush	WS6680SIL	Beko 14.2 chassis	2003, £250	PCB U99.190-07					
Bush	WS7667	4400 chassis							
Bush	WS7671	11AK19B1, 11AK19P4							
Bush	WS7673	11AK19P5 or 11AK37-6 (after 2002)	in 11AK19 Micro 19V1.OFT-A14						
Bush	WS7673SIL (10008660)	11AK19P4, 11AK19P5	2001-2002	AK19 prod.code: 10008660					
Bush	WS7673SIL (10014465)	11AK37-6		AK37 prod.code: 10014465					
Bush	WS7674SIL	PT92							
Bush	WS7680SIL	Beko 14.2 chassis							
Bush	WS766 (26ZKF)	4400 chassis	PCB marked B-4410	Options: Op1-A8, Op2-F8, Op3-1B					
Cathay	CT3520	Indiana 100	NEI						
Cathay	CTV1481R	Indiana 100	NEI						
Cathay	CTV2004T	Indiana 100	NEI						
Cathay	ST4000	Indiana 100	NEI						
Co-op	6348	Rank T20							
Crown	CF952BNFT	F11							
Crown	CF961417/W	F10/F12/F14							
Crown	CR10	Baby 10							
Crown	CR1406FT	Akura CX26							
Crown	CR20NT	Akura CX26							
Crown	CR2894R	Akura CX26							
Crown	CRP14(T)	SM1 Mono	also see Matsui 1496, 2096 etc						
Crown	CRP2196NT	SM1 Mono							
Crown	CRP21NT (T/TS)	SM1 Mono							
Crown	CRP26NT	SM1 Stereo							
Crown	CRT9655RTN	11AK10							
Crown	CRV37	11AK08							
Crown	CRV47	11AK08-13							
Crown	CRV72NT	11AK12							
Crown	CTF139TSL		2003, £100	Serv.mode: remove R/C top cover and press hidden button on the left hand side, then press OK. Use P+/- to navigate. V					
Crown	CTF1401R	G1000							
Crown	CTF1402T	G1000							
Crown	CTF14R	Amstrad CTV1400 (new)							
Crown	CTF2001R	G1000							
Crown	CTF2005NFT	G1000							
Crown	CTF2805NFT	E2000							
Crown	CTF28NFT		similar CTF29NF						
Crown	CTF29NF		similar CTF28NFT						
Daewoo	14C3	CP005 or CP185							
Daewoo	14C4	CP005 or CP185							
Daewoo	14C5	CP005							
Daewoo	14H3	CP082							
Daewoo	14Q1 14Q2 14Q3	CP370 (1-speaker)	VM -without TEXT, TM-with TEXT						
Daewoo	14T1 14T2 14T3	CP370 (2-speakers)	VM -without TEXT, TM-with TEXT						
Daewoo	14U1	CP005							
Daewoo	14V1	CP005							
Daewoo	14V2	CP005							
Daewoo	14V3	CP005 or CP185							
Daewoo	14V5	CP005							
Daewoo	20A1	CP330							
Daewoo	20C4	CP005							
Daewoo	20C5	CP005							
Daewoo	20H4	CP092							
Daewoo	20Q1 20Q2 20Q3	CP370 (1-speaker)	VM -without TEXT, TM-with TEXT						
Daewoo	20T1 20T2 20T3	CP370 (2-speakers)	VM -without TEXT, TM-with TEXT						
Daewoo	20U1	CP005							
Daewoo	20V1	CP005							
Daewoo	20V3	CP005 or CP185							
Daewoo	20V4	CP005							
Daewoo	20V5	CP005							
Daewoo	21C6	CP005							
Daewoo	21Q1 21Q2	CP370 (1-speaker)	VM -without TEXT, TM-with TEXT						
Daewoo	21T1 21T2	CP370 (2-speakers)	VM -without TEXT, TM-with TEXT						
Daewoo	21U1	CP005							
Daewoo	21U3	CP005							
Daewoo	21V1	CP005							
Daewoo	21V2	CP005							
Daewoo	21V3	CP005 or CP185							
Daewoo	21V4	CP005							
Daewoo	21V6	CP005							
Daewoo	25G7	CP785	PSU I801 STRF6653						
Daewoo	2880Z	CP820	2003						
Daewoo	2881Z	CP820F	2003						
Daewoo	28A6Z	CP820	2003						
Daewoo	28A7	CP785	PSU I801 STRF6653						
Daewoo	28A7Z	CP820	2003						
Daewoo	28B1	CP785(50Hz) or CP810(100Hz)							
Daewoo	28B1Z	CP820	2003						
Daewoo	28B2Z	CP820	2003						
Daewoo	28G6Z	CP820	2003						
Daewoo	28G7	CP785	PSU I801 STRF6653						
Daewoo	28G7Z	CP820	2003						
Daewoo	28G8Z	CP820	2003						
Daewoo	28W5Z	CP820	2003						
Daewoo	28W8Z	CP820F	2003						
Daewoo	29U7Z	CP820F	2003						
Daewoo	29U8	CP885F							
Daewoo	29U8Z	CP820F	2003						
Daewoo	DDT14H9S	CP099F (TV/DVD Combi)	2002	remote R-52B02					
Daewoo	DDT21H9S	CP099F (TV/DVD Combi)	2002	remote R-52B02					
Daewoo	DMQ1454	C901	DMQ2154	Thorn P1480R					
Daewoo	DMQ1457	CP315							
Daewoo	DMQ1494	CP315							
Daewoo	DMQ2057	CP315							
Daewoo	DMQ2072	CP320							
Daewoo	DMQ2154	C901	DMQ1454	Thorn P1480R					
Daewoo	DMQ2159	CP315							
Daewoo	DP32SM/SP	SP115 (plasma)	2002	R-V28A(E)					
Daewoo	DP42GM/GP	SP115 (plasma)	2002	R-V28A(E)					
Daewoo	DP42SM/SP	SP115 (plasma)	2002	R-V28A(E)					
Daewoo	DP42WM/WP	SP115 (plasma)	2002	R-V28A(E)					
Daewoo	DSC3210E	SC140	2002, Multisystem B/G, D/K, I	R-46G22					
Daewoo	DSC3220E	SC150	2002/2003, Multisystem B/G, D/K, I	Remote R-46G22					
Daewoo	DSC3220L	SC150	2002/2003, Multisystem B/G, D/K, I	Remote R-46G22					
Daewoo	DSC3261H	SC132	2002, Multisystem B/G, D/K, I	RV-22N					=NEC PF32W01
Daewoo	DSC3270EGB	SC130	2001, Multisystem B/G, D/K, I	RV-22D					
Daewoo	DSJ6000LHM	SJ210H (LCD Projection HDTV monitor)	2003						
Daewoo	DSJ6000LN	SJ210H (LCD Projection HDTV monitor)	2002						
Daewoo	DSP4210GM	SP110 (plasma)	2001						
Daewoo	DTA2011	CP385	PSU I801 STRF6653						
Daewoo	DTA2012	CP385	PSU I801 STRF6653						
Daewoo	DTA2013	CP385	PSU I801 STRF6653						
Daewoo	DTA2018	CP385	PSU I801 STRF6653						
Daewoo	DTA2111	CP385	PSU I801 STRF6653						
Daewoo	DTA2115	CP385	PSU I801 STRF6653						
Daewoo	DTA2119	CP385	PSU I801 STRF6653						
Daewoo	DTA21Y1	CP385	PSU I801 STRF6653						
Daewoo	DTB21U6	CP185F	2002, Multisystem B/G, D/K, I	R-40A10 (nontext), R-40A01(text AAA battery), R-44C05 (text AA battery)					
Daewoo	DTC14T6	CP390	1998, Multi-standard I, B/G, D/K						
Daewoo	DTC14U1	CP002	2000						
Daewoo	DTC14V1	CP002	2000						
Daewoo	DTC14V3	CP002	2000						
Daewoo	DTC14V4	CP002	2000						
Daewoo	DTC14V5	CP002	2000						
Daewoo	DTC20T6	CP390	1998, Multi-standard I, B/G, D/K						
Daewoo	DTC20V1	CP002	2000						
Daewoo	DTC20V3	CP002	2000						
Daewoo	DTC20V4	CP002	2000						
Daewoo	DTC20V5	CP002	2000						
Daewoo	DTC21T7	CP390	1998, Multi-standard I, B/G, D/K						
Daewoo	DTC21U1	CP002	2000						
Daewoo	DTC21U3	CP002	2000						
Daewoo	DTC21V1	CP002	2000						
Daewoo	DTC21V3	CP002	2000						

Daewoo	DTC21V4	CP002	2000				
Daewoo	DTE25G6	CP785	PSU I801 STRF6653				
Daewoo	DTE25G7	CP785	PSU I801 STRF6653				
Daewoo	DTE2896	CP785	PSU I801 STRF6653				
Daewoo	DTE2898	CP785	PSU I801 STRF6653				
Daewoo	DTE28A6	CP785	PSU I801 STRF6653				
Daewoo	DTE28A7GB	CP785	PSU I801 STRF6653				
Daewoo	DTE28B1	CP785	PSU I801 STRF6653				
Daewoo	DTE28G2	CP785	PSU I801 STRF6653				
Daewoo	DTE28G6	CP785	PSU I801 STRF6653				
Daewoo	DTE28G7GB	CP785	PSU I801 STRF6653				
Daewoo	DTE28G8	CP785	PSU I801 STRF6653				
Daewoo	DTE29G3KZR	CP795	PSU I801 STRF6653				
Daewoo	DTE29G3ZZR	CP795	PSU I801 STRF6653				
Daewoo	DTJ28A6F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28A7F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28B1F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28G6F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28G7F	CP810	PSU I801 STRF6654				
Daewoo	DTJ28G8F	CP810	PSU I801 STRF6654				
Daewoo	DTL25G6F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL25G7F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28G2F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28G6F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28G7F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28G8F	CP776	1999, Multi-standard I, B/G, D/K				
Daewoo	DTL28J8F	CP810F	2000				
Daewoo	DTP14C3	CP005	2000				
Daewoo	DTP14C4	CP005	2000				
Daewoo	DTP14C5	CP005	2000				
Daewoo	DTP14V1	CP005	2000				
Daewoo	DTP14V2	CP005	2000				
Daewoo	DTP14V3	CP005	2000				
Daewoo	DTP14V5	CP005	2000				
Daewoo	DTP20C4	CP005	2000				
Daewoo	DTP20C5	CP005	2000				
Daewoo	DTP20V1	CP005	2000				
Daewoo	DTP20V3	CP005	2000				
Daewoo	DTP21C6	CP005	2000				
Daewoo	DTP21V1	CP005	2000				
Daewoo	DTP21V2	CP005	2000				
Daewoo	DTP21V4	CP005	2000				
Daewoo	DTP21V6	CP005	2000				
Daewoo	DTP28G8GBS	CP885					
Daewoo	DTR14D3	CP490	VG-noTEXT, TM-TEXT, Multistandard I, B/G, D/K				
Daewoo	DTR16D3	CP490	VG-noTEXT, TM-TEXT, Multistandard I, B/G, D/K				
Daewoo	DTR20D3	CP490	VG-noTEXT, TM-TEXT, Multistandard I, B/G, D/K				
Daewoo	DTR21D3	CP490	VG-noTEXT, TM-TEXT, Multistandard I, B/G, D/K				
Daewoo	DTU14D3	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU14D4	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU16D3	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU20D3	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU20D4	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU21D3	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTU21D4	CP371	2000 (VG-game/no TEXT, TM-TEXT/no game)				
Daewoo	DTV2810	WP811N	2000				
Daewoo	DTV28W2GB	WP811N	2000				
Daewoo	DVT1482P	CP310	Ferguson FG14CB12V		Goodmans TVC1400 TVC14VP		
Daewoo	DVT1484D	CP310	Ferguson FG14CB12V		Goodmans TVC1400 TVC14VP		
Daewoo	DVT1485P	CP310					
Daewoo	DVT14F4P	CP350 Combi					
Daewoo	DVT14F6	CP420, K-Mecha Deck					
Daewoo	DVT14F8	CP420, K-Mecha Deck					
Daewoo	DVT14H1P(TP)	CP062	2000				
Daewoo	DVT14H2P(TP)	CP062	2000				
Daewoo	DVT2082P	CP310					
Daewoo	DVT2083P	CP310					
Daewoo	DVT2084P(D)	CP310	Ferguson FG20CB12V				
Daewoo	DVT2085P	CP310					
Daewoo	DVT20F4	CP350 Combi					
Daewoo	DVT20F6	CP420, K-Mecha Deck					
Daewoo	DVT20F8	CP420, K-Mecha Deck					
Daewoo	DVT20H1P(TP)	CP062	2000				
Daewoo	DVT20H2P(TP)	CP062	2000				
Daewoo	DVT2182LA	CP350 Combi					
Daewoo	DVT21F1	CP420, K-Mecha Deck	1999				
Daewoo	DVT21F2	CP420, K-Mecha Deck	1999				
Daewoo	DVT21F4LA	CP350 Combi					
Daewoo	DWF28W8GB	WP895F(50Hz) (CP885)					
Daewoo	DWL28W8-100D	WP811F (100Hz)	2002				
Daewoo	DWP28W2GB	WP795	2000		R-40A13		
Daewoo	DWX2880GB	CP885	2002				
Daewoo	DWX28W5GB	CP885	2002				
Daewoo	GB14A5T	CP375					
Daewoo	GB14C3BL	CP185	2000				
Daewoo	GB14C4NTS	CP185	2000				
Daewoo	GB14F7T1	CP420, K-Mecha Deck	Panasonic TX14GV1 combi				
Daewoo	GB14F8T1	CP420, K-Mecha Deck					
Daewoo	GB14F8T2	CP420, K-Mecha Deck					
Daewoo	GB14H1T	CP062					
Daewoo	GB14H2(NBL)	CP062					
Daewoo	GB14H3T2(T1)	CP082	2001				
Daewoo	GB14H4T2(T1)	CP082	2001				
Daewoo	GB20A5	CP375					
Daewoo	GB20C4ANT	CP185	2000				
Daewoo	GB20C4T	CP005					
Daewoo	GB20C5NT	CP185	2000				
Daewoo	GB20F7T2	CP420, K-Mecha Deck					
Daewoo	GB20F8T2	CP420, K-Mecha Deck					
Daewoo	GB20H1T	CP062					
Daewoo	GB20H2T	CP062					
Daewoo	GB20H3T2(T1)	CP082	2001				
Daewoo	GB20H4T2(T1)	CP082	2001				
Daewoo	GB20T8ST	CP380					
Daewoo	GB21A5T	CP375					
Daewoo	GB21C6NT	CP185	2000				
Daewoo	GB21F1T2	CP420, K-Mecha Deck					
Daewoo	GB21H4T2(T1)	CP082	2001				
Daewoo	GB21T5ST	CP375					
Daewoo	GB2896ST	CP775	Goodmans 255NS / 285NS				
Daewoo	GB2898ST	CP775					
Daewoo	GB28G2ST	CP775					
Daewoo	GB51F4TXT	CP350 Combi					
Daewoo	GB582TXT	CP350 Combi					
Daewoo	T140	CP330					
Daewoo	T142	CP330					
Daewoo	T200	CP330					
Daewoo	T202	CP330	Thom CT512T				
Daewoo	T512	CP330					
Daewoo	T514	CP365					
Daewoo	T564	CP760	Thom CT514TN				
Dansai	CTV1410	Orion chassis with STR5412 in PSU	PCB marked MCS M3 94V-0		LOPTx 101-214017, lcs STR5412, KA2914A, MN15245KWC, KA2154		
Dansai	CTV1477	Binatone 019014	Boots CTV1414R		Matsui 1450	Saisho CT147R	
Dansai	CTV1481R/T	Indiana 100					
Dansai	CTV2004T	Indiana 100					
Dansai	TA11401	Decca 141	Solarvox		Nikkai TLG99		
Dansai	TAT1051	Indiana 100					
Decca	! Model No's	1st digit: 9 = txt: 8 = non txt	2nd digit = chassis i.e. 9 = 190		e.g. DN8951 = 190 non txt		
Decca	! Model No's	newer models go by letter	e.g. VU2CEO = C series				
Decca	also see Tatung						
Decca	CT1273	120 Chassis					
Decca	CT9273	120 Chassis					
Decca	CV1371	130 Chassis					
Decca	CV1810	110 Chassis					
Decca	CZ8151	110 Chassis					
Decca	CZ8152	110 Chassis					
Decca	D28NEE5	Tatung E1					
Decca	D28W440	4400 chassis					
Decca	DN1251	120/125 Chassis					

Decca	DN1253	120 Chassis			
Decca	DN1256	120/125 Chassis			
Decca	DN1259	120/130 Chassis			
Decca	DN1451	140 Chassis			
Decca	DN1471	140 Chassis			
Decca	DN1651A	160 Chassis			
Decca	DN1670	160 Chassis			
Decca	DN1671	160 Chassis			
Decca	DN1672	160 Chassis			
Decca	DN1674	160 Chassis			
Decca	DN8452	140 Chassis			
Decca	DN8472	140 Chassis			
Decca	DN8652	165 Chassis			
Decca	DN8951	190 Chassis	Boots C1411/2	Matsui 1424	
Decca	DN8951	190 Chassis			
Decca	DN8955	190 Chassis			
Decca	DN9256	120/125 Chassis			
Decca	DN9257	120/125 Chassis			
Decca	DN9259	120/130 Chassis			
Decca	DP1257	120/130 Chassis			
Decca	DP1453	140 Chassis			
Decca	DP1473	140 Chassis			
Decca	DP1653/A	160 Chassis			
Decca	DP1673	160 Chassis			
Decca	DP8454	140 Chassis			
Decca	DP8474	140 Chassis			
Decca	DP9257	120/130 Chassis			
Decca	DP9454	140 Chassis			
Decca	DT1253	120 Chassis			
Decca	DT1257	120/125 Chassis			
Decca	DT1260	120 Chassis			
Decca	DT1263	120 Chassis			
Decca	DT1455	140 Chassis			
Decca	DT1475	140 Chassis			
Decca	DT1655	160 Chassis			
Decca	DT1675	160 Chassis			
Decca	DT8456	140 Chassis			
Decca	DT8459	140 Chassis			
Decca	DT8466	145A Chassis			
Decca	DT8476	145A Chassis			
Decca	DT8496	145A Chassis			
Decca	DT9253	120 Chassis			
Decca	DT9255	120/125 Chassis			
Decca	DT9260	120/125 Chassis			
Decca	DT9456	140 Chassis			
Decca	DT9459	140 Chassis			
Decca	DT9466	145A Chassis			
Decca	DT9476	145A Chassis			
Decca	DT9496	145A Chassis			
Decca	DT9497	140 Chassis			
Decca	DT9770	190/195 Chassis			
Decca	DT9772	171 Chassis			
Decca	DU8670M	165 Chassis			
Decca	DU8688	165 Chassis			
Decca	DV1254	120 Chassis			
Decca	DV1351	130 Chassis			
Decca	DV1353	130 Chassis			
Decca	DV1360	130 Chassis			
Decca	DV1361	130 Chassis			
Decca	DV1457	140 Chassis			
Decca	DV1462	140 Chassis			
Decca	DV1475	140 Chassis			
Decca	DV1477	140 Chassis			
Decca	DV1657	160 Chassis			
Decca	DV1677	160 Chassis			
Decca	DV8458	140 Chassis			
Decca	DV8460	140 Chassis			
Decca	DV8468	145A Chassis			
Decca	DV8478	147 Chassis			
Decca	DV8498	145A Chassis			
Decca	DV8554	150 Chassis			
Decca	DV9101	111 Chassis			
Decca	DV9151	111 Chassis			
Decca	DV9254	120 Chassis			
Decca	DV9351	130 Chassis			
Decca	DV9352	130 Chassis			
Decca	DV9357	131 Chassis			
Decca	DV9458	140 Chassis			
Decca	DV9460	140 Chassis			
Decca	DV9468	145A Chassis			
Decca	DV9498	145A Chassis			
Decca	DV9499	140 Chassis			
Decca	DV9551	150 Chassis			
Decca	DV9758	170/180 Chassis			
Decca	DYS9893C	180 Chassis			
Decca	DZ1352	130 Chassis			
Decca	DZ1362	130 Chassis			
Decca	DZ3152	111 Chassis			
Decca	DZ3352	130 Chassis			
Decca	DZ3354	130 Chassis			
Decca	DZ3358	120/130 Chassis			
Decca	DZ3362	130 Chassis			
Decca	DZ9555	150 Chassis			
Decca	PT9255	120/125 Chassis			
Decca	PV9352	130 Chassis			
Decca	PZ9354	130 Chassis			
Decca		10	Bradford		
Decca		30	Bradford		
Decca		70			
Decca		80	Granada C20SD1 / C20TD1		
Decca		90			
Decca		100			
Decca		110			
Decca		120			
Decca		125			
Decca		130			
Decca		140			
Decca		141			
Decca		145			
Decca		150			
Decca		160		Tatung TV9448 Tashiko 16E891	
Decca		161	GEC C1410		
Decca		162			
Decca		165	GEC C2000		
Decca		166			
Decca		170	Proline 360TT	Tatung TUV9731/4	
Decca		180	Proline NV2400/NV2700	Tatung TYS9824	
Decca		185			
Decca		A Series			
Decca		B Series			
Decca		C Series	Tatung DU6C22		
Decca		C Series	Tatung TU2C52		
Decca		C Series	Tatung VU2CEO		
Dynatron	267475SK	Philips K40			
Etron	EC142	Akashi 1450			
Expert	2061	Hitachi CPT2051			
Ferguson	14C1	TX90			
Ferguson	14C2	TX90			
Ferguson	14C9	TX90			
Ferguson	14D1	TX85			
Ferguson	14D2	TX85/90			
Ferguson	14J1	TX85			
Ferguson	14J2	TX85/90			
Ferguson	14J9	TX85			
Ferguson	14K1	TX85			
Ferguson	14K2	TX85			
Ferguson	14K9	TX85			
Ferguson	14L1	TX86			
Ferguson	14L2	TX86			

Ferguson	14L9		TX86						
Ferguson	14M1		TX86						
Ferguson	14M2		TX89						
Ferguson	14M9		TX86						
Ferguson	16A1		TX90						
Ferguson	16A2		TX90						
Ferguson	16A3		TX90						
Ferguson	16H2		TX99						
Ferguson	16H3		TX99						
Ferguson	170		TX9						
Ferguson	171		TX9						
Ferguson	1764		9700						
Ferguson	1765		9700						
Ferguson	1785		TX10						
Ferguson	1791		9700						
Ferguson	1796		9750						
Ferguson	1799		9700						
Ferguson	190		TX9						
Ferguson	200		TX90						
Ferguson	2000		TX90						
Ferguson	20A1		TX100						
Ferguson	20A2		TX100						
Ferguson	20A3		TX100						
Ferguson	20A4		TX100						
Ferguson	20C2		TX100						
Ferguson	20C3		TX100						
Ferguson	20C4		TX100						
Ferguson	20E1		TX90						
Ferguson	20E2		TX90						
Ferguson	20G1		TX100						
Ferguson	20G2		TX100						
Ferguson	20G3		TX100						
Ferguson	20H1		TX100						
Ferguson	20H2		TX100						
Ferguson	20H3		TX100						
Ferguson	20K2		TX95						
Ferguson	20K3		TX95						
Ferguson	22B1		TX100						
Ferguson	22B2		TX100						
Ferguson	22B3		TX100						
Ferguson	22B4		TX100						
Ferguson	22B5		TX10						
Ferguson	22D1		TX100						
Ferguson	22D2		TX100						
Ferguson	22D3		TX100						
Ferguson	22D4		TX100						
Ferguson	22G1		TX100						
Ferguson	22G2		TX100						
Ferguson	22G3		TX100						
Ferguson	22H1		TX100						
Ferguson	22H2		TX100						
Ferguson	22H3		TX100						
Ferguson	232		TX10						
Ferguson	2323		TX100						
Ferguson	233		TX10						
Ferguson	2343		TX100						
Ferguson	2353		TX100						
Ferguson	2403		TX10						
Ferguson	2422		TX100						
Ferguson	2423		TX100						
Ferguson	2452		TX100						
Ferguson	2453		TX100						
Ferguson	2463		TX100						
Ferguson	262		TX9						
Ferguson	26D1		TX100						
Ferguson	26D2		TX100						
Ferguson	26D3		TX100						
Ferguson	26G2		TX100						
Ferguson	26G3		TX100						
Ferguson	26H1		TX100						
Ferguson	26H2		TX100						
Ferguson	26H3		TX100						
Ferguson	271		TX9						
Ferguson	273		TX9						
Ferguson	282		TX10						
Ferguson	283		TX10						
Ferguson	2841		1690						
Ferguson	289		TX10						
Ferguson	311		TX10						
Ferguson	3170		TX9						
Ferguson	3171		TX9						
Ferguson	3190		TX9						
Ferguson	3232		TX10						
Ferguson	3233		TX10						
Ferguson	3262		TX9						
Ferguson	3271		TX9						
Ferguson	3272		TX9						
Ferguson	3273		TX9						
Ferguson	3282		TX10						
Ferguson	3283		TX10						
Ferguson	3289		TX10						
Ferguson	32WS650D		ICC19						
Ferguson	3311		TX10						
Ferguson	3579		TX571						
Ferguson	36040		TX9						
Ferguson	36140		TX90						
Ferguson	36141		TX90						
Ferguson	36152		TX9						
Ferguson	36310		TX90						
Ferguson	36311		TX90						
Ferguson	36351		TX9						
Ferguson	36H2		TX99						
Ferguson	36H3		TX99						
Ferguson	36K2		TX89						
Ferguson	36K3		TX99/89						
Ferguson	37003		TX9						
Ferguson	37003		TX9						
Ferguson	37023		TX9						
Ferguson	37023		TX9						
Ferguson	37041		TX9						
Ferguson	37041		TX9						
Ferguson	37051		TX10						
Ferguson	37060		TX10						
Ferguson	37060		TX10						
Ferguson	37063		TX10						
Ferguson	37063		TX10						
Ferguson	37081		TX9						
Ferguson	37081		TX9						
Ferguson	37090		TX9						
Ferguson	37090		TX9						
Ferguson	37093		TX9						
Ferguson	37093		TX9						
Ferguson	37100		TX9						
Ferguson	37100		TX9						
Ferguson	37101		TX9						
Ferguson	37101		TX9						
Ferguson	37103		TX9						
Ferguson	37140		TX90						
Ferguson	37141		TX90						
Ferguson	37147		TX90						
Ferguson	37149		TX90						
Ferguson	37311		TX10						
Ferguson	3734		9600						
Ferguson	37340		TX10						
Ferguson	37340		TX10						
Ferguson	37341		TX10						
Ferguson	37341		TX10						
Ferguson	37350		TX9						
Ferguson	37350		TX9						







Ferguson	A36R	TX80			
Ferguson	A51EAL	TX100			
Ferguson	A51F	ICC2			
Ferguson	A51N	ICC7			
Ferguson	A59EAK	TX100			
Ferguson	A59EAS	TX100			
Ferguson	A59F	ICC7			
Ferguson	A59N	ICC7/8			
Ferguson	A68N	ICC7			
Ferguson	AXF51	TX100			
Ferguson	B14C	TX90E			
Ferguson	B14R	TX90E			
Ferguson	B39F	TX90E			
Ferguson	B49F	TX90E			
Ferguson	B51F	ICC7			
Ferguson	B51NX	ICC8			
Ferguson	B59F	ICC7			
Ferguson	B59N	ICC8			
Ferguson	B59NX	ICC8			
Ferguson	B68N	ICC8			
Ferguson	B68NX	ICC8			
Ferguson	B78NTX	ICC5			
Ferguson	C14C	TX90E			
Ferguson	C15012R	Samsung P88 chassis			
Ferguson	C2152	TX100			
Ferguson	C2153	TX100			
Ferguson	C3615UT	Eurocombo2			
Ferguson	C39F	TX90E			
Ferguson	C49F	TX90E			
Ferguson	C51F	ICC8			
Ferguson	C51N	ICC8			
Ferguson	C51ND	ICC7			
Ferguson	C51NX	ICC8			
Ferguson	C59NX	ICC8			
Ferguson	C68F	ICC7			
Ferguson	C68NX	ICC8			
Ferguson	D14R	TX805			
Ferguson	D51N	ICC9			
Ferguson	D51ND	ICC9	NICAM		
Ferguson	D51NDD	ICC9			
Ferguson	D59F	ICC9	Mono sound		
Ferguson	D59N	ICC9	NICAM		
Ferguson	D68N	ICC9	NICAM		
Ferguson	D78N	ICC9	NICAM		
Ferguson	DSF68NX	IDC2			
Ferguson	F16/17	ICC7?			
Ferguson	FG14CB12V	CP-310 (Daewoo)	Goodmans TVC1400 TVC14VP	Daewoo DVT1484D	
Ferguson	FG20CB12V	CP-310 (Daewoo)	Goodmans TVC1400 TVC14VP	Daewoo DVT1484D	
Ferguson	FTV28WN1	11AK37	2004 E250		
Ferguson	M3610U	TX807			
Ferguson	M3615UT	TX807			
Ferguson	M3673GC(T)	TX91G			
Ferguson	M51131RH	TX807C			
Ferguson	M5115UT	TX807			
Ferguson	M5515UT	TX807			
Ferguson	M5518U	ICC17			
Ferguson	M5519U	TX91G			
Ferguson	M5520U	TX91G			
Ferguson	M5573GF	TX91G			
Ferguson	M6322U	ICC17			
Ferguson	M6373GH	TX92F			
Ferguson	M7017U	TX807CS			
Ferguson	M7022U	ICC17			
Ferguson	M7073GH	TX92F			
Ferguson	M8122U	ICC17			
Ferguson	M8123U	ICC17			
Ferguson	M8421U	ICC17			
Ferguson	M8422U	ICC17			
Ferguson	MC01	TX90	Receiver/Monitor		
Ferguson	MC05	TX90	Receiver/Monitor		
Ferguson	MC09	TX85			
Ferguson	MC09	TX90			
Ferguson	RR5191N	ICC7			
Ferguson	S59N	ICC9	NICAM+		
Ferguson	S68N	ICC9	NICAM+		
Ferguson	S7971	TX100			
Ferguson	S7981	TX100			
Ferguson	T10R	TX90	Mains/Batt portable 10"		
Ferguson	T14R	TX805			
Ferguson	T14T	TX91			
Ferguson	T25DPL	ICC9			
Ferguson	T28DPL	ICC9			
Ferguson	T49F	TX91			
Ferguson	T5173GF	TX91G			
Ferguson	T51F	TX91			
Ferguson	T59F	TX92	Thompson Digital Chassis		
Ferguson	T59FB	TX92F			
Ferguson	T59NB	TX92F			
Ferguson	T59NB	TX92F			
Ferguson	T68N	TX92			
Ferguson	T7021U	ICC17			
Ferguson	T7025UD	ICC17			
Ferguson	T78DPL	ICC9			
Ferguson	T78N	TX92			
Ferguson	T94N	ICC9			
Ferguson	TB6013C	TX10			
Ferguson	TB6023	TX9			
Ferguson	TB6213	TX9			
Ferguson	U2001	TX100			
Ferguson	U2201	TX100			
Ferguson	V51NB	TX91G			
Ferguson	W70201S	ICC17			
Ferguson	W7022U	ICC17			
Ferguson	W7023U	ICC17			
Ferguson	WF70401G	ICC20	(Telefunken chassis 446X)		
Ferguson	X51FB	TX91G			
Fidelity	1482	ZX2000			
Fidelity	AVS1600	ZX3000			
Fidelity	AVS2000	ZX3000			
Fidelity	C14M06/R06	ZX1415	Brittania B14M11		
Fidelity	C14M07	Solarvox 140 chassis	Nikkai TLG88		
Fidelity	C14M08	Solarvox 141 chassis	Nikkai TLG99		
Fidelity	C14R08	ZX4000			
Fidelity	C14T01	ZX5000			
Fidelity	C20R03	ZX4222			
Fidelity	C20T03	ZX4223			
Fidelity	C20T04	ZX5000 (Digital)	Saisho/Matsui CM260T		
Fidelity	CS1T01	ZX5000			
Fidelity	CM14	ZX3000			
Fidelity	CTM14	ZX3000 Mk2			
Fidelity	CTM1400	ZX3000 Mk2			
Fidelity	CTM2000	ZX3000			
Fidelity	CTM2001	ZX3000			
Fidelity	CTM2002	ZX3000			
Fidelity	CTM2003RT	ZX3000			
Fidelity	CTM2003TX	ZX4200			
Fidelity	CTM200TX	ZX4200			
Fidelity	CTV14	ZX2000			
Fidelity	CTV14 Mk2	ZX3000	Triumph CTV8209		
Fidelity	CTV140	ZX2000			
Fidelity	CTV1404	ZX1411	Murphy M14R01		
Fidelity	CTV1404R	ZX4000			
Fidelity	CTV1404S	ZX4000			
Fidelity	CTV1405	ZX3000			
Fidelity	CTV1405S	ZX4000			
Fidelity	CTV140R	ZX4010			
Fidelity	CTV14R	ZX2000			
Fidelity	CTV14S	ZX2000/3000			
Fidelity	CTV20	ZX4120			



Finlux	51A1TX	Mono Plus 2 (MP2)		
Finlux	55A1TX	Mono Plus 2 (MP2)		
Finlux	80D28	4000		
Finlux	82R100	Nokia/Salora/Luxor MZ-chassis		
Finlux	9560RC	3000		
Finlux	FTS5510	1000		
Finlux	FTS6310	1000		
Finlux	FTS7110	1000		
Finlux	FTS7111	1000		
Fisher	CFB1410P	Sanyo 80P		
Fisher	CFB1810P	Sanyo 80P		
Fisher	CFB2144	Sanyo E2-B21		
GEC	C1402	ITT	CVC801	
GEC	C1403	ITT	PICO-1A	
GEC	C1404	ITT	PICO-1A	
GEC	C1405	Hitachi	NP84	
GEC	C1409	Hitachi 2176		
GEC	C1410	Tatung 161		
GEC	C1502	Decca	160	
GEC	C1503	Decca	161	
GEC	C1650	Hitachi	NP8CQ	
GEC	C1655	ITT	PICO-1A	
GEC	C1656	ITT	PICO-1A	
GEC	C1657	Hitachi	NP84	
GEC	C1659	Hitachi 2176		
GEC	C1818		PIL	
GEC	C2000	Hitachi 2176		
GEC	C2001	Decca	140	
GEC	C2002	Decca	140	
GEC	C2004	Decca	171	
GEC	C2005	Decca	171	
GEC	C2026H	PIL CHASSIS		
GEC	C2036	PIL CHASSIS		
GEC	C2041	2040		
GEC	C2055	Hitachi	NP8CQ	
GEC	C2057	Hitachi	NP8CQ	
GEC	C2058	Hitachi 208/222		
GEC	C2067H	Hitachi	NP81CQ	
GEC	C2069H	Hitachi	NP81CQ	
GEC	C2073	2040		
GEC	C2074	2040		
GEC	C2085	Hitachi 2024		
GEC	C2086	Hitachi 2024		
GEC	C2087	Hitachi	NP81CQ	
GEC	C2087H	Hitachi	NP83CQ	
GEC	C2089H	Hitachi	NP83CQ	
GEC	C2090H	Hitachi	NP83CQ	
GEC	C2093H	Hitachi	NP84CQ	
GEC	C2095	Hitachi 2176		
GEC	C2096H	DECCA 140		
GEC	C2097H	DECCA 140		
GEC	C2100	2040		
GEC	C2102	DECCA 170/180		
GEC	C2103	2040		
GEC	C2107	2040		
GEC	C2108	2040		
GEC	C2111	2110 Series		
GEC	C2112	2110 Series		
GEC	C2113	2110 Series		
GEC	C2115	2040		
GEC	C2118	2110 Series		
GEC	C2119	2110 Series		
GEC	C2120	2110 Series		
GEC	C2121	2110 Series		
GEC	C2136	2110 Series		
GEC	C2137	2110 Series		
GEC	C2140	2110 Series		
GEC	C2141	2110 Series		
GEC	C2147	2110 Series		
GEC	C2148	2110 Series		
GEC	C2149	2110 Series		
GEC	C2150	Decca 160		
GEC	C2151	Decca 160		
GEC	C2153	Decca 171		
GEC	C2154	Decca 171		
GEC	C2200	Hitachi 2176		
GEC	C2201	Decca 146		
GEC	C2202	Decca 140		
GEC	C2204	Decca 171		
GEC	C2205	Decca 171		
GEC	C2206	2110H		
GEC	C2217	20AX Mk1		
GEC	C2218	20AX Mk1		
GEC	C2219	2110H		
GEC	C2233	20AX Mk1		
GEC	C2236H	20AX Mk1		
GEC	C2255	Hitachi	NP8CQ	
GEC	C2257	Hitachi	NP8CQ	
GEC	C2260H	20AX Mk1		
GEC	C2267H	Hitachi	NP81CQ	
GEC	C2269H	Hitachi	NP81CQ	
GEC	C2285	Hitachi 2224		
GEC	C2286H	Hitachi	NP83CQ	
GEC	C2287H	Hitachi	NP83CQ	
GEC	C2287H	Hitachi 2224		
GEC	C2288H	Hitachi 2234	NP81CQ Mk2	
GEC	C2289H	Hitachi	NP83CQ	
GEC	C2290H	Hitachi 2036	NP83CQ	
GEC	C2295	Hitachi 2176		
GEC	C2296	Decca	140	
GEC	C2297	Decca	140	
GEC	C2501	Decca	180	
GEC	C2502	Decca	180	
GEC	C2601H	2110H		
GEC	C2611H	2110 Series		
GEC	C2626H	2110 Series		
GEC	C2627	20AX Mk1		
GEC	C2628	20AX Mk1		
GEC	C2640	20AX Mk2		
GEC	C2641	20AX Mk2		
GEC	C2645	20AX Mk2		
GEC	C2659H	Hitachi CBP260	NP9A	
GEC	C2661H	Decca	180	
GEC	C2695H	Hitachi CBP260	NP9A	
GEC	G9502	Decca	180	
Genexia	CTV1001	Akura CX10	Boots CTV10R	
Genexia	CTV1001	Nikkai Baby 10	Osaki P10R	
Genexia	CTV1001	Samsung I221R		
Genexia	CTV10	Goodmans Compact-110		
Goldstar	see LG			
Goldstar	see LG			
Goldstar	see LG			
Goodmans	1404(A)	Alba CTV840	also Bush 1404, Hinary HIT140RC	
Goodmans	1410	Ferguson TX805		
Goodmans	1418R	CP325		
Goodmans	1425RS	CP375		
Goodmans	1430R/W	Onwa		
Goodmans	1445RS	Orion chassis	remote 076R0DG040	
Goodmans	1450T	Onwa		
Goodmans	145TT	Orion 14A chassis		
Goodmans	1476TS	CP005	2003 around £85	
Goodmans	147TT	same as Alba CTV841	also Bush 1452T	
Goodmans	1490T-IB	Formenti FPC203 (PCB marked FPC230.1)	remote SF5, LOPTx 1142.1695, LOPTr BU	Tuning - hold [...] for >5 sec, this is the same button that bring MAIN menu if quickly pressed.
Goodmans	1495T-IB	Formenti FPC2002	2002 around £90 from Comet	
Goodmans	1790T		2003, £149	
Goodmans	2019R	Onwa		
Goodmans	2025RS	CP375		
Goodmans	2029T	Onwa		
Goodmans	2032	Nikkai NT20		











Granada	C51KX4	Toshiba 2100TB							
Granada	C51KX4	Toshiba 2103TB							
Granada	C51LH4	Hitachi C2114T							
Granada	C51LP6	Philips 2731							
Granada	C51LS2	Sanyo							
Granada	C51LS4	Sanyo							
Granada	C51LZ6	Nokia OEM							
Granada	C51LZ8	Nokia OEM							
Granada	C51MA5	Mitsubishi CT21A5ST							
Granada	C51MH4	Hitachi C214T							
Granada	C51MH6	Hitachi C2164TN							
Granada	C51MP6	Philips 21PT532A							
Granada	C51MP7	Philips 21522B							
Granada	C51MS2	Sanyo OEM							
Granada	C51MS4	Sanyo CB5146							
Granada	C51MS5	Sanyo EC1-B21	1997						
Granada	C51MT6	Ferguson D51ND							
Granada	C51MX3	Toshiba 2145DB							
Granada	C51MX4	Toshiba 2141TB							
Granada	C51MX6	Toshiba 2132DB							
Granada	C51MZ6	Finlux chassis 5000							
Granada	C51NH6	Hitachi C2146TN							
Granada	C51NN6	Panasonic TX21MN1							
Granada	C51NP4	Philips 21PT165B							
Granada	C51NP6	Philips 21PT442B/05	GR2.2						
Granada	C51NS4	Sanyo CB5156G							
Granada	C51NT6	Ferguson TX91							
Granada	C51PN4	Panasonic TX21S1T							
Granada	C51PN6	Panasonic TX21ND1							
Granada	C51PP4	Philips 21PT1532	Anubis A						
Granada	C51PS6	Sanyo 21D1							
Granada	C51PX6	Toshiba 2163DB							
Granada	C51RH6	Hitachi C2156TN							
Granada	C51RH7	Hitachi C2186TN							
Granada	C51RN4	Panasonic TX21S3T							
Granada	C51RP4	Philips 21PT1653	L6.2						
Granada	C51RS4	Sanyo 21MT2							
Granada	C51RS6	Sanyo 21BN1							
Granada	C51RX6	Toshiba 2173DB							
Granada	C56E24	Salora OEM							
Granada	C56E25	Salora OEM							
Granada	C56FZ1	Salora OEM							
Granada	C56FZ2	Salora OEM							
Granada	C56FZ4	Salora OEM							
Granada	C56FZ5	Salora OEM							
Granada	C56GZ5	Salora OEM							
Granada	C56NZ8	Nokia 6197UK							
Granada	C59EB7	Sanyo 2566							
Granada	C59EG5	Grundig 63375							
Granada	C59EK3	ITT 3576							
Granada	C59EK5	ITT 35467							
Granada	C59EK7	ITT 35767							
Granada	C59EP2	Philips 24CE4579	2B						
Granada	C59EP3	Philips 24CE3270	CP110						
Granada	C59EP5	Philips					Philips		
Granada	C59EP6	Philips 24CE3570	CP110						
Granada	C59EP3	Panasonic 2475							
Granada	C59ER6	Panasonic TX2472							
Granada	C59ER6	Panasonic 2464							
Granada	C59ER7	Panasonic TX2450							
Granada	C59ES3	Hitachi CPT2476							
Granada	C59ET5	Toshiba 255T							
Granada	C59ET7	Toshiba 258T							
Granada	C59EV1	Sharp 2448							
Granada	C59EV5	Selec 24567							
Granada	C59EV5	Sharp 2456							
Granada	C59EV6	Sharp 2449							
Granada	C59EV7	Selec 24487							
Granada	C59EV7	Selec 24569							
Granada	C59EV7	Sharp 2456							
Granada	C59EY3	Pye 59KE2703							
Granada	C59EY5	Pye 59KE2706							
Granada	C59EY6	Dynatron 106							
Granada	C59FK4	Panasonic TX2482							
Granada	C59FK5	Panasonic TX2482							
Granada	C59FP2	Philips 24CE3271	CP110						
Granada	C59FP3	Philips 24CE3271	CP110						
Granada	C59FP4	Philips 24CE3588	CP110						
Granada	C59FP5	Philips 24CE3578	CP110						
Granada	C59FP6	Philips 24CE3588	CP110						
Granada	C59FX7	Sony X25T							
Granada	C59FY5	Pye 59KE3785							
Granada	C59FZ4	Hitachi CPT2658	Salora L						
Granada	C59FZ6	Salora OEM							
Granada	C59FZ7	Hitachi C25P759							
Granada	C59GK4	Panasonic TX2492							
Granada	C59GK5	Panasonic TX24T1							
Granada	C59GK6	Panasonic TX24W1							
Granada	C59GP2	Philips 25GR3271							
Granada	C59GP4	Philips 25CE6570							
Granada	C59GP6	Philips 25GR6783							
Granada	C59GP7	Philips 25CE6574							
Granada	C59GS4	Sanyo CBP2552							
Granada	C59GX7	Toshiba 2590							
Granada	C59GY7	Pye 5637							
Granada	C59GZ6	Salora OEM							
Granada	C59GZ7	Hitachi C25P759							
Granada	C59HA4	Hitachi 5029							
Granada	C59HP6	Philips 25CE5764							
Granada	C59HP7	Philips 25GR9763							
Granada	C59HS4	Sanyo							
Granada	C59HY5	Pye 63KE6725							
Granada	C59HZ5	Luxor (Salora N)	6395				DeGraaf		
Granada	C59HZ6	Salora	OEM				Finlandia		
Granada	C59JG4	Grundig 6346							
Granada	C59JG7	Grundig 6356							
Granada	C59JP4	Philips 25CE6570							
Granada	C59JP5	Philips 25ST1550							
Granada	C59JP6	Philips 25ST1724							
Granada	C59JP7	Philips 5760							
Granada	C59JP8	Philips 1750							
Granada	C59JP9	Philips 1724							
Granada	C59JY4	Pye 6772							
Granada	C59JZ5	Nokia	N-chassis				Finlandia		
Granada	C59KP6	Philips 25ST2761							
Granada	C59KZ6	Nokia 25N8C	Eurostereo 2 B-F				Finlandia		
Granada	C59LH4	Hitachi C2514T							
Granada	C59LH7	Hitachi C2574TN							
Granada	C59LP6	Philips 25PT482A							
Granada	C59LZ6	Nokia	OEM				Finlandia		
Granada	C59LZ8	Nokia	OEM				Finlandia		
Granada	C59MA4	Mitsubishi CT25M3TX							
Granada	C59MA6	Mitsubishi CT25A5ST							
Granada	C59MH6	Hitachi C2565TN							
Granada	C59MN6	Panasonic TX25X1							
Granada	C59MN7	Panasonic TX25X1DP							
Granada	C59MP5	Philips 25410A							
Granada	C59MP7	Philips 25PT532B							
Granada	C59MP8	Philips 25822AS							
Granada	C59MX3	Toshiba 2545DB							
Granada	C59MX5	Toshiba 2535DB							
Granada	C59MX7	Toshiba 2539DB							
Granada	C59MZ5	Nokia	OEM				Finlandia		
Granada	C59MZ6	Finlux (Nokia)	5000 chassis						
Granada	C59MZ8	Nokia 5000 with built-in sat. receiver					Finlandia		
Granada	C59NA4	Mitsubishi CT25M5BT							
Granada	C59NH6	Hitachi C2546TN							
Granada	C59NH7	Hitachi C2576TNY							
Granada	C59NN6	Panasonic TX25MD1							

Granada	C59NN7	Panasonic TX25AD1DP							
Granada	C59NP5	Philips 25632AC							
Granada	C59NP6	Philips 25421							
Granada	C59NP7	Philips 25727BP							
Granada	C59NP8	Philips 259021							
Granada	C59NX5	Toshiba 2555DB							
Granada	C59NX6	Toshiba 2552DB							
Granada	C59PH7	Hitachi C2548TN							
Granada	C59PS4	Sanyo 25MT1							
Granada	C59PX6	Toshiba 2563DB							
Granada	C59RH6	Hitachi C2556TN							
Granada	C59RH7	Hitachi C2586TN							
Granada	C59RN6	Panasonic TX25MD3							
Granada	C59RP6	Philips 25PT4523							
Granada	C59RS4	Sanyo 25MT2							
Granada	C66EB6	Sanyo 2866							
Granada	C66EB7	Sanyo 2865							
Granada	C66EK7	ITT 3896							
Granada	C66EK7	ITT 38767							
Granada	C66EP1	Philips 7690							
Granada	C66EP4	Philips 27CE3290							
Granada	C66EP5	Philips 27CE3598							
Granada	C66EP6	Philips27CE3590							
Granada	C66ET5	Toshiba 289T							
Granada	C66EV1	Sharp 2848							
Granada	C66EV3	Seleco 28362							
Granada	C66EV5	Sharp 2836							
Granada	C66EV7	Nordmende 9387							
Granada	C66EV7	Nordmende 2401S							
Granada	C66EV7	Seleco 28487							
Granada	C66EvV1	Sharp 2248							
Granada	C66EY5	Dynatron D820							
Granada	C66EY5	Pye 820							
Granada	C66EZ4	Salora	OEM					Finlandia	
Granada	C66EZ5	Salora	OEM					Finlandia	
Granada	C66FK7	ITT 3898							
Granada	C66FP7	Philips 27CE7593							
Granada	C66FP7	Pye 7593							
Granada	C66FR5	Panasonic XC78							
Granada	C66FR7	Panasonic XC78							
Granada	C66FY5	Pye 68KE3985							
Granada	C66FZ1	Salora	OEM					Finlandia	
Granada	C66FZ2	Salora	OEM					Finlandia	
Granada	C66FZ4	Salora	OEM					Finlandia	
Granada	C66FZ5	Salora	OEM					Finlandia	
Granada	C66FZ6	Salora	OEM					Finlandia	
Granada	C66FZ7	Salora	OEM					Finlandia	
Granada	C66GK6	Panasonic TX28W1							
Granada	C66GK7	Panasonic TX28A1							
Granada	C66GY4	Pye 27CE3598							
Granada	C66GZ6	Salora	OEM					Finlandia	
Granada	C66GZ7	Salora	OEM					Finlandia	
Granada	C66HK6	Panasonic TX28W1							
Granada	C66HP5	Philips 6590							
Granada	C66HZ5	Luxor 7005	Salora N					DeGraaf	
Granada	C66JZ6	Salora	Salora M					Finlandia	
Granada	C66JG6	Grundig 7460							
Granada	C66JS6	Sanyo CBP2876							
Granada	C66JZ5	Nokia	N-chassis					Finlandia	
Granada	C66Kp6	Philips 25ST2781							
Granada	C66KZ6	Nokia 28N8C	Eurostero 2 B-F						
Granada	C66LH7	Hitachi C2874TN							
Granada	C66LP6	Philips 28PT482A							
Granada	C66LZ6	Finlux 5000	Nokia 5000					Finlandia	
Granada	C66LZ8	As C66LZ6 with built in sat rx	Nokia 5000					Finlandia	
Granada	C66MH6	Hitachi C2865TN							
Granada	C66MN6	Panasonic TX28X1							
Granada	C66MN7	Panasonic TX28X1DP							
Granada	C66MP6	Philips 28PT512A							
Granada	C66MP7	Philips 28PT532B							
Granada	C66MP8	6770C							
Granada	C66MZ6	Finlux	5000 chassis					Finlandia	
Granada	C66MZ8	Finlux	5000 with built-in sat. receiver					Finlandia	
Granada	C66NH6	Hitachi C2846TN							
Granada	C66NH7	Hitachi C2976TNY							
Granada	C66NP6	Philips 284521							
Granada	C66NX7	Toshiba 2857DB							
Granada	C66PH7	Hitachi C2848TN							
Granada	C66PX7	Toshiba 2857DB							
Granada	C66RH7	Hitachi C2886TN							
Granada	C66RN6	Panasonic TX28MD3							
Granada	C66RP6	Philips 28PT4523							
Granada	C66RX7	Toshiba 2877DB							
Granada	C67KP9	Philips 28ML8916							
Granada	C67KP9	Philips 28ML8762							
Granada	C67MP9	Philips 28PW632A							
Granada	C67MZ7	Nokia 7296UK							
Granada	C67NP8	Philips 28PW631							
Granada	C67NP9	Philips 28PW632B							
Granada	C68LH7	Hitachi C2984TN							
Granada	C68MP8	Philips 29PT822B							
Granada	C68MX7	Toshiba 2939DB							
Granada	C68NN6	Panasonic TX29AD1							
Granada	C68NN7	Panasonic TX29AD1DP							
Granada	C68NP5	Philips 29PT832A							
Granada	C68NP7	Philips 29PT727B							
Granada	C68NP8	Philips 29PT9021							
Granada	C68NP9	Philips 29PT828CP							
Granada	C68RN7	Panasonic TX29AD2DP							
Granada	C78MP9	Philips 32PW962							
Granada	C78MT6	Ferguson D78N							
Granada	C78NP9	Philips 32PW9631							
Granada	C78PP9	Philips 32W9612							
Granada	C80MX7	Toshiba 3339DB							
Granada	CV66MX5	Toshiba 2835DB							
Granada	D16VP1	Philips KT3 16C928							
Granada	D16VP2	Philips G11							
Granada	D16VY3	Philips KT3							
Granada	D20VP3	Philips KT3							
Granada	D20VY3	Philips KT3							
Granada	D22VP3	Philips G11							
Granada	D22WP1	Philips K30							
Granada	D22XP5	Philips K30							
Granada	D22XY5	Philips K30							
Granada	D26TP2	Philips G11							
Granada	D26WP3	Philips K30							
Granada	D26XY5	Philips K30							
Grundig	14GR3000	TV/DV/DVCR	2004 £120						
Grundig	6100	CUC42							
Grundig	7600	CUC740	8600						
Grundig	1514/1614	GSC100	6415						
Grundig	1644GB	GSC200							
Grundig	1645GB	GSC200							
Grundig	2463/3102/3103/3104	CUC40	4102/4103/4104	6232					
Grundig	28WF100	Orion 8500	2003, 100Hz, £399						Serv.mode: switch on while holding MENU on front panel, when red LED is on release MENU and press STBY on R/C.
Grundig	28XKB GW7060	Orion 2500							
Grundig	32EKB GW8260	Orion chassis	around £500						
Grundig	32WF100	Orion 8500							serv.mode: see 28WF100
Grundig	32WF8000	4400, Pureflat CRT	2003, £429						
Grundig	3302/3303/3304/3305	CUC52c	3306/3307/3308						3362/3403/3404
Grundig	3302/3303/3304/3312	CUC50	3313/3314/3402/						3403/3404/6630
Grundig	4245GB	GSC200							
Grundig	4445GB	GSC200							
Grundig	6245GB	GSC200							
Grundig	6445/1645	GSC200							
Grundig	6445GB	GSC200							
Grundig	70WF8000	2500 (Orion chassis)	2003 around £400						serv.mode: see W70-2100
Grundig	C2402	CUC51KT							
Grundig	C8400	CUC70KT	C7402						C7400



Grundig	SE 7087 TOP/LOG	CUC6360			
Grundig	SE 7216/8 DOLBY	CUC1838	2000, Multistandard B/G, D/K, I		TP912C
Grundig	SE 7277 text	CUC6331			
Grundig	SE 7287 TOP/LOG	CUC6365			
Grundig	SE 8216/9	CUC1984 (DigI6)	100Hz, PAL/SECAM I, B/G, D/K, L, M		
Grundig	ST 1770 TOP	CUC6360			
Grundig	ST 1772 TOP/LOG	CUC6365			
Grundig	ST 770 TOP/LOG	CUC6360			
Grundig	ST 770/9 TOP	CUC6360	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST3022RK	CUC731KT			
Grundig	ST55-710	CUC2020			
Grundig	ST55-715	CUC2021			
Grundig	ST55-725	CUC7350			
Grundig	ST55-725a	CUC2020			
Grundig	ST55-725b	CUC2021			
Grundig	ST55-730 GB/DOLBY	CUC2021N	2000, Multistandard B/G, D/K, I		TP715 or TP750C
Grundig	ST55-730 S/GB/DOLBY	CUC2021N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST55-734GB/DOLBY	CUC2103 (similar to CUC2100)	2001, Pal I		TP750C
Grundig	ST55-734GB/DOLBY	CUC2121 (similar to CUC2100)	2002, Pal I		TP750C
Grundig	ST55-750/9	CUC7350			
Grundig	ST55-798	CUC7350			
Grundig	ST55-801/9	CUC7350			
Grundig	ST55-825 FT/GB	CUC2021	1999, Multistandard B/G, D/K, I		TP715 or TP750C
Grundig	ST55-834 GB/DOLBY	CUC2021N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST55-876	CUC7350	Matsui 21V1N		
Grundig	ST55-894GB/DOLBY	CUC2103 (similar to CUC2100)	2001, Pal I		TP750C
Grundig	ST55-894GB/DOLBY	CUC2121 (similar to CUC2100)	2002, Pal I		TP750C
Grundig	ST63-2103/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST63-270/8 IDTV	CUC1838 or CUC1825			
Grundig	ST63-400/4 DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST63-4101/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST63-660	CUC5360			
Grundig	ST63-700 NIC/TOP	CUC2030N	1997, Multistandard B/G, D/K, I		TP713
Grundig	ST63-700A NIC/FT	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-701 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-702 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-702/8 Dalby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST63-706 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-712 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-713/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST63-720 text	CUC6330			
Grundig	ST63-725/8 FT/GB	CUC6330			
Grundig	ST63-750/9 TOP	CUC6360	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST63-755/9 TOP	CUC6360	1996, Multistandard		TP720
Grundig	ST63-760/9	CUC7861			
Grundig	ST63-761/9 TOP	CUC6365	1996, Multistandard		TP720
Grundig	ST63-775DPL	CUC2040			
Grundig	ST63-780 NIC/TOP	CUC2030N	1997, Multistandard B/G, D/K, I		TP713
Grundig	ST63-782 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST63-800/9 TOP	CUC6360	1996, Multistandard		TP720
Grundig	ST70-109 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-2102 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-2103/8 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-2104/8 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-282/8	CUC1838			
Grundig	ST70-284/8 DOLBY	CUC1837	2000, Multistandard B/G, D/K, I		
Grundig	ST70-292/8 DOLBY	CUC1837	2000, Multistandard B/G, D/K, I		TP100C
Grundig	ST70-300/8 DOLBY	CUC1837	2000		
Grundig	ST70-5001 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-5101/8 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-5108/6 DOLBY	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-602 NIC	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-700 NIC	CUC2030N	1997, Multistandard B/G, D/K, I		TP713
Grundig	ST70-700 S/GB/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-700A NIC/FT	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-701 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-702 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-703 NIC	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-705 NIC	CUC2030N	1998, Multistandard B/G, D/K, I		TP715
Grundig	ST70-705/8 text	CUC6330			
Grundig	ST70-705/9 TOP	CUC6360			
Grundig	ST70-705/9 TOP/LOG	CUC6360			
Grundig	ST70-706 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-707 NIC/FT	CUC2030N	1999		TP715
Grundig	ST70-708 GB/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-712 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-712/5 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-713/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-720 text	CUC6330			
Grundig	ST70-725/8 FT/GB	CUC6330			
Grundig	ST70-728 text	CUC6330			
Grundig	ST70-730 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-740 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-741/8 Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-750/9 TOP	CUC6360	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST70-755/5 TOP	CUC6360	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST70-760 TOP/LOG	CUC6361			
Grundig	ST70-770 text	CUC6330			
Grundig	ST70-775 DPL	CUC2040			
Grundig	ST70-778 text	CUC6330			
Grundig	ST70-780 NIC/TOP	CUC2030N	1997, Multistandard B/G, D/K, I		TP713
Grundig	ST70-782 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-782 NIC/TOP	CUC2030N	1999, Multistandard B/G, D/K, I		TP715
Grundig	ST70-800/9 TOP	CUC6360	1996, Multistandard		TP720
Grundig	ST70-809/9	CUC6360	1996, Multistandard		TP720
Grundig	ST70-822/4 DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-829 NIC/DOLBY	CUC2050N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	ST70-839 NIC/DOLBY	CUC2050N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	ST70-853 NIC	CUC2050N	1999, Multistandard B/G, D/K, I		TP800
Grundig	ST70-854 PIP/DOLBY	CUC2050N	2000, Multistandard B/G, D/K, I		TP810C
Grundig	ST70-875	CUC2059N			
Grundig	ST70-875 DPL/FT	CUC2050			
Grundig	ST70-898/8A Dolby	CUC2130M	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST70-900 NIC	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-900/4 DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-904 NIC/DOLBY	CUC2030N	2000, Multistandard B/G, D/K, I		TP750C
Grundig	ST70-95 TOP	CUC6360			
Grundig	ST72-161	CUC1822			
Grundig	ST72-2104/8	CUC2130 or CUC2131M (depends on date of m	2001, Multistandard B/G, D/K, I		TP150C
Grundig	ST72-760 text	CUC6331			
Grundig	ST72-760/8 text	CUC6331			
Grundig	ST72-760/9DPL	CUC7861			
Grundig	ST72-762/9 TOP	CUC6365	1995, Multistandard B/G, D/K, I		TP720
Grundig	ST72-860 NIC	CUC2031N	1997, Multistandard B/G, D/K, I		TP800
Grundig	ST82-774	CUC7890			
Grundig	ST84-2202	CUC2062N			
Grundig	ST84-796/9 TOP	CUC6380	2000, Multistandard B/G, D/K, I		TP150C
Grundig	ST84-896 NIC	CUC2080N			
Grundig	ST95-575	CUC5836	1999, Multistandard B/G, D/K, I		TP810C
Grundig	Sydney ST872 text	CUC6331			
Grundig	Sydney ST872/8 text	CUC6331			
Grundig	T51-070	CUC7301	Matsui 20V1T		
Grundig	T51-071	CUC7301			
Grundig	T51-1101/5TXT	Beko 12.4			
Grundig	T51-2101MV	CUC2103	similar to CUC2100		
Grundig	T51-3101MV	CUC2103	similar to CUC2100		
Grundig	T51-720 text GB	CUC7303			
Grundig	T51-730	CUC7301			
Grundig	T51-830 Multi/ICN	CUC2003H	1998, Multistandard B/G, D/K, I		TP715 Hotel
Grundig	T55-1010	Orion chassis	2001	Remote 076R0DG200	serv. mode: switch on, set pin code removal: switch to stby, hold "7" on R/C for 6 sec
Grundig	T55-1020	Orion chassis M3K5-07G, PCB TMA518A	2001, around £60	Remote 076R0DG200	serv. mode: see T55-1010 pin code removal: see T55-1010
Grundig	T55-1101/5 TXT	Beko 12.4			
Grundig	T55-1120	Orion chassis	2004, £90-£100		PCB TMC562A, Micro 195C6PCL0ECF010A (OECF010A)
Grundig	T55-2101MV	CUC2103	similar to CUC2100		
Grundig	T55-3020	E9 or E12 check on PCB (Evelux)			
Grundig	T55-340	CUC3400	P37-342GB		
Grundig	T55-340/90	CUC3490			
Grundig	T55-4101GB	CUC2103	similar to CUC2100 , 2001 Pal I		TP750C
Grundig	T55-4104 MHOT/C/L	CUC2103H	2002, Multistandard B/G, D/K, I		TP800Hd

Grundig	T55-540	CUC5301			
Grundig	T55-645	G1000			
Grundig	T55-730 text/GB	CUC7301	1996, Pal I	TP711	
Grundig	T55-731	CUC7301			
Grundig	T55-750	CUC7350			
Grundig	T55-830 FT/GB	CUC7303	2000, Pal I	TP750C	
Grundig	T55-830 Multi MegASIS	CUC2003H	1998, Multistandard B/G, D/K, I	TP800 Hotel	
Grundig	T55-830 Multi/CN	CUC2003H	1998, Multistandard B/G, D/K, I	TP715 Hotel	
Grundig	T55-930 FT/GB	CUC7303	2000, Pal I	TP750C	
Grundig	T6335	CUC5310			
Grundig	T6348	CUC6310			
Grundig	T63-530	CUC5310			
Grundig	T63-539	CUC5310			
Grundig	T63-640	CUC6310			
Grundig	T70-1020 (28BNK)	4400 (Orion chassis)			
Grundig	T70-1020A (28EKB)	2500 (Orion chassis)	Micro TDA9363, power TEA1504, frame T	LOPTx 2 types used. One marked 40348A-16 (part S031010000), another marked 40348A-20 (part S031010030). Not in	
Grundig	T70-1021	E12 (Evelux)		Serv.mode: press TV, i, STOP withing 5 sec from switching set on. To exit press STOP. Values are stored automatically	
Grundig	T70-1022	2500 or 2550 ??? / unconfirmed			
Grundig	T70-340	CUC3410			
Grundig	T70-440/1 TEXT/GB	CUC4410	CUC4410 similar to CUC4411		
Grundig	T70-449	CUC4411			
Grundig	T70-540	CUC3400			
Grundig	T70-540F	CUC3400			
Grundig	T70-640	CUC6310			
Grundig	T70-755	CUC6360			
Grundig	TVR3710 GB	Philips Turbo deck	1997		
Grundig	TVR3715	Orion chassis			
Grundig	TVR3720 GB	Philips Turbo deck	1997		
Grundig	TVR3725 FT/GB	Orion chassis	PCB marked TM9123A, video PCB VM9171B		
Grundig	TVR3730 Text/GB	Philips Turbo deck	1998		
Grundig	TVR3740 FT/GB	CP425 (Daewoo CP420 , K-Mecha Deck)	1999	PSU I801 STRS5707, I807 TOP210	
Grundig	TVR3805	Orion chassis (no TEXT)	PSU VPA150A, video PCB VMA230A	PIN code: Enter any pin code 3 times until "PIN CODE ERROR" is displayed, then hold "Vol-" on the unit and "7" on R/C	
Grundig	TVR3815(A)	Orion chassis (like TVR3805 but with TEXT)	PIN code: see TVR3805		
Grundig	TVR3820	Orion chassis	PCB marked TMA523A, video PCB VMA23	Micro OEC0113B	
Grundig	TVR4500	CUC4100	PIN code: Disconnect the cable and pull the video recorder out of the cabinet towards the back, connect the unit to the mains and switch it on, short the service test		
Grundig	TVR4510	CUC4100	PIN code - see TVR4500		
Grundig	TVR5100 GB	Philips Turbo deck	1997		
Grundig	TVR5120	Orion chassis	PCB marked TMA523A, video PCB VMA239A.		
Grundig	TVR5130 Text/GB	Philips Turbo deck	1998		
Grundig	TVR5504	CUC3500			
Grundig	TVR5510	CUC4100	PIN code - see TVR4500		
Grundig	TVR5540 FT/GB	CP425 (Daewoo CP420 , K-Mecha Deck)	1999	PSU I801 STRS5707, I807 TOP210	
Grundig	W56-2020	E12 (Evelux)	2003, £230	Serv.mode: press TV, i, STOP withing 5 sec from switching set on. To exit press STOP. Values are stored automatically	
Grundig	W70-2020	E12 (Evelux)	2003, Currys £199.99	Serv.mode: press TV, i, STOP \remote PR106	
Grundig	W70-2030	E9A(Made in Slovenia 2001/2002 by Evelux)	Micro SDA555XFL, LOPTx 1372.9005A	remote PR106 £14.97 incl. Options: Op1-20, Op2-91, Op3-00, Op4-10, Op5-04	
Grundig	W70-2100	2550 (Orion chassis) or 8500(on later sets???)	2004, Currys £269.99	Serv.mode: switch on while holding MENU on front panel, when green LED is on release MENU and press STBY on R/C	
Grundig	W82-2030	E9A(Made in Slovenia 2001/2002 by Evelux)	LOPTx 1372.9005A	Serv.mode: press TV, i, STOP withing 5 sec from switching s	remote PR106
Grundig	W82-2030A	E12 (Made in Slovenia by Evelux)	2003		
Grundig	WF56-3020 (24AF)	2550 (Orion chassis)		serv.mode: see W70-2100	
Grundig	WF70-3020	Orion chassis, same as Matsui 28WN05A	PCB TMA520B, sub-PCB TMA521B	LOPTx 043228005R LOPTx 2SD2499, Micro OECF003B	
Grundig	WF82-3020	4400 (Orion chassis)		remote S068244000	
Grundig	WF82-3020A	2500 (Orion chassis)			
Grundig	XS 55/9	CUC7350			
Grundig	XS 63/8 FT/GB	CUC5360			
Grundig	XS 63/81	CUC6330			
Grundig	XS 70/81	CUC6330			
Hanwood	CT14	Fidelity ZX4000			
Hanwood	CTV1401	Fidelity ZX4000			
Hanwood	Hat14	Fidelity ZX4000			
Hanwood	HNI6696BLK	chassis F11	Goodmans 2575 2875 3375		
Hanwood	HTV3604R	Alba CTV1400	Bush CTV1400		
Hanwood	HTV9014R	Osume CTV1484R			
Hanwood	HTV9014R	Solarvox 141			
Hanwood	HTV9425RTN	Bush 2857NTX			
Hinari	CT15	Goodmans 5160TT	Hinari ST200	Hinari TVA1	
Hinari	CT16	Goodmans Compact-100			
Hinari	CT4	Osaki P20H			
Hinari	CT4 / 5	Solarvox CML14			
Hinari	HIT140RC	Alba CTV840	also Bush 1402, Goodmans 1404(A)		
Hinari	HIT14R	Orion 14A chassis			
Hinari	HIT14RC	Alba CTV840			
Hinari	HIT14S (HIT14T)	Orion 14A chassis			
Hinari	ST200	Hinari CT15			
Hinari	Traveller	Nikkai Baby 10			
Hinari	TVA1	Hinari CT15	Nikkai TLG101		
Hinari	VTV200	Goodmans 1560TT	Hinari CT15		
Hitachi	C1410R/T	MONOPLUS-90			
Hitachi	C1411R/T	Daewoo CP330			
Hitachi	C1420VT	Combi ECO Philips	also see Mitsubishi CT14MV1B	Child lock. PIN - press Vol+, Vol-, Pr-, Pr+ followed by OK.	
Hitachi	C1421R/T	Daewoo CP375			
Hitachi	C1422R/RS	F1R (Tatung F series)	S-silver		
Hitachi	C1422T/TS	F1Y (Tatung F series)	T-text, S-silver		
Hitachi	C1424R/T	Daewoo CP185			
Hitachi	C1426R	11AK30	2003		
Hitachi	C1432TB/TY	see C1422T (F1Y chassis, Tatung F series)	T-text, B-blue, Y-yellow		
Hitachi	C14P216	G8Q			
Hitachi	C14-P216	G8Q/P	G7P Mk2		
Hitachi	C14-P218	G8Q/P	G7P Mk2		
Hitachi	C15-P218	Salora L			
Hitachi	C1705T	G7PS/L			
Hitachi	C1719T	G7PS/L			
Hitachi	C2055H (GEC)	NP8CQ			
Hitachi	C2057H (GEC)	NP8CQ			
Hitachi	C2114R/T-311	G7PS3	1993		
Hitachi	C2114RE(TE)	similar to C2117T	1997		
Hitachi	C2117T	similar to C2114TE(RE) <not "C2114T" !>	1997		
Hitachi	C2118R/T	G7PS2	1990		
Hitachi	C2119R/T	G7PS/2			
Hitachi	C2121R	Daewoo CP375	1997		
Hitachi	C2121T-TEXT	Daewoo CP375	1997		
Hitachi	C2122T	F4Y (Tatung F series)	1998		
Hitachi	C2125S/T	11AK19K, 11AK19Y4	2000		
Hitachi	C2126S	11AK30	2002		
Hitachi	C2133MN	S3-M4 chassis (PAL-SECAM-NTSC)			
Hitachi	C2133TN	STEREO PLUS			
Hitachi	C2135MN	S3-M4 chassis (PAL-SECAM-NTSC)			
Hitachi	C2142N/S	11AK19K	2000		
Hitachi	C2143S	11AK30	2002		
Hitachi	C2144S	11AK30	2002		
Hitachi	C2146TN	A4	1995		
Hitachi	C2156TN	A7	1998		
Hitachi	C2164TN	G10Q			
Hitachi	C2166TN	A4			
Hitachi	C2186TN	A7	1998		
Hitachi	C2196	G8Q/P			
Hitachi	C2196	G8Q/P			
Hitachi	C21F45N	V2E	2000		
Hitachi	C21P226	G8Q/P			
Hitachi	C21P228	G8Q/P			
Hitachi	C21P518	G8Q/P			
Hitachi	C21P819	G8Q/P			
Hitachi	C2255H (GEC)	NP8CQ			
Hitachi	C2257H (GEC)	NP8CQ			
Hitachi	C24W1TN	A7	1998		
Hitachi	C24W410SN	A7	2000/2001		
Hitachi	C24W430N-311	A7	2000/2001		
Hitachi	C24W511TN	A7	2000/2001		
Hitachi	C2509R/T	G7PS/L			
Hitachi	C2514T	G7PS3S	1993		
Hitachi	C2514TZ-311	G7PS3S			
Hitachi	C2514TE		1997		
Hitachi	C2519R/T	G8Q			
Hitachi	C2524R/T	G7PS/L	1991		
Hitachi	C2544TN	G10Q	1992		
Hitachi	C2546TN	A4	1995		
Hitachi	C2547TN	A4			
Hitachi	C2548TN	A6	1997		
Hitachi	C2556TN	A7	1998		
Hitachi	C2557N	V2E	2000		



Hitachi	CPT1492	NP84C2							
Hitachi	CPT1493	NP84C2							
Hitachi	CPT1494	NP84C2							
Hitachi	CPT1497	NP84C2							
Hitachi	CPT1499	NP84C2							
Hitachi	CPT1556	Salora L							
Hitachi	CPT1557	Salora L							
Hitachi	CPT1558	Luxor 18036549							
Hitachi	CPT1624	NP82CQ							
Hitachi	CPT1626	NP82CQ							
Hitachi	CPT1644	NP84CQ							
Hitachi	CPT1646	NP84CQ							
Hitachi	CPT1646R	NP84CQ							
Hitachi	CPT1657	NP8C							
Hitachi	CPT1674	NP84CQ/4							
Hitachi	CPT1676	NP84CQ/4							
Hitachi	CPT2016	NP81CQ/2							
Hitachi	CPT2024	NP82CQ	GEC C2086						
Hitachi	CPT2026	NP83CQ							
Hitachi	CPT2028	NP83CQ							
Hitachi	CPT2036	NP83CQ	GEC 2090 / C2295						
Hitachi	CPT2038	NP83CQ							
Hitachi	CPT2044	NP83CQ/2	GEC2294H						
Hitachi	CPT2046	NP83CQ/2	GEC2294H						
Hitachi	CPT2048	NP83CQ/2							
Hitachi	CPT2050	Salora J 22J40							
Hitachi	CPT2051	NP80CR	Expert 2061						
Hitachi	CPT2055	NP80C							
Hitachi	CPT2060	Salora J							
Hitachi	CPT2066	NP85CQ/2							
Hitachi	CPT2068	NP85CQ/2							
Hitachi	CPT2071	NP80CR							
Hitachi	CPT2074	NP83CQ/2							
Hitachi	CPT2076	NP83CQ/2							
Hitachi	CPT2078	NP83CQ/2							
Hitachi	CPT2091	NP83CQ							
Hitachi	CPT2118	G6P							
Hitachi	CPT2128	G7P/2							
Hitachi	CPT2138	G7PS/2							
Hitachi	CPT2158	NP85CQ/2							
Hitachi	CPT2174	G6P							
Hitachi	CPT2176	G6P	GEC C2095 / C2200 / C2295						
Hitachi	CPT2178	G6P							
Hitachi	CPT2188	Salora K							
Hitachi	CPT2196	G8Q/P							
Hitachi	CPT2198	G8Q/P							
Hitachi	CPT2210	NP81CQ/2							
Hitachi	CPT2216	NP81CQ/2							
Hitachi	CPT2218	NP81CQ/2							
Hitachi	CPT2224	NP81CQ/2	GEC C2085 / C2285 / C2288						
Hitachi	CPT2226	NP81CQ/2	GEC C2286						
Hitachi	CPT2228	NP83CQ/2							
Hitachi	CPT2234	NP83CQ	GEC 2288H				GEC2089H		
Hitachi	CPT2236	NP83CQ							
Hitachi	CPT2238	NP83CQ							
Hitachi	CPT2244	NP83CQ/2	GEC2294H						
Hitachi	CPT2246	NP83CQ/2	GEC2294H						
Hitachi	CPT2248	NP83CQ/2							
Hitachi	CPT2250	Salora J							
Hitachi	CPT2260	Salora J	IPSALO-2						
Hitachi	CPT2274	NP83CQ/2							
Hitachi	CPT2276	NP83CQ/2							
Hitachi	CPT2278	NP83CQ/2							
Hitachi	CPT2476	G6P							
Hitachi	CPT2478	G6P							
Hitachi	CPT2488	Salora K							
Hitachi	CPT2508	G7P MK2							
Hitachi	CPT2524	G7P/2							
Hitachi	CPT2528	G7P							
Hitachi	CPT2538	G7P MK2							
Hitachi	CPT2550	Salora J							
Hitachi	CPT2568	NP86LUQ/2							
Hitachi	CPT2578	G8Q/P							
Hitachi	CPT2596	G8Q/P							
Hitachi	CPT2598	G8Q/P							
Hitachi	CPT2598A	G8Q							
Hitachi	CPT2625	Sakora J							
Hitachi	CPT2626	NP83CQ							
Hitachi	CPT2650	Salora J							
Hitachi	CPT2656	Salora L							
Hitachi	CPT2658	Salora L							
Hitachi	CPT2660	Salora J	IPSALO-2						
Hitachi	CPT2808	G7P-MK2							
Hitachi	CPT2888	Salora K							
Hitachi	CPT3308	G6P							
Hitachi	CPT5908	Salora M							
Hitachi	CPT6608	Salora M							
Hitachi	CPV2055	NP80C							
Hitachi	CRP143	NP6C							
Hitachi	CRP146	PAL4							
Hitachi	CRP147	PAL4							
Hitachi	CRP148	PAL4							
Hitachi	CTP202	PAL4							
Hitachi	CTP203	NP6C							
Hitachi	CTP205	PAL4							
Hitachi	CTP206	PAL4							
Hitachi	CTP208	NP8CQ							
Hitachi	CTP209	PAL4							
Hitachi	CTP213	NP6C							
Hitachi	CTP215	NP6C							
Hitachi	CTP216	NP6C							
Hitachi	CTP217	NP6C							
Hitachi	CTP230	NP8C							
Hitachi	CWP132	NP6C							
Hitachi	CWP300	NP8CQ							
Hitachi	D36WF840N	D8 (A8 plus digibox but without feature box)	2001						
Hitachi	GIRD3000	USAT001							
Hitachi	GRD100	OMNI							
Hitachi	P26	SJ							
Hitachi	P27	SX							
Hitachi	P27FM	SX							
Hitachi	P32	SV							
Huanayu	37C2	similar to Hitachi NP82CQ							
ITT	1530HS	EUROMONO 1					HOTEL		
ITT	1730HS	EUROMONO 1					HOTEL		
ITT	2130HS	EUROMONO 1					HOTEL		
ITT	3678UK	COMPACT D							
ITT	3688UK	COMPACT D							
ITT	3878UK	COMPACT D							
ITT	3888UK	COMPACT D							
ITT	3988MS	DIGI B 110							
ITT	848C	COMPACT B							
ITT	Compact B Mk2	CT3425 / CT3437	CT3548				FX3448		
ITT	Compact D2 FST	ST25TX							
ITT	Core 110*	5520 / 6320 / 7140							
ITT	Core 2	CP3128							
ITT	CP2212	CVC1110/12							
ITT	CP2342	CVC1110/12 PICO 1A							
ITT	CP2352	CVC1110/12 PICO 1A							
ITT	CP3104	PICO S							
ITT	CP3104/16	PICO S/2							
ITT	CP3106	MONOPRINT A							
ITT	CP3120	ZX4200							
ITT	CP3125/T	PICO S/2-3							
ITT	CP3126	MONOPRINT B							
ITT	CP3128	CORE 2 90DEG							
ITT	CP3200	PICO 1A							
ITT	CP3204	PICO S/2222-3							
ITT	CP3210	PICO A FS							



ITT	CP3225	PICO S+S/2							
ITT	CP3225/1	PICO S/3							
ITT	CP3228	MONOPRINT B							
ITT	CT2500	CVC1175							
ITT	CT2500/2	PICO 1ST/2							
ITT	CT2512	CVC1200							
ITT	CT2512/2	MINI 2 90DEG FS							
ITT	CT2600	CVC1210/15	MINI 2 110DEG STD						
ITT	CT2601	COMPACT 80R DST							
ITT	CT2612	CVC1210/15							
ITT	CT2612/2	MINI 2 110DEG FS							
ITT	CT2613	COMPACT 80R 110DEG							
ITT	CT2700	MINI 2 110DEG STD							
ITT	CT2701	COMPACT 80R DST							
ITT	CT2712	CVC1200	MINI 2 110DEG FS						
ITT	CT2713	COMPACT 80R							
ITT	CT3306	MONOPRINT A							
ITT	CT3307	MONOPRINT A							
ITT	CT3314M	MONOPRINT A							
ITT	CT3315	PICO S-S3							
ITT	CT3325	PICOS2-S3							
ITT	CT3326	MONOPRINT B							
ITT	CT3327	MONOPRINT B							
ITT	CT3414M	80R 110DEG							
ITT	CT3415	80R 110DEG							
ITT	CT3425	80R 110DEG							
ITT	CT3426	COMPACT B							
ITT	CT3435	COMPACT 80R 90DEG							
ITT	CT3436	COMPACT 80R 90DEG							
ITT	CT3437	COMPACT B							
ITT	CT3446	DIGI 3 90DEG							
ITT	CT3448	COMPACT B100DEG							
ITT	CT3535	80R 110DEG							
ITT	CT3537	COMPACT B 110DEG FST							
ITT	CT3548	COMPACT B2 110DEG FST							
ITT	CT3548	COMPACTB							
ITT	CT3548UK	COMPACTB							
ITT	CT3578	COMPACTD							
ITT	CT3598	COMPACTD							
ITT	CT3715	COMPACT 80R							
ITT	CT3724	COMPACT 80R 110DEG							
ITT	CT3724	MONO PLUS							
ITT	CT3835	COMPACT 80R 110DEG FST							
ITT	CT3837	COMPACT B 110DEG							
ITT	CT3878	COMPACTD							
ITT	CT3888	COMPACTD							
ITT	CT4030	CORE 90 FST							
ITT	CT4532	EUROMONO 1/2 90 DEG							
ITT	CT5110	CORE 2							
ITT	CT5111	CORE 2 90DEG							
ITT	CT5520	CORE 2 110DEG							
ITT	CT5521	CORE 2 90DEG							
ITT	CT5523	EUROMONO 1/2 90DEG							
ITT	CT6332	EUROMONO 1/2 110DEG							
ITT	CVC1100	Granada YK1							
ITT	CVC1102								
ITT	CVC1110	Granada AK1							
ITT	CVC1112								
ITT	CVC1120								
ITT	CVC1150								
ITT	CVC1175	Solarvox 20S09	CT2500/2						
ITT	CVC1200	Solarvox 20T19							
ITT	CVC1200								
ITT	CVC1202	CT2512							
ITT	CVC1203								
ITT	CVC1204								
ITT	CVC1210	CT2600 / 2700							
ITT	CVC1212								
ITT	CVC1215		TX2612						
ITT	CVC1217								
ITT	CVC20								
ITT	CVC21								
ITT	CVC25								
ITT	CVC30		TX791						
ITT	CVC32								
ITT	CVC40	CP340							
ITT	CVC45								
ITT	CVC5								
ITT	CVC7								
ITT	CVC800								
ITT	CVC801	Granada XK1/5	CP0211/1						
ITT	CVC802	CT1511/2							
ITT	CVC803	CT0500/2							
ITT	CVC820	Granada WK1/5							
ITT	CVC823	CT600/1							ITT80-90°
ITT	CVC824	CT3701/3732	CT/TX3432/3732						ITT80-90°/110°
ITT	CVC825		ITT 3732						
ITT	CVC830		ITT80-110°						
ITT	CVC9								
ITT	Digi 3	ST3876/3896	ST3576						
ITT	Digivision 6362	Eurostereo 1							
ITT	Digivision 6382	Eurostereo 1							
ITT	Digivision 7162	Eurostereo 1							
ITT	Digivision 7182	Eurostereo 1							
ITT	EuroMono2		FX5532						
ITT	EuroStereo		2BF110NN						
ITT	FS9R	FS10R							
ITT	FX3448	Compact B							
ITT	FX3448UK	Compact B							
ITT	FX3548	Compact B							
ITT	FX3548UK	Compact B							
ITT	FX3724	MONO PLUS							
ITT	FX4030	CORE 2 90DEG							
ITT	FX4530	CORE 2 90DEG							
ITT	FX4532	EUROMONO 1/2 90DEG							
ITT	FX5124	MONOPLUS							
ITT	FX5520	CORE 2 110DEG							
ITT	FX5521	CORE 2 90DEG							
ITT	FX5524	MONO PLUS							
ITT	FX5530	CORE 2 90DEG							
ITT	FX5532	EUROMONO 1/2 90DEG							
ITT	FX6320	CORE 2 110DEG							
ITT	FX6330	CORE 2 110DEG							
ITT	FX6332	EUROMONO 1/2 110DEG							
ITT	MC3896	DIGI 3 110DEG							
ITT	Mini 2 ST2/2								TX3325
ITT	Monoprint A	CT3306	CP3106						
ITT	Monoprint B	CT3327	CT3326						TX3326
ITT	Monoprint B								TX3126
ITT	Pico 1A	Granada 14AK1							
ITT	Pico S/2								
ITT	Pico S/3	CT2500	TX2612						CP3106
ITT	Pico S/3	Solarvox 16R19	Solarvox 20S19						CT23304
ITT	Pico S/3	Tashiko 14F681	Solarvox 14R19						KB Aristocrat A632S
ITT	SAT7190	M80							CT3315/1
ITT	SFN3578	COMPACT D-2							CP3125
ITT	SFN3878	COMPACT D-2							
ITT	SFN5363	EUROSTEREO 1							
ITT	SFN5515	5000							
ITT	SFN5552	EUROSTEREO 1							
ITT	SFN5553	EUROSTEREO 2 B-F							
ITT	SFN5575	STEREO PLUS							
ITT	SFN5581	COMPACT D/E							
ITT	SFN6315	5000							
ITT	SFN6355	STEREO PLUS							
ITT	SFN6361	COMPACT DE							
ITT	SFN6363	EUROSTEREO 1							
ITT	SFN6364	EUROSTEREO 2 B-F							
ITT	SFN6365	STEREO PLUS							







Logik	4294	TX100					
Logik	4298	TX10					
Logik	20A1	TX100					
Logik	20E1	TX90					
Logik	4298	TX100					
Logik	M125	KC					
Luxor	3351	L1 Chassis					
Luxor	3392	Mono Plus 2 (MP2)					
Luxor	3654	L1 Chassis					
Luxor	3711	B-2 Chassis					
Luxor	3781	180 Chassis	B-1 Chassis				
Luxor	4211	B-2 Chassis					
Luxor	4723	Nokia 3723					
Luxor	4743	Nokia 3743					
Luxor	4751	A-1 CHASSIS					
Luxor	4781	B-1 CHASSIS					
Luxor	4783	Nokia 3783					
Luxor	4791	B-2 CHASSIS					
Luxor	4854	L-1 CHASSIS					
Luxor	4874	L-2 CHASSIS					
Luxor	5111	BC Chassis	B-2 Chassis				
Luxor	5114	BC Chassis	B-2 Chassis				
Luxor	5134	B3-1 Chassis	SX9 Chassis				
Luxor	5141	SX9 Chassis					
Luxor	5151	A1 Chassis					
Luxor	5191	B2 Chassis					
Luxor	5192	Mono Plus 2 (MP2)					
Luxor	5355	SX9 Chassis					
Luxor	5564	L-2 CHASSIS					
Luxor	5566	K1					
Luxor	5592	Mono Plus 2 (MP2)					
Luxor	5601	BC Chassis	B-2 Chassis				
Luxor	5608	BC Chassis	B-2 Chassis				
Luxor	5609	B-2 Chassis					
Luxor	5619	SX9 Chassis					
Luxor	5634	SX9 Chassis					
Luxor	5636	SX9 Chassis					
Luxor	5639	SX9 Chassis					
Luxor	5644	SX9 Chassis					
Luxor	5661	A-1 CHASSIS					
Luxor	5664	A-1 CHASSIS					
Luxor	5681	B-1 CHASSIS					
Luxor	5691	B-2 Chassis					
Luxor	5698	B-2 Chassis					
Luxor	6355	SX9 Chassis					
Luxor	6368	K-1 Chassis					
Luxor	6385	M Chassis	Salora				
Luxor	6387	L-2 CHASSIS					
Luxor	6615	A-2 CHASSIS					
Luxor	6656	SX9 Chassis					
Luxor	6661	A-1 CHASSIS					
Luxor	6663	A-1 CHASSIS					
Luxor	6664	A-1 CHASSIS					
Luxor	6709	B-2 Chassis					
Luxor	6711	B-2 Chassis					
Luxor	6711	BC Chassis					
Luxor	6714	A-2 CHASSIS					
Luxor	6718	B-2 Chassis					
Luxor	6718	BC Chassis					
Luxor	6719	A-2 CHASSIS					
Luxor	6734	SX9 Chassis					
Luxor	6736	SX9 Chassis					
Luxor	6739	SX9 Chassis					
Luxor	6741	SX9 Chassis					
Luxor	6781	A-1 CHASSIS					
Luxor	6791	B-2 Chassis					
Luxor	6798	B-2 Chassis					
Luxor	7064	L-2 CHASSIS					
Luxor	7068	K-1 Chassis					
Luxor	7075	M Chassis	Salora				
Luxor	7076	M-1 CHASSIS					
Luxor	7085	M Chassis	Salora				
Luxor	7128	EURODIGI 16:9					
Luxor	8228	EURODIGI 16:9					
Luxor	8289	Nokia/Salora/Luxor MZ-chassis					
Luxor	9128	EURODIGI 16:9					
Luxor	18056449	SX9 Chassis					
Luxor	18067349	SX9 Chassis					
Luxor	17L67	L2 Chassis					
Luxor	FS71U1	FEATURE STEREO (FS Chassis)					
Matsui	1091X	Goodmans Compact-100					
Matsui	1400 IRE	11AK36A8	2003-2004	AK36 prod.code: 10023024			
Matsui	1402						
Matsui	1403						
Matsui	1407	orion chassis	PCB marked TM7384A	serv.mode: set volume to minimum, press VOL- on TV and '9' on R/C, navigate using Ch+/Ch-, adjust using Vol+/Vol-, to			
Matsui	1407RS	same chassis to 2107N	serv.mode: see Matsui 1407				
Matsui	1408R	Orion chassis	PCB Tm9414A, Tm9414B; Micro OEC6053	Remote 076R0BR060			
Matsui	1408T	Orion TV134TX	PCB marked TM9414B; Micro OEC6053A	Remote 07680BQ150			
Matsui	1409R	Orion chassis, serv.mode see 1407	PCB marked TMX486A	076RODG020	scan coils XY-14016AL2 E157951 fail very often		
Matsui	1409T	Orion chassis, serv.mode see 1407	PCB marked TMX486A	076RODG010	scan coils XY-14016AL2 E157951 fail very often		
Matsui	140R	=140R Orion chassis	PCB marked TM6362				
Matsui	140T	=140T Orion chassis	PCB marked TM6362				
Matsui	1410	Amstrad CTV1401	Saisho CT1400				
Matsui	1410	Saisho CT142R	ORION 14PS(B)				
Matsui	1410R	Orion CTN BB					
Matsui	1410T	Orion CTN BB					
Matsui	1414R		there is no elec.service mode, but there is child lock, volume lock and tuning lock				
Matsui	1420	Orion 14DS	Saisho CT141				
Matsui	1420A	Saisho CT141X					
Matsui	1420B						
Matsui	1420T	Orion chassis, serv.mode see 1407	2002/2003 £70, 2004 £60	PCB TMA504A, Micro OECF00	INIT 01 -> EEPROM 03H, INIT 02 ->04H and so on		
Matsui	1420TIL(B)	Orion chassis, serv.mode see 1407	2004	PCB TMB557A, Micro PCM195C3OECF009B (OECF009B)			
Matsui	1421T Silver		2004 £60				
Matsui	1422						
Matsui	1424	TATUNG 190/195					
Matsui	1430						
Matsui	1430A						
Matsui	1434	Tatung 190					
Matsui	1435	Orion 14A chassis	PCB marked TM0176B				
Matsui	1435B	Orion chassis	PCB marked TM0176C				
Matsui	1436	Bush 2004	Alba CTV100				
Matsui	1436XA						
Matsui	1440	Orion 14DR	Saisho CT142R				
Matsui	1440A	Saisho CT142RX					
Matsui	1450	Binatone 01/9014	Boots CTV1414R				
Matsui	1450	Matsui 1455					
Matsui	1450	Saisho CT147R	HINARI CT4	Dansai CTV1477			
Matsui	1455	Alba CTV4805	Onwa				
Matsui	1465	1660 2060					
Matsui	1465						
Matsui	1466	ORION 14LR					
Matsui	1476	Orion chassis	PCB marked TM0280A	LOPTx Q401 2SD2089 LOPTx FCM-14B007A			
Matsui	1480	Saisho CT149					
Matsui	1480A	Orion 14DT	Saisho CT149X				
Matsui	1480B						
Matsui	1481						
Matsui	1481B	Orion 14AT	PCB marked TM0157				
Matsui	1482						
Matsui	1496(T) ( R )	Matsui 2096, CHASSIS SR1	Crown CRP2196NT				
Matsui	1498	Onwa					
Matsui	1408R	see 1408R (letter "O" = zero)					
Matsui	14R1	Grundig G1000					
Matsui	14T1	Grundig G1000	GT1402				
Matsui	14TR50	Tatung F chassis					
Matsui	14TV/DVR1	TV/DVD/VCR Combi	2004 £199				
Matsui	14V1	G1000	GT1401				
Matsui	14V1R	GrundigCUC7301	P37-071				
Matsui	14V1T	GrundigCUC7301	P37-731				
Matsui	14V2R	CUC7303					



Mitsubishi	CT15MS1TX	EE2			
Mitsubishi	CT180				
Mitsubishi	CT186				
Mitsubishi	CT1902				
Mitsubishi	CT1905				
Mitsubishi	CT2023				
Mitsubishi	CT2027				
Mitsubishi	CT2027				
Mitsubishi	CT2101				
Mitsubishi	CT2117				
Mitsubishi	CT2124	Euro 4 Chassis			
Mitsubishi	CT2125				
Mitsubishi	CT2131	Euro 4 Chassis			
Mitsubishi	CT2132	Euro 4 Chassis			
Mitsubishi	CT2141	Euro 4 Chassis			
Mitsubishi	CT2142	Euro 4 Chassis			
Mitsubishi	CT2144	Euro 4 Chassis			
Mitsubishi	CT2145	Euro 6 Chassis			
Mitsubishi	CT2145BM	Euro 6 Chassis			
Mitsubishi	CT2146	Euro 6 Chassis			
Mitsubishi	CT21461X	Euro 6 Chassis	EURO 4		
Mitsubishi	CT2153	Euro 4Z Chassis			
Mitsubishi	CT2154	Euro 4 Chassis			
Mitsubishi	CT2155	Euro 4Z Chassis			
Mitsubishi	CT21A2STX(LST)	Euro 12 Chassis			
Mitsubishi	CT21A3STX	Euro 12 Chassis			
Mitsubishi	CT21A5STX	Euro 14FS			
Mitsubishi	CT21AV1B	EE3			
Mitsubishi	CT21M1	Euro 10 Chassis			
Mitsubishi	CT21M1BM	Euro 10 Chassis			
Mitsubishi	CT21M1LM	Euro 10 Chassis			
Mitsubishi	CT21M2	Euro 14			
Mitsubishi	CT21M3	Euro 14			
Mitsubishi	CT21M5B(T)	EE4			
Mitsubishi	CT2206				
Mitsubishi	CT2217				
Mitsubishi	CT2223				
Mitsubishi	CT2224				
Mitsubishi	CT2227				
Mitsubishi	CT2230				
Mitsubishi	CT2517	Euro 1 Chassis			
Mitsubishi	CT2525	Euro 10 Chassis			
Mitsubishi	CT2528	Finlux 9000			
Mitsubishi	CT2531	Euro 4 Chassis			
Mitsubishi	CT2532	Euro 4 Chassis			
Mitsubishi	CT2533				
Mitsubishi	CT2534	Euro 4 Chassis			
Mitsubishi	CT2545	Euro 4 Chassis			
Mitsubishi	CT2553	Euro 4Z Chassis			
Mitsubishi	CT2554				
Mitsubishi	CT2555	Euro 4Z Chassis			
Mitsubishi	CT25A2STX(LST)	Euro 12 Chassis			
Mitsubishi	CT25A3STX	Euro 12 Chassis			
Mitsubishi	CT25A4STX(LST)	Euro 12 Chassis			
Mitsubishi	CT25A5STX	Euro 14FS			
Mitsubishi	CT25A6STX	Euro 12 Chassis			
Mitsubishi	CT25AV1B	EE3			
Mitsubishi	CT25AV1BDS	EE3 Chassis	TV/Sat Rx		
Mitsubishi	CT25B2STX	Euro 11 Chassis			
Mitsubishi	CT25B3ST	B3			
Mitsubishi	CT25M1	M1 Chassis Euro 10 Chassis			
Mitsubishi	CT25M2TX	Euro 14			
Mitsubishi	CT25M3TX	Euro 14			
Mitsubishi	CT25M5BT	EE4			
Mitsubishi	CT28AV1B	EE3			
Mitsubishi	CT28BW2B	EE3 Chassis			
Mitsubishi	CT28BW2BD	EE3W			
Mitsubishi	CT2964	Euro 4Z Chassis			
Mitsubishi	CT2965	Euro 8F Chassis	PSU similar to Euro 10		
Mitsubishi	CT29A4ST	Euro 12 Chassis			
Mitsubishi	CT29A6ST	Euro 12 Chassis			
Mitsubishi	CT29AT5				
Mitsubishi	CT29B2STX	Euro 11 Chassis			
Mitsubishi	CT29B3ST	B3			
Mitsubishi	CT29B4ST	B4			
Mitsubishi	CT29BV1(BD)	EE3W			
Mitsubishi	CT32BW1B	W1			
Mitsubishi	CT32CW1BD	EW1			
Mitsubishi	CT33B3ST	B3			
Mitsubishi	CT33C1STX(TX)				
Mitsubishi	CT37C1STX(TX)				
Mitsubishi	CT37C2STX	E9			
Murphy	3510T	Goodmans FST51TT			
Murphy	CTV 3510	Murphy CTV 3540T			
Murphy	CTV3500	Cathay/Osaki P22G	Phase PH20567	Susumu FX14S/FX1400R	
Murphy	CTV3540T	Goodmans FST51TT			
Murphy	M14R01	Fidelity ZX4000	Fidelity CTV1404R		
Murphy	M1500	Fidelity ZX4000			
Murphy	M22S01	Fidelity ZX4200			
Murphy	M22S01	Fidelity ZX4200			
Murphy	M22T01	Fidelity ZX4000			
Murphy	MC6124	Bush BC6004			
Naiko	N1088	Goodmans Compact-110			
Naiko	N2810DVD	PT92 +DVD	2003/2004 Safeways £299		
Naiko	N2811W	PT92			
Naiko	N2818W	PT92			
Naiko	N2850W	PT92	2003/2004		
Naiko	N2866	PT90A +DVD			
Naiko	N2897	F16			
Naiko	N3211W	PT92			
Naiko	N3280W	PT90	2003/2004		
Narita	DVT2	TV+DVD Profilo PT90C chassis			
NEC	PF32W01	Daewoo SC132 chassis	=Daewoo model DSC3261H		
NEI	1288	Mono			
NEI	1451R/TX	Indiana 100 Chassis	Bush		
NEI	1461R	Indiana 100 Chassis	Bush		
NEI	1481R	Indiana 100 Chassis	Similar to NEI2031		
NEI	1482	Indiana 100 Chassis	Bush		
NEI	14FRE				
NEI	14SRE		Sunkyong		
NEI	1551TX	Indiana 100 Chassis	Bush		
NEI	1581TX	Indiana 100 Chassis	Bush		
NEI	1601				
NEI	2031R/TX	Indiana 100 Chassis			
NEI	2041R	Indiana 200 Chassis	Bush		
NEI	2047(TX)	Indiana 200 Chassis			
NEI	2051R/TX	Indiana 200 Chassis	Bush		
NEI	2052R	Indiana 200 Chassis	Bush		
NEI	2131R	Indiana 100 Chassis	Bush		
NEI	2147(TX)	Indiana 200 Chassis			
NEI	2151R/TX	Indiana 200 Chassis	Bush		
NEI	2152R	Indiana 200 Chassis			
NEI	2181R	Indiana 200 Chassis	Bush		
NEI	2591FTXN	CE25			
NEI	2891FTXN	CE25			
NEI	5544	11AK03 Chassis			
NEI	ART701	Evelux E5 (use remote to bring out of stby)	Evelux = Elektronika Velenje in Slovenija		
NEI	C25F1FXN	CE25			
NEI	C28F1FXN	CE25			
NEI	CTV61	Indiana 100 Chassis			
NEI	E14D1X	Evelux E5			
NEI	E14TX	Evelux E5			
NEI	E20C1X	Evelux E5			
NEI	E2591TFXN	CE25			
NEI	E25G1TFXN	Evelux E5			
NEI	E28G1TFXN	Evelux E5			
NEI	NE3743TX	11AK08			
NEI	NE5147	11AK03 Chassis			
NEI	NE5155NT	11AK10			

NEI	NE5159NT	11AK10				
NEI	NE5159TX	11AK10				
NEI	NE5555	11AK10				
NEI	NE559TX	11AK10				
Network	1210	Similar to NE1288	Mono			
Network	1286		Mono			
Network	1401	Bush T24		Toshiba X53		
Network	1402	Goldstar				
Network	1414	Grundig GSC-100				
Network	1430	Goldstar				
Network	1451R	Indiana 100 Chassis	NEI			
Network	1461R	Indiana 100 Chassis	NEI			
Network	1481R	Indiana 100 Chassis	NEI			
Network	1482R	Indiana 200 Chassis	NEI			
Network	1551TX	Indiana 100 Chassis	NEI			
Network	1581TX	Indiana 100 Chassis	NEI			
Network	2020	Grundig GSC-100				
Network	2031R	Indiana 100 Chassis				
Network	2031TX	Indiana 100 Chassis				
Network	2041R	Indiana 200 Chassis				
Network	2051R	Indiana 200 Chassis				
Network	2052R	Indiana 200 Chassis				
Network	2081	Indiana 200 Chassis				
Network	21311X	Indiana 200 Chassis				
Network	2151R	Indiana 200 Chassis				
Network	2152R	Indiana 200 Chassis				
Network	2181	Indiana 200 Chassis				
Network	2571	CE25				
Network	2591	CE25				
Network	2871	CE25				
Network	2891	CE25				
Network	3000172	Goldstar				
Network	NW1414	Grundig GSC-100				
Network	NW2020	Grundig GSC-100				
Nikkai	2155	Indiana 100 Chassis				
Nikkai	2156T	Indiana 100 Chassis				
Nikkai	Baby 10	Osaki P10R				
Nikkai	Baby 10	Samsung C1210R / Boots CTV10R	Akura Tourer CX10		Genexia CTV1001	
Nikkai	K3743TX	11AK08				
Nikkai	K5155NT	11AK10				
Nikkai	K5159NT	11AK10				
Nikkai	NT20	Sentra STX600	Susumu FX20			
Nikkai	TLG0101	Sentra STX600	Solarvox CML14RC			
Nikkai	TLG0909	Solarvox CML14				
Nikkai	TLG100	Solarvox 142TT	Osume CTV1486T			
Nikkai	TLG101	Hinari TVA1				
Nikkai	TLG120TX	Indiana 100 Chassis				
Nikkai	TLG1407T	Indiana 100 Chassis				
Nikkai	TLG1409					
Nikkai	TLG1432					
Nikkai	TLG1433					
Nikkai	TLG1447	Indiana 200 Chassis				
Nikkai	TLG1447T	Indiana 200 Chassis				
Nikkai	TLG1447TC	Indiana 100 Chassis				
Nikkai	TLG14R	Alba CTV14R				
Nikkai	TLG151T	Indiana 100 Chassis				
Nikkai	TLG200					
Nikkai	TLG2000	Indiana 100 or 200 Chassis				
Nikkai	TLG201	Indiana 100 Chassis				
Nikkai	TLG20TX	Indiana 200 Chassis				
Nikkai	TLG2121	Goodmans CTV2R				
Nikkai	TLG2122	Goodmans CTV2T				
Nikkai	TLG2149	Indiana 200 Chassis				
Nikkai	TLG2151TX	Indiana 200 Chassis				
Nikkai	TLG2155	Indiana 100				
Nikkai	TLG2156	Indiana 100				
Nikkai	TLG2195					
Nikkai	TLG2501	NEI CE25				
Nikkai	TLG2801	NEI CE25				
Nikkai	TLG511	Indiana 100 Chassis				
Nikkai	TLG51TX	Indiana 200 Chassis				
Nikkai	TLG88/89	Fidelity C14M07	Harwood HTV9014R		Hinari CT11	
Nikkai	TLG88/89	Osume 1484R	Soundwave CTV1401R		Solarvox 140	
Nikkai	TLG99	Dansai TA11401	Osume CTV1484R		Fidelity C14M08	
Nikkai	TLG99	Tashiko 14F841	Goodmans C140		Solarvox 141	
Nikkai	TV1407T	Indiana 100 Chassis	Bush			
Nokia	1425HS	EUROMONO 2				
Nokia	1430HS	EUROMONO 1/2				
Nokia	1530UK HS	EUROMONO 2				
Nokia	1630HS	EUROMONO 1 OR 2				
Nokia	1725HS	EUROMONO 2				
Nokia	1730HS	EUROMONO 1 OR 2				
Nokia	1741HS	HOTEL PLUS	tuning - for RCN612 press MUTE,VISION,1servis- MUTE,RED.TV (or STOP)			
Nokia	2125HS	EUROMONO 2				
Nokia	2141HS	HOTEL PLUS	tuning - for RCN612 press MUTE,VISION,Tv; for RCN624 press MUTE,VISION,STOP.			
Nokia	3721(T)	Mono Plus 2 (MP2)				
Nokia	3723	Luxor 4723				
Nokia	3724UKFX	MonoPlus				
Nokia	3743	Luxor 4743				
Nokia	3755UK	MONOPLUS 90				
Nokia	3783	Luxor 4783				
Nokia	5121(T)	Mono Plus 2 (MP2)				
Nokia	5155	MONOPLUS 90				
Nokia	5521(T)	Mono Plus 2 (MP2)				
Nokia	5556 UK SFN	Monoplus 110				
Nokia	5575 UK SFN	STEREO PLUS				
Nokia	6355 NICAM	STEREO PLUS				
Nokia	6356 UK SFN	Monoplus 110				
Nokia	6364UKSFN	Eurostereo 2				
Nokia	7155UK SFN	STEREO PLUS				
Nokia	7156 UK SFN	Monoplus 110				
Nokia	7165 UK SFN	STEREO PLUS				
Nokia	7204MAC	EURODIGI 16:9				
Nokia	7291-T	Nokia/Salora/Luxor MZ-chassis				
Nokia	7294UK	Eurodig 16:9 II	1993		PSU IC LF0112	
Nokia	8284MAC	EURODIGI 16:9				
Nokia	8284SAT	EURODIGI 16:9				
Nokia	8291-T	Nokia/Salora/Luxor MZ-chassis				
Nokia	8294SAT	EURODIGI 16:9				
Nokia	8294UK	Eurodig 16:9 II	1993		PSU IC LF0112	
Nokia	CT3711	SANYO				
Nokia	CT3724	MONOPLUS				
Nokia	CT4030UK	CORE2				
Nokia	CT5111UK	CORE2				
Nokia	CT5124	MONOPLUS 90DEG				
Nokia	Digivision 6381	Nokia digital chassis B-E2				
Nokia	Digivision 6381 N UK	Nokia digital chassis B-E2				
Nokia	Digivision 7171	Nokia digital chassis B-E2				
Nokia	Digivision 7182	Nokia digital chassis B-E2				
Nokia	Digivision 8281	Nokia digital chassis B-E2				
Nokia	FP7282	=SFN7296				
Nokia	FP82B2	=SFN8296				
Nokia	FS91E1	FS chassis				
Nokia	FX3724UK	MonoPlus				
Nokia	FX3725	MONOPLUS				
Nokia	FX4030UK	CORE2				
Nokia	FX4530UK	CORE2				
Nokia	FX5530UK	CORE2				
Nokia	FX5532	EUROMONO 2				
Nokia	FX6332	EUROMONO				
Nokia	MP51A1	MONOPLUS				
Nokia	SFN3755	MONOPLUS				
Nokia	SFN5155	MONOPLUS				
Nokia	SFN5166	MONOPLUS				
Nokia	SFN5554	STEREO PLUS				
Nokia	SFN5573	Eurostereo 2 B-F				
Nokia	SFN6374	Eurostereo 2 B-F				
Nokia	SFN6386	FEATURE STEREO (FS Chassis)				
Nokia	SFN7173	Eurostereo 2 B-F				



Nokia	SFN7174	Eurostereo 2 B-F					
Nokia	SFN7186	FEATURE STEREO (FS Chassis)					
Nokia	SFN7296	FEATURE STEREO PLUS					
Nokia	SFN8296	FEATURE STEREO PLUS					
Nokia	SP55A1.5554	STEREO PLUS					
Nokia	SP63D1.6365UK	STEREO PLUS					
Nokia	SP71D1	STEREO PLUS					
Nokia	SP71L1	STEREO PLUS	Akai CT2867				
Nokia	ST51A1	MONOPLUS					
Nokia	ST51D2	MONOPLUS					
Nordmende	1434PI	F10					
Nordmende	1444	F10					
Nordmende	2112	F10					
Nordmende	2513A	F8					
Nordmende	3434	F10					
Nordmende	3601		Ferguson 3787				
Nordmende	3602	F8					
Nordmende	3604	F14					
Nordmende	4230	FV I	Ferguson 3787				
Nordmende	4231		Ferguson 3787				
Nordmende	5038	F15/16					
Nordmende	5205	F15/16					
Nordmende	5432	F11					
Nordmende	6559	F16					
Nordmende	7000	F16					
Nordmende	778535A	F5 TT					
Nordmende	8180		Ferguson 3787				
Nordmende	8572D	F5 TT					
Nordmende	982512H	F10					
Nordmende	982514H	F10					
Nordmende	982515H	F10					
Nordmende	F11B	Ferguson ICC3					
Nordmende	F15	Ferguson ICC5	Telefunken 617				
Nordmende	F16	Ferguson ICC5	Telefunken 517				
Nordmende	F17/F18	Ferguson ICC5	Telefunken 518/618/B/A				
Nordmende	F19	Ferguson IKC2					
Nordmende	F19/F20	Ferguson IKC2	Telefunken 418/A				
Nordmende	F20	Ferguson IKC2					
Nordmende	F22	Ferguson TX80	Telefunken 318A				
Nordmende	F23	ICC8-S	Telefunken 418				
Nordmende	F23-11	ICC7-S	Telefunken 418B-ST				
Nordmende	F24	ICC8-M	Telefunken 418C				
Nordmende	F24-11	ICC7-M	Telefunken 418B				
Nordmende	Futura 55	chassis F18					
Oceanic	B294SAT	Eurodigi 16.9					
Okishi	N2818W	PT92					
Onimax	2818	TV.3 Multi (Schneider)	Micro IC901 ST92R195B0/EPF	LOPTx 1372.0031, =HR8409			
Onwa	K9228	Akai CT2862UNT					
Orion	14AT	Matsui 1481B					
Orion	14DR	Matsui 1440	Saisho CT142R				
Orion	14DS	Matsui 1420	Saisho CT141				
Orion	14DT	Matsui 1480A	Saisho CT149X				
Orion	14LR	Matsui 1466					
Orion	14PR	Amstrad CTV1409	Saisho CT14R	Triumph CTV8208			
Orion	14PS	Amstrad CTV1401	Matsui 1410	Saisho CT1400			
Orion	16BR	Matsui 1640	Saisho CT162R				
Orion	18PS	Matsui 1810	Saisho CT1800				
Orion	20LS	Logik 690	Saisho CT204				
Orion	20LT	Logik 698	Saisho CT208				
Orion	286KB	4300	PCB marked B-4101				
Orion	28ZKM TV28F44	4400					
Orion	28ZKN TV28F44	4400					
Orion	3850	Bush 4400 chassis					
Orion	C1500	combi Orion chassis	PSU PCB VPA150A, main PCB VMA230A, Micro OEC0107				
Orion	CTV144	Saisho CX14R	Triumph CTV8212				
Orion	CTV164	Saisho CX16R	Triumph CTV8312				
Orion	T28F44	4400					
Orion	TV134TX	Matsui 1408T		Remote 07660BQ160			
Orion	TV2844W	4400 chassis					
Orion	TV400TX	chassis CTT-H AA					
Orion	TV4400NTX	4400 chassis					
Orion	TV450TX (TV450R)	CTN AA chassis					
Orion	TV700BR	CTN AA chassis					
Orion	TV700LTX	CTN BB chassis					
Orion	TV800TX	CTN AA chassis					
Osaki	3214S	Orion 14A chassis					
Osaki	CI5013T	Samsung CI5052XT					
Osaki	CTV14	Jackson Mk2	Triumph CTV8209				
Osaki	P10	Nikkai Baby 10 etc					
Osaki	P140	Philips GR1-AX	Philips 14GR1021				
Osaki	P142	Akura CX4					
Osaki	P145	Philips GR1-AX					
Osaki	P20G	Murphy CTV3500					
Osaki	P20H	Hinari CT14					
Osaki	P60G	Hitachi NP8CQ					
Osume	CTV1474R	Bush Z214					
Osume	CTV1484R	Solarvox 141	Nikkai TLG99	Harwood HTV9014R			
Osume	CTV1486T	Nikkai TLG100T					
Pacific	PTV14-100	Orion chassis	Micro 195C6PC00ECF011A (OECF011A)				
Pacific	PTV2701T	Schneider chassis TV9					
Pacific	PTV3604	CTS AA	Micro SAA5541PS/M5/0330				
Pacific	PTV3605	Beko 12 8	PCB marked G80.190-02	LOPTx 003071094 (058.413-TR5), equiv. FBT41041			
Pacific	PTV3606	Orion chassis	PCB marked TMB557A				
Pacific	PTV5102	CTS AA					
Pacific	PTV7001T	E9 chassis (Evelux, made in Slovenia)	Micro SDA5255-B001				
Pacific	PTV7002	E9 chassis (Evelux, made in Slovenia)					
Pacific	PTV7003	E9 chassis (Evelux, made in Slovenia)	Micro SDA5255-B002				
Panasonic	1665	Z1					
Panasonic	21V2	Alpha 4					
Panasonic	25A3	Euro 1					
Panasonic	25X1DP	Alpha 4					
Panasonic	28X1	Alpha 4H					
Panasonic	28X1DP	Alpha 4					
Panasonic	CT20S	U4 Chassis					
Panasonic	CT22S	U4W Chassis					
Panasonic	TC1302	M6					
Panasonic	TC1303	M6					
Panasonic	TC1404	M11					
Panasonic	TC1405	M11					
Panasonic	TC1406	M11					
Panasonic	TC1407	M12					
Panasonic	TC1408	M12					
Panasonic	TC1460	Z1					
Panasonic	TC1465	Z1					
Panasonic	TC1470	Z1					
Panasonic	TC1475	Z1					
Panasonic	TC1480	Z3					
Panasonic	TC1485T	Z3	1990				
Panasonic	TC1483R	Z375 (DAEWOO CP375)					
Panasonic	TC1484R(B)	Z185 (Daewoo CP185)					
Panasonic	TC14J1R1	Z7					
Panasonic	TC14K1R	Z7					
Panasonic	TC14L3R	MX1A					
Panasonic	TC14S1M	Z5					
Panasonic	TC14S1R/B	Z5					
Panasonic	TC14S1R/BH	Z5					
Panasonic	TC14S2R	Z5					
Panasonic	TC14S3R(W)	Z7					
Panasonic	TC14S3RC	Z7	nonUK Pal B/G				
Panasonic	TC14S4RL	Z7					
Panasonic	TC15M1	Z4					
Panasonic	TC15M1M	Z4					
Panasonic	TC15M1R	Z4					
Panasonic	TC15M1T	Z4					
Panasonic	TC15M2	Z4					
Panasonic	TC15M2R	Z4					
Panasonic	TC15MIR	Z1					
Panasonic	TC1601	M11					
Panasonic	TC1602	M11					



















Philips	V6821	K40 SYSTEM 4	1985						
Philips	V6851	K40 SYSTEM 4	1985						
Philips	V7001	K40							
Philips	VP120	KT4							
Pilot	CTV735	THORN 9500							
Pilot	P735	THORN 9500							
Pilot	P798A	Ferguson TX9							
Pilot	P8039	Ferguson TX9							
Pioneer	AV28	ITT Core							
Pioneer	SD21AVI	Nokia Compact D-E							
Pioneer	SD25AVI	Nokia Compact D-E							
Pioneer	SD28AVI	Nokia Compact D-E							
Pioneer	SV2103	2A/2B?							
Pioneer	SV2503	2B							
Pioneer	SV2803	2B							
Portland	GB14F5	CP420 (Daewoo, K-Mecha Deck)							
Portland	P14F5	CP420 (Daewoo, K-Mecha Deck)							
PowerPoint	CTN BB	Orion CTN BB chassis							
Proline	1405R	PC180 (Seleco-Formenti)							
Proline	1415T 1415R	TX807 (Ferguson)							
Proline	1420R 1420T	Tatung F chassis							
Proline	1460R 1460T	Tatung K chassis							
Proline	1485T	Daewoo chassis							
Proline	1490T	Formenti PC230 chassis (PCB marked FPC230)	2001-2002						
Proline	20N1	Daewoo CP385							
Proline	28N1	F19							
Proline	28N1T	FPC2001 (aka TWIST)							
Proline	380TT	Tatung 170							
Proline	418B	TX807 (Ferguson)							
Proline	5100RC	Tatung 170							
Proline	5900TT	Tatung 180							
Proline	F205T	Formenti PC230 chassis							
Proline	K1405		2003 £70 from Comet, 2004 £60						
Proline	NV2400	Tatung 180							
Proline	NV2700	Tatung 180							
Proline	TVC140								
Proline	TVD1425	TV+DVD							
Proline	TVD1430	TV+DVD							
Proline	W28D1	CP885	2002, around £250						
Protec	7295	11AK12							
Protec	7296NT	11AK12-9							
Pye	1022	K30							
Pye	1042	K30							
Pye	1062	K30							
Pye	1826	K12							
Pye	2013	TX2							
Pye	2056	K12Z							
Pye	2060	CTX							
Pye	2062	CTX							
Pye	2162	CTX							
Pye	2260	CTX							
Pye	3030	NC3							
Pye	3052	KT3							
Pye	3062	KT3							
Pye	3152	KT3							
Pye	3157	KT3							
Pye	3237	KT3							
Pye	3267	KT3							
Pye	3457	K30							
Pye	3508	K35							
Pye	3757	K30							
Pye	3808	K35							
Pye	3908	K35							
Pye	4146	KT4							
Pye	4184	KT4							
Pye	4187	KT4							
Pye	4266	KT4							
Pye	4284	KT4							
Pye	4287	KT4							
Pye	4309	KT4							
Pye	4508	K40							
Pye	4509	K40							
Pye	4808	K40							
Pye	25KX1201	Philips 10CX1120							
Pye	27KE1112	CP90	1988						
Pye	27KE1115	CP90	1988						
Pye	31BX2013	TX2	1982						
Pye	31BX2016	TX2	1982						
Pye	31BX2125	TX3							
Pye	31BX3025	TX3	1984						
Pye	31BX3033	TX3	1984						
Pye	31BX3046	TX3							
Pye	31BX3112	TX3	1984						
Pye	31BX3115	TX3	1984						
Pye	35BX1045	TX-14*	1982						
Pye	35BX2045	TX2	1982						
Pye	35BX3045	TX3	1984						
Pye	37KE225	KT3	1979						
Pye	37KE1022	CP90	1987						
Pye	37KE1025	CP90	1989						
Pye	37KF1140	CF1	1986						
Pye	37KN2010	NC3CR	1988						
Pye	37KN2012	NC3CR	1988						
Pye	37KN3030	NC3	1987						
Pye	37KT2040	CTX-E	1984						
Pye	37KT2042	CTX-E	1984						
Pye	37KT2060	KT3							
Pye	37KT2062	KT3							
Pye	37KT3052	KT3	1980						
Pye	37KT3062	KT3	1981						
Pye	37KT7225	KT3							
Pye	37KV1232	GR1-AX	1989						
Pye	37KV1240	GR1-AX	1990						
Pye	37KV1242	GR1-AX	1990						
Pye	37KV2225	G90B	1990						
Pye	38KE1102	CP90	1987						
Pye	38KE1185	CP90	1988						
Pye	38KT2093	CTX-E	1986						
Pye	38KV2325	G90AE	1989						
Pye	41KT3152	KT3							
Pye	42KT227	KT3	1979						
Pye	42KT228	KT3	1979						
Pye	42KT2140	CTX-E	1984						
Pye	42KT2142	CTX-E	1984						
Pye	42KT2160	CTX-E	1982						
Pye	42KT2162	CTX-E	1983						
Pye	42KT3150	KT3	1979						
Pye	42KT3152	KT3	1980						
Pye	42KT3157	KT3	1981						
Pye	42KT4146	KT4 SYSTEM 4	1984						
Pye	42KT4168	KT4 SYSTEM 4	1984						
Pye	42KT4184	KT4 SYSTEM 4	1983						
Pye	42KT4187	KT4 SYSTEM 4	1983						
Pye	42KT5184	KT4 SYSTEM 4	1984						
Pye	42KT7227	KT3							
Pye	42KT7228	KT3							
Pye	43KE1312	CP90	1987						
Pye	43KE1315	CP90	1987						
Pye	43KE1385	CP90	1988						
Pye	43KE2196	CTX-E							
Pye	43KE2425	G90AE							
Pye	43KT2198	CTX-E							
Pye	43KV2429	G90-AE							
Pye	44T7220	E2	1983						
Pye	51BE2080	E2	1983						
Pye	51BL7205	L7	1982						
Pye	51BL7215	L7	1982						
Pye	51K7324	KT3	1984						
Pye	51K7326	KT3	1984						

Pye	51KT2260	CTX-E	1983
Pye	51KT2262	CTX-E	1983
Pye	51KT2360	CTX-E	1984
Pye	51KT2362	CTX-E	1984
Pye	51KT2366	CTX-E	1985
Pye	51KT3237	KT3	1984
Pye	51KT3260	KT3	1982
Pye	51KT3262	KT3	1982
Pye	51KT3267	KT3	1984
Pye	51KT3272	KT3	1984
Pye	51KT4226	KT4 SYSTEM 4	
Pye	51KT4284	KT4 SYSTEM 4	1982
Pye	51KT4287	KT4 SYSTEM 4	1983
Pye	51KT4309	KT4 SYSTEM 4	1984
Pye	51KT4366	KT4 SYSTEM 4	1984
Pye	51KT5287	KT4 SYSTEM 4	1983
Pye	51KT7323	KT3	
Pye	51KT7324	KT3/4	
Pye	51KT7326	KT3	
Pye	52KE1510	CP90	1987
Pye	52KE1512	CP90	1987
Pye	52KE1515	CP90	1987
Pye	52KE1585	CP90	1988
Pye	52KE2403	2A	1986
Pye	52KE2406	2A	1986
Pye	52KE4505	2B	1986
Pye	52KV1528	GR1-AX	1990
Pye	52KV2523	G90AE	1989
Pye	52KV2525	G90AE	1989
Pye	52KV2529	G90AE	1991
Pye	56KE2800	2A	1985
Pye	56KE2810	2A	1986
Pye	56KE2812	2A	1986
Pye	56KE2815	2A	1986
Pye	56KS1042	K30	1981
Pye	56KS1060	K30	1981
Pye	56KS1062	K30	1982
Pye	56KS1070	K30	1982
Pye	56KS3400	K35	1982
Pye	56KS3452	K35	1983
Pye	56KS3457	K35	1983
Pye	56KS3477	K35	1983
Pye	56KS3500	K35	1982
Pye	56KS3508	K35	1982
Pye	56KS4508	K40 SYSTEM 4	1983
Pye	56KS4509	K40 SYSTEM 4	1983
Pye	56KS5402	K40 SYSTEM 4	1984
Pye	56KS5418	K40 SYSTEM 4	1984
Pye	56KS5447	K40 SYSTEM 4	1984
Pye	56KS5457	K40 SYSTEM 4	1984
Pye	56KS5487	K40 SYSTEM 4	1985
Pye	56KS5603	K40 SYSTEM 4	1984
Pye	56KS5607	K40 SYSTEM 4	
Pye	56KS5513	K40 SYSTEM 4	1984
Pye	56KS5553	K40 SYSTEM 4	1985
Pye	56KS5557	K40 SYSTEM 4	1984
Pye	56KS5563	K40 SYSTEM 4	
Pye	56KS5567	K40 SYSTEM 4	1984
Pye	56KS5577	K40 SYSTEM 4	1985
Pye	59KE2703	2A	1986
Pye	59KE2706	2A	1986
Pye	59KE3702	CP110	1987
Pye	59KE3715	CP110	1990
Pye	59KE3775	CP110	1988
Pye	59KE3785	CP110	1988
Pye	59KE4705	2B	1986
Pye	59KE4795	2B	1987
Pye	61BL7245	L7	1982
Pye	63KE5765	2B	1988
Pye	63KE6722	CP110	1990
Pye	63KE6725	CP110	1989
Pye	66KE2800	2A	1986
Pye	66KE2812	2A	1986
Pye	66KE2815	2A	1986
Pye	66KS1020	K30	1980
Pye	66KS1022	K30	1980
Pye	66KS1152	K30	1982
Pye	66KS3700	K35	1982
Pye	66KS3752	K35	1983
Pye	66KS3757	K35	1983
Pye	66KS3808	K35	1982
Pye	66KS3908	K35	1983
Pye	66KS4808	K40 SYSTEM 4	1983
Pye	66KS5702	K40 SYSTEM 4	1984
Pye	66KS5787	K40 SYSTEM 4	1984
Pye	66KS5917	K40 SYSTEM 4	1985
Pye	68KE2903	2A	1986
Pye	68KE2906	2A	1986
Pye	68KE3902	CP110	1987
Pye	68KE3915	CP110	1989
Pye	68KE7807	3A	1987
Pye	68KE7827	3A	1988
Pye	70KE6925	CP110	1989
Pye	86KE3985	CP110	
Pye	C823	725	
Pye	CT420	G11	
Pye	CT450	G11	
Pye	CT451	G11	
Pye	CT452	G11	
Pye	CT453	G11	
Pye	CT454	G11	
Pye	CT455	G11	
Pye	CT456	G11	
Pye	CT457	G11	
Pye	CT462	G11	
Pye	CT464	G11	
Pye	CT467	G11	
Pye	CT474	G11	
Pye	CT480	G11	
Pye	CT481	G11	
Pye	CT483	G11	
Pye	CT484	G11	
Pye	CT492	G11	
Pye	CT493	G11	
Pye	CT494	G11	
Pye	M1432/05 (/25)	L6.1 AA	1996
Pye	M1452/05	L6.1 AA	1996-1998
Pye	M2032/05X	L6.1 AA	1996-1997
Pye	M2052/05X	L6.1 AA	1996-1997
Pye	M2192/05X	L6.1 AA	1997
Pye	T163	E2	
Pye	T190	TX	
Pye	T191	TX	
Pye	T192	TX	
Pye	T193	TX	
Pye	T194	TX	
Pye	T195	TX	
Pye	T196	TX	
Reddiffusion	365018	Mk5	Sharp SP1
Reddiffusion	365118	Mk5	Sharp SP1
Reddiffusion	365130	Mk5	Sharp SP1
Reddiffusion	564058	Mk4	
Reddiffusion	674051	Mk4	
Reddiffusion	674058	Mk4	
Reddiffusion	674358	Mk4	
Reoc	TR4 Combi	Daewoo CP062	remote R-46C04
Reoc	TT7	Beko 14.1	
Roadstar	CTV1010	"J "	Serv.mode - press FACTORY button on R/C
Roadstar	CTV1020	"J "	Serv.mode - press FACTORY button on R/C

Roadstar	CTV552	Goodmans Compact-110			
Roadstar	TLV1081	Orion chassis, OVD-6 deck	PCB marked TM9415C, video VM9155C	Micro OEC0076A	
Roadstar	TLV1085	Orion chassis, OVD-6S deck	PCB marked TMX482A, video VMX207A	Micro OEC0093B, option codes	EEPROM address 0F0h
Saba	SB9221	Ferguson ICC7			
Saisho	CM145R				
Saisho	CM159TX	Bush 2020	Matsui 1580		
Saisho	CM16R				
Saisho	CM16TT				
Saisho	CM2080				
Saisho	CM20TT				
Saisho	CM250R				
Saisho	CM260TT	Fidelity ZX5000			
Saisho	CM2880TX	Matsui 2890			
Saisho	CT1400	Amstrad CTV1401	Matsui 1410	Orion 14PS	
Saisho	CT141	Matsui 1420	Orion 14DS		
Saisho	CT141X	Matsui 1420A	Orion 14DR		
Saisho	CT142R	Matsui 1440			
Saisho	CT142RX	Matsui 1440A	PCB marked TM0130B		
Saisho	CT144R (CT144B)	Orion 14A chassis			
Saisho	CT147R	Boots CTV1414R	Dansai CTV1477		
Saisho	CT147R	Matsui 1450	Binatone 01/9014		
Saisho	CT149	Matsui 1480			
Saisho	CT149TX	Matsui 2080			
Saisho	CT149X	Matsui 1480A	Orion 14DT		
Saisho	CT14R	Amstrad CTV1409	Orion 14PR		
Saisho	CT14R	Triumph CTV820			
Saisho	CT162R	Matsui 1640	Orion 14BR		
Saisho	CT1800	Matsui 1810	Orion 18PS		
Saisho	CT204	Logik 690	Orion 20LS		
Saisho	CT208	Logik 698	Orion 20LT		
Saisho	CT208TT				
Saisho	CT20S	Panasonic U4/W			
Saisho	CT22S	Panasonic U4/W			
Saisho	CX14R	Orion CTV144	Triumph CTV8212		
Saisho	CX16R	Triumph CTV8312	Orion CTV164		
Saisho	FST210R	Matsui 2160			
Saisho	FST212T	Matsui 2180TT			
Saisho	FST2130TX	Matsui 2190			
Saisho	FST2530TX	Matsui 2590			
Salora	14MP50	Mono Plus 2 (MP2)			
Salora	16R19	ITT PICO S2			
Salora	20MP50	Mono Plus 2 (MP2)			
Salora	21C5	ITT CORE 2 90DEG			
Salora	21C60	ITT CORE 2 90DEG			
Salora	21D61	ITT CORE 2 90DEG			
Salora	21M8	M80			
Salora	21MP50	Mono Plus 2 (MP2)			
Salora	21N6	Eurostereo 1			
Salora	21N6F	Eurostereo 2 B-F			
Salora	21N6U	ITT EUROSTEREO 1			
Salora	21N81	Eurostereo 2 B-F			
Salora	21S5U	ITT EUROMONO 1 & 2			
Salora	22J40	Hitachi CPT2050			
Salora	25C51	ITT CORE 2 110DEG			
Salora	25C81	ITT CORE 2 110DEG	ITT CORE 90		
Salora	25C81	ITT CORE 2 110DEG			
Salora	25D81 LUK FX	Compact DE 110deg	Micro IC1451 SAA1282C-R686, PSU IC70	LOPTx D064/37, equiv HR6284, FAT30033	
Salora	25M87	M80			
Salora	25M9C	M2 DIGI STEREO			
Salora	25M6	Eurostereo 1			
Salora	25N6F	Eurostereo 2 B-F			
Salora	25N6U	ITT EUROSTEREO 1			
Salora	25N8C	Eurostereo 2 B-F			
Salora	25N8S	Eurostereo 2 B-F			
Salora	25S5U	ITT EUROMONO 1 & 2			
Salora	28F8	ITT EURODIGI 16:9			
Salora	28M87	M80			
Salora	28M9C	M90			
Salora	28MZ100	Nokia/Salora/Luxor MZ-chassis			
Salora	28N8C	Eurostereo 2 B-F			
Salora	28N8S	Eurostereo 2 B-F			
Salora	32F8	ITT EURODIGI 16:9			
Salora	32F9C	ITT EURODIGI 16:9			
Salora	32MZ110	Nokia/Salora/Luxor MZ-chassis			
Salora	33E7S	E			
Salora	33M9C	ITT M2 DIGI STEREO			
Salora	36F8	ITT EURODIGI 16:9			
Samsung	BT110	Alba PTC9C	Goodmans Q9001		
Samsung	BT309K	UWA 12/14" Mono			
Samsung	BT510	Goodmans Q9001	Alba PTC9C	5" Mono with radio	
Samsung	CB14F12(T)(Z)	KS1A			
Samsung	CB14F1T	S15A			
Samsung	CB14Y52T	KS1A			
Samsung	CB20792T	KS1A			
Samsung	CB20F12(T)(Z)	KS1A			
Samsung	CB20F42(T)(Z)	KS1A			
Samsung	CB20H12T	KS1A			
Samsung	CB20H32T	KS1A			
Samsung	CB21F12T	KS1A			
Samsung	CB21H12T	KS1A			
Samsung	CF14Y5Z	KS1A			
Samsung	CF20F4Z	KS1A			
Samsung	C125	Goodmans GTV9200	5" Col portable with radio		
Samsung	C14F1T	S15A (marked C14F1T5X near barcode)	1999, manual 3S15A-1402		
Samsung	C14F1TS	S15A (marked C14F1T50X near barcode)	2001, manual 3S15A-SA14-01		
Samsung	C14F1Z	S15A (marked C14F1Z5X near barcode)	1999, manual 3S15A-1402		
Samsung	C14Y42T	KS1A Rev.1(marked C14Y42TSX near barcode)	2002, manual 3KS1A-SIEL-0910		
Samsung	C14Y42Z	KS1A Rev.1(marked C14Y42Z5X near barcode)	2002, manual 3KS1A-SIEL-0910		
Samsung	C14Y4T	S15A (marked C14Y4T6X near barcode)	2001, manual 3S15A-SIEL-2101		
Samsung	C14Y4Z	S15A (marked C14Y4Z6X near barcode)	2001, manual 3S15A-SIEL-2101		
Samsung	C14Y5Z	KS1A (marked C14Y5ZBX near barcode)	2001, manual 3KS1A-SEH-0917		
Samsung	C14Y5Z	S15A (marked C14Y5Z55X near barcode)	2001, manual 3S15A-SEH-1403		
Samsung	C14Y5Z	S15A (marked C14Y5Z55X near barcode)	2001, manual 3S15A-SEH-1403		
Samsung	C120F12T	KS1A (marked C120F12TSX)	2001, manual 3KS1A-SEH-0917		
Samsung	C120F12Z	KS1A (marked C120F12Z5X)	2001, manual 3KS1A-SEH-0917		
Samsung	C120F32T(Z)	KS1A(P) Rev.1	2002, manual AA82-00215A		
Samsung	C120S10BZ	S15A (=C1501FZ5X)	1999, manual 3S15A-1402		
Samsung	C120S20BT	S15A (=C1501FT5X)	1998, manual 3S15A-0101		
Samsung	C1210R	Nikai Baby 10	Alba CTV10	Boots CTV1010R	
Samsung	C1213	10" portable			
Samsung	C121F12TS	KS1A (marked C121F12TSX)	2001, manual 3KS1A-SEH-0917		
Samsung	C121F32T	KS1A(P) Rev.1	2002, manual 3KS1A-SEH-1104		
Samsung	C121S20BT	S15A			
Samsung	C128C7D	S51A	2001, manual 3S51A-SEH-6201		
Samsung	C13312Z	Portable P58SC			
Samsung	C13351	Thorn C15012R	Portable P68SC		
Samsung	C13352	P68			
Samsung	C1337T	S15A (marked C1337T0X near barcode)	2001, manual 3S15A-SEH-1403		
Samsung	C13373T(Z)	SCT11D			
Samsung	C13373T4C	SCT13B			
Samsung	C1337Z	S15A (marked C1337Z5X near barcode)	1999, manual 3S15A-1402		
Samsung	C1337Z	SCT13B			
Samsung	C1337Z4C	SCT13B			
Samsung	C1338	P50	Tashiko 14D971		
Samsung	C1338G	P50F			
Samsung	C1338Z	P36A			
Samsung	C1340ZA	P50			
Samsung	C1347	P50F			
Samsung	C1347F	P50F			
Samsung	C1347FF	P50F			
Samsung	C1348	P50			
Samsung	C13482				
Samsung	C15012	P58SC			
Samsung	C15013T	P58SC	Akai CT2115		
Samsung	C1501FT	S15A (marked C1501FT0X near barcode)	2001, manual 3S15A-SEH-1403		
Samsung	C1501FT	S15A (marked C1501FT5X near barcode)	1998, manual 3S15A-0101		
Samsung	C1501FZ	S15A (marked C1501FZ5X near barcode)	1999, manual 3S15A-1402		
Samsung	C15030AN	US60AN			
Samsung	C15052	P68SW	Osaki C15013T		

Samsung	CI5052A	P68AT-SA				
Samsung	CI5052AT	P68SA				
Samsung	CI5052X	P68	Osaki CI5013T			
Samsung	CI5052XT	P68SC-M				
Samsung	CI5061	P68SA				
Samsung	CI5079	SCT13B				
Samsung	CI5079TZ	SCT11B				
Samsung	CI5103	P58SC				
Samsung	CI5103T	P58SC				
Samsung	CI514	P36A				
Samsung	CI514	P50				
Samsung	CI514Z	P36A				
Samsung	CI517	P50				
Samsung	CI5312	U88MT				
Samsung	CI5322XT	P68T				
Samsung	CI5322Z	P58SC				
Samsung	CI5330AN	US60A				
Samsung	CI5337AN	US60A				
Samsung	CI533CN	S51A (CI533CN3X)	1999, manual 3S51A-4417			
Samsung	CI533CN	S51A (CI533CNG3X)	2001, manual 3S51A-SEH-6201			
Samsung	CI5344N	S51A (marked CI5344NG3X near barcode)	2001, manual 3S51A-SE53-03			
Samsung	CI5344N	S51A (marked CI5344N3X near barcode)	1999, manual 3S51A-4417			
Samsung	CI5361AT	P68AT				
Samsung	CI537	P55				
Samsung	CI5373T	S15A (marked CI5373T5X near barcode)	1998, manual 3S15A-7349			
Samsung	CI5373T	SCT11B				
Samsung	CI5373T	SCT13B (marked CI5373T4X near barcode)	1998, manual 3SCT13B-7310			
Samsung	CI537V	P56				
Samsung	CI541	P58SH				
Samsung	CI541ZG	P58SH				
Samsung	CI5913	U88MT				
Samsung	CI5933	U88MT				
Samsung	CI5935T	P70				
Samsung	CI5935Z	P70				
Samsung	CI5937AN	Z68				
Samsung	CI593CN	KS2A (marked CI593CN8X near barcode)	2001, manual 3KS2ATSE-2501	Micro SIM806EW1		
Samsung	CI593CN	KS3A (marked CI593CN8X near barcode)	2000, manual 3KS3A-2801	Micro SDA555x		
Samsung	CI593CN	S51A (marked CI593CN3X near barcode)	1999, manual 3S51A-4417	Micro SAA5297M1A		
Samsung	CI593CN	S51A (marked CI593CNG3X near barcode)	2001, manual 3S51A-SE53-03	Micro SAA5553PS/M3/0029		
Samsung	CI593CN	SCT12B (marked CI593CNX near barcode)	1998, manual 3SCT12B-9301	Micro SAA5297PS/230		
Samsung	CI5944N	SCT12B				
Samsung	CI6229T	P72 / U88MT				
Samsung	CI6230	P72				
Samsung	CI6230WWM	U88MT				
Samsung	CI6813	U88MT				
Samsung	CI6835	P70				
Samsung	CI6835T	P70				
Samsung	CI6835Z	P70				
Samsung	CI6837AN	Z68				
Samsung	CI683CN	S51A (marked CI683CN3X near barcode)	1999, manual 3S51A-4417			
Samsung	CI683CN	S51A (marked CI683CNG3X near barcode)	2001, manual 3S51A-SE53-03			
Samsung	CI683CN	SCT12B (marked CI683CNX near barcode)				
Samsung	CI6844N	SCT12B				
Samsung	CI703CN	SCT12B	1998, manual 3SCT12B-9301			
Samsung	CI7230	U88MT				
Samsung	CK5341	P68				
Samsung	CS6818	Z66/RM11				
Samsung	CW21443N	KS3A(P) Rev.2	2001			
Samsung	CW21A83NS	KS3A				
Samsung	CW21C33N	KS3A(P) Rev. 2	2001			
Samsung	CW21C33W	KS3A(P) Rev. 4 50Hz				
Samsung	CW21D83NS	KS1A(P) Rev.1	2002, manual 3KS1A-SEH-0819			
Samsung	CW21M63N	KS3A(P) Rev. 4 50Hz	2002			
Samsung	CW25C33N	KS3A(P) Rev.2				
Samsung	CW25D83NS	KS3A(P) Rev. 4 50Hz				
Samsung	CW28C33N	KS3A(P) Rev. 2	2001, manual 3KS3A-SEH28C7-04			
Samsung	CW28C33W	KS3A(P)	2001, manual 3KS3A-SEH21C7-01			
Samsung	CW28C93V	KS3A(P) Rev. 4 50Hz				
Samsung	CW28D83N	KS3A(P) Rev. 4 (marked CW28D83NS8X)	2002			
Samsung	CW28D83N	S56A(P) Rev.1 (marked CW28D83NSPX)	2003			
Samsung	CW28D85V	KS3A(P) Rev. 4 50Hz				
Samsung	CW29A6HA	SCT53A				
Samsung	CW29M66VS	K55A (marked CW29M66VSGXXEC)	2003, manual AA82-00696A			
Samsung	CW29M66VS	KS3A(P) Rev. 4 (marked CW29M66VS8XXEC)	2002, manual 3KS3A, 50-SEH-0508			
Samsung	CW30A80SA	SCT53A	= CW764AHA			
Samsung	CW30A90SD	SCT53A	= CW767AHD			
Samsung	CW5012	P54				
Samsung	CW533CNG	KS3A (Rev.2)				
Samsung	CW533CNS	KS3A (Rev.2)				
Samsung	CW533CW	KS3A (Rev.2)				
Samsung	CW5344NG	KS3A (Rev.2)				
Samsung	CW683CN	KS3A (marked CW683CNG8X)	2000			
Samsung	CX683CN	KS3A (marked CX683CN8X near barcode)	2000, 3KS3A-2801			
Samsung	CX683CN	S51A (marked CX683CN3X near barcode)	1999, 3S51A-3306			
Samsung	CX683CN	S51A (marked CX683CNG3X near barcode)	2001, 3S51A-SEH-6801			
Samsung	CX683CW	S51A (marked CX683CWG3X near barcode)	2001, 3S51A-SEH-6801			
Samsung	CX683CW3XXEG	S51A				
Samsung	CZ14F2T	KS1A				
Samsung	CZ20F12T	KS1A				
Samsung	CZ20H32T	KS1A				
Samsung	CZ21A083N	KS1A(P) Rev2	2003, AA82-00760B			
Samsung	CZ21F12T	KS1A				
Samsung	SP403JHAX	PLT51A				
Samsung	SP42W5HFX	J52A (projection)	LCD projection TV			
Samsung	SP43W6HFX	J54A				
Samsung	SV421	DX5-R				
Samsung	SV821	DX5-R				
Samsung	T114B3 (T114B33X)	C15C Combi	2001			
Samsung	T114B3DF (T114B3DF3X)	C15C Combi	2001			
Samsung	T114B3F (T114B3F3X)	C15C Combi	2001			
Samsung	T114B7 (T114B73X)	C15C (Rev.1) Combi	2001, 3C15C-SESA-2125			
Samsung	T114B9 (T114B93X)	C15C Combi				
Samsung	T114C5 (T114C52X)	C15C				
Samsung	T114N3 (T114N34X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819			
Samsung	T114N5 (T114N53X)	C15C Rev. 2 Combi	2000, 3C15C-SESA-2035	video TDA8842/N2		
Samsung	T114N5 (T114N54X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819	video TDA9361PS		
Samsung	T114P1 (T114P14X)	C17A (TS10) Combi	2002, 3C17A-SEH-14P1			
Samsung	T114P1DF (T114P1DF4X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819			
Samsung	T114P1F (T114P1F4X)	C17A (TS10) Combi	2002,			
Samsung	T114P7 (T114P74X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819			
Samsung	T114P9 (T114P94X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819			
Samsung	T120C5DF	E260				
Samsung	T120P1DF (T120P1DF4X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819			
Samsung	T120P5DF (T120P5DF4X)	C17A (TS10) Combi	2002, 3C17A-SESA-0819			
Samsung	T121B4DF	C17A (TS10) Combi	2002			
Samsung	T121B5DF (T121B5DF4X)	C17A (TS10) Combi	2002, 3C17A-SEH-0911			
Samsung	T1331	combi SCV11F				
Samsung	T1601	combi SCV11F				
Samsung	TO-62X	Z66/RM11				
Samsung	TVP3350I	SCV11F				
Samsung	TVP3370	PS14				
Samsung	TVP5050	SCV11A/SCV11D				
Samsung	TVP5050IST	SCV11F				
Samsung	TVP5070IT	PS14B (combi)				
Samsung	TVP5350	SCV11A/SCV11D				
Samsung	TVP5370	PS14				
Samsung	Voyager 10					
Samsung	VT306K	Tashiko 12D971				
Samsung	WI24W6VD	S51A (marked WI24W6VD3X near barcode)	2001, manual 3S51A-SEH-6801			
Samsung	WI28W5VN	S51A (marked WI28W5VN3X)				
Samsung	WI28W6VD	S51A	1999, manual 3S51A-W2802			
Samsung	WI28W6VN	S51A	1999, manual 3S51A-W2802			
Samsung	WS24V53N	KS3A Rev.5 (marked WS24V53NS8XXEU)	2003, manual AA82-00327A			
Samsung	WS24V53V	KS3A Rev.5 (marked WS24V53VS8XXEU)	2003, manual AA82-00327A			
Samsung	WS24W63N	KS3A Rev.2 (marked WS24W63NS8XXEU)	2001, manual 3KS3A-SEH-2810			
Samsung	WS24W63V	KS3A Rev.5 (marked WS24W63NS8XXEC)	2002, manual 2KS3A-SEH-1104			
Samsung	WS24W64N	KS3A Rev.2 (marked WS24W64NS8XXEC)	2001, manual 3KS3A-SEH32W6-04			
Samsung	WS24W6VN	KS3A(P) Rev. 2 (marked WS24W6VNG8XXEU)	2000, manual 3KS3A(P)-W2401			
Samsung	WS28M64NS	KS3A(P) Rev. 4 50Hz		around £399		



Sanyo	CE14A2-GB	EC7-A	2001				
Sanyo	CE14AT2-GB	EC7-A	2001 (=14AT2)				
Sanyo	CE14AT3-GB	EC7-C	2003, E75		remote 0600123608		
Sanyo	CE14M2B-03	EC5-A	1998		remote JXYA		
Sanyo	CE14M2B-04	EC5-A	1999				
Sanyo	CE14M3B-00	EC5-A	2000				
Sanyo	CE14M4B-00	EC8-A	2001				
Sanyo	CE14M4SLB-00	EC8-A	2001				
Sanyo	CE14MT2SLB-03	EC5-A	1999		remote JXYC		
Sanyo	CE14MT3B-00	EC5-A	2000				
Sanyo	CE14MT4B-00	EC8-A	2001		remote JXMKE		
Sanyo	CE14MT4MB-00	EC8-A	2001				
Sanyo	CE14MT4SLB-00	EC8-A	2001		remote JXMKE		
Sanyo	CE17AT3-GB	EC7-B	2002				
Sanyo	CE21DG1B-04	EB4-A	1998				
Sanyo	CE21DN1	EB4-A					
Sanyo	CE21DN2	EB4-A					
Sanyo	CE21DN4B-01(02)	EB4-A	1999				
Sanyo	CE21DN5B-00(01,03)	EB6-A	2000				
Sanyo	CE21DN5B-04	EB6-A	2001				
Sanyo	CE21DN5B-05	EB6-A	2002				
Sanyo	CE21DN6B-00	EB6-A	2001				
Sanyo	CE21DN6B-01	EB6-D	2001				
Sanyo	CE21DN6MDB-00	EB6-B	2001				
Sanyo	CE21DN7B-00	EB6-D	2002				
Sanyo	CE21DN8B-00	EB7-B	2003				
Sanyo	CE21DN8B-00(01)	EB8-A	2004				
Sanyo	CE21EF55B	EC7-B	2000				
Sanyo	CE21MT3B-00	EC5-A	2000				
Sanyo	CE21MT4B-00	EC8-A	2001		remote JXMKE		
Sanyo	CE21MT4B-00	EC8-A	2001		remote JXMKE		
Sanyo	CE21MT4HB-00	EC8-A	2001		remote JXMKE		
Sanyo	CE21MT4HB-01	EC8-A	2002				
Sanyo	CE21MT4HRB-00	EC8-A	2002				
Sanyo	CE21MT4MB-00	EC8-A	2001				
Sanyo	CE24FVN5B-00	EB8-A	2004				
Sanyo	CE24FVN5BKB-00	EB8-A	2004				
Sanyo	CE24WN4B-00(01)	EB6-A	2000				
Sanyo	CE24WN5B-00(01)	EB6-A	2001				
Sanyo	CE24WN5B-03(04,05)	EB7-A	2002				
Sanyo	CE24WN6B-00	EB7-A	2003				
Sanyo	CE24WN7B-01	EB8-A	2004				
Sanyo	CE25BM1B-00	EC5-A	2000		remote JXMKE		
Sanyo	CE25BM2B-00	EC5-A	2001		remote JXMKE		
Sanyo	CE25BN2B-00(01)	EB4-A	2000				
Sanyo	CE25DN1B	EB4-A					
Sanyo	CE25DN2B-03	EB4-A					
Sanyo	CE25DN3B-01(03,04,07,12)	EB4-A (MKII)	1998				
Sanyo	CE25DN5B-00(01,02,03,04)	EB6-A	2000				
Sanyo	CE25DN6B-00	EB6-A	2001				
Sanyo	CE25DN6B-01	EB6-D	2001				
Sanyo	CE25DN6MDB-00	EB6-B	2001				
Sanyo	CE25DN7B-00(01)	EB6-D	2002				
Sanyo	CE25DN8B-00	EB7-B	2003				
Sanyo	CE25DN9B-00	EB7-B	2004				
Sanyo	CE25DN9B-01	EB8-A	2004				
Sanyo	CE26MT3B-00	EC5-A	2000				
Sanyo	CE26MT3B-01	EC5-A	2001				
Sanyo	CE26MT3B-02(03)	EC5-A	2002				
Sanyo	CE26MT4B-00	EC8-C	2003		remote JXMTA		
Sanyo	CE26MT4MB-00	EC8-C	2003				
Sanyo	CE25XP2B-00(01)	EB4-A (MKII)	1998/1999				
Sanyo	CE27LD3B-00	UB4-B LCD TV	2004				
Sanyo	CE28BN2B-00(02)	EB4-A	2000				
Sanyo	CE28BN2B-01	EB4-A	2001				
Sanyo	CE28DFN1B-00	WB5-D	2002				
Sanyo	CE28DFN2B-00	EB7-D	2003				
Sanyo	CE28DN1B	EB4-A					
Sanyo	CE28DN4B-01(02)	EB4-A (MKII)	1999				
Sanyo	CE28DN5B-00(01,02,03)	EB6-A	2000				
Sanyo	CE28DN6B-00	EB6-A	2001				
Sanyo	CE28DN6B-01	EB6-D	2001				
Sanyo	CE28DN7B-00(01)	EB6-D	2002				
Sanyo	CE28DN8B-00(01)	EB7-B	2003				
Sanyo	CE28DN9B-00(01)	EB8-A	2004				
Sanyo	CE28DWN1B-00	EB7-D	2004				
Sanyo	CE28FVN4B-00	WB6-A	2003		remote JXMTA		
Sanyo	CE28FVN1B-00	WB5-B	2000				
Sanyo	CE28FVN2B-00	WB5-B	2001				
Sanyo	CE28FVN2B-01	EB6-C					
Sanyo	CE28FVN3B-00(01)	EB6-C	2002				
Sanyo	CE28FVN3B-02(03)	EB7-A	2002				
Sanyo	CE28FVN4B-00(01)	EB7-A	2003				
Sanyo	CE28FVN4BKB-00	EB7-A	2003				
Sanyo	CE28FVN5B-00	EB7-A	2004				
Sanyo	CE28FVN5B-01	EB8-A	2004				
Sanyo	CE28FVN5BKB-00	EB8-A	2004				
Sanyo	CE28FWP2B-00	WB5-B	2001		remote JXMFE		
Sanyo	CE28MT3B-00	EC5-A	2000				
Sanyo	CE28MT4B-00	EC8-C	2003		remote JXMTA		
Sanyo	CE28WN3B-01	EB5-W	1999				
Sanyo	CE28WN4B-00(01)	EB6-A	2000				
Sanyo	CE28WN4B-04	EB6-A	2001				
Sanyo	CE28WN4JB-00	EB7-A	2003				
Sanyo	CE28WN5B-00(01,02,03)	EB6-A	2001-2002				
Sanyo	CE28WN5B-04(05,06)	EB7-A	2002				
Sanyo	CE28WN6B-00(01)	EB7-A	2003				
Sanyo	CE28WN7B-00	EB7-A	2004				
Sanyo	CE28WN7B-01	EB8-A	2004				
Sanyo	CE28WP1B	WB2-A			remote SXMR		
Sanyo	CE28WP2B-00	WB2-A			remote SXMR		
Sanyo	CE28WP3B-01(02)	WB2-A	1999				
Sanyo	CE28WP4B-00(01,02,03,04)	EB6-A	2000				
Sanyo	CE28WP5B-00(01,02,03)	EB6-A	2001-2002				
Sanyo	CE28XP2B-01	EB4-A (MKII)	1998				
Sanyo	CE28XP2B-04	EB4-A	1999				
Sanyo	CE30LD3B-00	UB4-B LCD TV	2004				
Sanyo	CE32DFN1B-00	WB5-D	2002		remote JXMSA		
Sanyo	CE32DFN2B-00	EB7-D	2003				
Sanyo	CE32DFN2BKB-00	EB7-D	2003				
Sanyo	CE32FVN4B-00(01)	WB6-A	2003/2004		remote JXMTA		
Sanyo	CE32FVN2B-00	WB5-B	2001				
Sanyo	CE32FVN2B-01	EB6-A	2002				
Sanyo	CE32FVN3B-00	WB5-B	2002		remote JXMTA		
Sanyo	CE32FVN3B-01	EB6-C	2002				
Sanyo	CE32FVN3B-02(03)	EB7-A	2002				
Sanyo	CE32FVN4B-00(01)	EB7-A	2003				
Sanyo	CE32FVN4BKB-00	EB7-A	2003				
Sanyo	CE32FVN5B-00	EB7-A	2004				
Sanyo	CE32FVN5B-01	EB8-A	2004				
Sanyo	CE32FVN5BKB-00	EB8-A	2004				
Sanyo	CE32FWP2B-00	WB5-B	2001				
Sanyo	CE32WN2B-00	WB2-B	1998		remote SXMR		
Sanyo	CE32WN3B-01	EB5-W	1999				
Sanyo	CE32WN4B-00(01,02,03)	EB6-A	2000				
Sanyo	CE32WN4B-04	EB6-A	2001				
Sanyo	CE32WN4JB-00(01)	EB7-A	2003				
Sanyo	CE32WN5B-00(01)	EB6-A	2001				
Sanyo	CE32WN5B-02(03)	EB6-A	2002				
Sanyo	CE32WN5B-04(05,06)	EB7-A	2002				
Sanyo	CE32WN6B-00(01)	EB7-A	2002				
Sanyo	CE32WN7B-00	EB7-A	2004				
Sanyo	CE32WN7B-01	EB8-A	2004				
Sanyo	CE32WP2B-00	WB2-A			remote SXMR		
Sanyo	CE32WP3B-00(01)	WB2-A	1999/2000				
Sanyo	CE32WP4B-00(01,02,03)	EB6-A	2000				
Sanyo	CE32WP5B-00(01,02,03)	EB6-A	2001-2002				
Sanyo	CMX2100	83S-C21					
Sanyo	CPB2552	E4-A25					

Sanyo	CPB2558	E3				
Sanyo	CTP3101	B5C-31021				
Sanyo	CTP3104	79P-BBZ				
Sanyo	CTP3105	79P				
Sanyo	CTP3106	80P-B14				
Sanyo	CTP3131	80P-B14				
Sanyo	CTP3132	80P-B14				
Sanyo	CTP3134	83P-D14				
Sanyo	CTP3141	83P-C14	Tashiko 14D961			
Sanyo	CTP3144	E2-A14	Tashiko 14D962			
Sanyo	CTP3246	80P				
Sanyo	CTP4100	79P				
Sanyo	CTP4132	80P-G16				
Sanyo	CTP4144	E2-A16				
Sanyo	CTP6112	B5A-61120				
Sanyo	CTP6113	B5A-61130				
Sanyo	CTP6124	80P-A20				
Sanyo	CTP6130	80P-D20				
Sanyo	CTP6131	80P-D20				
Sanyo	CTP6132	80P-D20				
Sanyo	CTP6133	80P-D20				
Sanyo	CTP6134	83P-D20				
Sanyo	CTP6135	83P-D20				
Sanyo	CTP6143	E2-B20				
Sanyo	CTP6144	E2-B20				
Sanyo	CTP6229	80P				
Sanyo	CTP7130	80P-F22				
Sanyo	CTP7131	80P-F22				
Sanyo	CTP7132	80P-F22				
Sanyo	CTP7133	80P-F22				
Sanyo	CTP7135	80P-F22				
Saville	XMP25	Goldstar P58A				
Schneider	70222	TV9.1	Multistandard Pal/SECAM I, B/G, D/K			
Schneider	Scenario 215	11AK19E-3				
Schneider	Scenario 216	11AK19E-3				
Schneider	Scinema 2817UK	TV9.3 Multi	2000, Philips "Made in Germany" CRT	LOPTx 1372.0031 (FBT40715, HR8409)		
Schneider	STV1401	11AK20M				
Schneider	STV1402T	CTN AA				
Schneider	STV1405T	CTN BB				
Schneider	STV2003T	CTN BB				
Schneider	STV2007T	CTS AA	2001, serv.mode see Pacific PTV5102	LOPTx 40337-54, LOPTr BUT11AF		
Schneider	STV2801T	TV9				
Schneider	STV2802T	TV9.1				
Schneider	STV2804T	Beko 14.2				
Schneider	STV360	11AK20				
Schneider	STV365	11AK20				
Schneider	STV510	11AK19E-3				
Schneider	STV515	11AK19E-3				
Schneider	STV5187.1	11AK19E-3				
Schneider	STV5197.1	11AK19E-3				
Schneider	STV550	11AK19E-3				
Schneider	STV5501 ("STV5501")	11AK19-8A	1999-	AK19 prod.code: 10000360		
Schneider	STV552	11AK19E-3				
Schneider	SVTV1451	Orion chassis	PCB marked VMA230A, PSU VPA150A	Micro OEC0107B, option codes EEPROM 0B4h (0B4->0B4h)		
SEG	CT1402A(UK)	11AK36	2002-2003	prod.code: 10015412		
SEG	CT1402S(UK)	11AK36	2002-2003	prod.code: 10015414		
SEG	CT2102a UK	11AK30	2002-2003	prod.code: 10014287		
SEG	CT2102UK	11AK30	2002-2003	prod.code: 10014288		
SEG	CT2103A	11AK30				
SEG	CT2801UK	11AK19P5	micro SDA5555-A041			
SEG	CT2820a	11AK28-7				
SEG	CT7800	11AK19E-3				
SEG	CT7951GB	11AK19P				
Sentra	GX9200	Nikkai TLG0101				
Sentra	STX600	Nikkai NT20	Susumo FX20			
Sharp	15JF25H	GA1E	2002			
Sharp	15JF26H	GA1E	2002			
Sharp	21HS50H	GA1E	2001			
Sharp	21HT15H	GA1E	2001			
Sharp	21KF80H	GA1E	2003			
Sharp	21LF90H	11AK44 (Vestel)	2004			
Sharp	28HW53H	DA50W	2001			
Sharp	28JF73H	GA20	2002/2003			
Sharp	28JF74H	GA20	2002/2003			
Sharp	28JW73H	GA20 100Hz	2002, around £330, Pal I			
Sharp	28JW74H	GA20	2002/2003			
Sharp	28JW76E	GA200 100Hz	2002/2003, Multisystem Pal/SECAM B/G, D/K	ERRMCG1073BMSA		
Sharp	28KF84H	GA200 100Hz	2003			
Sharp	28LF92H	11AK45 (Vestel)	2004, £300			
Sharp	28LW92H	11AK45 (Vestel)	2004			
Sharp	32HW53H	DA50W				
Sharp	32HW57E	DA100W 100Hz	2001, Multisystem Pal/Secam I, B/G, D/K			
Sharp	32JF73H	GA20	2002/2003			
Sharp	32JF74H	GA20	2002/2003			
Sharp	32JF77H	GA200 100Hz	2003			
Sharp	32JW73H	GA20 100Hz	2002, Pal I			
Sharp	32JW74H	GA20	2002/2003			
Sharp	32JW76E	GA200 100Hz	2002/2003, Multisystem Pal/SECAM B/G, D/K, I			
Sharp	32KF84H	GA200 100Hz	2003			
Sharp	32LF92H	11AK45 (Vestel)	2004			
Sharp	32LW92H	11AK45 (Vestel)	2004			
Sharp	37AM12H	5BSA				
Sharp	37AM23H	5BSA				
Sharp	37AT25H	5BSA				
Sharp	37DM23H	CA1				
Sharp	37DT25H	CA1				
Sharp	37EM33H	CA1				
Sharp	37ES33H	CA1				
Sharp	37ET35H	CA1				
Sharp	37FM11H	CA1				
Sharp	37FT15H	CA1				
Sharp	37GQ20H	Squad	2000			
Sharp	37GT25H	GA1	2000/2001			
Sharp	37GT27H	SQUAD-T	2002			
Sharp	37VT12H	VP3				
Sharp	37VT24H	VP5				
Sharp	37VT26H	VP8	1999			
Sharp	51AT15H	5BSA				
Sharp	51CS03H	CS				
Sharp	51CS05H	CS				
Sharp	51DS02H	CA10				
Sharp	51DS03H	CA10				
Sharp	51DS05H	CA10				
Sharp	51DT25H	CA1				
Sharp	51FSS1H	CA10				
Sharp	51GT25H	GA1	2000			
Sharp	56FW53H	DA100 50Hz chassis (aka DA50W)	1999/2000			
Sharp	59CS03H	CS				
Sharp	59CS05H	CS				
Sharp	59CS08H	CS				
Sharp	59DS03H	CA10				
Sharp	59DS06H	CA10				
Sharp	59ES03H	CA10				
Sharp	59ES05H	CA10				
Sharp	59ES07H	DA100				
Sharp	66AS05H	4BSC				
Sharp	66AS06H	BCTV-A				
Sharp	66CS03H	CS				
Sharp	66CS05H	CS				
Sharp	66CS08H	CS				
Sharp	66DS03H	CA10				
Sharp	66DS05H	CA10				
Sharp	66DW18H	CW100	1999			
Sharp	66ES03H	CA10				
Sharp	66ES05H	CA10				
Sharp	66ESD7H	DA100				
Sharp	66FW53H	DA100 50Hz chassis (aka DA50W)	1999/2000			
Sharp	66FW54H	DA100 50Hz	1999/2000			
Sharp	66GF63H	DA50W	2000			



Sharp	66GF64H	DA50W	2000						
Sharp	66GS62H	GA10 50Hz	2001						
Sharp	70FW53E	DA50W 50Hz	2002						
Sharp	70GS64S	DA100 (nonUK model)							
Sharp	76DW18H	CW100	1999						
Sharp	76EF19H	DA100W , 100Hz ,not Dolby, only NICAM	1999						
Sharp	76EF20H	DA100W , 100Hz, Dolby sound	1999						
Sharp	76FW53H	DA100 50Hz chassis (aka DA50W)	1999/2000						
Sharp	76FW54H	DA100 50Hz	1999/2000						
Sharp	76GF63H	DA50W							
Sharp	76GF64H	DA50W	2000						
Sharp	81GF66E	DA100W							
Sharp	C1407	no chassis type							
Sharp	C1410HW	4PS							
Sharp	C1411H	4PSR1							
Sharp	C1412								
Sharp	C1415	no chassis type							
Sharp	C1420H	7PS							
Sharp	C1421H	7PSR1							
Sharp	C1430	8PS							
Sharp	C1431H	8PSR							
Sharp	C1480	TAP-812							
Sharp	C1491	Rediffusion Mk5							
Sharp	C1493								
Sharp	C1495								
Sharp	C1871								
Sharp	C1891								
Sharp	C2002								
Sharp	C2072								
Sharp	C2082								
Sharp	C2085								
Sharp	C3703H	7PS							
Sharp	C3703HBK	7PS							
Sharp	C3704	8PS							
Sharp	C3705	4PSR1							
Sharp	C3705H	4PS							
Sharp	C3706H	14B							
Sharp	C3709	7PS							
Sharp	C3710H	8PSR							
Sharp	C3720H	14A							
Sharp	C3730H	14B							
Sharp	CV2121H	7PSR1							
Sharp	CV2123H	7PSR1							
Sharp	CV2131	8PSR							
Sharp	CV2133H	8PSR							
Sharp	CV3707	5P-SR1							
Sharp	CV3707H	5PS							
Sharp	CV3709H	7PS							
Sharp	CV3730								
Sharp	CV3745	14B							
Sharp	CV4833	14B							
Sharp	CV5407	5PS							
Sharp	DV1512	Euro DS1							
Sharp	DV1600	no chassis type							
Sharp	DV1620								
Sharp	DV2120	4PSR2							
Sharp	DV2121	4PS							
Sharp	DV3750H	S3B							
Sharp	DV3751H	S3B							
Sharp	DV3760H	4BSA							
Sharp	DV3761H	4BSC							
Sharp	DV3770H	4BSA							
Sharp	DV4205	4PS							
Sharp	DV5101H	EURO-DS							
Sharp	DV5103H	EURO-DS							
Sharp	DV5105H	DECO-4							
Sharp	DV5107H	DECO-5							
Sharp	DV51083H	D3000							
Sharp	DV5131H	S3B							
Sharp	DV5132H	DECO-5							
Sharp	DV5135H	DECO-5							
Sharp	DV5150H	S3B							
Sharp	DV5161H	4BSA							
Sharp	DV5165H	4BSB							
Sharp	DV5180H	4BSB							
Sharp	DV5903H	D3000							
Sharp	DV59083H	D3000							
Sharp	DV5932H	BCTV-A							
Sharp	DV5935H	BCTV-A							
Sharp	DV5937H	BCTV-A							
Sharp	DV5940H	4BSC							
Sharp	DV6603H	D3000							
Sharp	DV66083H	D3000							
Sharp	DV6632H	4BSC							
Sharp	DV6635H	BCTV-A							
Sharp	DV6640H	4BSC							
Sharp	SV2189	8PLS							
Sharp	SV257	NC-7							
Sharp	SV2588	8PLS							
Sharp	SV2588H	8PLS							
Sharp	SV2589	8PLS							
Sharp	SV2589H	8PLS							
Sharp	SV287	NC-7							
Sharp	SV2888	8PLS							
Sharp	SV2888H7	8PLS							
Sharp	SV2889	8PLS							
Sharp	SV3320	8PLP1							
Sharp	VT3700	VP1			TV/VCR				
Sharp	VT3705	VP1			TV/VCR				
Skantic	3781	180							
Skantic	5111	BC							
Skantic	5114	BC							
Skantic	5601	BC							
Skantic	5608	BC							
Skantic	6711	BC							
Skantic	6718	BC							
Skantic	18051919	B2							
Solarvox	142TT								
Solarvox	14R19	CVC1110/12							
Solarvox	14S09	CVC1110/12							
Solarvox	14S19	ITT PICO S/2							
Solarvox	16R19	ITT PICO S/2			CVC1110/12				
Solarvox	20R09	ITT MINI 2 ST2/2							
Solarvox	20S09	ITT CVC1175							
Solarvox	20S19	ITT PICO S/2							
Solarvox	20T09	ITT CVC1200/1							
Solarvox	20T19	ITT MINIZ							
Solarvox	22R09	ITT CVC1215							
Solarvox	22S19	ITT CVC1200/1			CVC1210/15				
Solarvox	22S19	ITT COMPACT 80/R							
Solarvox	22T09	ITT CVC1215							
Solarvox	22T09TX	ITT CVC1210							
Solarvox	26R09	ITT CVC1212/17							
Solarvox	26SR09	ITT CVC1212/17							
Solarvox	26ST09	ITT CVC1212/17							
Solarvox	26T09	ITT CVC1212/17							
Solarvox	CML14	Hinari CT4 / 5			Nikkai TLG0909				
Solarvox	CML14RC	Nikkai TLG0101							
Sony	CKV2760				TV/MONITOR				
Sony	FDL390				1991				
Sony	KD28DL10U	FE2D, 50Hz, Dolby Surround			2003, RM933, £430				
Sony	KD28DL11U	FE2D			2004, RM949				
Sony	KD28DX200U	AE6D			2004, RM933				
Sony	KD28DX40U	FE2D			2001, RM933, around £540				
Sony	KD28DX50U	FE2D			2003, RM933				
Sony	KD28DX51U	FE2D			2004, RM949				
Sony	KD32DX100U	AE6D			2001, RM933				
Sony	KD32DX150U	AE6D			2003, RM933				
Sony	KD32DX200U	AE6D			2004, RM933				

Sony	KD32DX40U	FE2D	2002, RM933		
Sony	KD32DX50U	FE2D	2003, RM933		
Sony	KD32DX51U	FE2D	2004, RM949		
Sony	KD32NS100B	AE6D	2001, nonUK, RM935		
Sony	KD32NX100U	AE6D	2001, RM935		
Sony	KD32NX200U	AE6D	2002, RM939		
Sony	KD36NX200U	AE6D	2002, RM939		
Sony	KD51DS1U	RE2D	2000, RM892		
Sony	KDEP42MRX1D	MRX1 (LCD TV)	2004, RMY1013		
Sony	KDEP50MRX1D	MRX1 (LCD TV)	2004, RMY1013		
Sony	KDEP61MRX1D	MRX1 (LCD TV)	2004, RMY1013		
Sony	KDLL32MRX1D	MRX1 (LCD TV)	2004, RMY1013		
Sony	KDLL42MRX1D	MRX1 (LCD TV)	2004, RMY1013		
Sony	KF42SX200U	LE3A (LCD TV, Multistandard B/G, D/K, I, L)	2003, RM905		
Sony	KF42SX300U	LE4A	2004, RM906		
Sony	KF50SX100U	LE3	2000, RM903		
Sony	KF50SX200U	LE3A (LCD TV, Multistandard B/G, D/K, I, L)	2002, RM905		
Sony	KF50SX300U	LE4A	2003, RM906		
Sony	KF60SX300U	LE4A	2003, RM906		
Sony	KL37W1U	LE1	1996, RM838		
Sony	KL37W2U	LE1	1998, RM838		
Sony	KL40WA1U	LEZ (LCD Projector)	1997, RM862		
Sony	KL50W1U	LE1	1996, RM838		
Sony	KL50W2U	LE1	1997, RM838		
Sony	KLV15SR1	AS1 (LCD TV, Multi-standard)	2002, RM932		
Sony	KLV15SR2	? (LCD TV, Multi standard)	2003, RMY1101		
Sony	KLV17H1	AS1 (LCD TV, Multi-standard)	2002, RM932		
Sony	KLV23HR2	? (LCD TV, Multi standard)	2003, RMY1103		
Sony	KLV30MR1	? (LCD TV, Multi standard)	2003, RM972		
Sony	KP41DS1U	RE2D (based on BE3D)	1999, RM892		
Sony	KP41S3U	RE1	1996, RM831		
Sony	KP41S4U	RE2 (based on BE3D)	1998, RM862		
Sony	KP41S5U	RE2	1999, RM862		
Sony	KP44DX2	AE6X	2003, RM948		
Sony	KP44PS2	RE3W	2001, RM903		
Sony	KP44PX2U	AE6X	2002, RM938		
Sony	KP44PX3U	AE6Y	2004, RM945		
Sony	KP46S4U	RX1E	1997, RM831		
Sony	KP48PS1	RE3	2000, RM892		
Sony	KP53PS1	RE3	2000, RM892		
Sony	KP53S4U	RX1E	1997, RM831		
Sony	KP61PS1	RE3	2000, RM892		
Sony	KPS4112	AP1E	1995, RM831		
Sony	KT-X1420UB	SCC-603-A			
Sony	KV1201UB	SCC23A-A			
Sony	KV1310		1974		
Sony	KV1320		1972		
Sony	KV1330		1974		
Sony	KV1340		1975		
Sony	KV1352E	P-2E			
Sony	KV1400		1978		
Sony	KV1412UB	XE3	1984, RM636		
Sony	KV1430UB	XE3	1983		
Sony	KV1434M3	GP1A (nonUK, brought from abroad)	RM687B		
Sony	KV1440UB	XE5	1985		
Sony	KV1442UB	XE5	1986, RM651		
Sony	KV1460UB	GPI	1987		
Sony	KV1462UB	GPI	1987, RM655		
Sony	KV14CT1U	BX1	2003, RMW100		
Sony	KV14FV1U	BC5	2000, RMC815	around £350	
Sony	KV14LM1U	FE2	2000, RM889		
Sony	KV14LT1U	FE2	2000, RM887		
Sony	KV14M1U	BE4	1996, RM836		
Sony	KV14T1U	BE4	1996, RM836		
Sony	KV14V4U	TE1	1996, RMC802		
Sony	KV14V5U	BC4	1997, RMC811		
Sony	KV14V6U	BC4	1997, RMC811		
Sony	KV1612UB	XE3	1979, RM604B	SCC-251A	
Sony	KV16WS1U	BE5	1996, RM836		
Sony	KV16WT1U	BE4	1995, RM836		
Sony	KV16XMTU	GP2	1987, RM654		
Sony	KV1800		1972		
Sony	KV1810		1973		
Sony	KV1820	SCC-132B-B	ALSO SCC-155A-A	MADE1976	
Sony	KV1822UB	SCC-146C-B	1978		
Sony	KV1882UB	XE3	1984, RM636	SCC-521C-A	
Sony	KV19XMTU	GP2	1987, RM654		
Sony	KV19XMU	GP2	1987, RM652		
Sony	KV2000UB		1975		
Sony	KV2000UB-II/1820	SCC-132A-A & B	ALSO SCC-99A-A	1977	
Sony	KV2020		1979		
Sony	KV2022		1979, RM604B		
Sony	KV2029				
Sony	KV2040		1981		
Sony	KV2052U	PE2	1982, RM621		
Sony	KV2056UB	PE2	1982, RM615		
Sony	KV2060	XE3	1983		
Sony	KV2062	XE3	1983, RM632		
Sony	KV2066	XE3	1983, RM632		
Sony	KV2075				
Sony	KV2090	XE4	1985		
Sony	KV2092	XE4	1985, RM641		
Sony	KV2096UB	XE4	1985, RM641		
Sony	KV20WS1U	BE5	1997, RM836		
Sony	KV211XMTU	AE1	1989, RM670		
Sony	KV211XMU	AE1	1989, RM671		
Sony	KV2121U	AE1			
Sony	KV2153MT				
Sony	KV2170U	BE4A			
Sony	KV2171U	BE4A			
Sony	KV21CL10U	BX1, 50Hz	2003, RMW100, £215		
Sony	KV21CT1U	BX1, 50Hz	2003, RMW100, £170		
Sony	KV21FT1U	FE2	2000, RM887		
Sony	KV21FV1U	BC5	2000, RMC815	around £450	
Sony	KV21FX20	FE1A	nonUK		
Sony	KV21FX30	FE2	nonUK		
Sony	KV21LS30U	FE2	2000, RM887		
Sony	KV21LT1U	FE2	2000, RM887		
Sony	KV21M1U	BE4A	1996, RM836		
Sony	KV21M3U	BE4A	1997, RM836		
Sony	KV21M5	FE1	1998, nonUK		
Sony	KV21T1U	BE4A	1996, RM836		
Sony	KV21T3U	BE4A	1997, RM836		
Sony	KV21V4U	TE1	1996, RMC802		
Sony	KV21V5U	BC4	1997, RMC811		
Sony	KV21V6U	BC4	1997, RMC811		
Sony	KV21X1U	BE5	1996, RM836		
Sony	KV21X4U	BE5	1997, RM836		
Sony	KV21X5U	FE1	1998, RM883		
Sony	KV21XMTU	AE1	1987, RM670		
Sony	KV21XMU	AE1	1987, RM671		
Sony	KV21XRTU	SX	1986, RM661		
Sony	KV21XRU	SX	1986, RM661		
Sony	KV2200		1978		
Sony	KV2201	YE2	1981		
Sony	KV2202		1978		
Sony	KV2204UB	SCC-244A-A	1979, RM604B		
Sony	KV2206		1980		
Sony	KV2207		1980		
Sony	KV2212UB	YE2	1982, RM615		
Sony	KV2212UBII	YE2	1984, RM632		
Sony	KV2215UB	YE2	1985, RM632		
Sony	KV2216UB	YE2	1982, RM615		
Sony	KV2216UBII	YE2	1984, RM632		
Sony	KV2217UB	YE2	1985, RM632		
Sony	KV2252UB	PE3 (chassis depends on year)	1983, RM632		
Sony	KV2252UB	RX (chassis depends on year)	1985, RM632		
Sony	KV2256UB	PE3 (chassis depends on year)	1983, RM632		
Sony	KV2256UB	RX (chassis depends on year)	1985, RM632		





Sony	KVX2102U	BE3B	1994, RM833				
Sony	KVX2121U	AE1	1989, RM670				
Sony	KVX2129	AE1	1990, RM670				
Sony	KVX2131	AE1C					
Sony	KVX2132U	AE1B	1990, RM689, NICAM				
Sony	KVX2133	AE1B					
Sony	KVX2142	AE1C	1991, RM816				
Sony	KVX2152	AE1C	1992, RM816				
Sony	KVX2153	AE1C					
Sony	KVX2162U	AE2	1993, RM830				
Sony	KVX2163	AE1C					
Sony	KVX217	AE2B					
Sony	KVX2172	AE2B	1994, RM831				
Sony	KVX2173	AE2B					
Sony	KVX2182U	BE3B	1995, RM833				
Sony	KVX21TU	AE1	1988, RM670				
Sony	KVX2502	BE3B	1994, RM833				
Sony	KVX2503	BE3B					
Sony	KVX2521	AE1	1989, RM670				
Sony	KVX2529U	AE1	1990, RM670				
Sony	KVX2531	AE1C					
Sony	KVX2532	AE1B	1990, RM689				
Sony	KVX2533	AE1B					
Sony	KVX2542	AE1C	1991, RM831				
Sony	KVX2545	AE1C	1991, RM824				
Sony	KVX2552	AE1C	1992, RM816				
Sony	KVX2553	AE1C					
Sony	KVX2560	AE2					
Sony	KVX2561	AE2					
Sony	KVX2562U	AE2	1993, RM830				
Sony	KVX2563	AE2					
Sony	KVX257	AE2B					
Sony	KVX2572	AE2B	1994, RM831				
Sony	KVX2573	AE2B					
Sony	KVX2582U	BE3B	1995, RM833				
Sony	KVX25TU	AE1	1988, RM670				
Sony	KVX2902	BE3B	1994, RM833, A board	part number A-1632-199-A			
Sony	KVX2903	BE3B					
Sony	KVX2910	AE1					
Sony	KVX2931	AE1C					
Sony	KVX2932	AE1B	1990, RM689				
Sony	KVX2933	AE1B					
Sony	KVX2942	AE1C	1991, RM816				
Sony	KVX2952	AE1C	1992, RM816				
Sony	KVX2962	AE2	1993, RM830				
Sony	KVX2963	AE2					
Sony	KVX297	AE2B					
Sony	KVX2972	AE2B	1994, RM831				
Sony	KVX2973	AE2B					
Sony	KVX2982U	BE3B	1995, RM833, A board 1-655-470-11	part number A-1632-275-A			
Sony	KX14CP1	HF	1985				
Sony	KX20PS1	HF	1982				
Sony	KX27PS1	HF	1982				
Sony	KZ32TS1	??	2002, RM932				
Sony	KZ32TS2	??	2003, RM932				
Sony	KZ42TS1	??	2002, RM932				
Sony	KZ42TS2	??	2003, RM932				
Sony	PVM-1440OM	SCC-C57A-A					
Sony	PVM-1442OM	SCC-C66A-A					
Sony	PVM-1444OM	SCC-C55A-A					
Sony	TV9-90UB	D/S MONO					
Susumu	FX1400R	Murphy CTV3500					
Susumu	FX14S	Murphy CTV3500					
Susumu	FX20	Nikkai NT20	Sentra STX600				
Susumu	GT20	Hinari CT5					
Tandy	CTV1402	Decca 140					
Tandy	CTV1601	Decca 160					
Tandy	CTV2102	Decca 160					
Tashiko	12D971	Samsung VT306K					
Tashiko	14D961	Sanyo CTP3141					
Tashiko	14D962	Sanyo E2	Sanyo CTP3144				
Tashiko	14D971	Samsung CI338F					
Tashiko	14E881	Nikkai TLG0101					
Tashiko	14F891	Decca 160	Tatung VN1671				
Tashiko	16E891	Decca 160	Tatung DP8655				
Tashiko	20E911	Jackson 20R	Matsui CTV2055				
Tashiko	20E912	Jackson 20R	Matsui CTV2055				
Tashiko	20F862	ITT Pico S/3					
Tashiko	45E881	Nikkai TLG010					
Tashiko	51E941	Finlandia/Salora/Granada	C51E24				
Tashiko	51E942	Finlandia/Salora/Granada	C51E24				
Tatung	D14DT90S	TV/DVD PT90 chassis	2003	remote 631020001381			
Tatung	D14DT91S	TV/DVD PT90 chassis					
Tatung	D14RFG5	F Series					
Tatung	D14RFG6	F Series					
Tatung	D14RFG7	F Series					
Tatung	D14RKD5	K Series (chassis KAT00-W, Cabinet 14CX4)	2002, nonTEXT	chassis marked 200-100-TV2K			
Tatung	D14RKD6	K Series (chassis KAT00-W, Cabinet 14CX7)	2002, nonTEXT	chassis marked 200-100-TV2K			
Tatung	D14RKG7LS	K Series (TV3K chassis)					
Tatung	D14TFG5	F Series					
Tatung	D14TFG6	F Series					
Tatung	D14TKD5	K Series (chassis KAT00-I, Cabinet 14CX4)	2002, TEXT	chassis marked 200-100-TV2K			
Tatung	D14TKD6	K Series (chassis KAT00-I, Cabinet 14CX7)	2002, TEXT	chassis marked 200-100-TV2K			
Tatung	D14TKG6LS	K Series (TV3K chassis)					
Tatung	D14TT92S	PT92					
Tatung	D20NDE5	D4N Series					
Tatung	D20RFG5	F Series					
Tatung	D20RKG5	K Series (chassis KBT00-W, Cabinet 20CX7)	2002, nonTEXT	chassis marked 200-100-TV2K			
Tatung	D20TFG6	F Series					
Tatung	D20TKG5	K Series (chassis KBT00-I, Cabinet 20CX7)	2002, TEXT	chassis marked 200-100-TV2K			
Tatung	D21NDE5	D4N Series					
Tatung	D21NF91S	PT90					
Tatung	D21NT90S	PT90					
Tatung	D21NT92S	PT92					
Tatung	D21RDF6	D Series (D4N Series)					
Tatung	D21TFG5	F Series					
Tatung	D21TFG6	F Series					
Tatung	D21TKG5LS	K Series					
Tatung	D25N440	4400 chassis					
Tatung	D28DGH5S	G Series					
Tatung	D28N440 (28BKD)	4400 chassis					
Tatung	D28N441	4400					
Tatung	D28NGH5S	G Series					
Tatung	D28NT92S	PT92					
Tatung	D28W441 (28ZKR)	4400 chassis		LOPTx S065621350 1372.0030 (Wills Grove LT-838 £14.95), equiv HR8624, FBT40824			
Tatung	D28WHH5S	H Series (H3N)					
Tatung	D28WHH6S	H Series					
Tatung	D28WT92S	PT92					
Tatung	D32W441S	4400 chassis					
Tatung	DP9855	PT92					
Tatung	DVC763	160	Decca	Tashiko 16E891			
Tatung	DVC764	Orion chassis	PCB marked TM9450A, video VM9162D	Micro OEC0078C, option codes EEPROM address 100H			
Tatung	DVT466S	Orion chassis		Micro OEC0096B			
Tatung	RR5188	170Q	Decca	Micro OEC0107B, option codes EEPROM address 0B4h (0B4->0B4h)			
Tatung	T14DT90S	TV/DVD PT90 chassis	2003	remote 631020001381			
Tatung	T14DT91S	TV/DVD PT90 chassis					
Tatung	T14RF70	F Series					
Tatung	T14RF71	F Series					
Tatung	T14RK40	K Series (chassis KAT00-W, Cabinet 14CX4)	2002, nonTEXT	chassis marked 200-100-TV2K			
Tatung	T14RK70	K Series (chassis KAT00-W, Cabinet 14CX7)	2002, nonTEXT	chassis marked 200-100-TV2K			
Tatung	T14TD40	D Series					
Tatung	T14TF70	F Series					
Tatung	T14TF71	F Series					
Tatung	T14TK40	K Series (chassis KAT00-I, Cabinet 14CX4)	2002, TEXT	chassis marked 200-100-TV2K			
Tatung	T14TK70	K Series (chassis KAT00-I, Cabinet 14CX7)	2002, TEXT	chassis marked 200-100-TV2K			
Tatung	T20TD50	D Series					
Tatung	T20TF70	F Series					
Tatung	T20TK70	K Series (KBT00-I, Cabinet 20CX7)	2002, TEXT	chassis marked 200-100-TV2K			











Toshiba	2101TB							
Toshiba	2102TB							
Toshiba	2103TB							
Toshiba	210R6B		FST					
Toshiba	210T6B							
Toshiba	2112DB	C91SB						
Toshiba	21114B							
Toshiba	212R4B		1985					
Toshiba	212T4B							
Toshiba	2132DB	C3						
Toshiba	213R4B							
Toshiba	2140RB	C4						
Toshiba	2140TB	C4						
Toshiba	2141RB	C4						
Toshiba	2141TB	C4						
Toshiba	2145DB	C3SSR						
Toshiba	214E7B							
Toshiba	214T7B							
Toshiba	2151TB	C4ER						
Toshiba	2152DB	C5						
Toshiba	215R8B		1988					
Toshiba	215T8B							
Toshiba	2163DB	C6S						
Toshiba	216T9B							
Toshiba	2173DB	C7S						
Toshiba	217D9B							
Toshiba	2180TB	C80						
Toshiba	2181TB	C80						
Toshiba	218D9B		21in set from 1989					
Toshiba	219T9B							
Toshiba	21N21B	Orion chassis, 2003	PCB marked TMB545A	Micro OECF004A	remote R25-1800			
Toshiba	21N21B2	Orion chassis, 2002	PCB marked TMC572A	Micro OECF012A	remote RC-GX010			
Toshiba	21N211	Orion chassis, 2003	PCB marked TMB545A	Micro OECF004A	remote R25-1800			
Toshiba	21R01F	Samsung KS1A						
Toshiba	21S04B	Samsung KS3A						
Toshiba	21S23B	Orion chassis, 2003	PCB marked TMA528C	Micro OECF004A, video STV22	remote SBKM00030A	option data in EEPROM starts from 03H, e.g. INI 01 -> 03H		
Toshiba	21S23B2	Orion chassis, 2002	PCB marked TMC572A	Micro OECF012A	remote CT-849			
Toshiba	21T01B(D,I,N)	Samsung KS1A						
Toshiba	21T01F	Samsung KS1A	Samsung CI21T01F2					
Toshiba	21V13B	Orion chassis, 2003	PCB marked TMA528A	Micro OECF004A	remote SBKM00030A	IC501 TEA1507P, part IOWD015070		
Toshiba	21V33B2	Orion chassis, 2003	PCB marked TMC572B	Micro OECF012B	remote RC-GX020			
Toshiba	221E4B	Matsui 2220						
Toshiba	221T3B							
Toshiba	222T5B							
Toshiba	223B1	Matsui CTV8510						
Toshiba	24W33B	11AK37	2003					
Toshiba	24Z33B	Orion chassis, 2003	PCB marked AMC001A	Micro OECF015A	remote RC-GZ010			
Toshiba	24Z37B	Orion chassis, 2003	PCB marked AMC001A	Micro OECF015A	remote RC-GZ020			
Toshiba	2500TB							
Toshiba	2505DB	C90D						
Toshiba	2512DBT	C91SB	Nicam 1991					
Toshiba	251T4B		1984					
Toshiba	2527DB	C2D						
Toshiba	2535DB							
Toshiba	2539DB	C2D						
Toshiba	2545DB	C3 Chassis (C80 chassis)						
Toshiba	2550TB	C4ER						
Toshiba	2552DB	C5						
Toshiba	2555DB	C5						
Toshiba	2557DB	C5SS						
Toshiba	255R7B							
Toshiba	255T7B		1985					
Toshiba	2563DB	C6SR						
Toshiba	2573DB	C7SR						
Toshiba	2577DB	C7SS						
Toshiba	2579DB	C7SS						
Toshiba	258T7B							
Toshiba	259D9B							
Toshiba	2805DBT	C90D						
Toshiba	2812DB	C91SB						
Toshiba	2835DB							
Toshiba	284T8B							
Toshiba	2852DB	C5						
Toshiba	2855DB	C5						
Toshiba	2857DB	C5SS						
Toshiba	2857DD	C5SS						
Toshiba	285T5BZ							
Toshiba	285T8B							
Toshiba	2863DB	C6SR						
Toshiba	2873DB	C7SR						
Toshiba	2877DB	C7SS						
Toshiba	2879DB	C7SS						
Toshiba	289T6B							
Toshiba	28H14G	Grundig CUC1837 100hz	2001, multistandard I, B/G, D/K		remote RC150			
Toshiba	28MW7DB/DG	C7SS	1997, DB - Pal I, DG - multistandard B/G, D		remote CT-9888			
Toshiba	28N03B	C0SS	2000		remote CT-90040			
Toshiba	28N04D	CUC2032F						
Toshiba	28N13D2 28N13F2	11AK37						
Toshiba	28N14G	Grundig CUC2130M						
Toshiba	28N23B	11AK37-11	2001, multistandard I, B/G, D/K		remote RC150			
Toshiba	28N33B	11AK37	2002-2003					
Toshiba	28N33B	11AK37	2003					
Toshiba	28W23B	11AK37-8	2002-2003					
Toshiba	28W27B	11AK37	2003					
Toshiba	28W33B	11AK37	2003					
Toshiba	28W37B	11AK37	2003					
Toshiba	28W8DB	C7SS						
Toshiba	28W93B	C7SS						
Toshiba	28WD98B	C9SS						
Toshiba	28Z05B	C00S	2000		CT-90043			
Toshiba	28Z07B	C00S	2000		CT-90043			
Toshiba	28Z13B	Z13B	2001					
Toshiba	28Z23B	Z23B	2002		CT-90040			
Toshiba	28Z27B	Z23G (similar to Z23B)	2002		CT-90040			
Toshiba	28Z33B	Z33	2003		CT-90179			
Toshiba	28ZD06B	C00S	2000		CT-90042			
Toshiba	28ZD26P	ZD26 (similar to ZH37 chassis)	2002, around £500, Multistandard Pal/SEC		CT-90101			
Toshiba	28ZH36P	ZH37 (similar to ZD26 chassis)	2003 around £499		CT-90101			
Toshiba	28ZH37P	ZH37	2004		CT-90101			
Toshiba	2927DB	C2D						
Toshiba	2939DB	C2D	1993					
Toshiba	2987DB	C8SS						
Toshiba	29N23B	11AK37-11						
Toshiba	29V24B	11AK37	2003					
Toshiba	29VH14P	Samsung KS3A 100Hz						
Toshiba	32MW7DB	C7SS						
Toshiba	32W33B	11AK37	2003					
Toshiba	32W37B	11AK37	2003					
Toshiba	32W8DB	C6SS						
Toshiba	32W8DB	C6SS (same as 28W8DB on C7SS)						
Toshiba	32WD98B	C9SS	1999					
Toshiba	32Z07B	C00S	2000		CT-90043			
Toshiba	32Z13B	Z13B	2001		CT-90040			
Toshiba	32Z17B	C00S	2001		CT-90043			
Toshiba	32Z23B	Z23B	2002, around £600		CT-90040			
Toshiba	32Z27B	Z23G (similar to Z23B)	2002		CT-90040			
Toshiba	32Z33B	Z33	2003		CT-90179			
Toshiba	32ZD06B	C00S	2000		CT-90042			
Toshiba	32ZD09G	C00S						
Toshiba	32ZD26P	ZD26 (similar to ZH37 chassis)	2002 around £750, Multistandard Pal/SEC		CT-90101			
Toshiba	32ZD98B	C9SS						
Toshiba	32ZH36P	ZH37 (similar to ZD26 chassis)	2003 around £650		CT-90101			
Toshiba	32ZH37P	ZH37	2004		CT-90101			
Toshiba	32ZP18P	C00S	2001					
Toshiba	3327DB	C2D						
Toshiba	3339DB	C2D	1993					
Toshiba	3357DB	C5SS						
Toshiba	3377DB	C7SS						
Toshiba	3387DB	C8SS	1999, around £620-£800 depending on the year					
Toshiba	33N23G	11AK37						



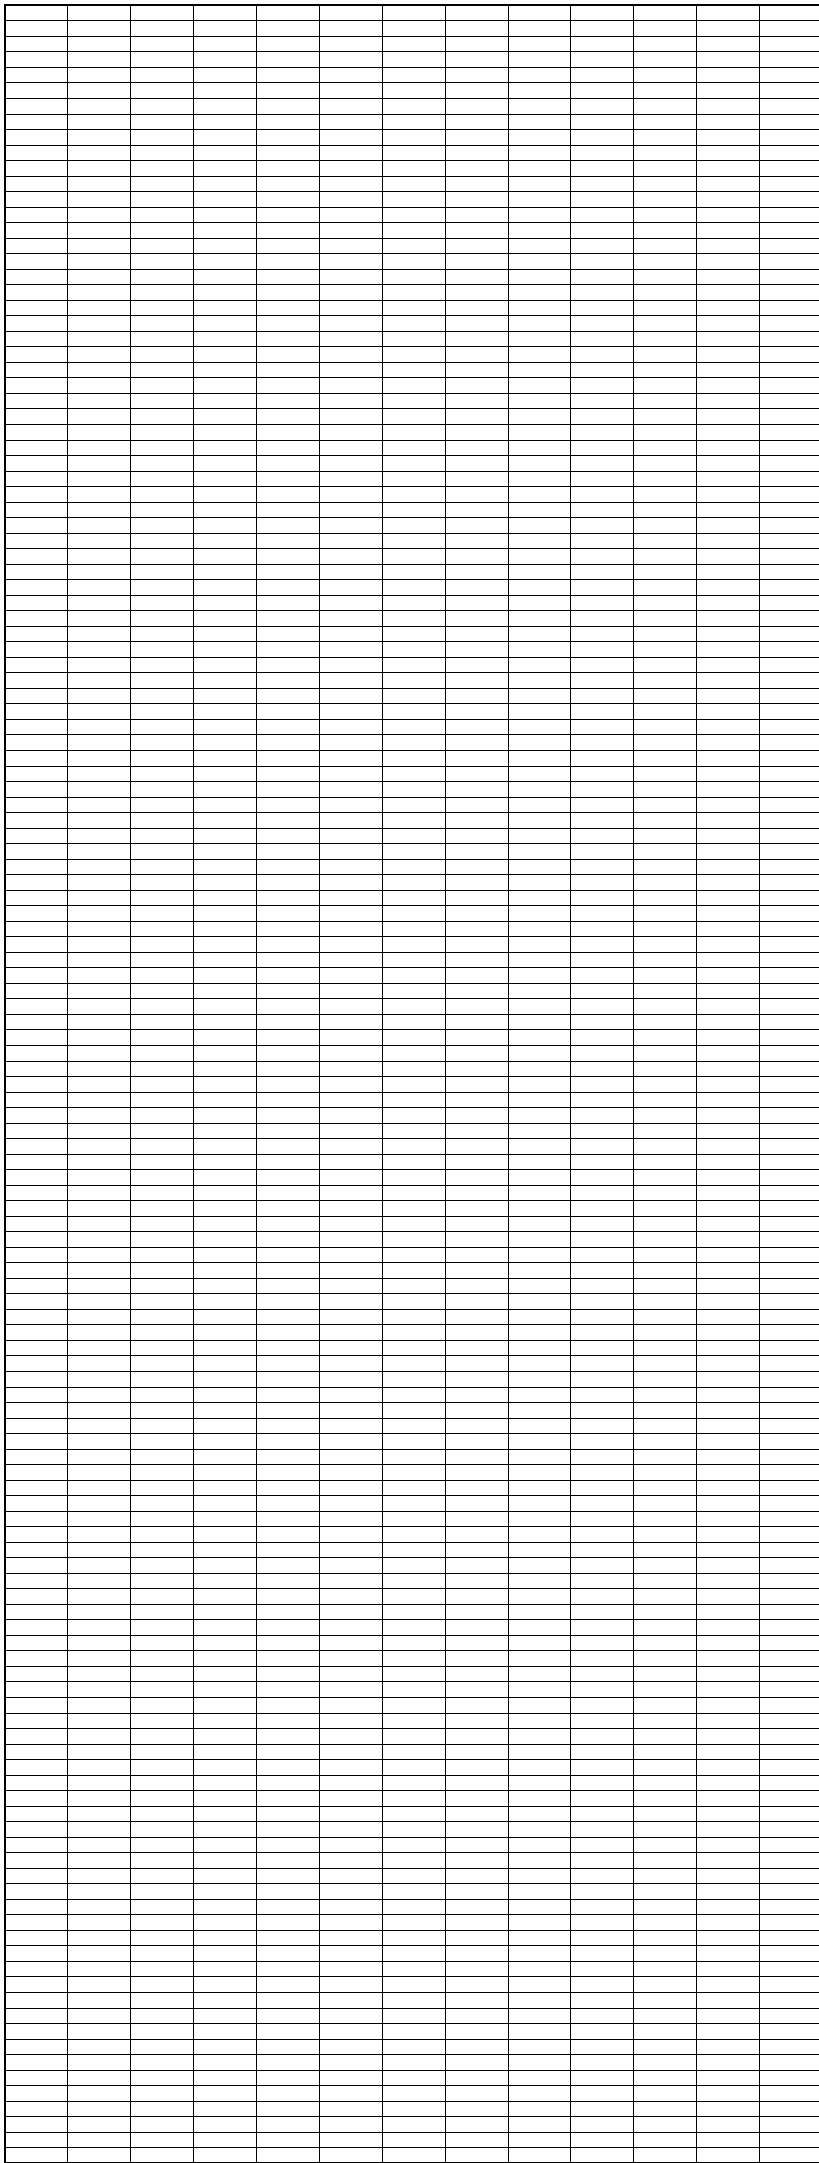

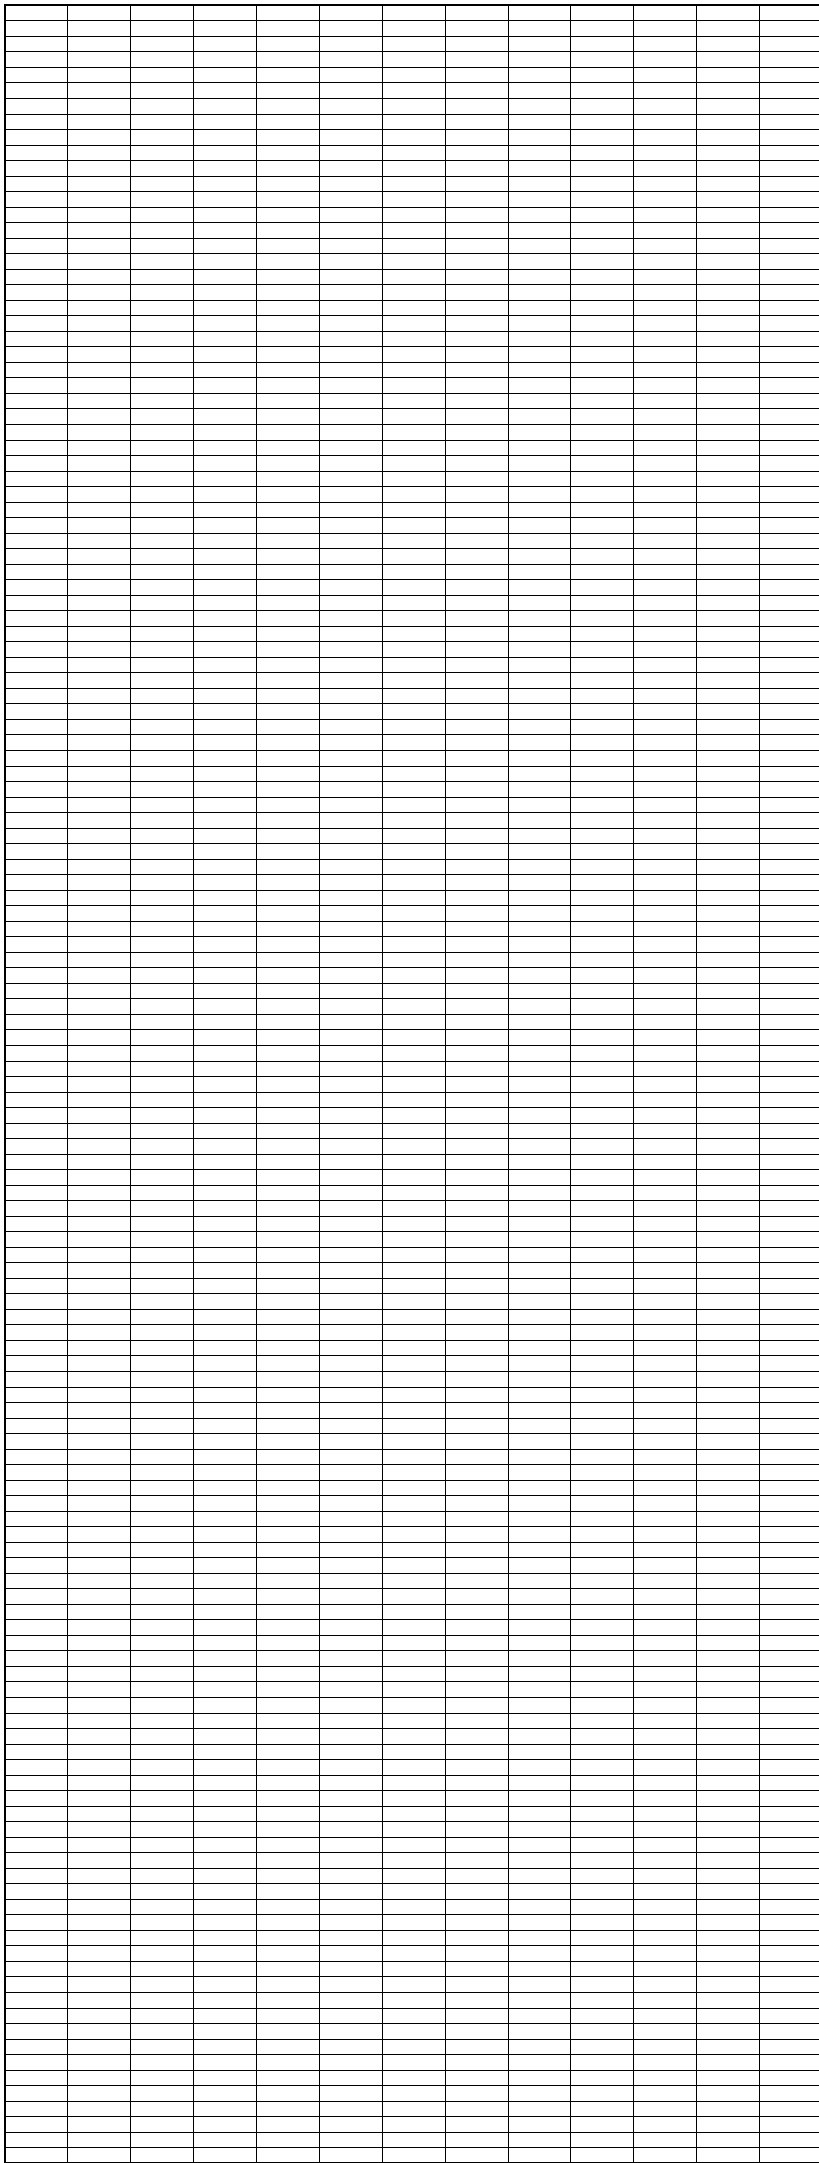


ART LG W66QBD240X11


9B-1)


and pressing [TV] (aka text off) gives the same code as RED+BLUE.


0+/- to adjust, OK to store, PP to exit.

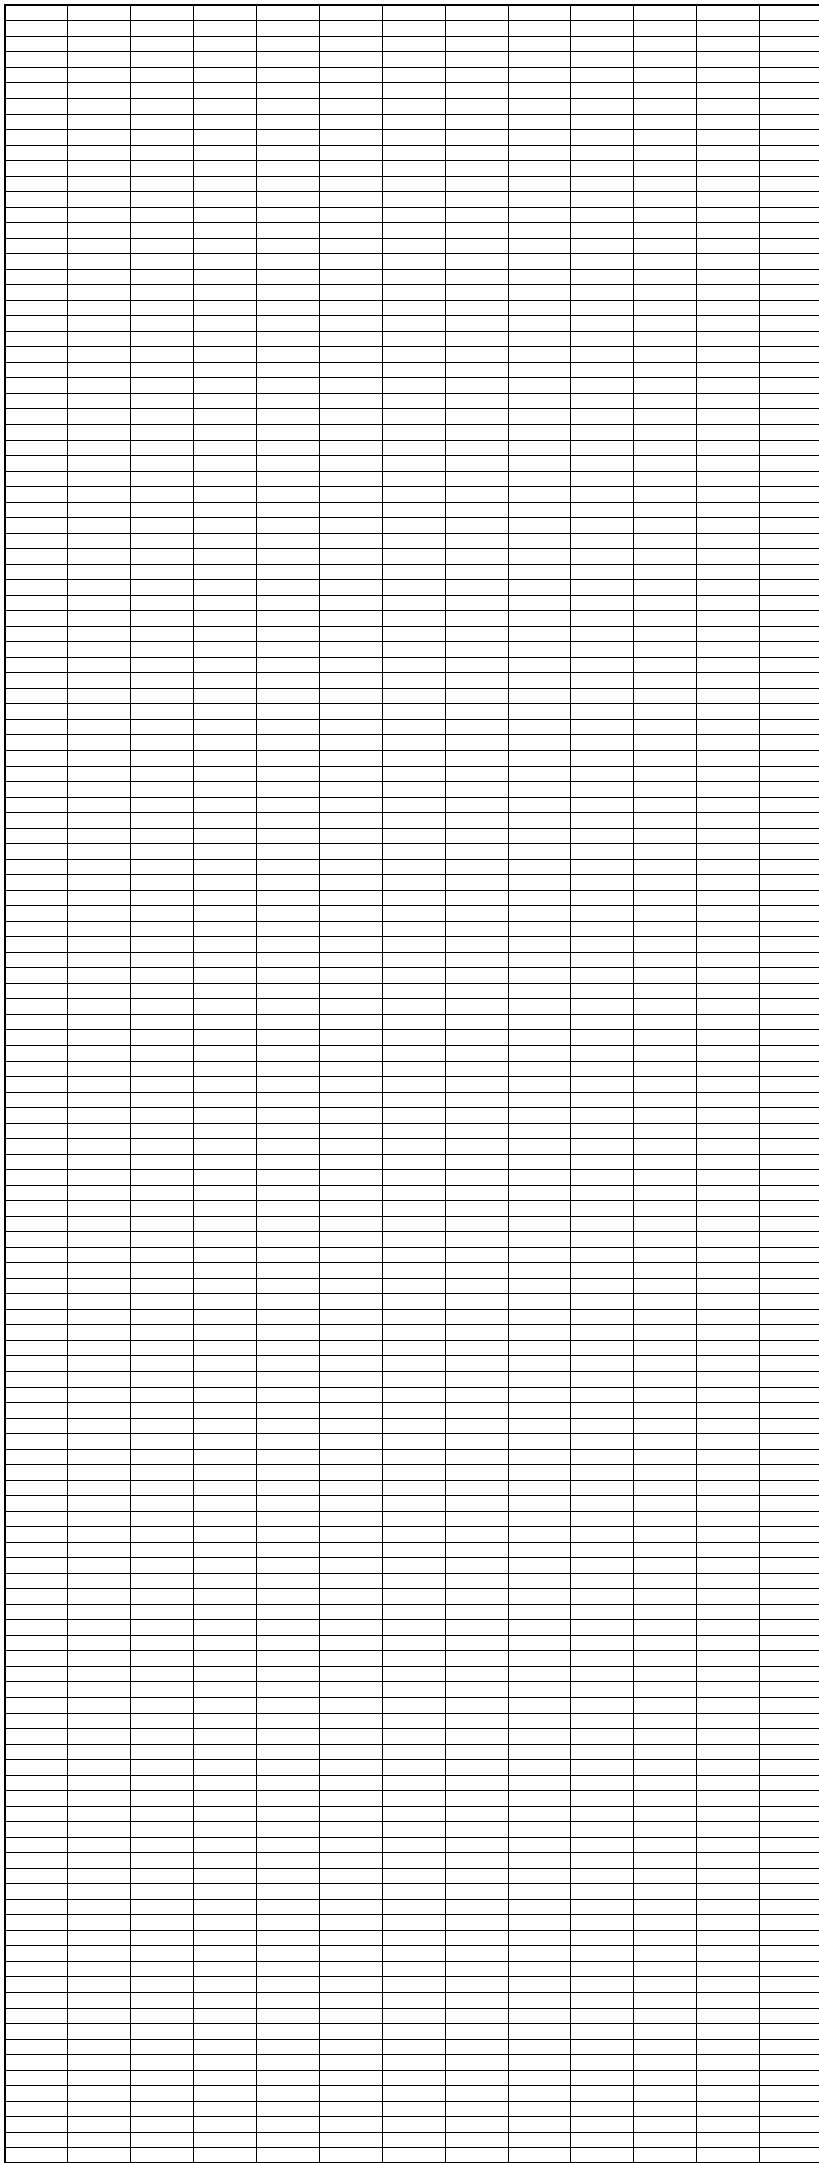





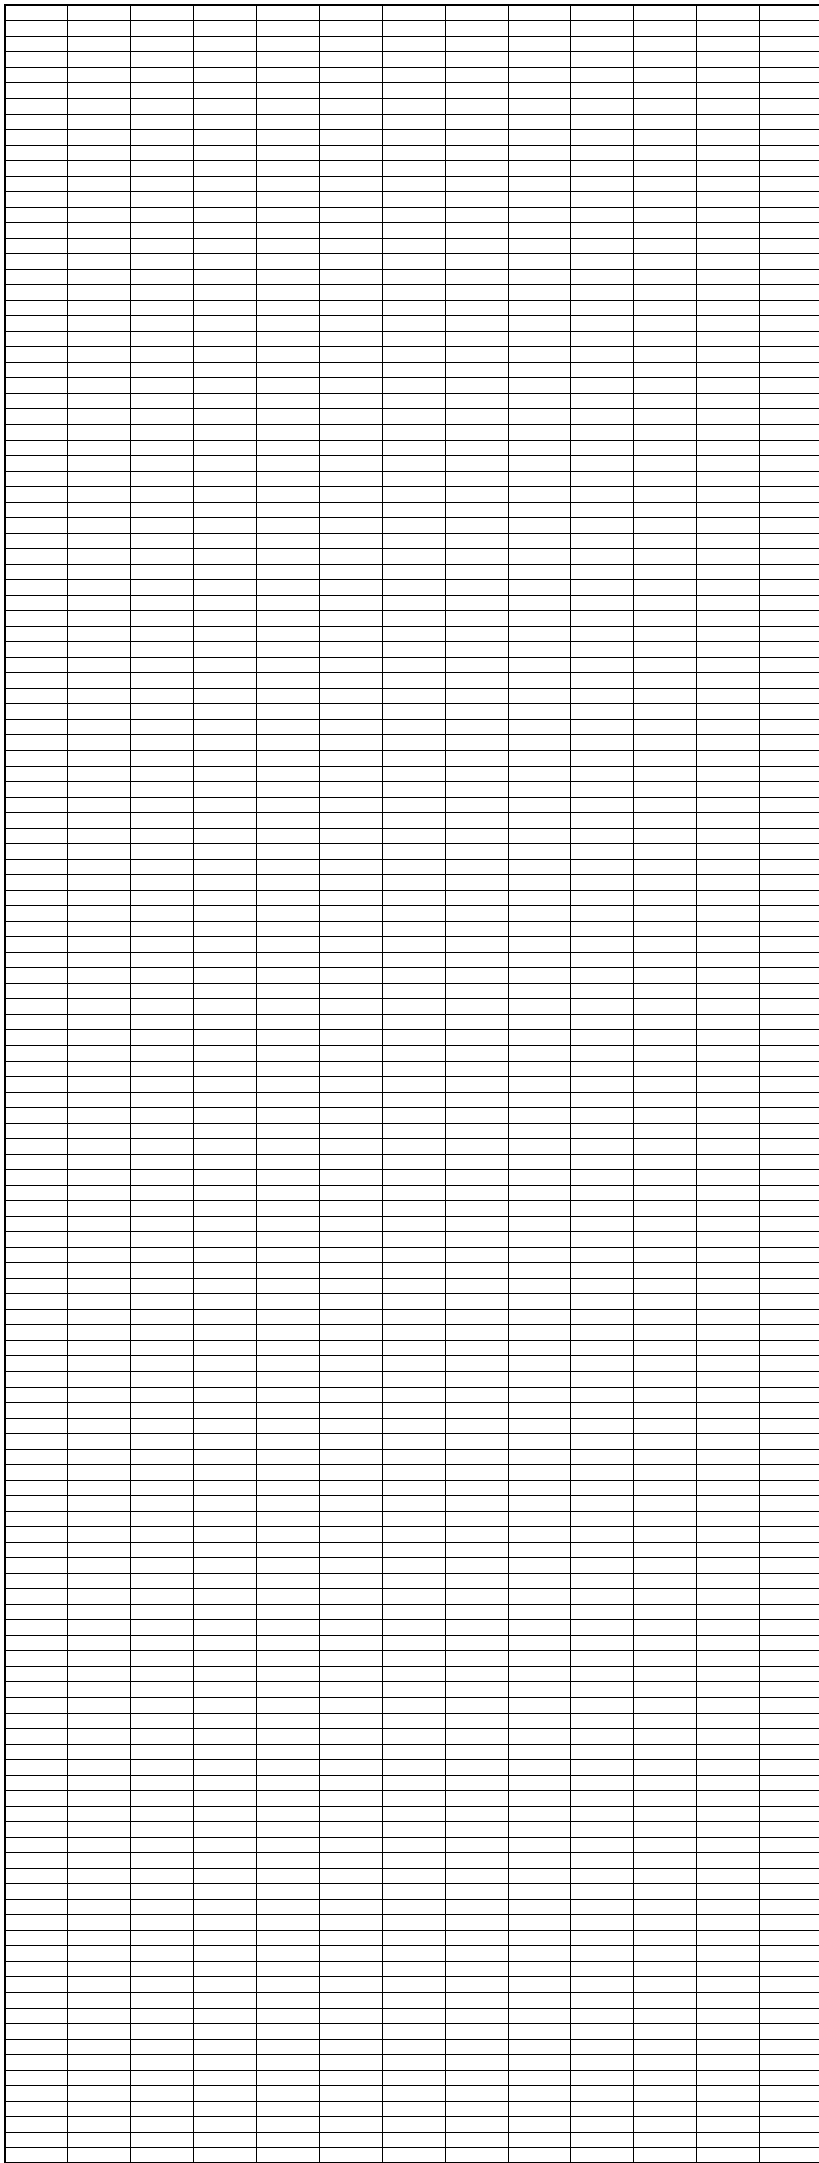


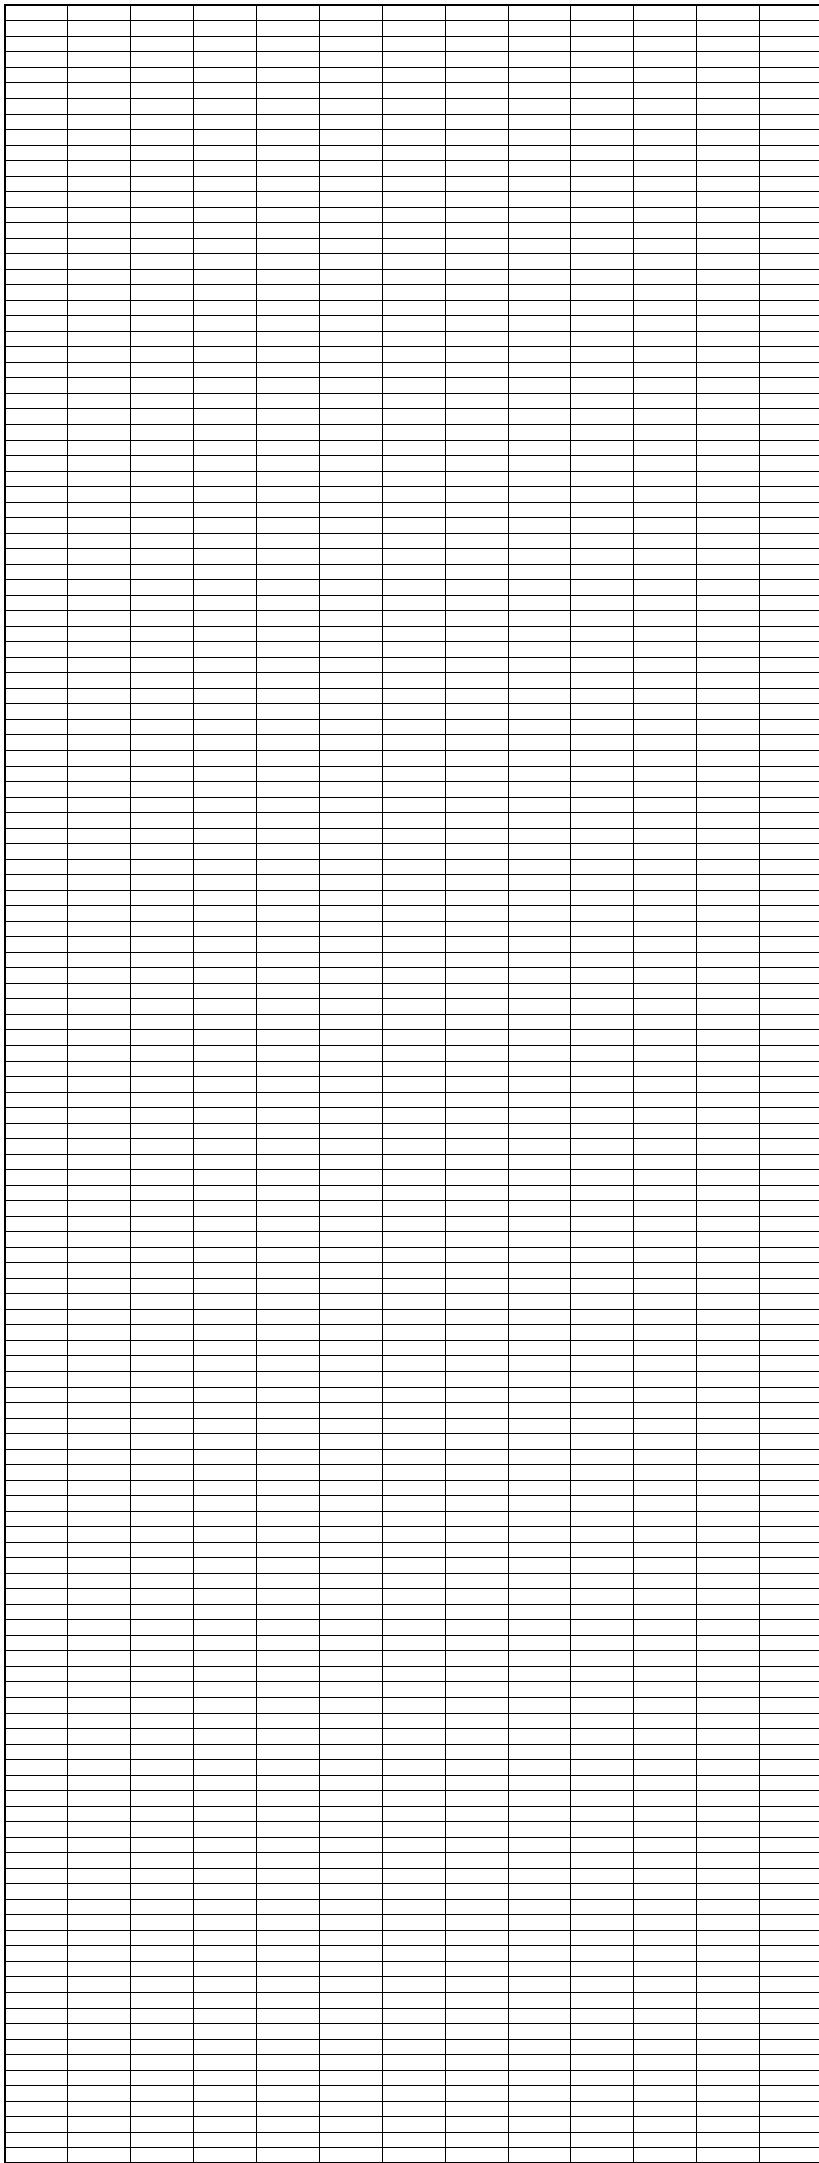


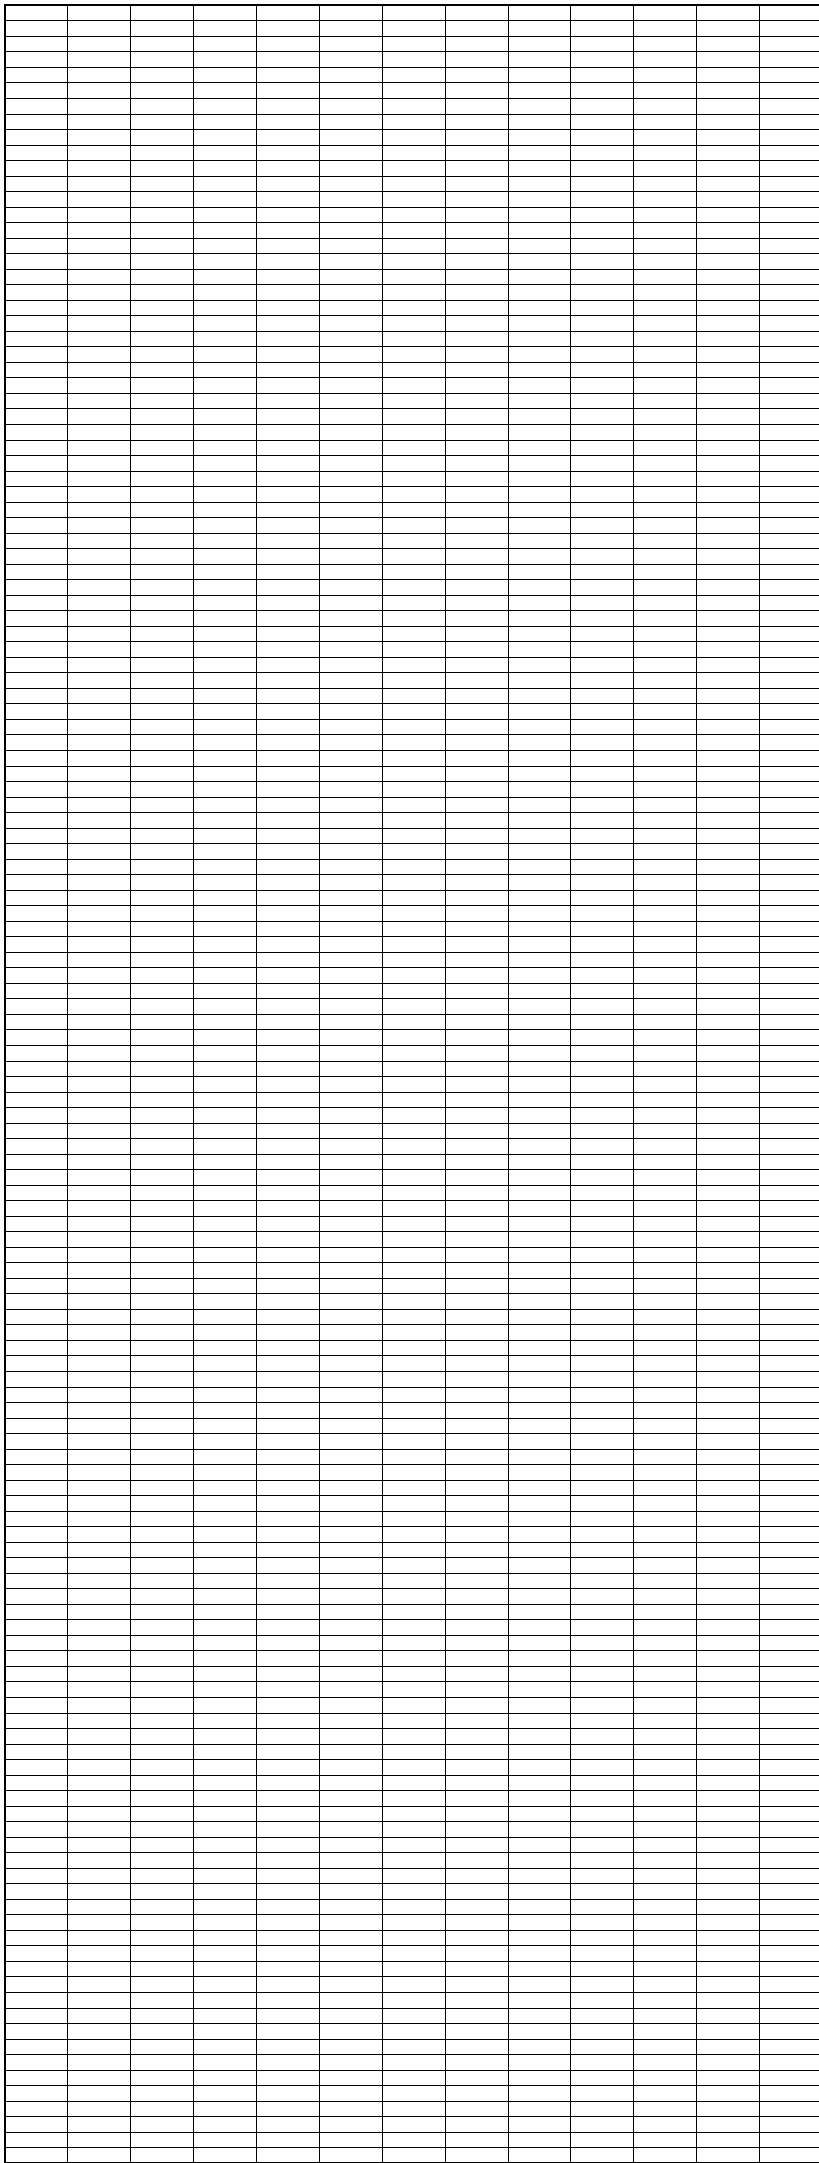

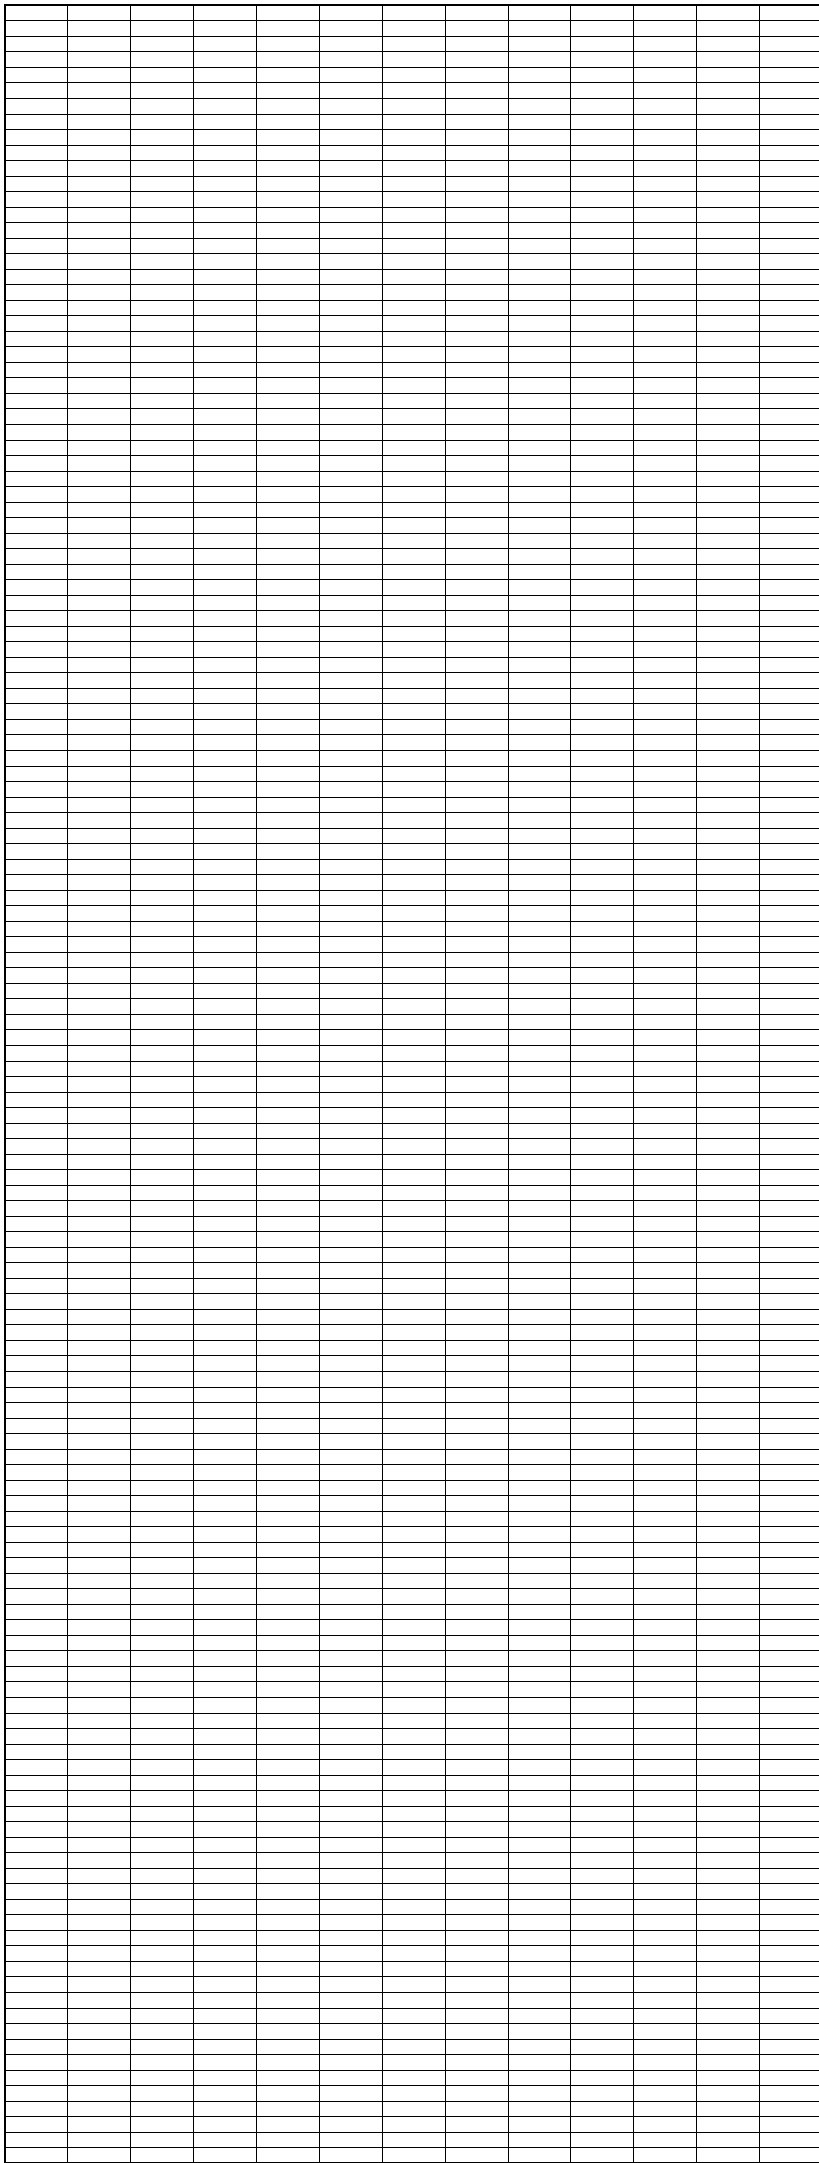

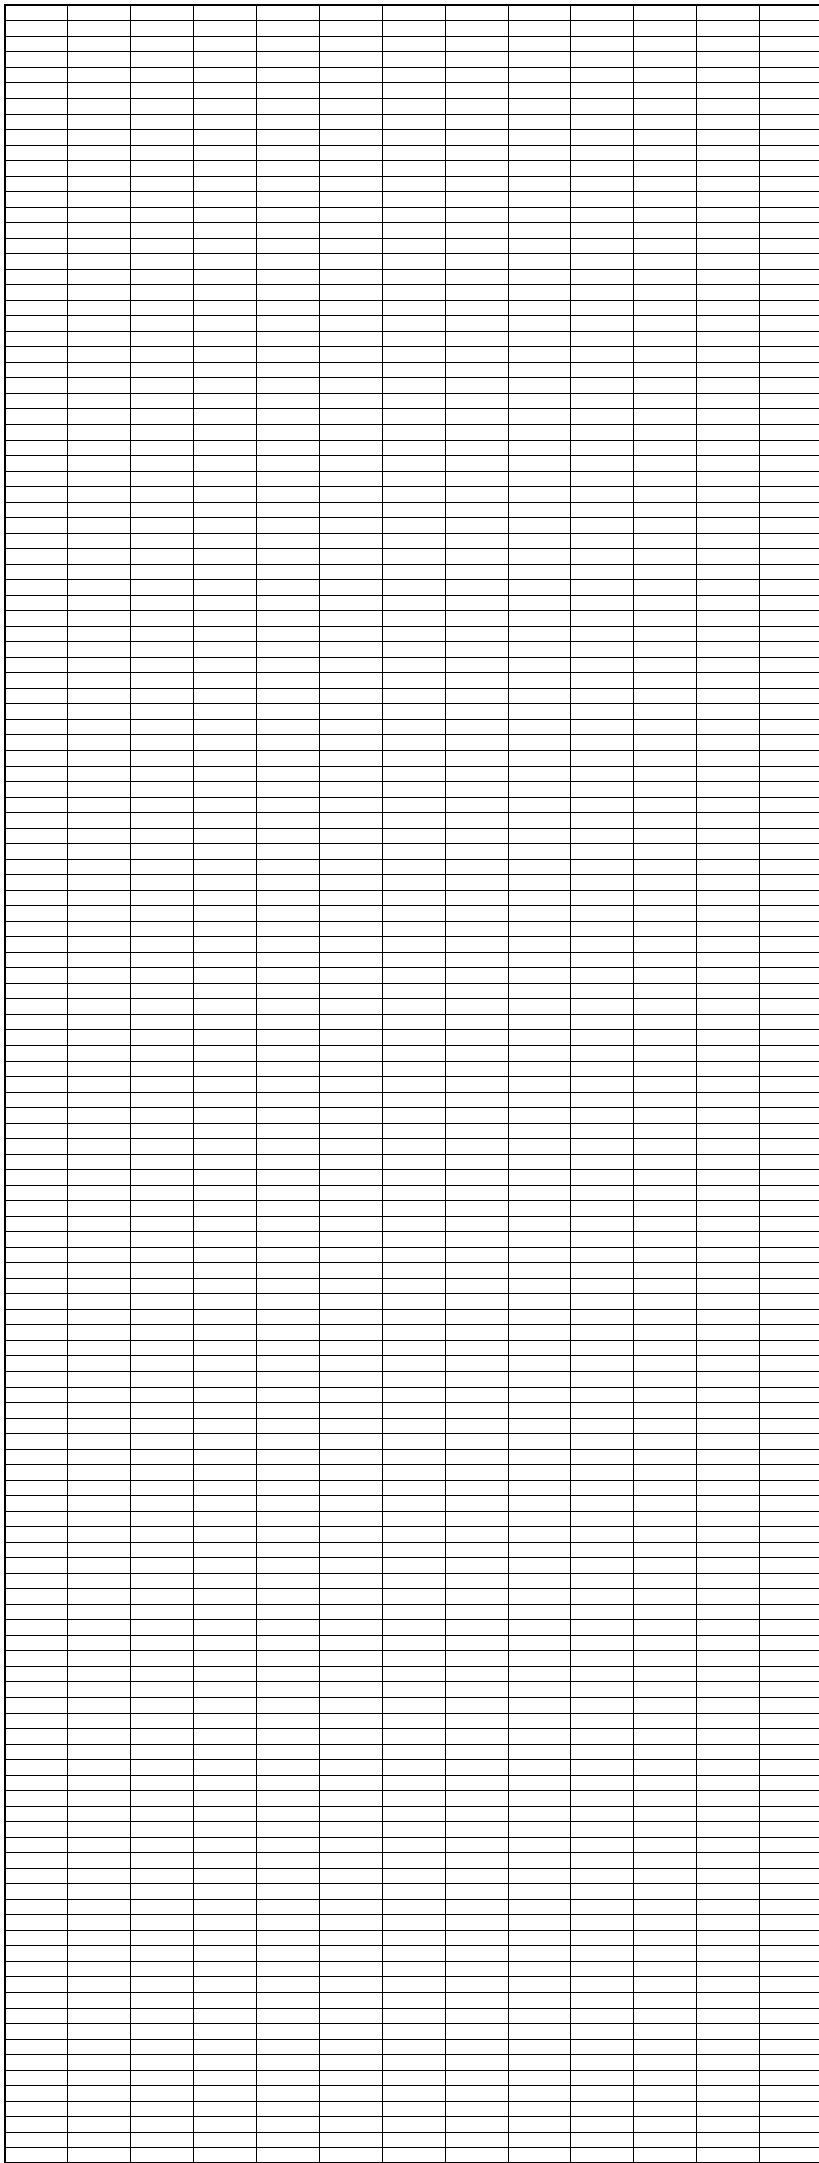


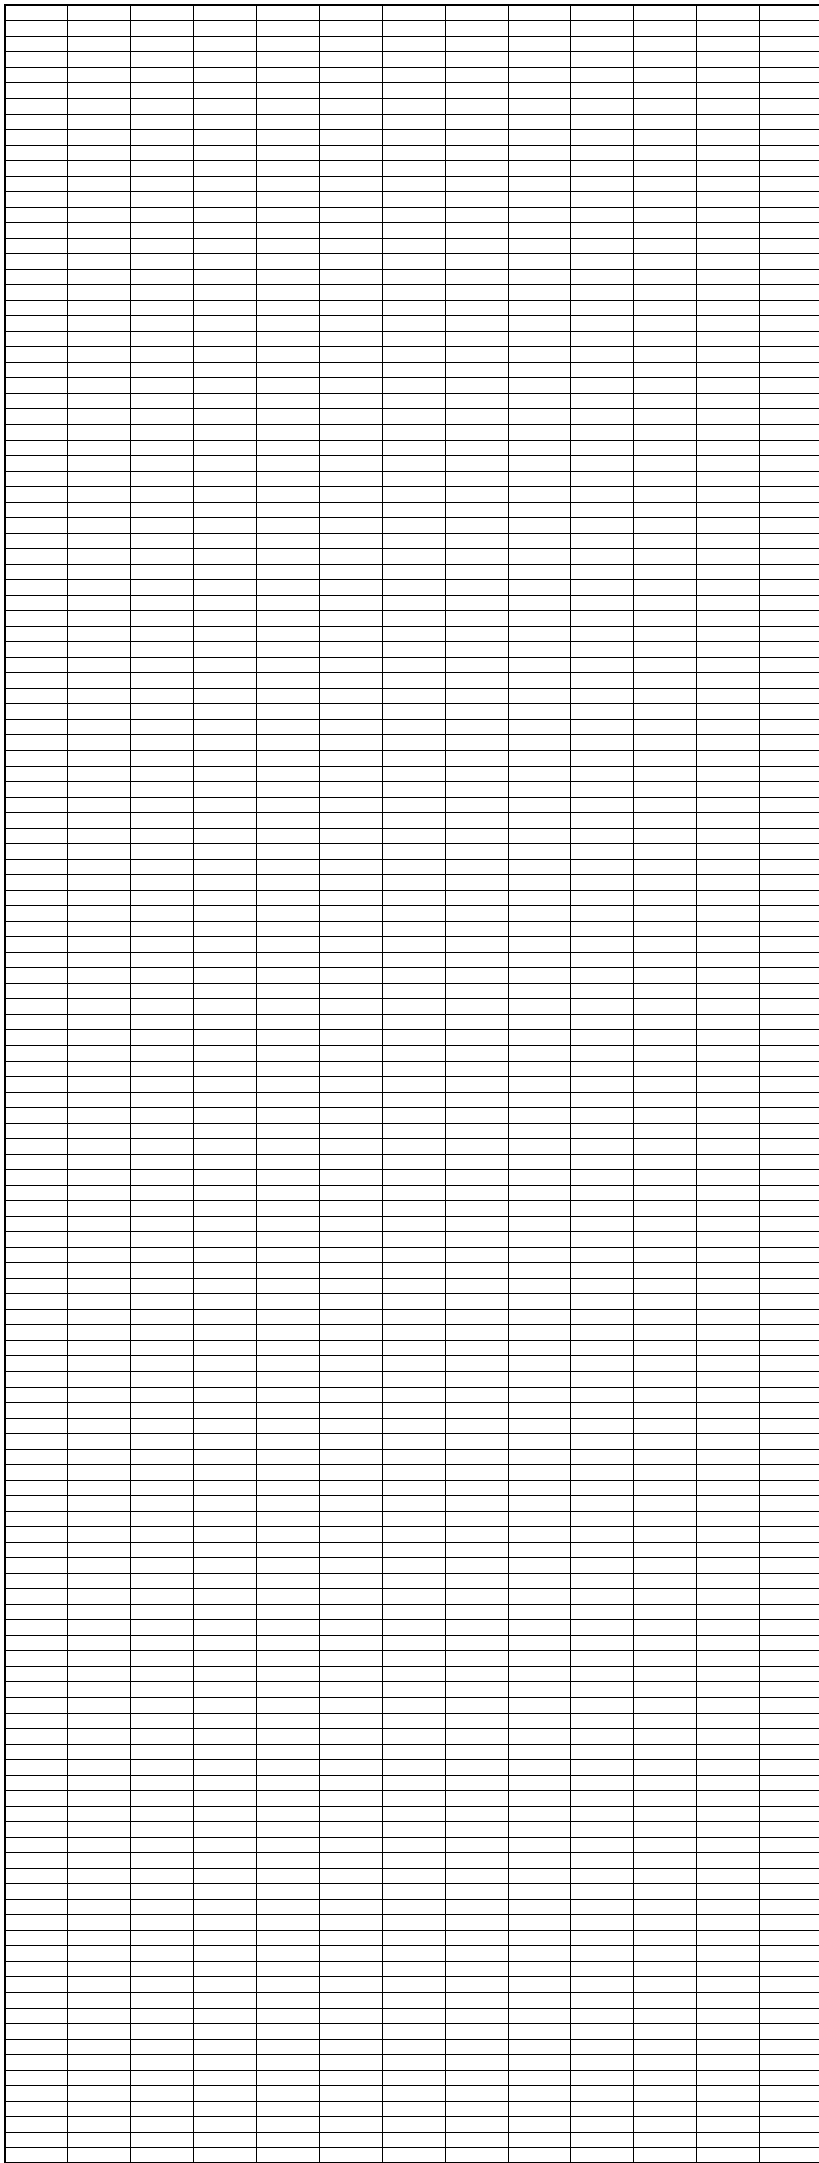


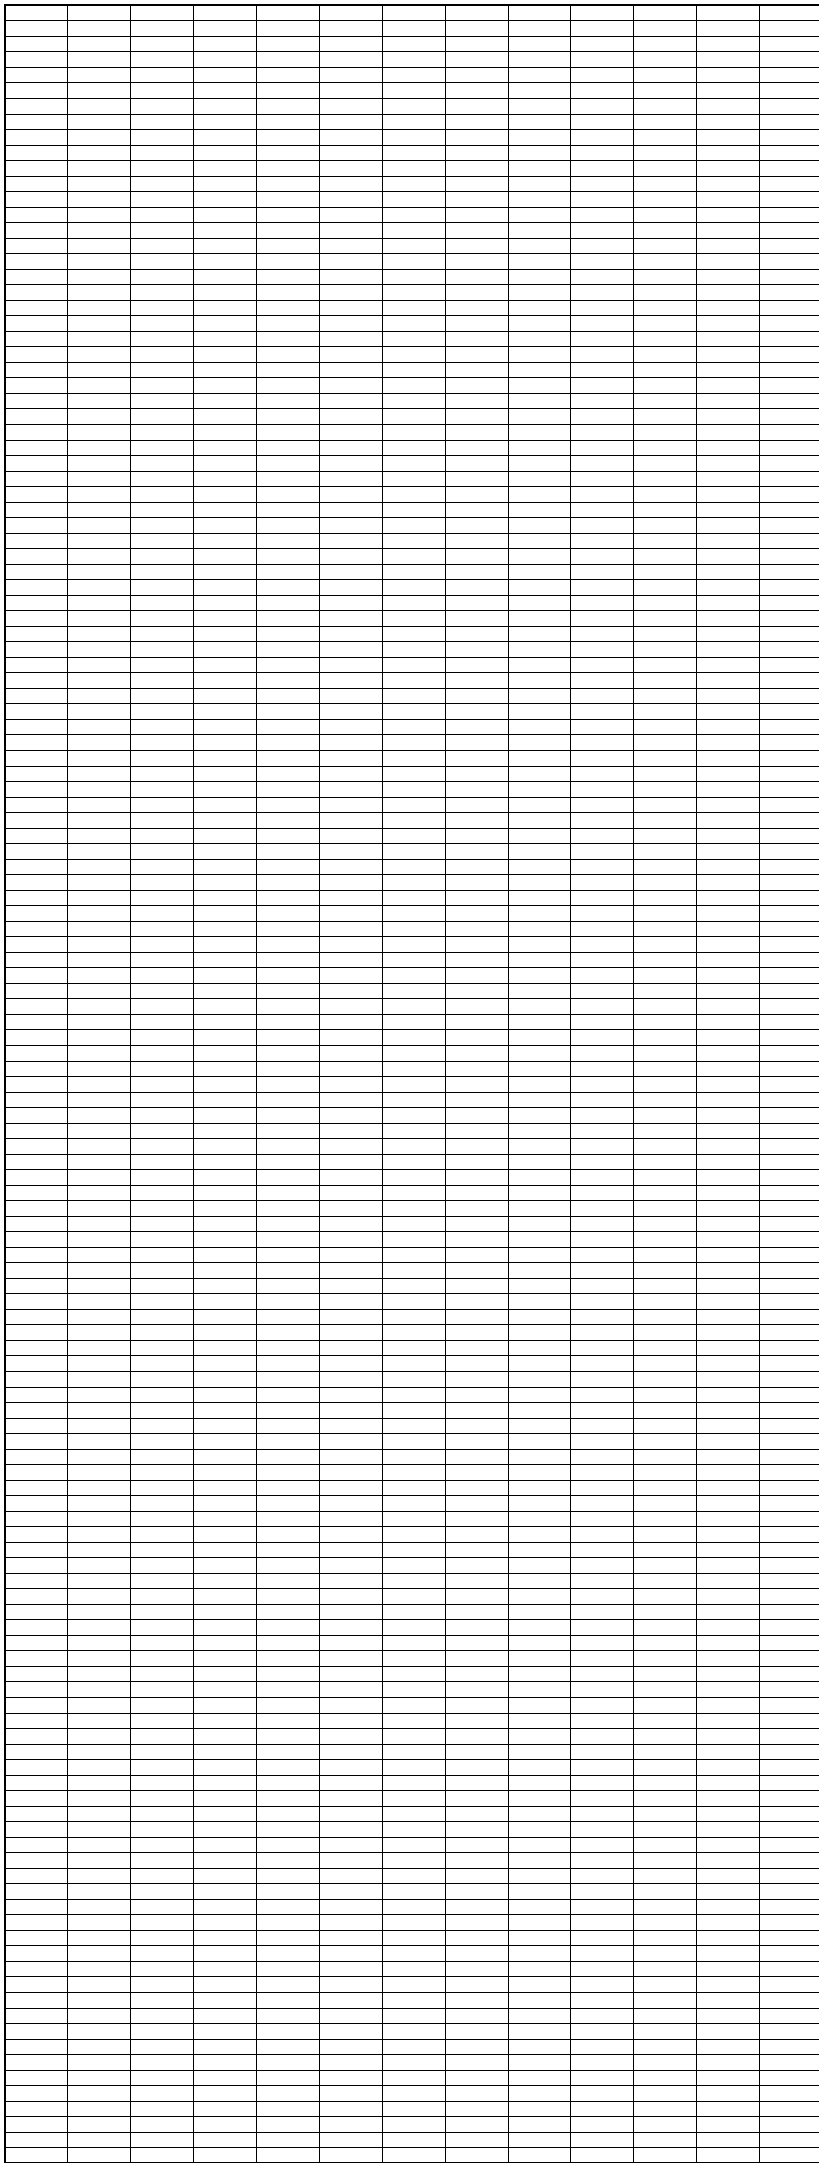



841P/524)




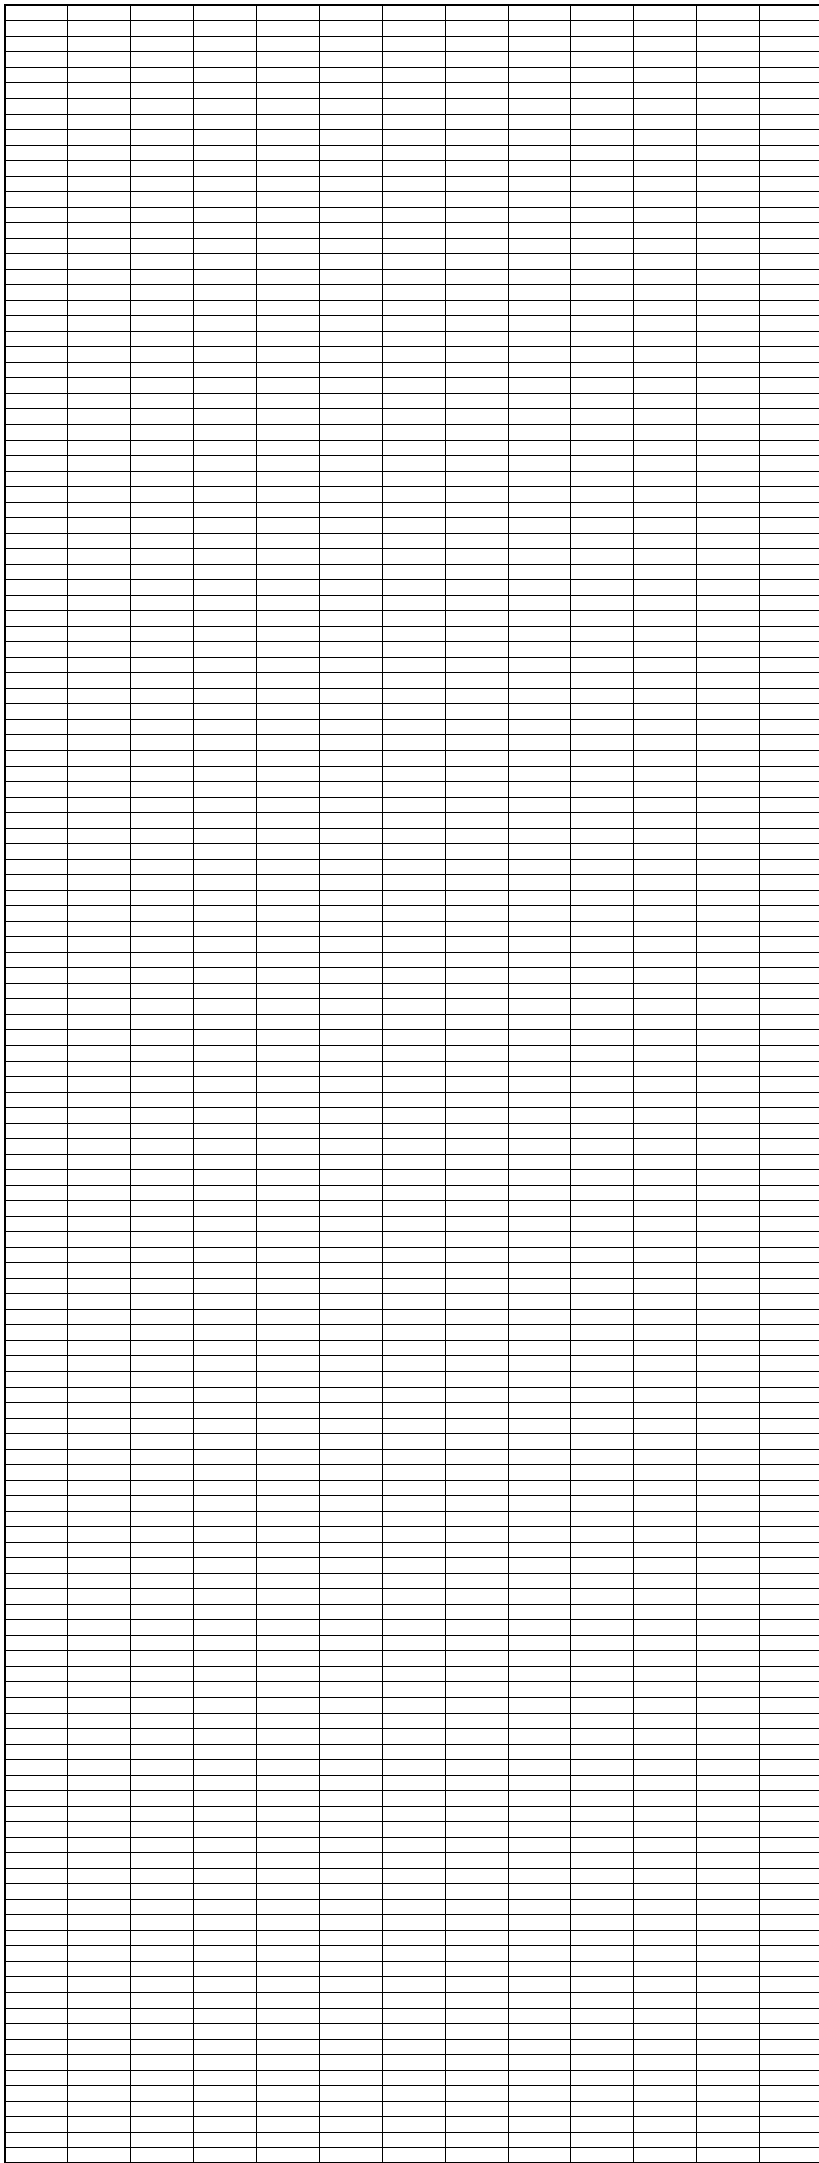


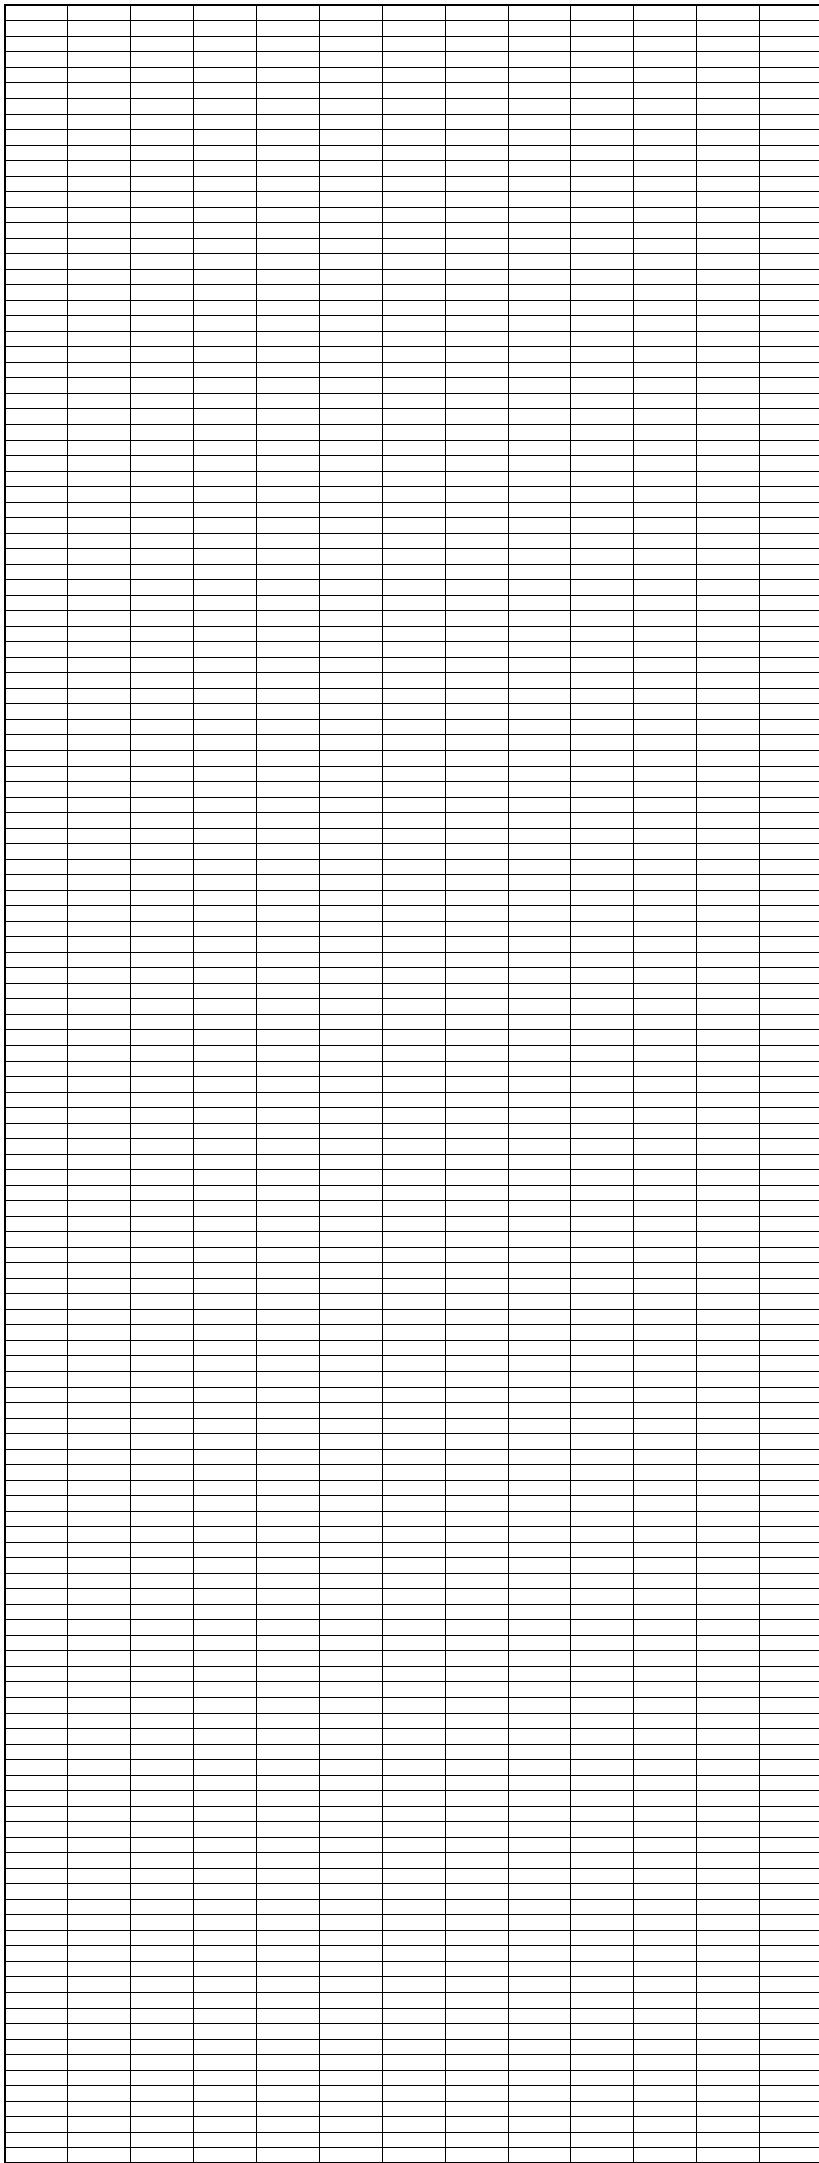

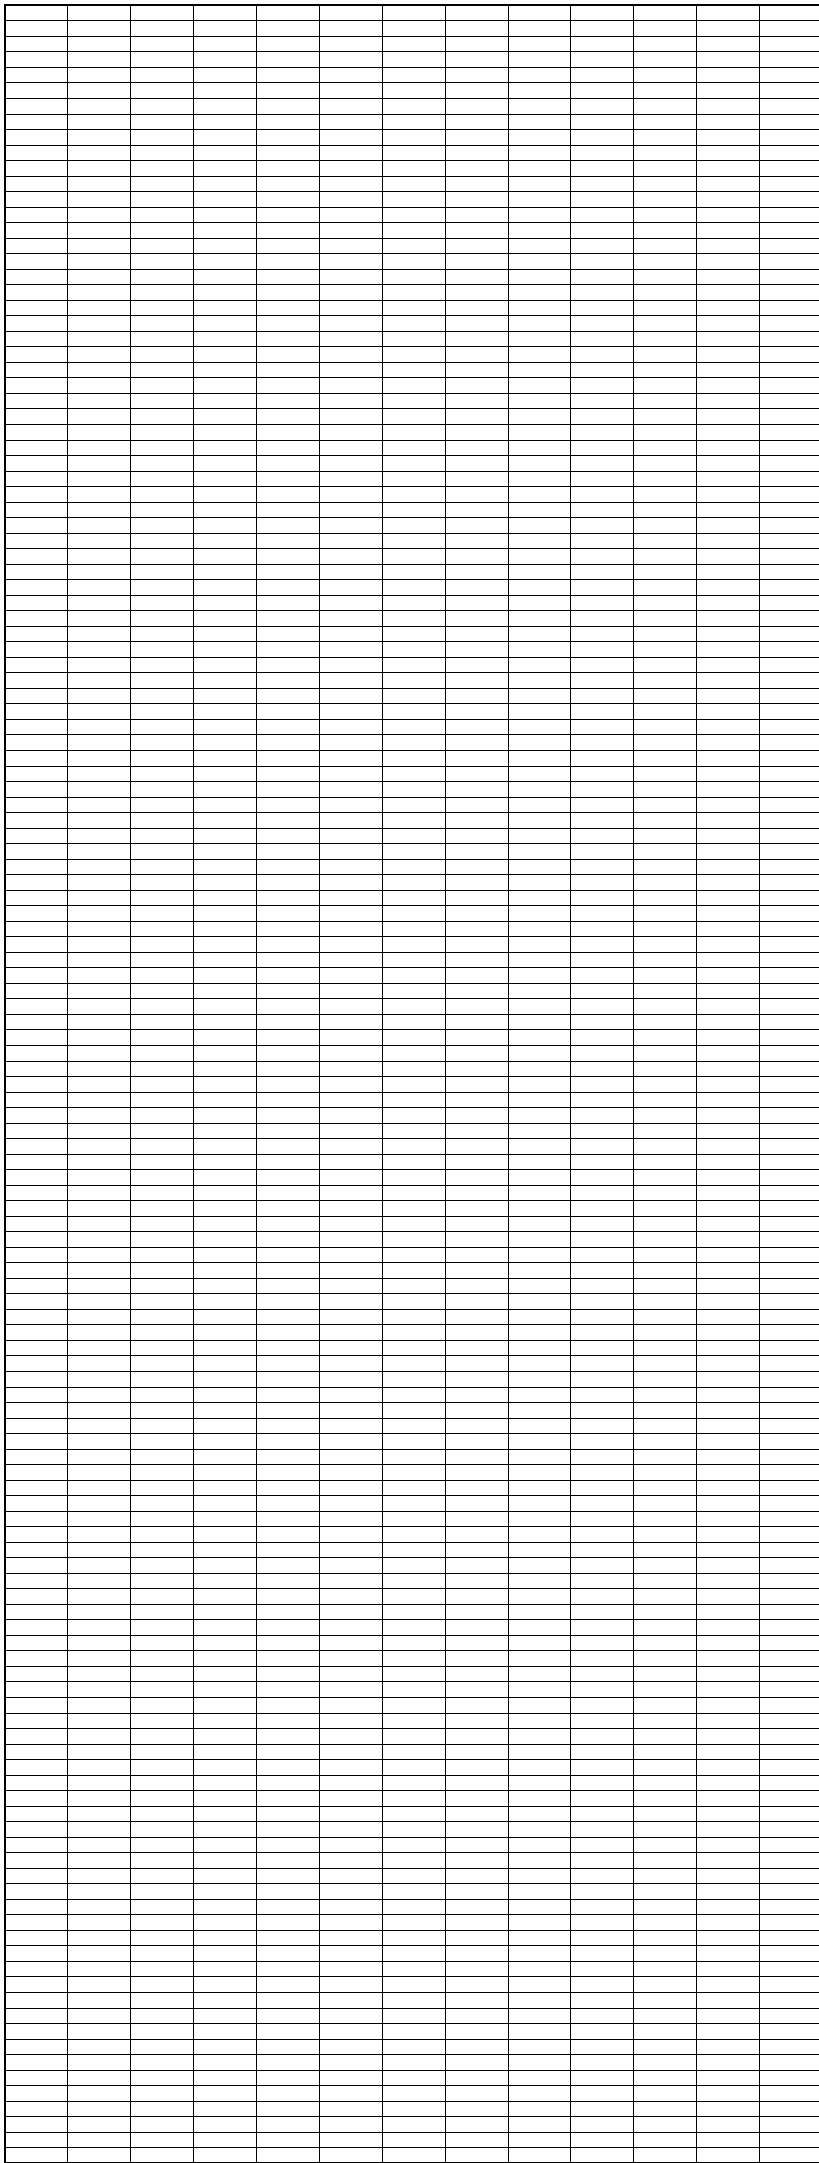

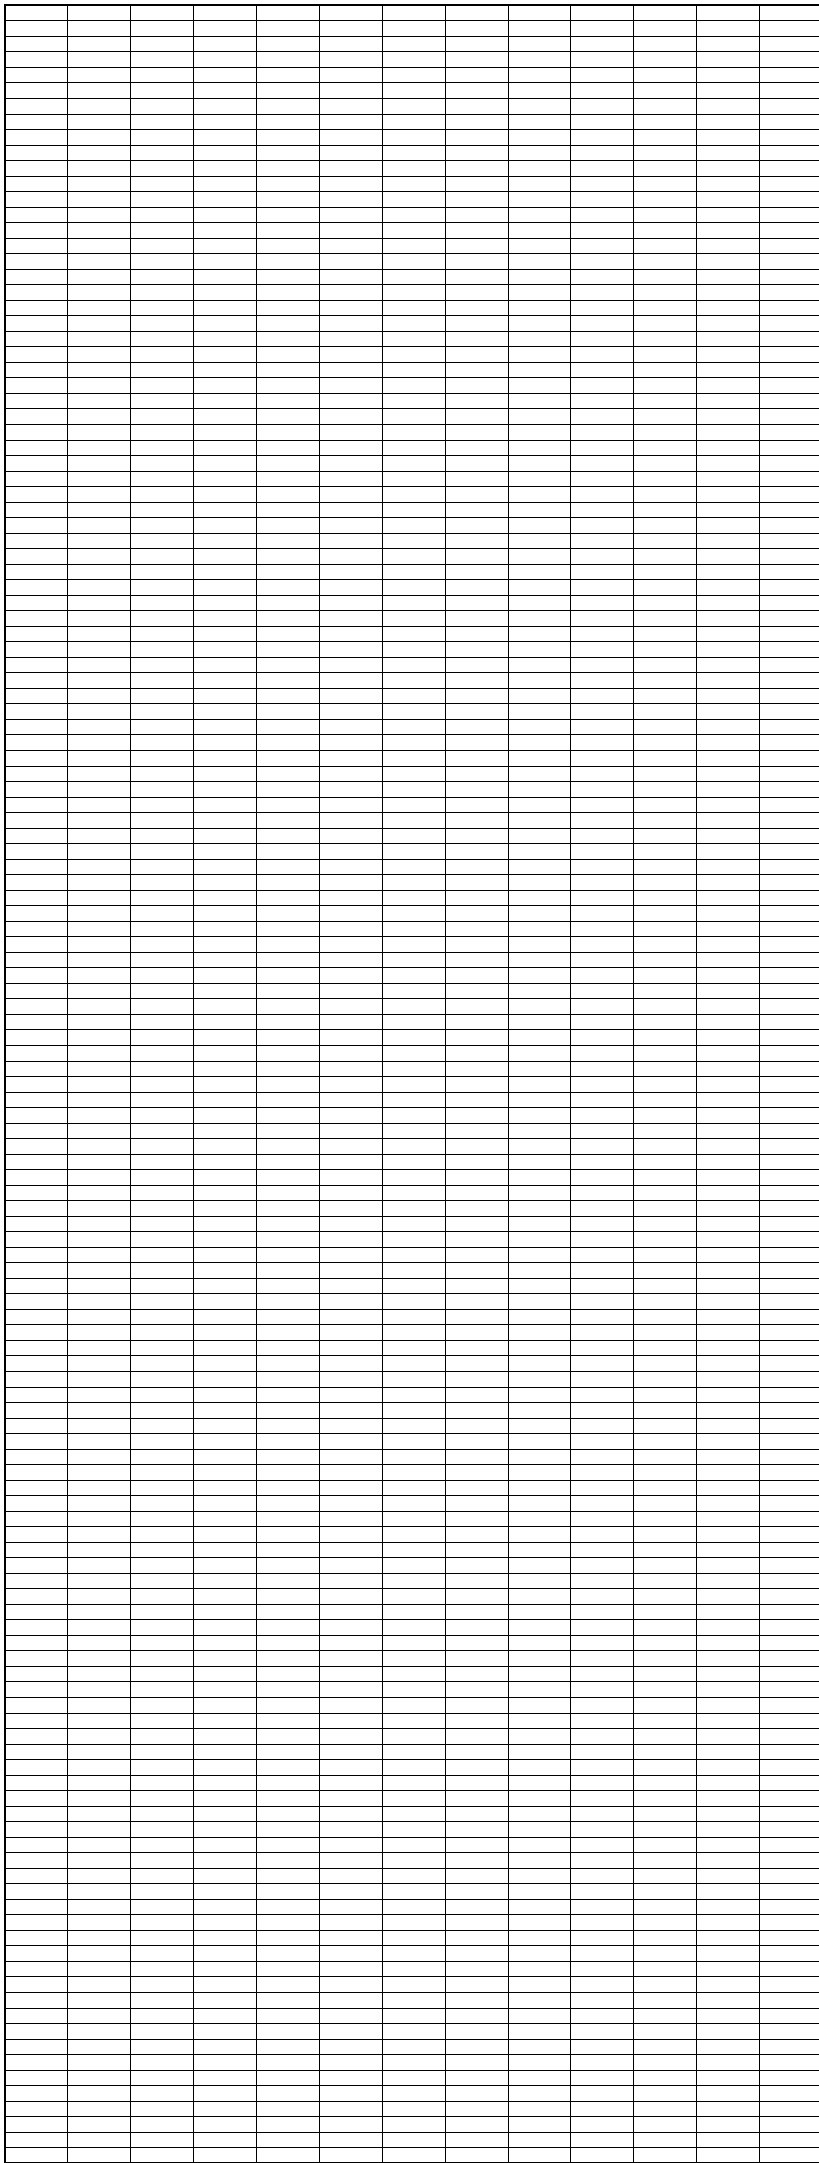

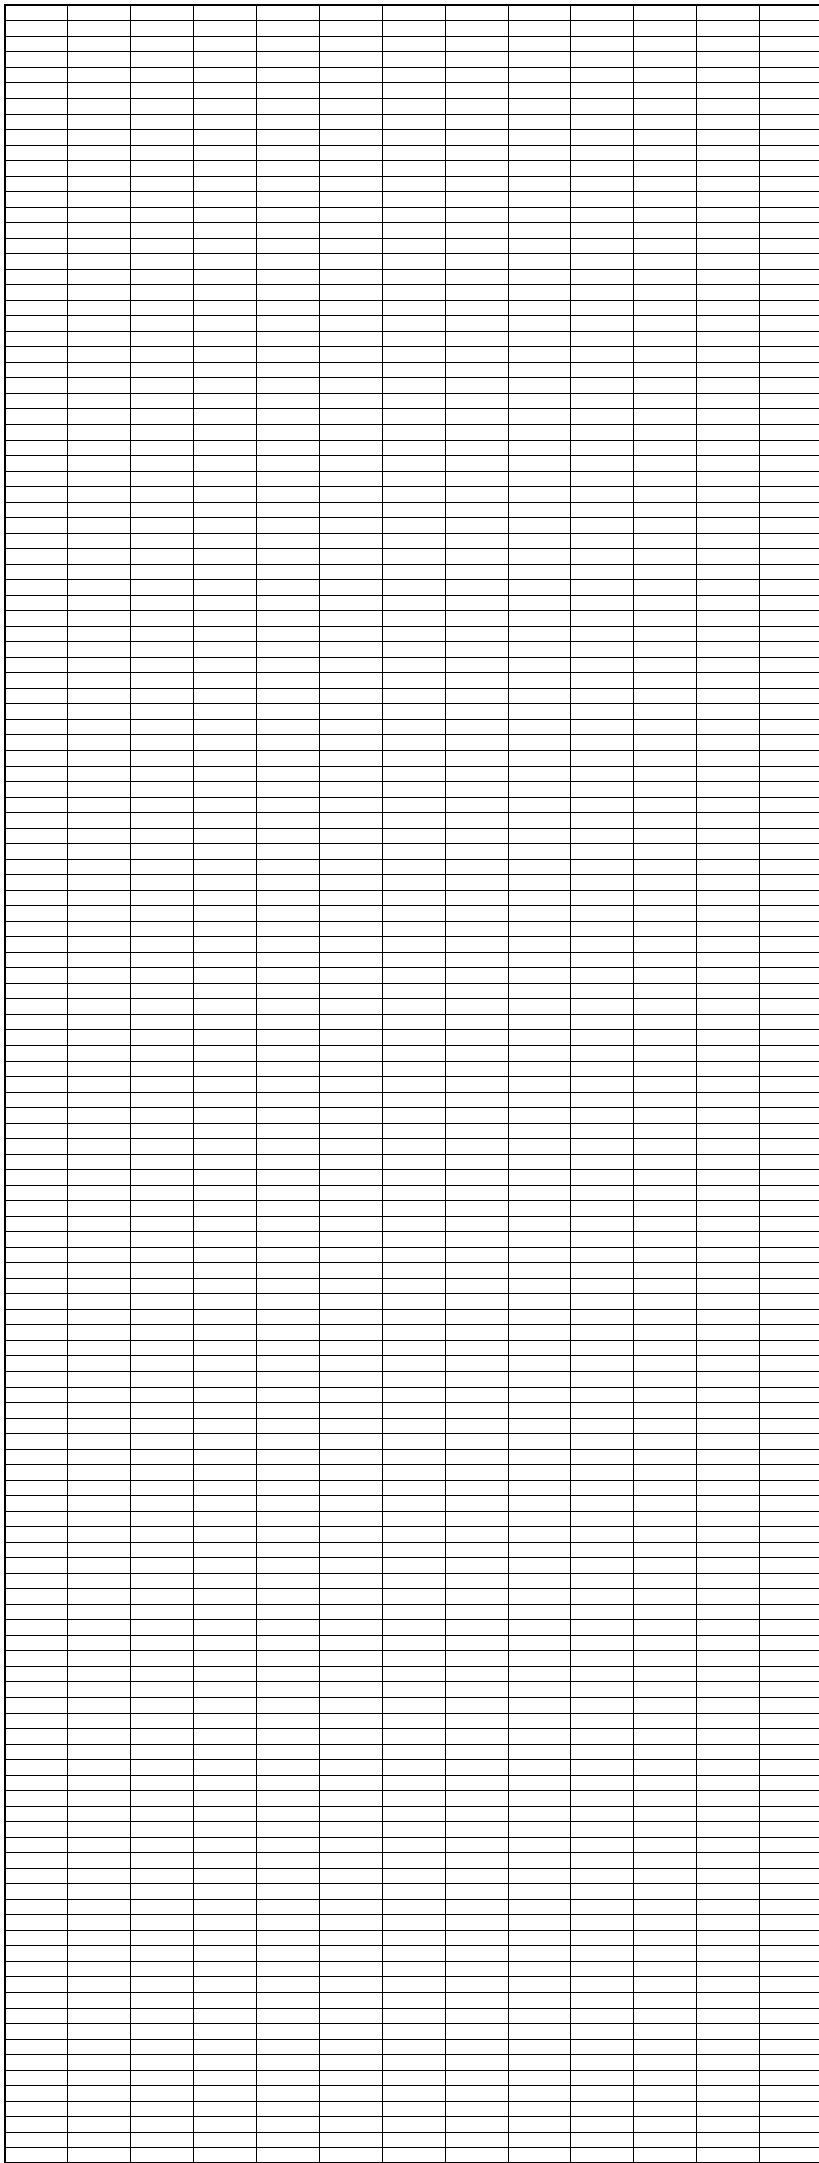

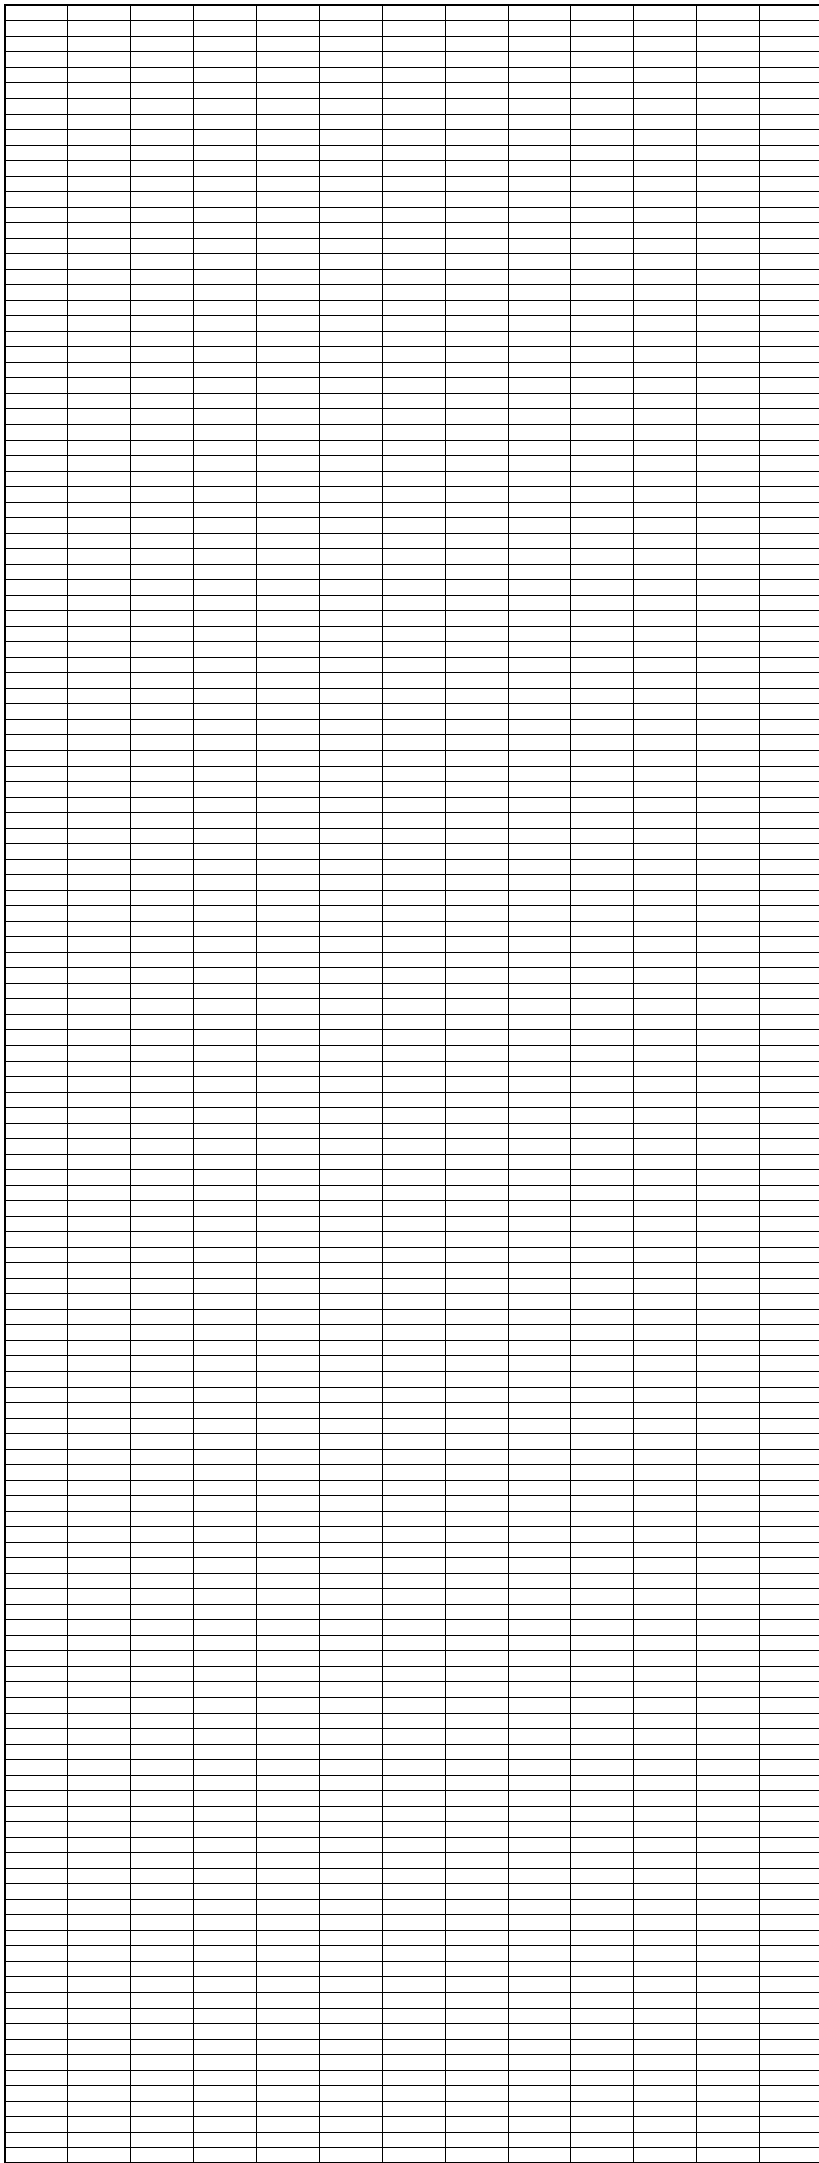

then immediately press stby.


interchangeable.  
when you move to the next item using Pr+/-.


together for >3 sec.


points on the keyboard control unit for a short period, switch the unit off and disconnect it from the mains.


when you move to the next item using Pr+/-.




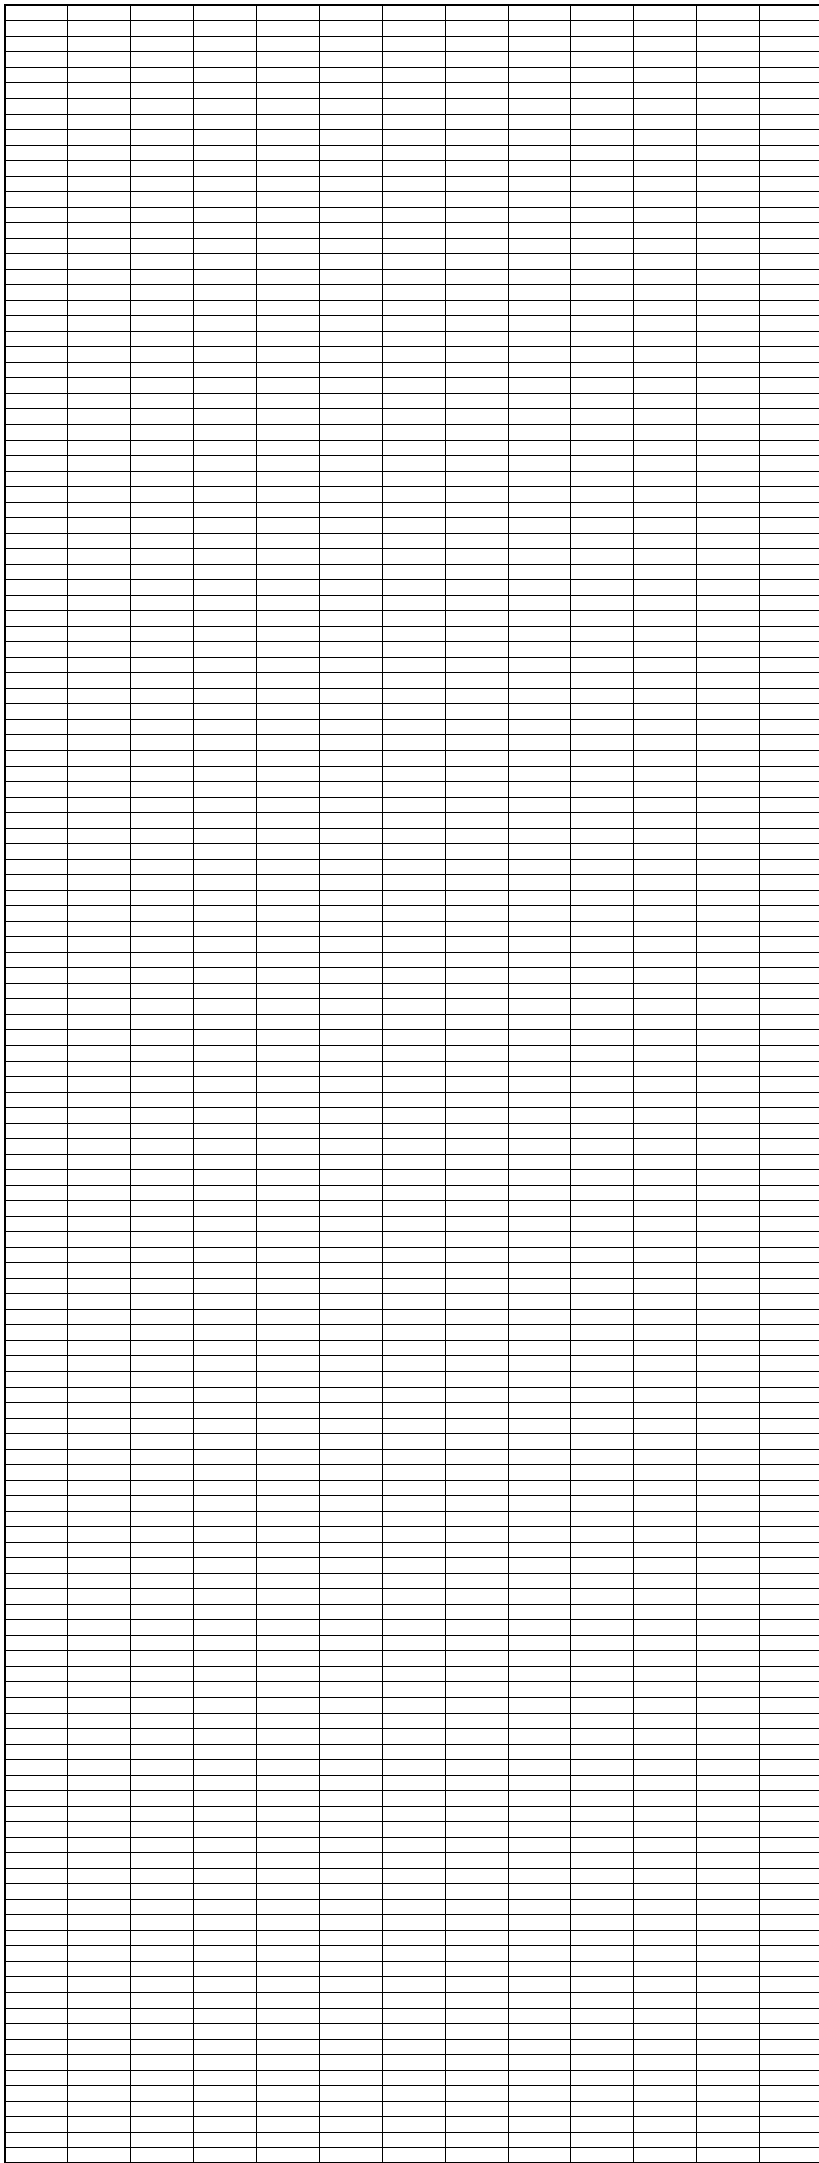


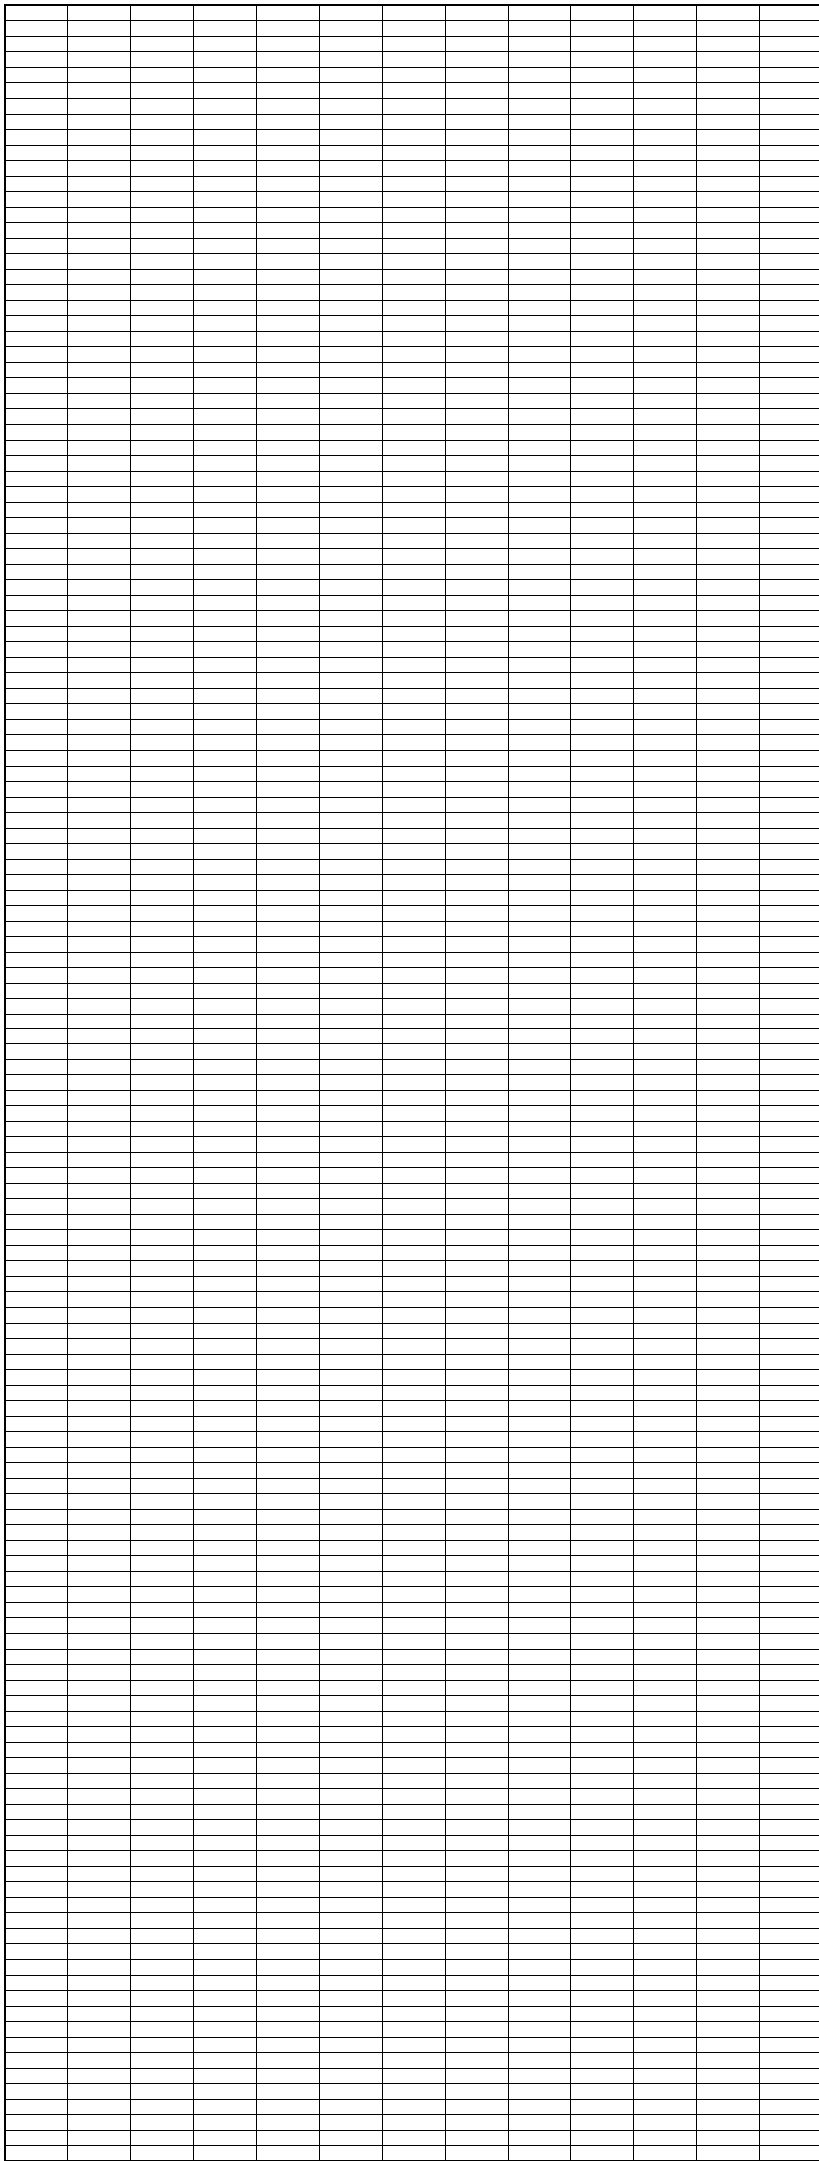


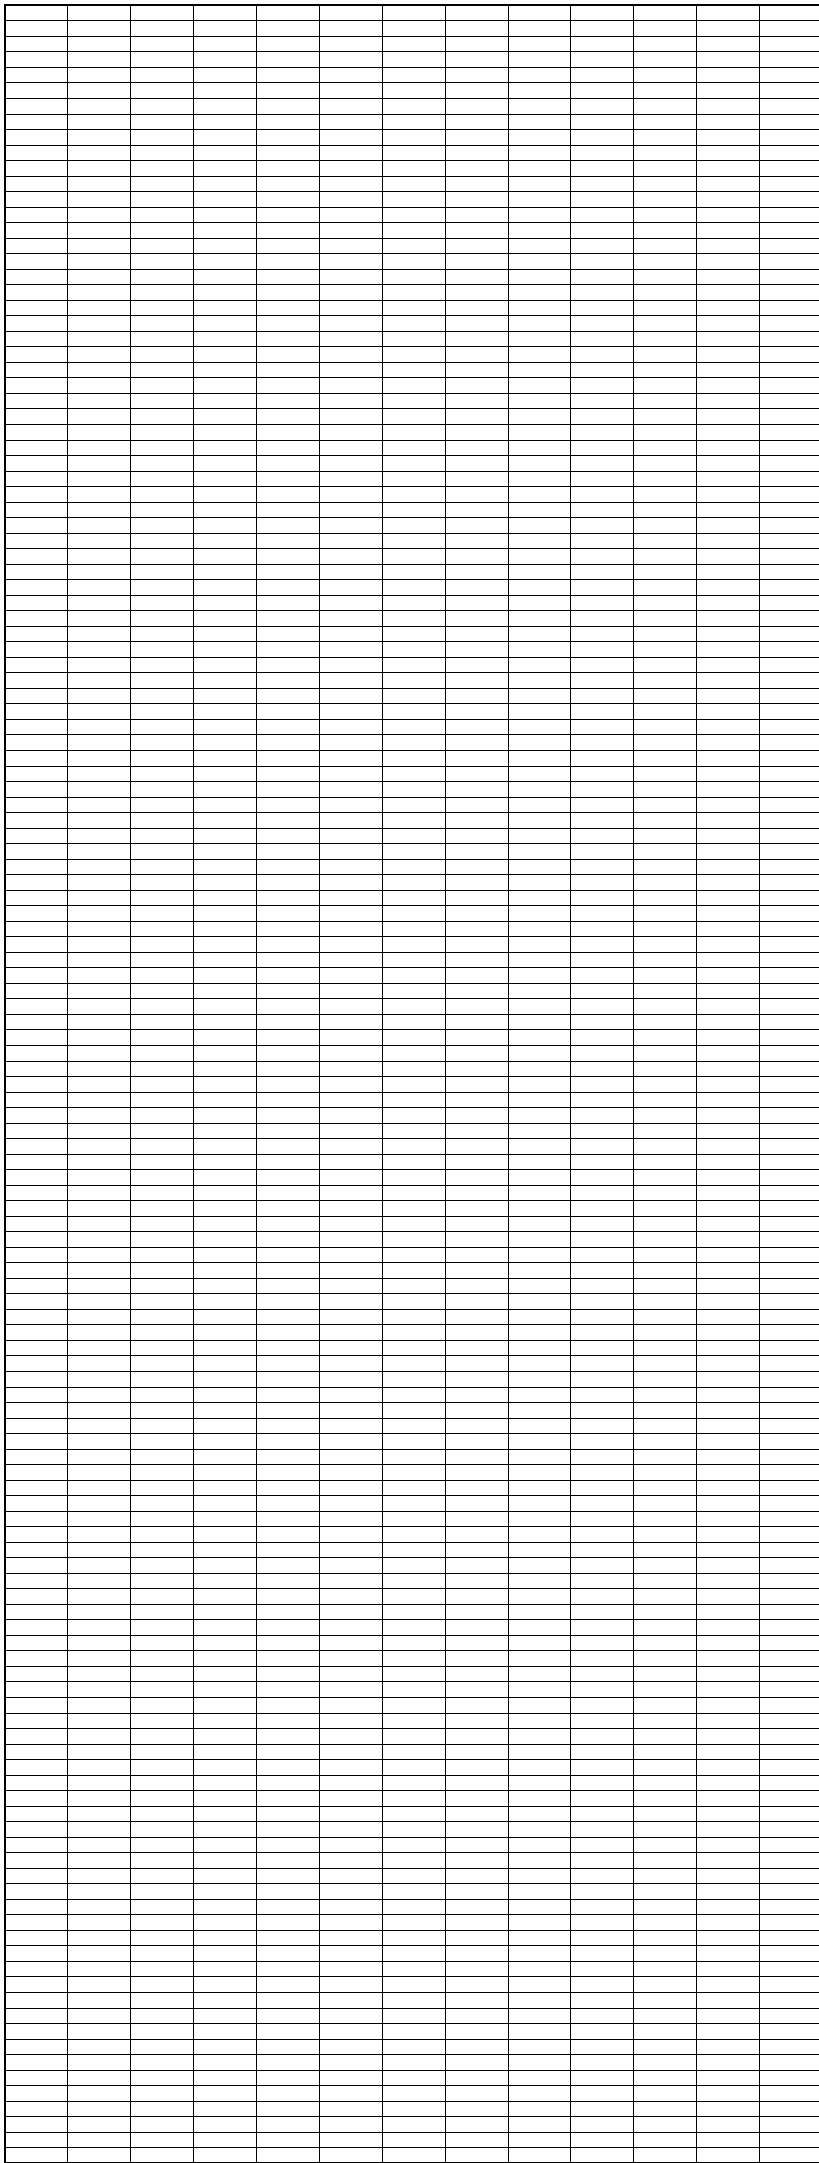

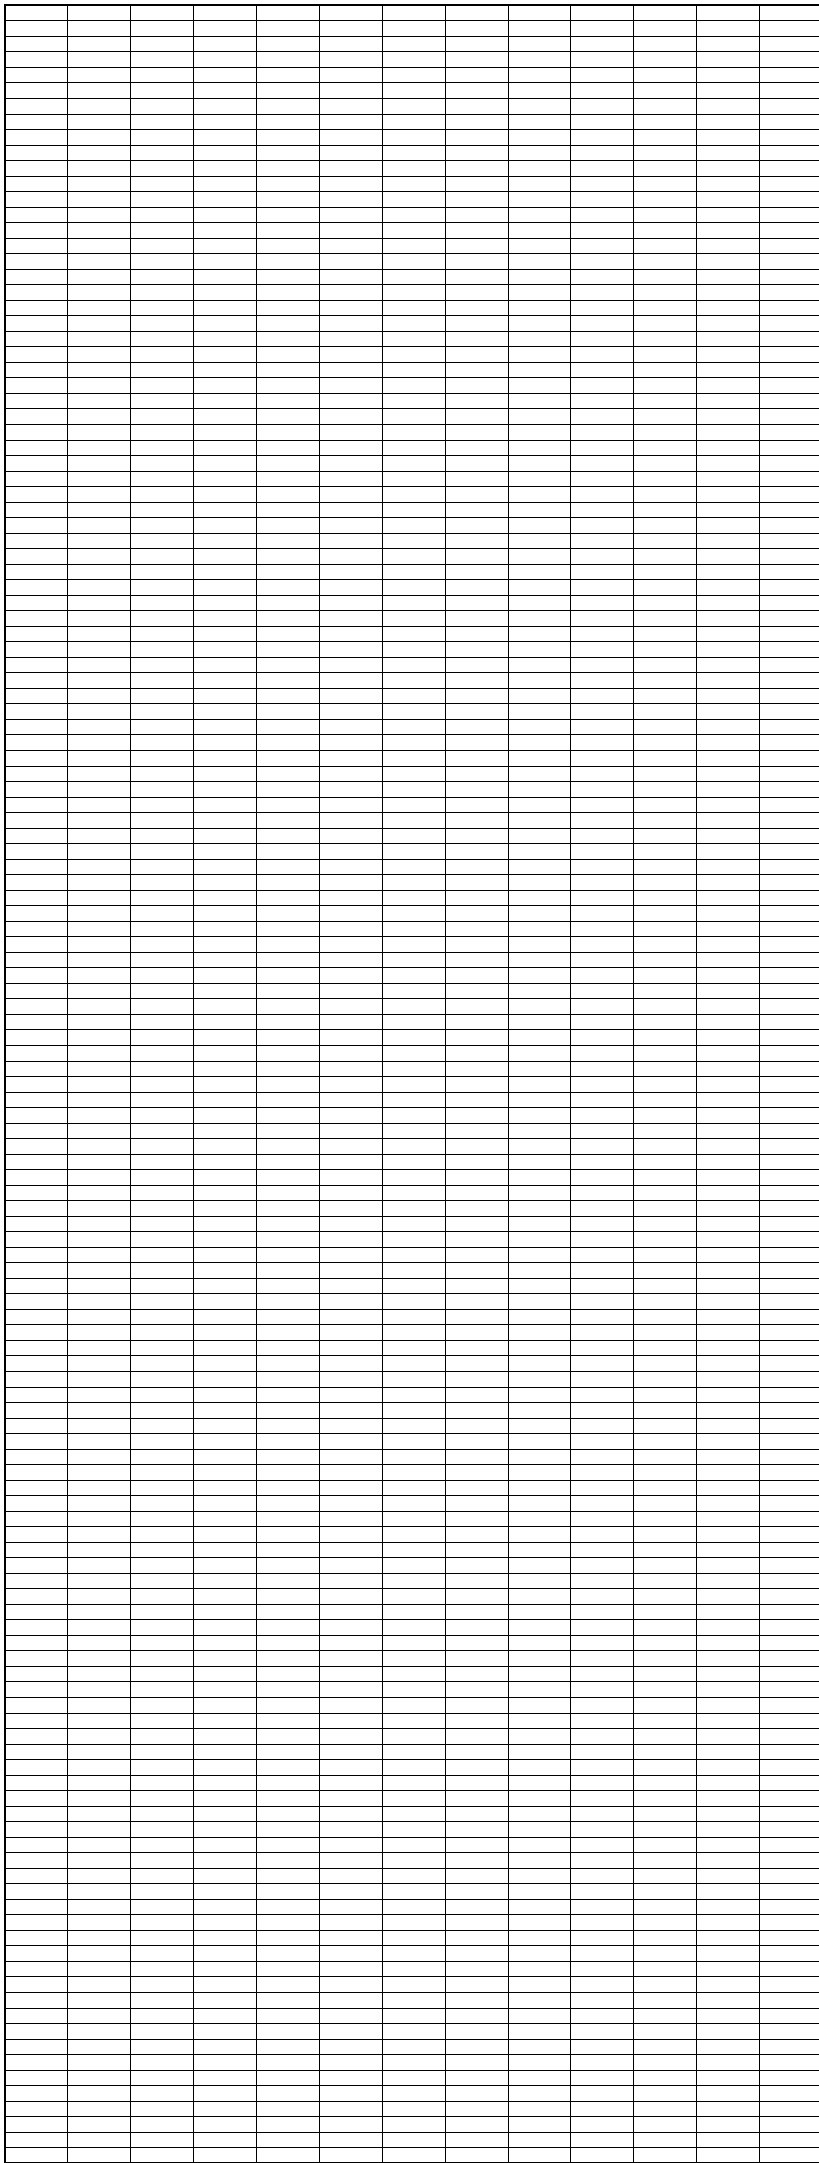


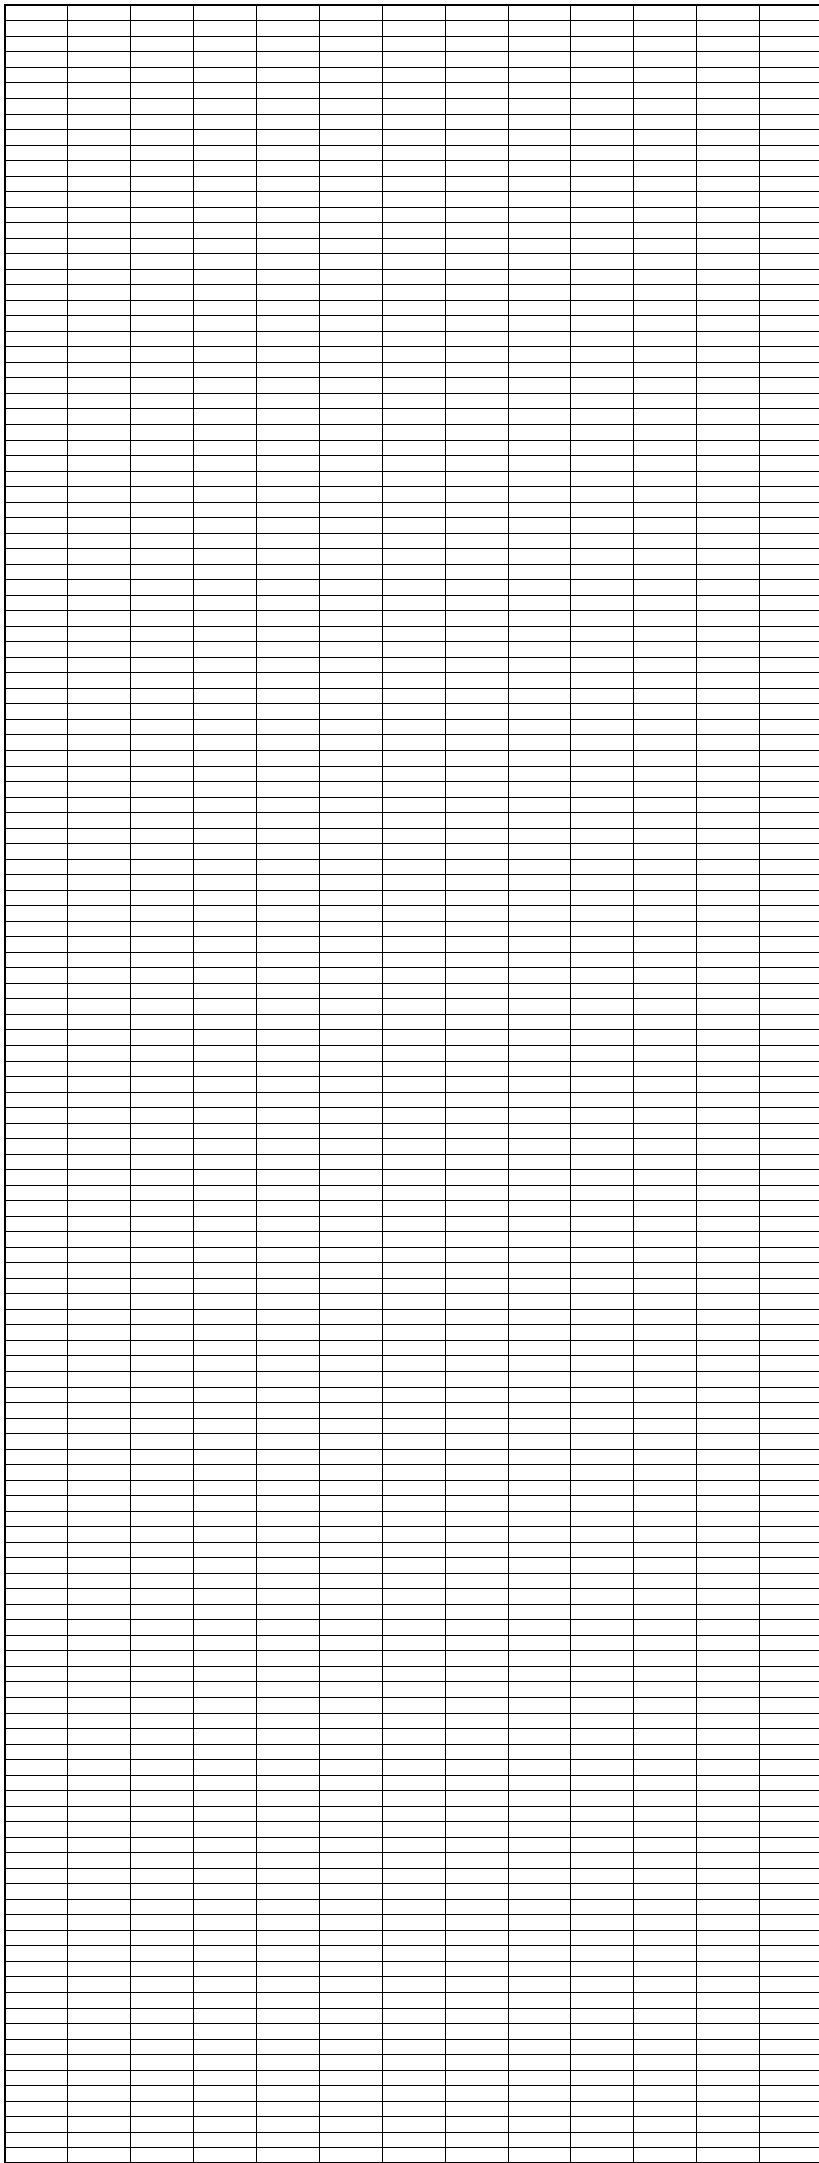

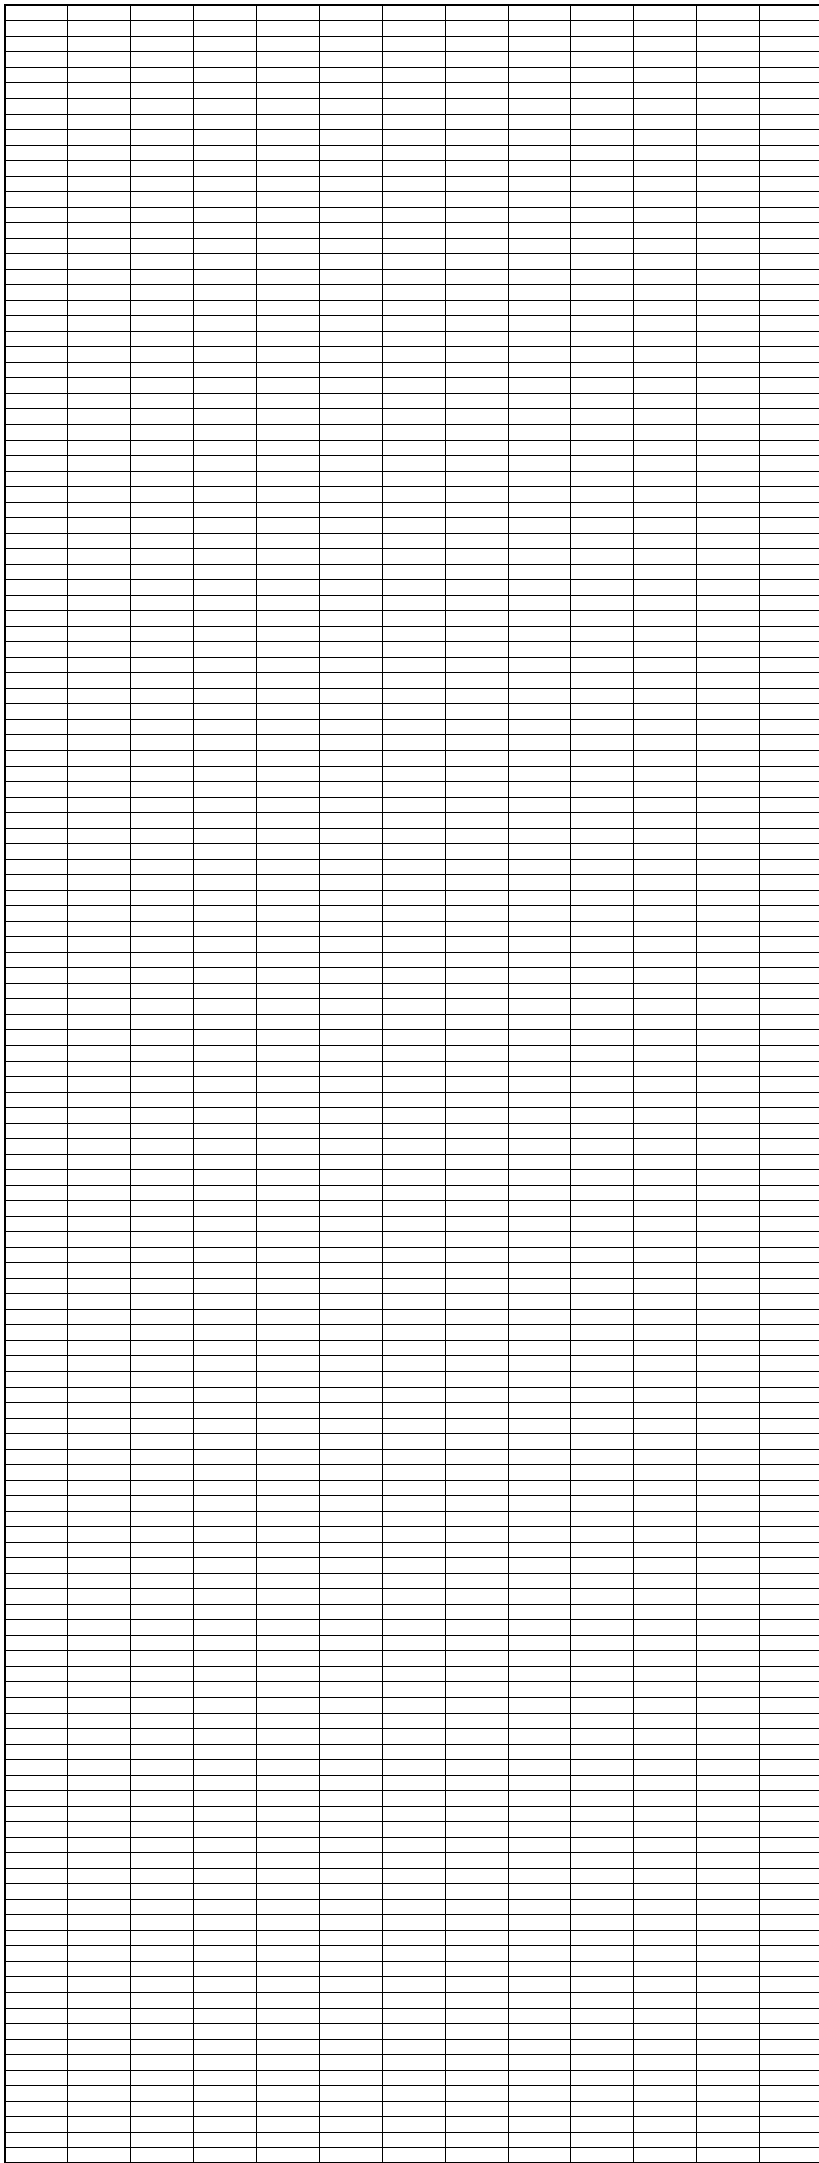

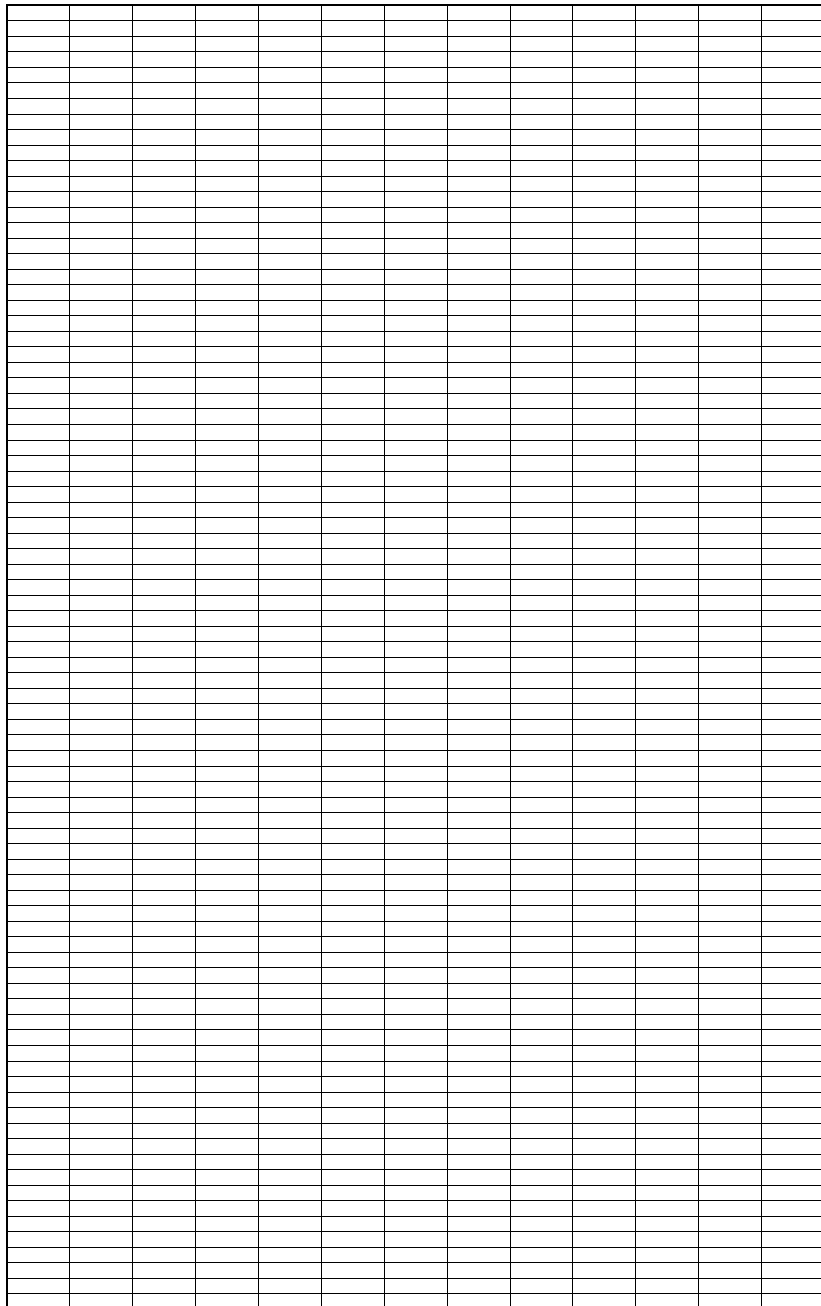



exit press '8' on remote control. PIN CODE: enter any pin 3 times, then press Vol- on TV and '7' on R/C.

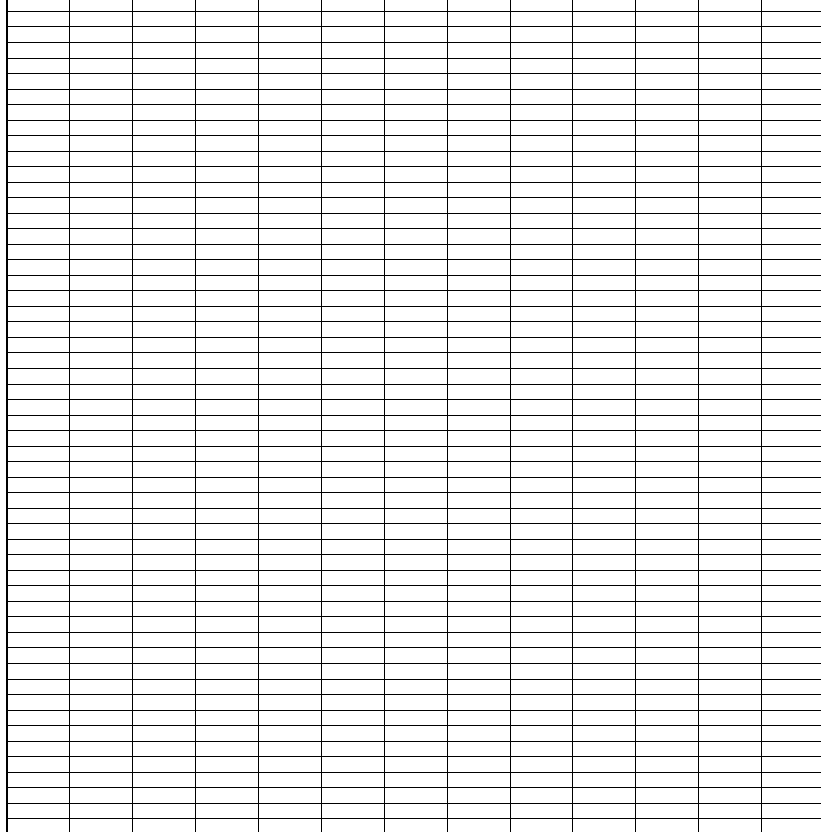






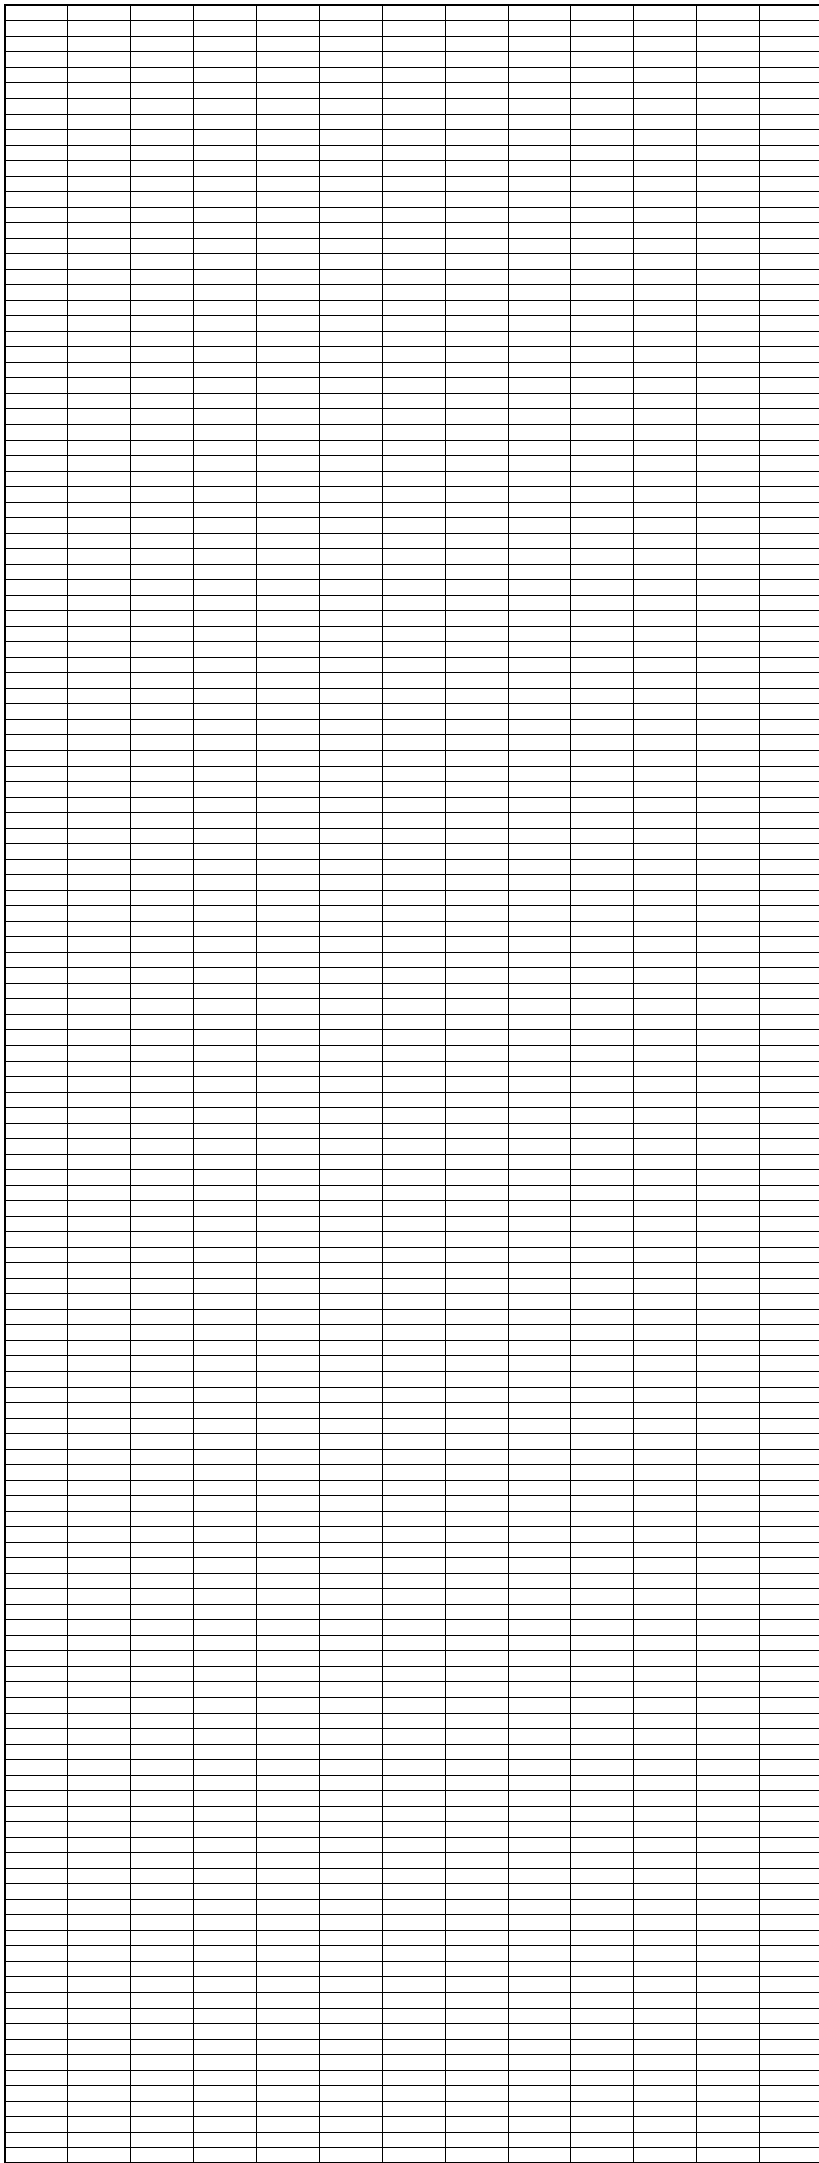


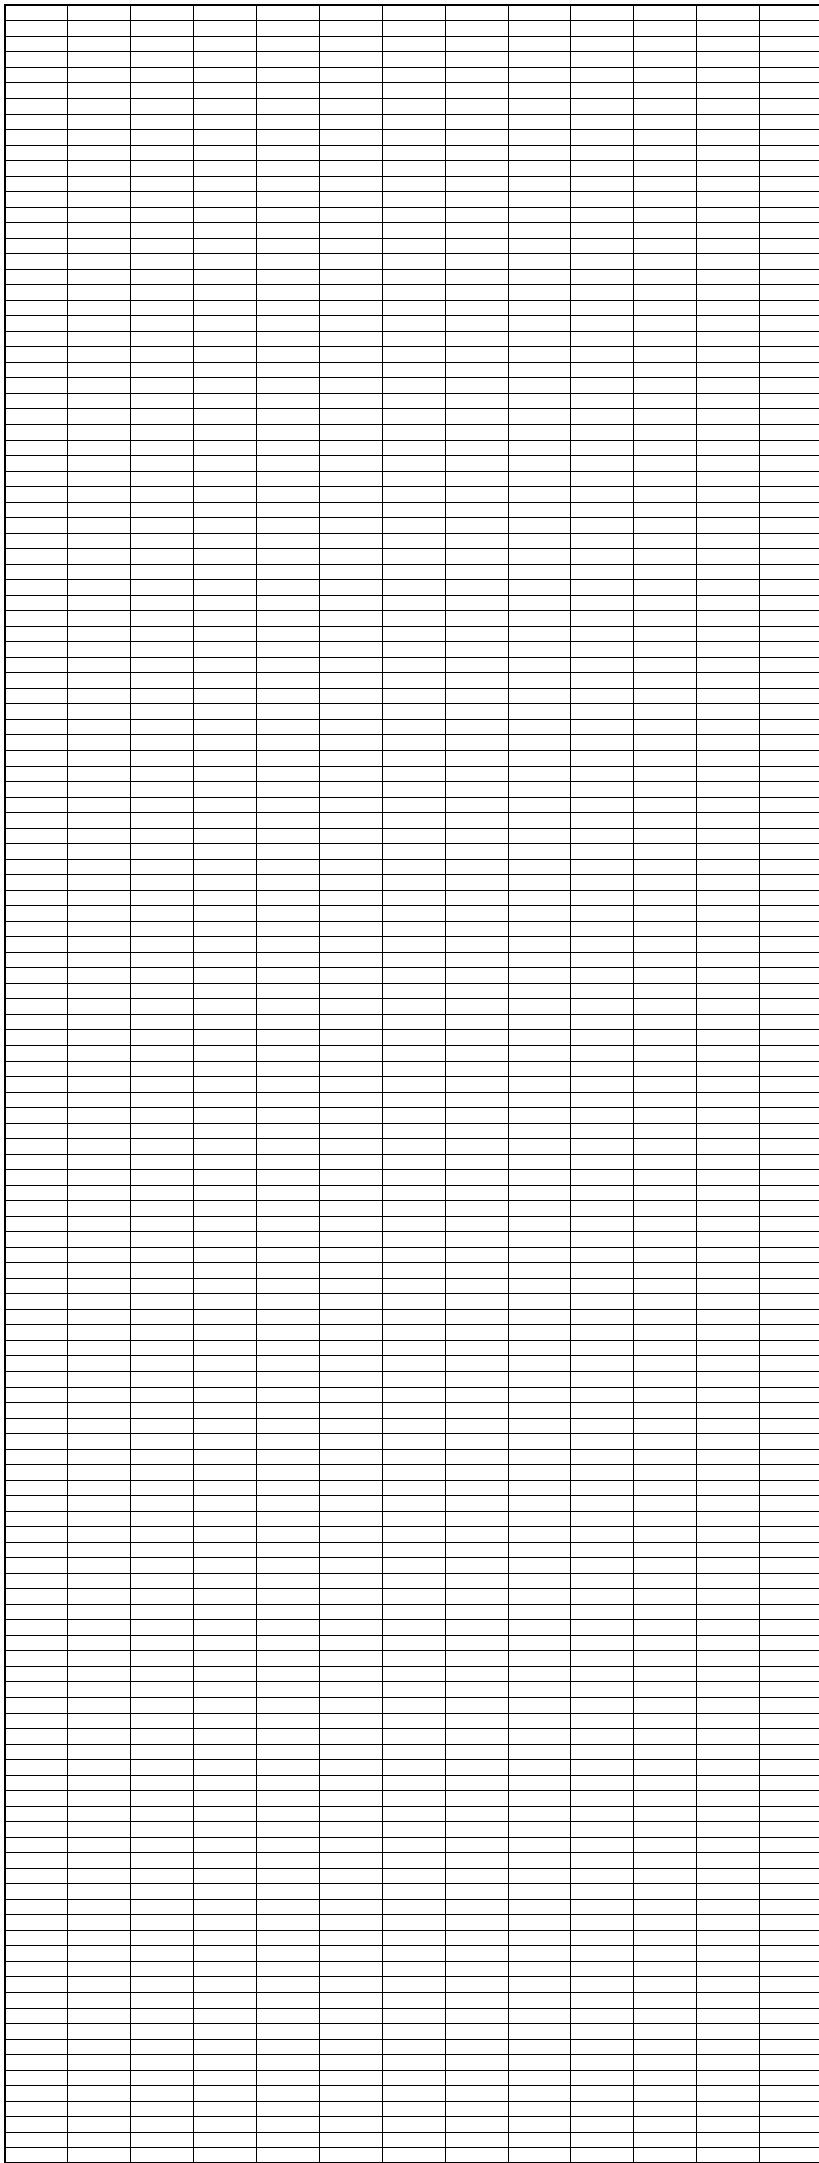





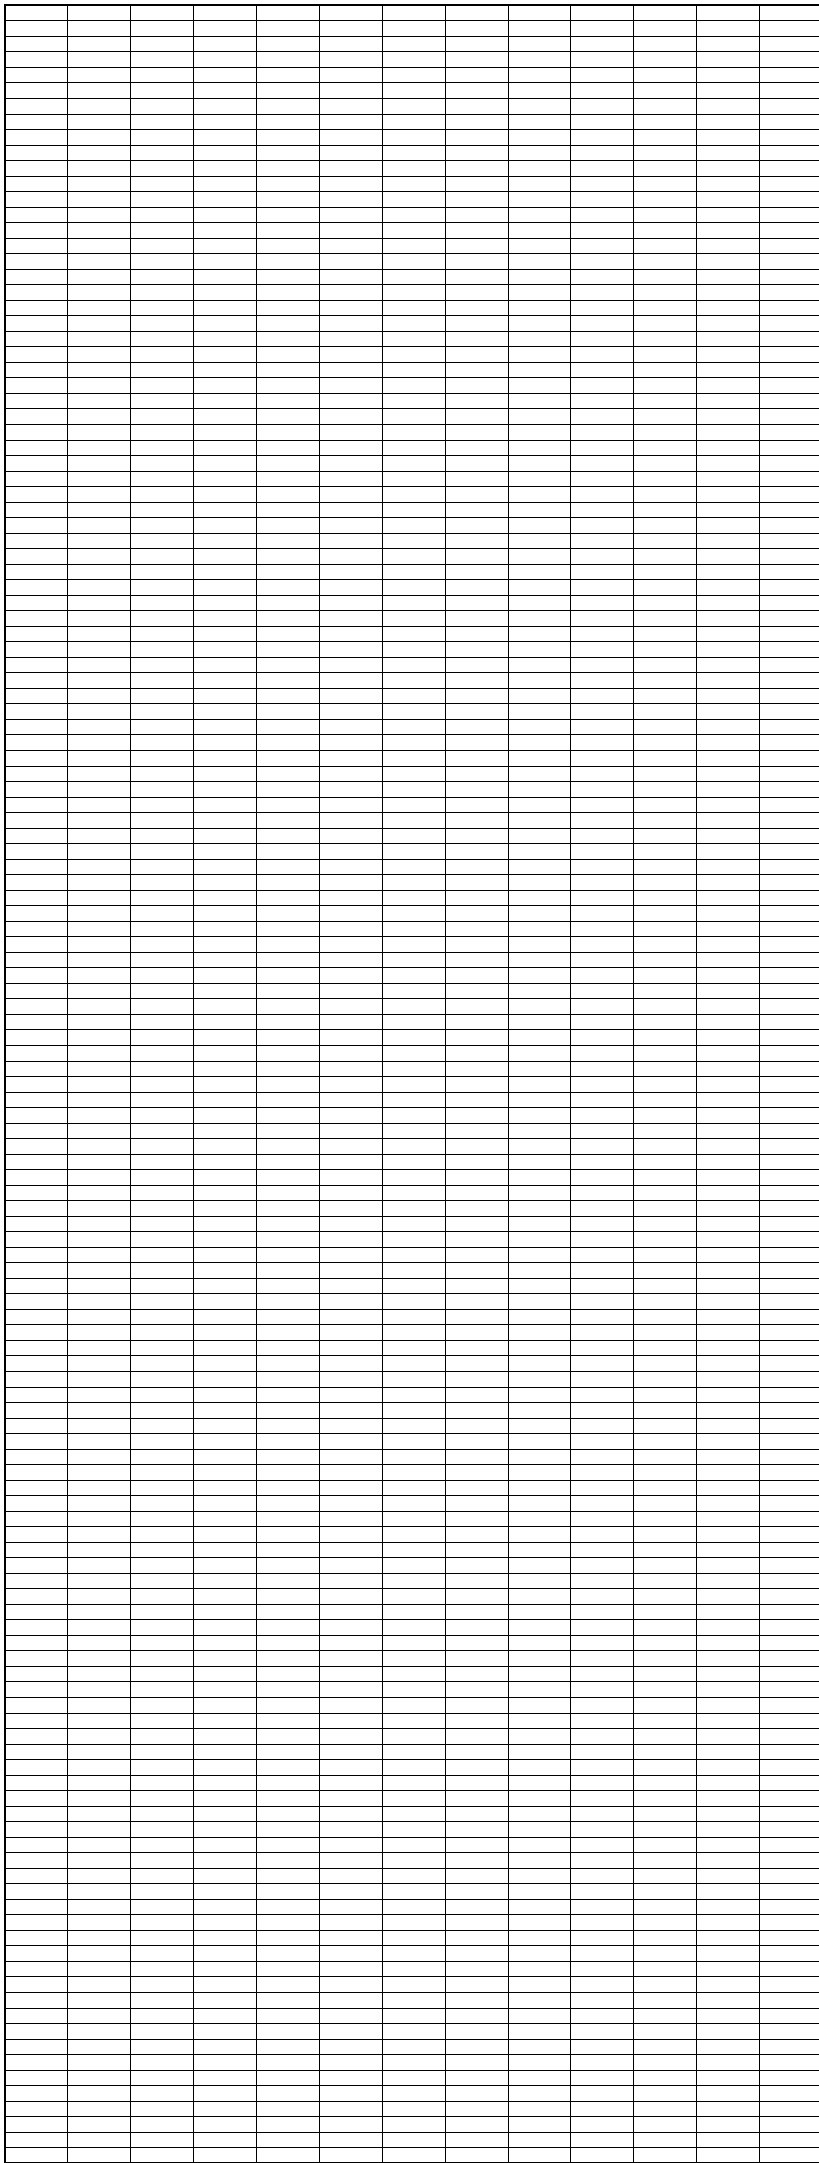




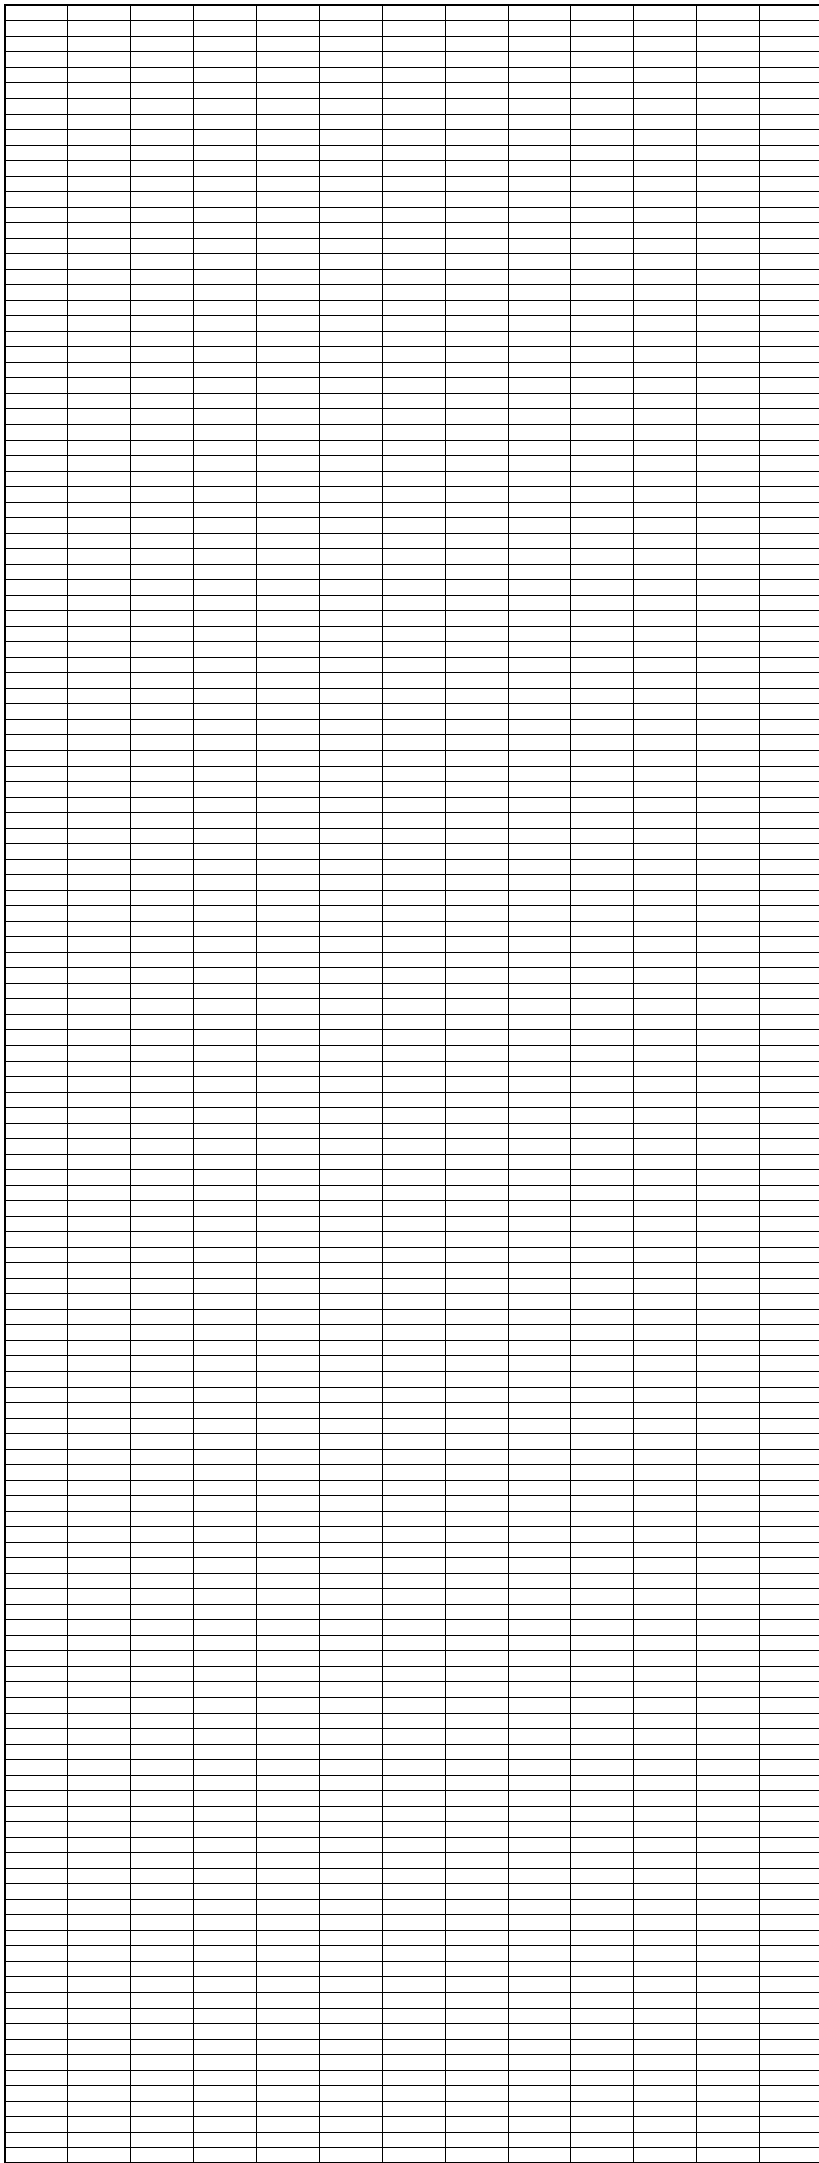


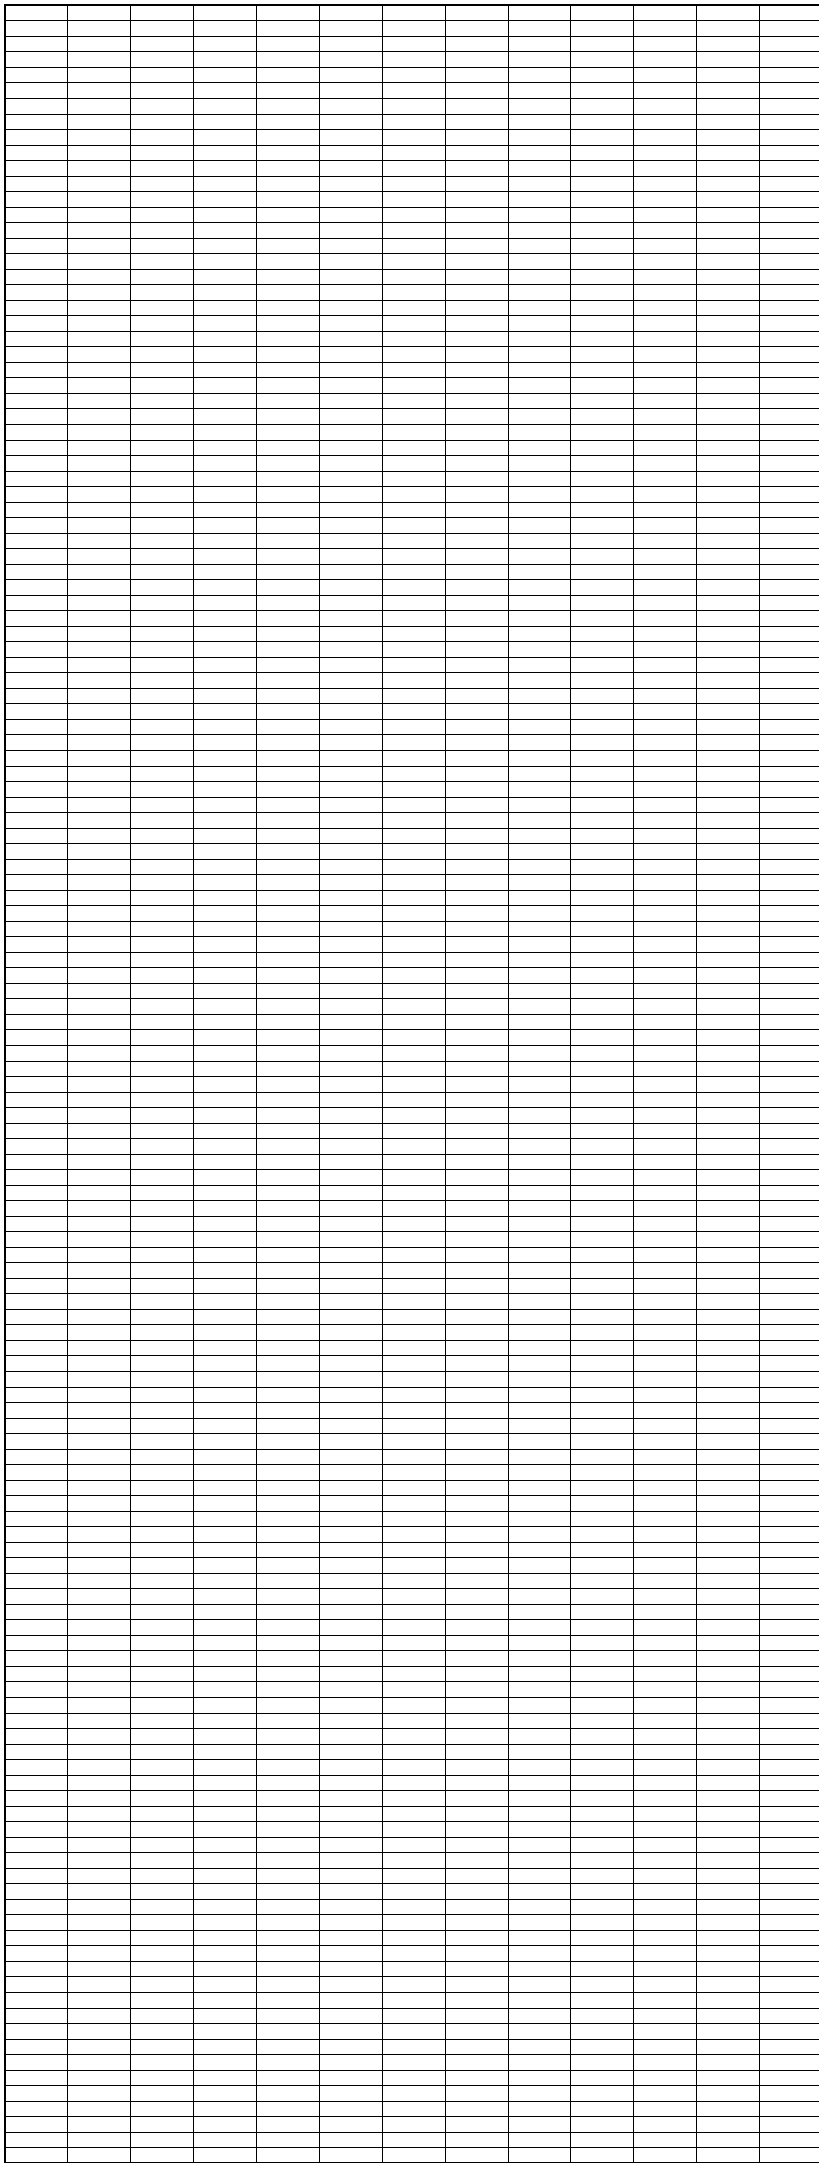


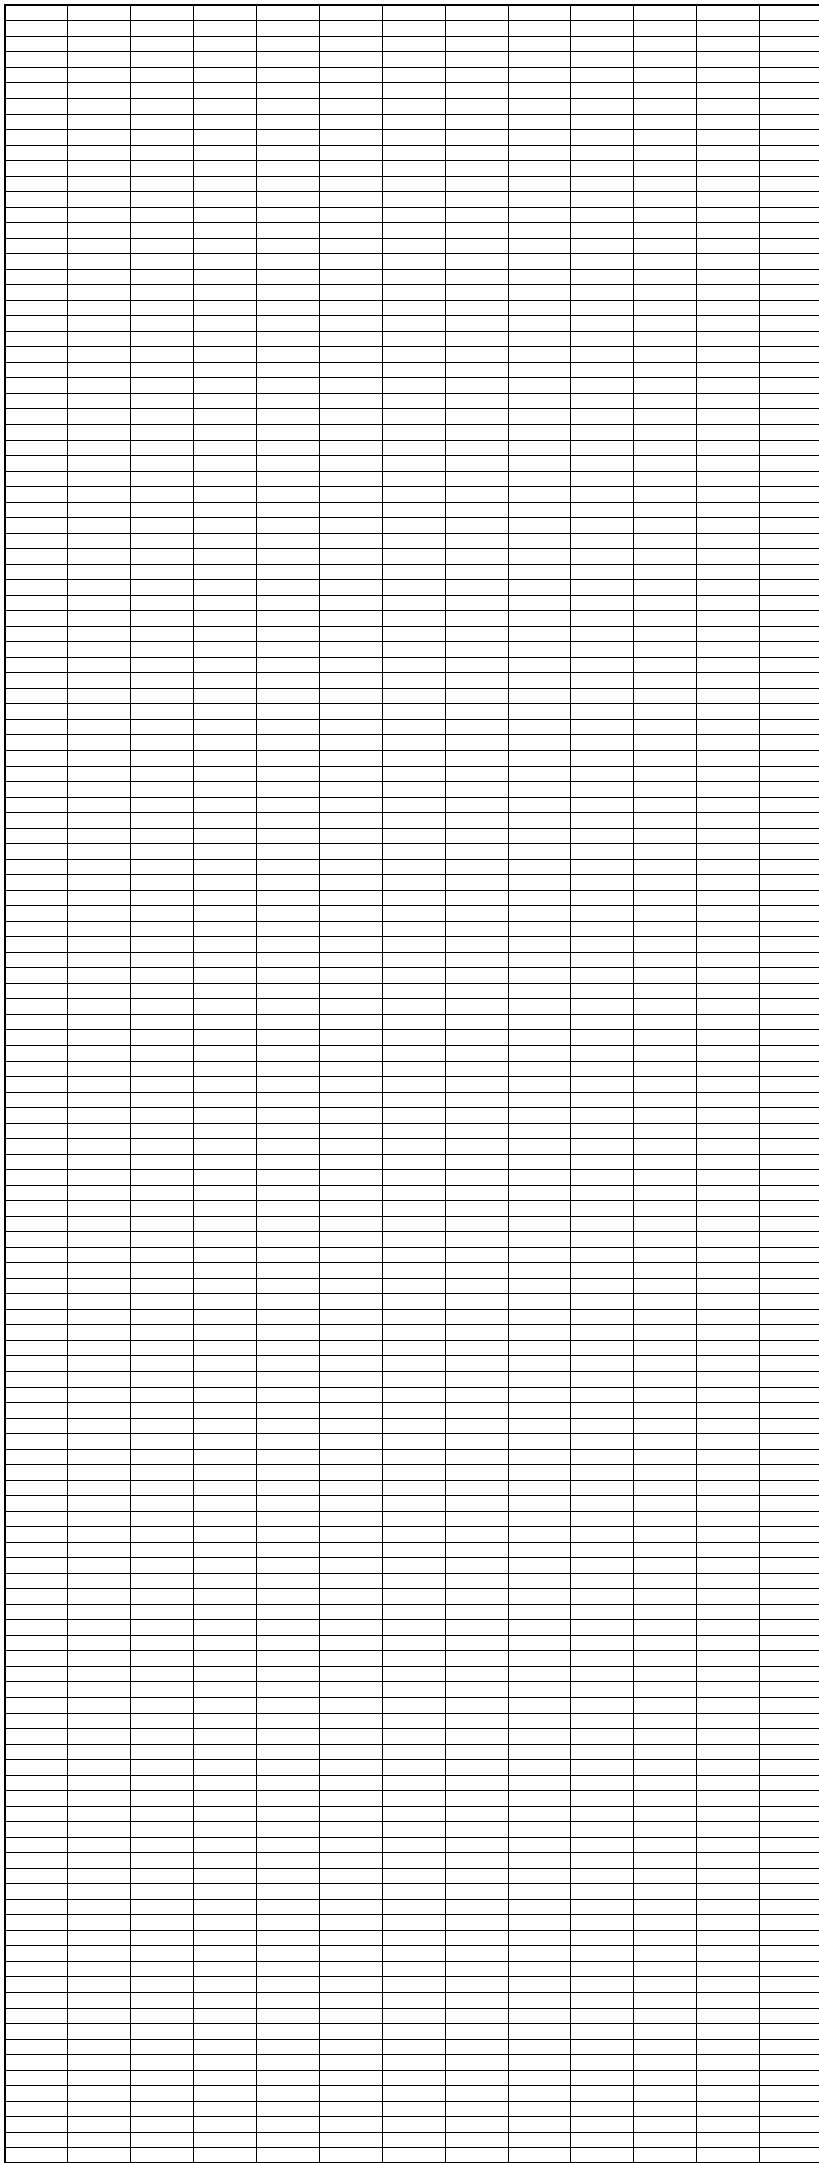





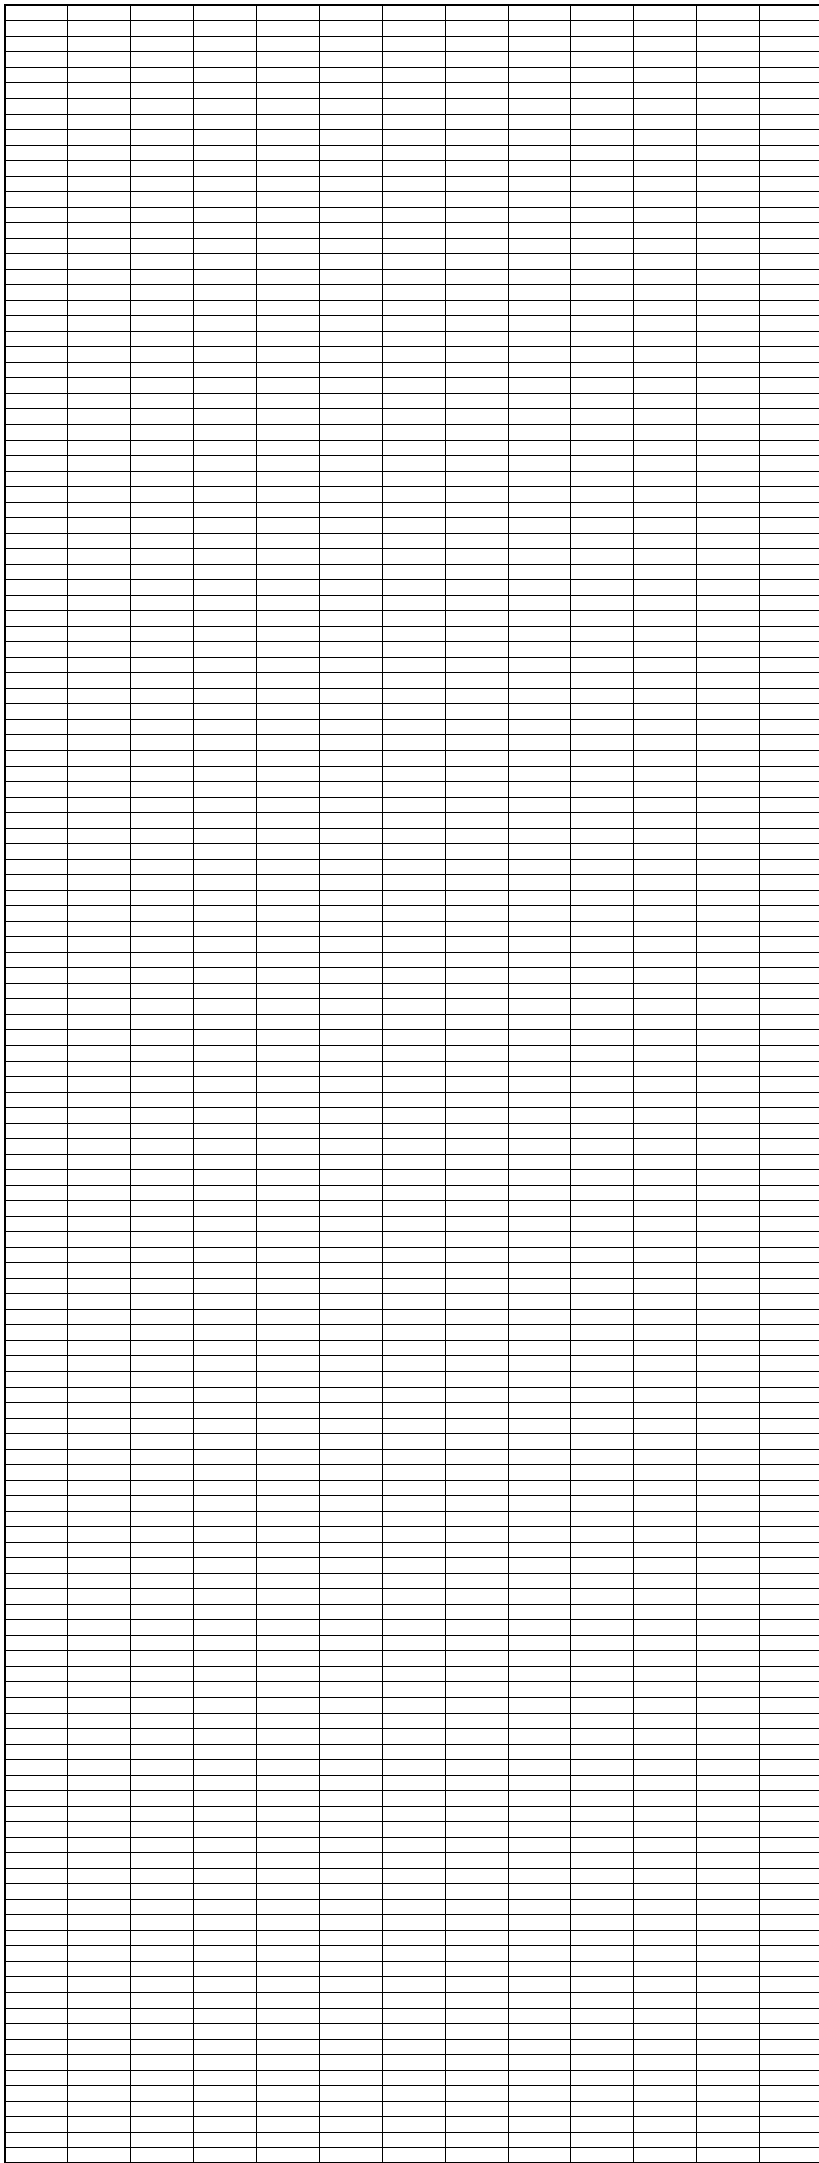


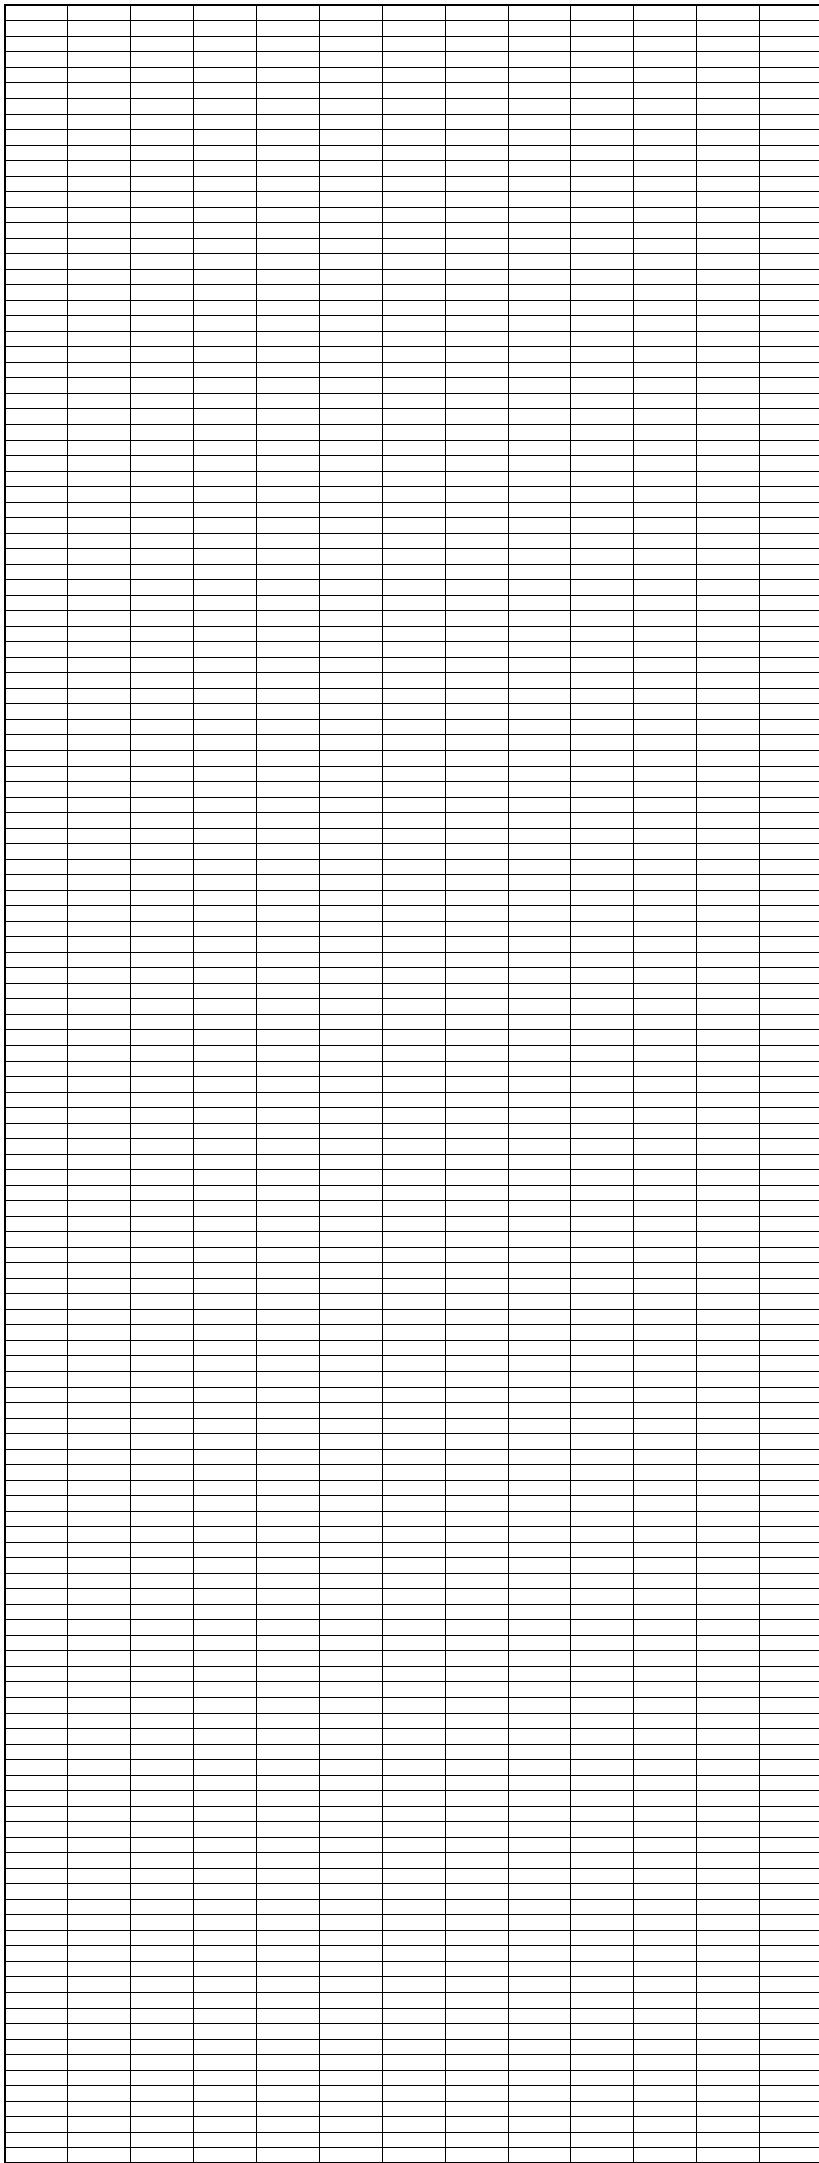


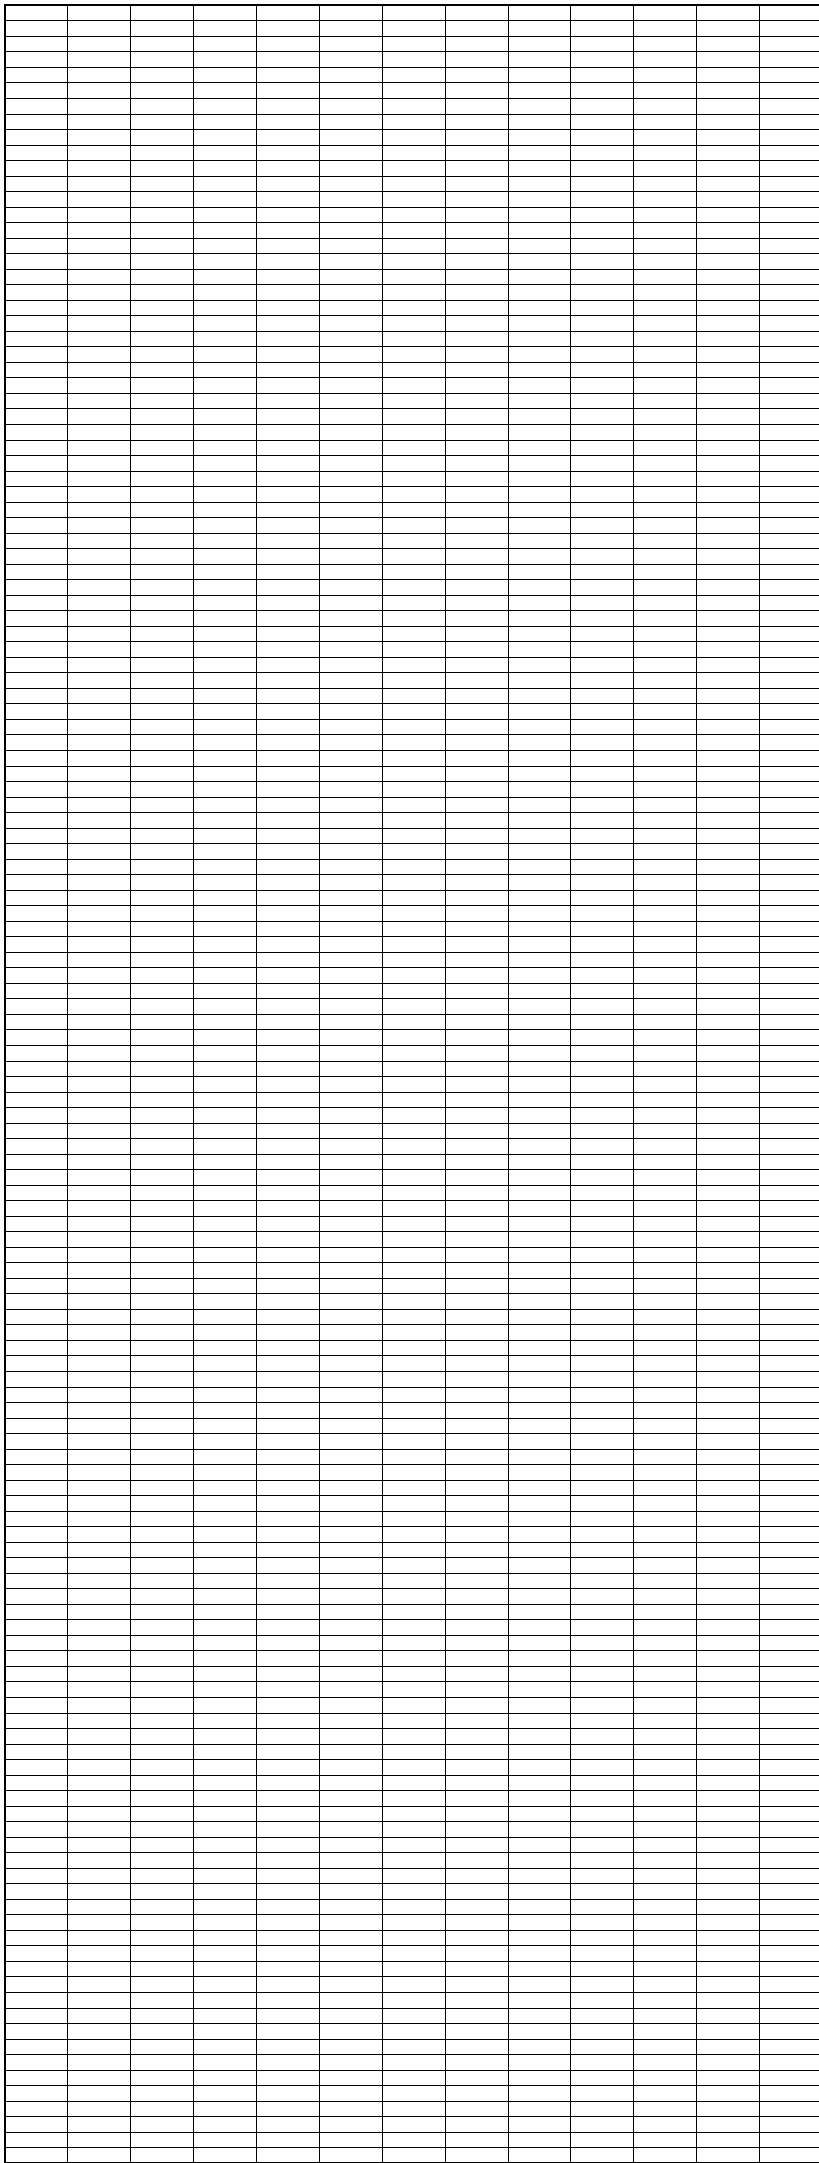


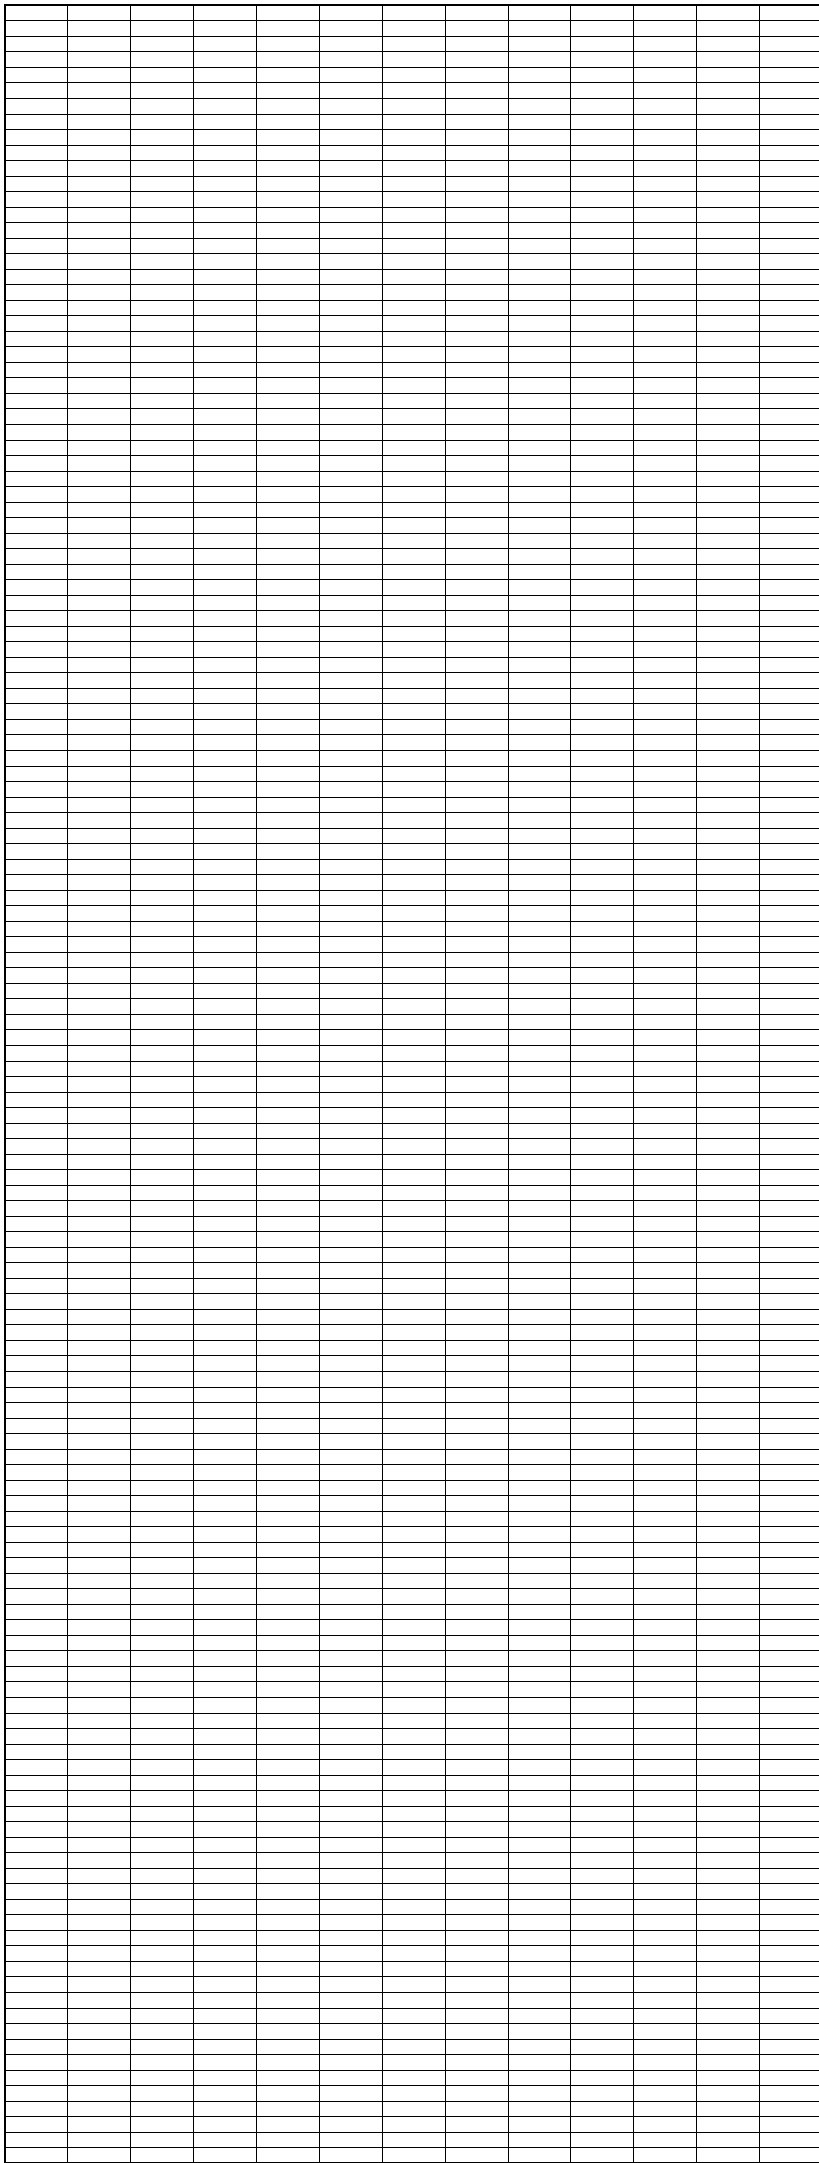

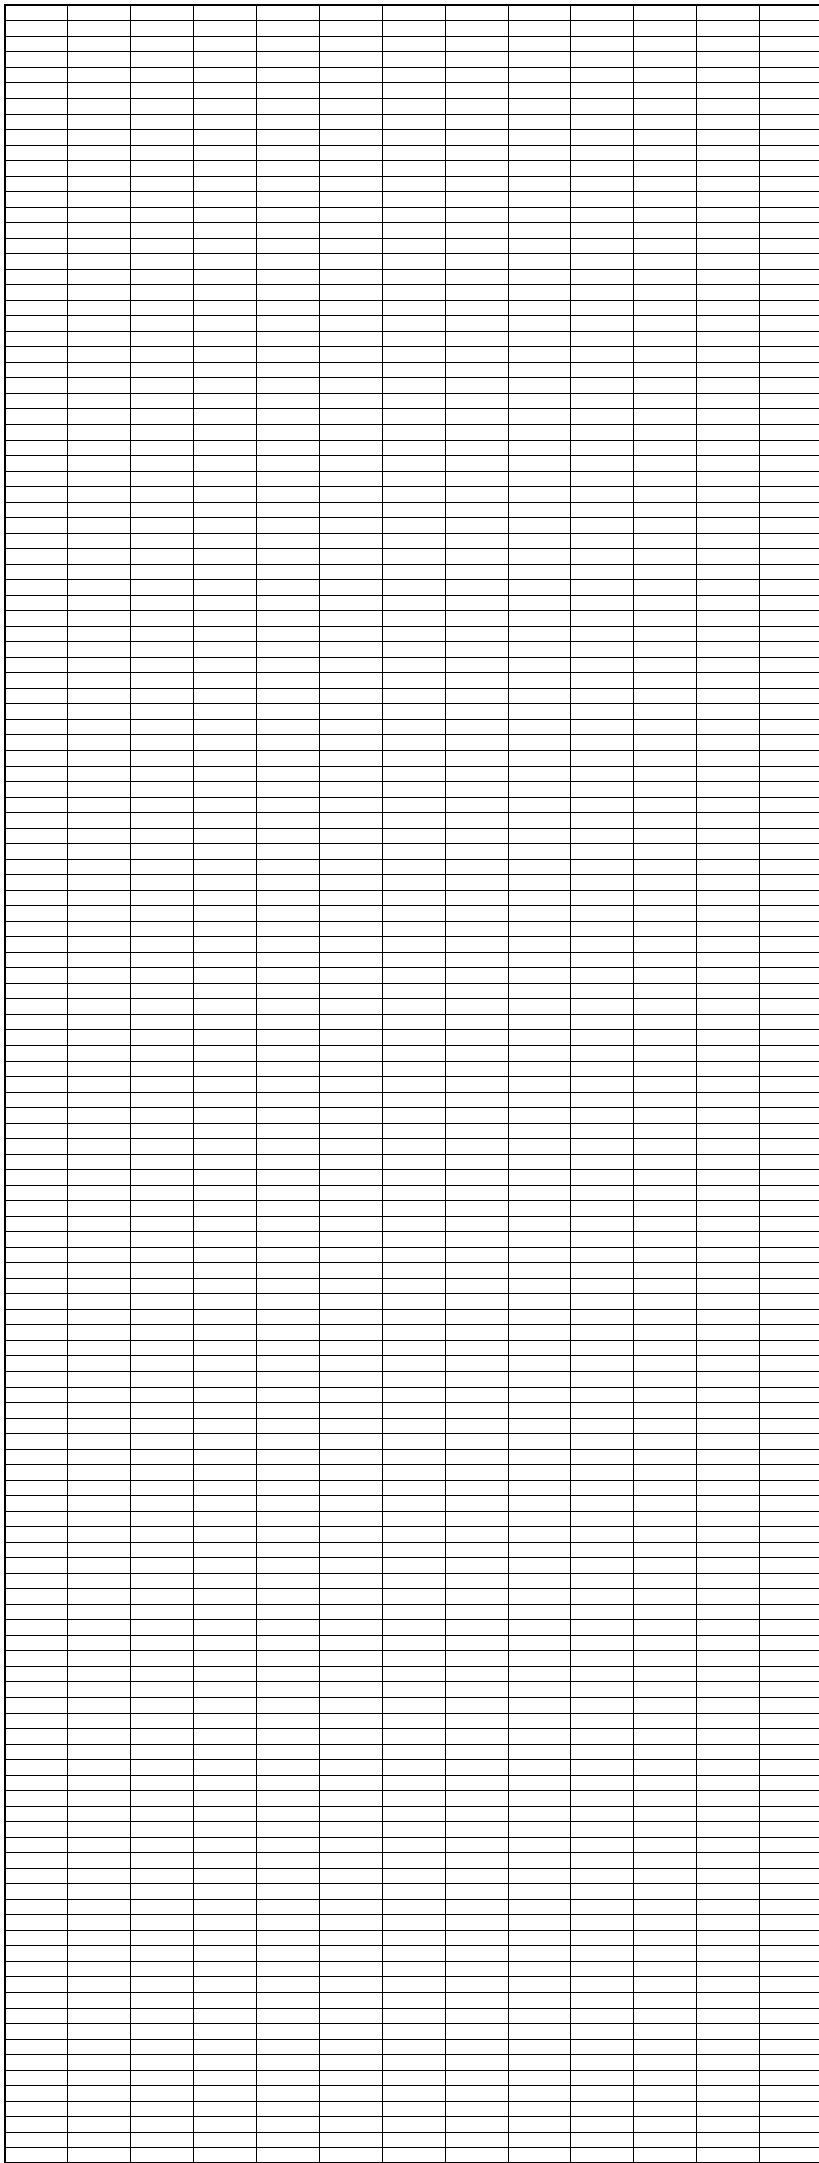


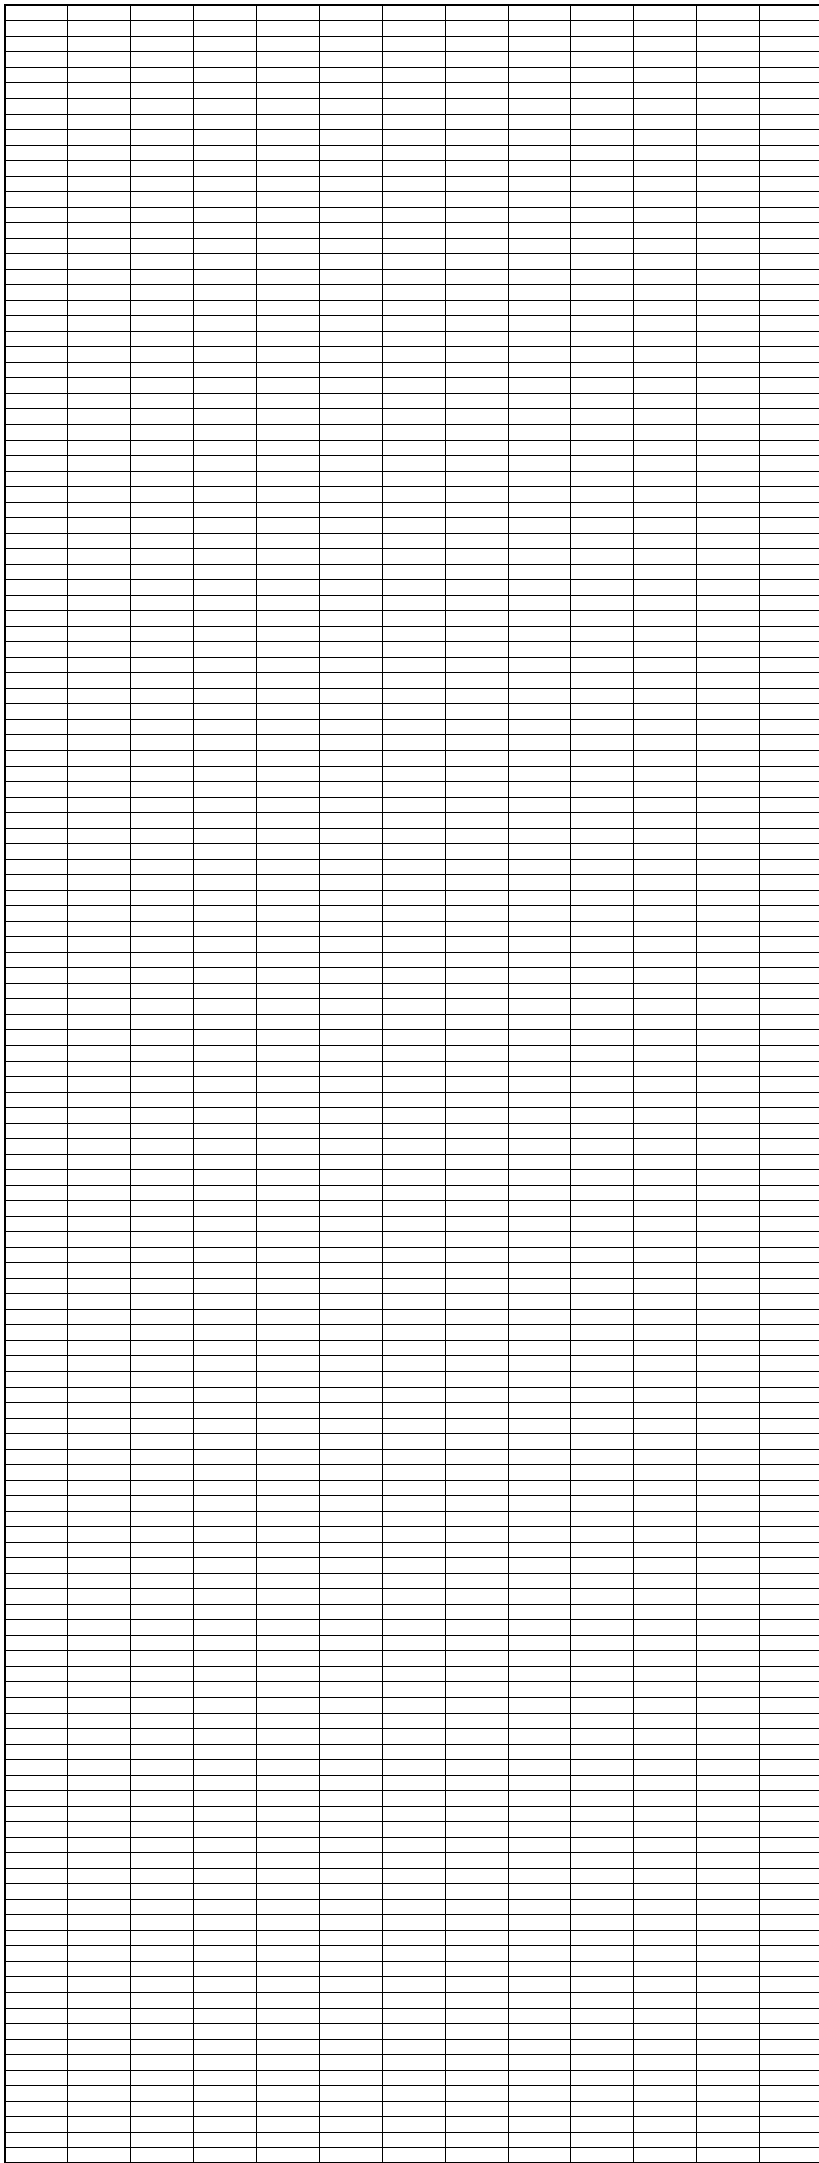


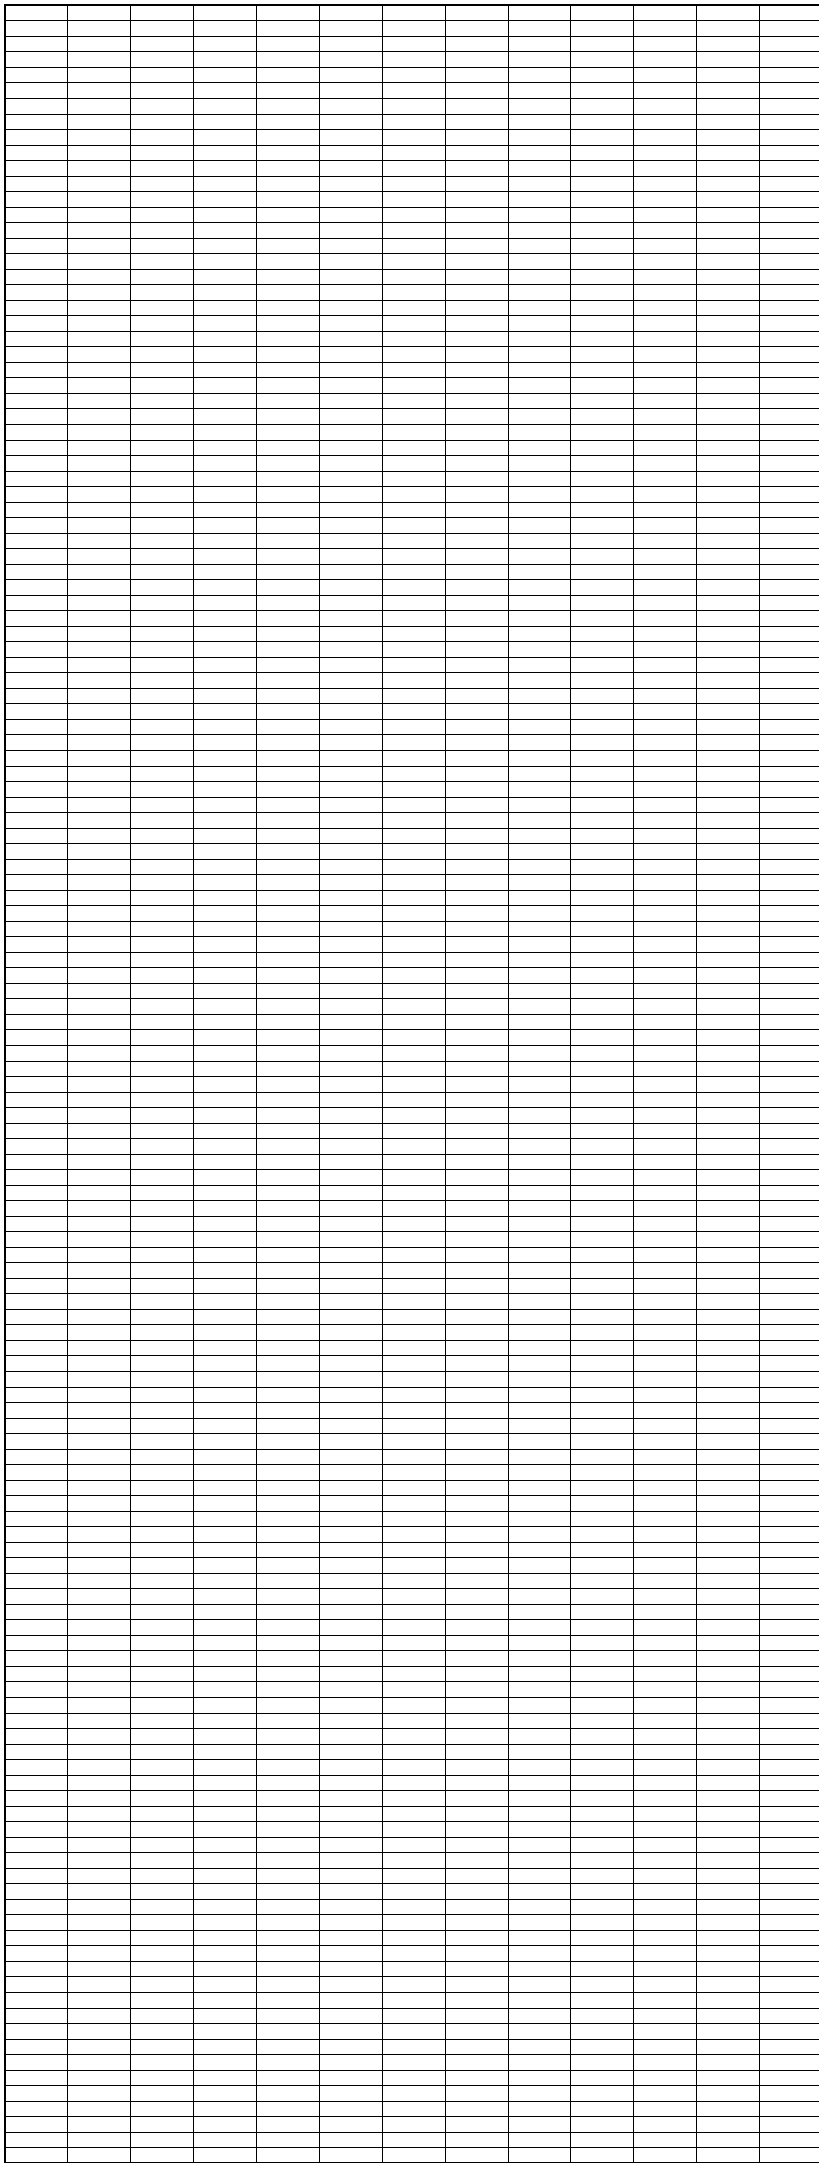


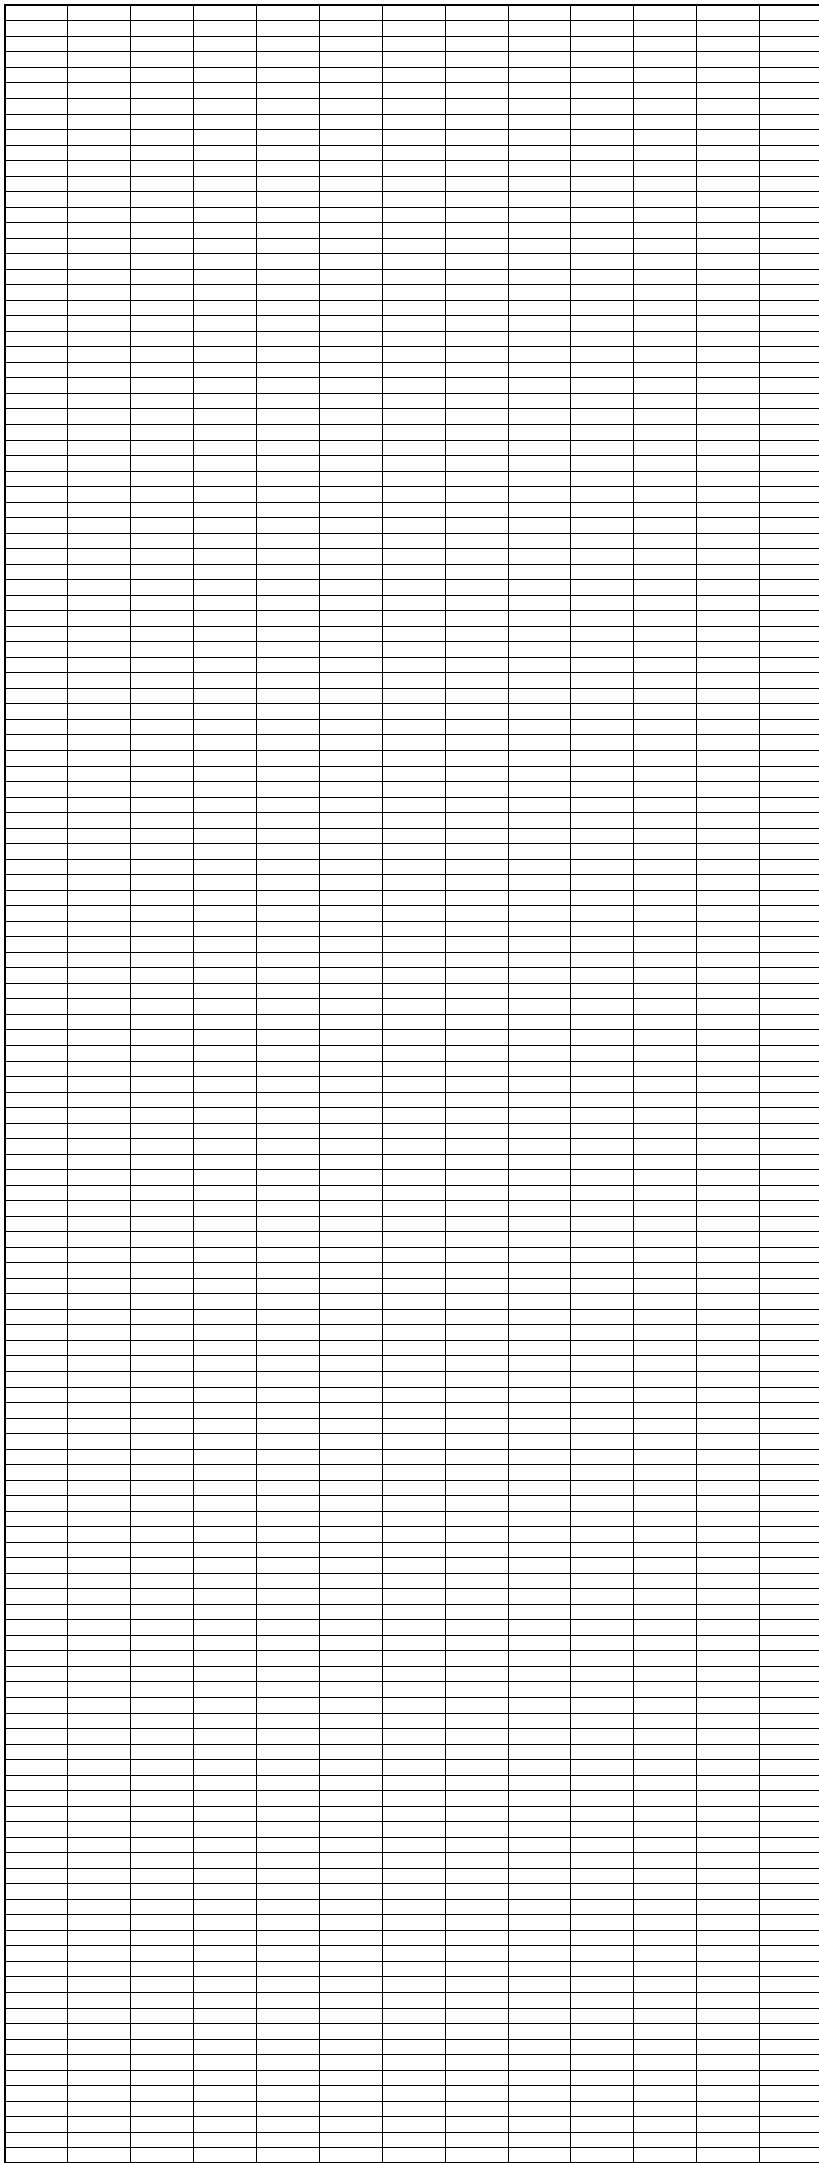





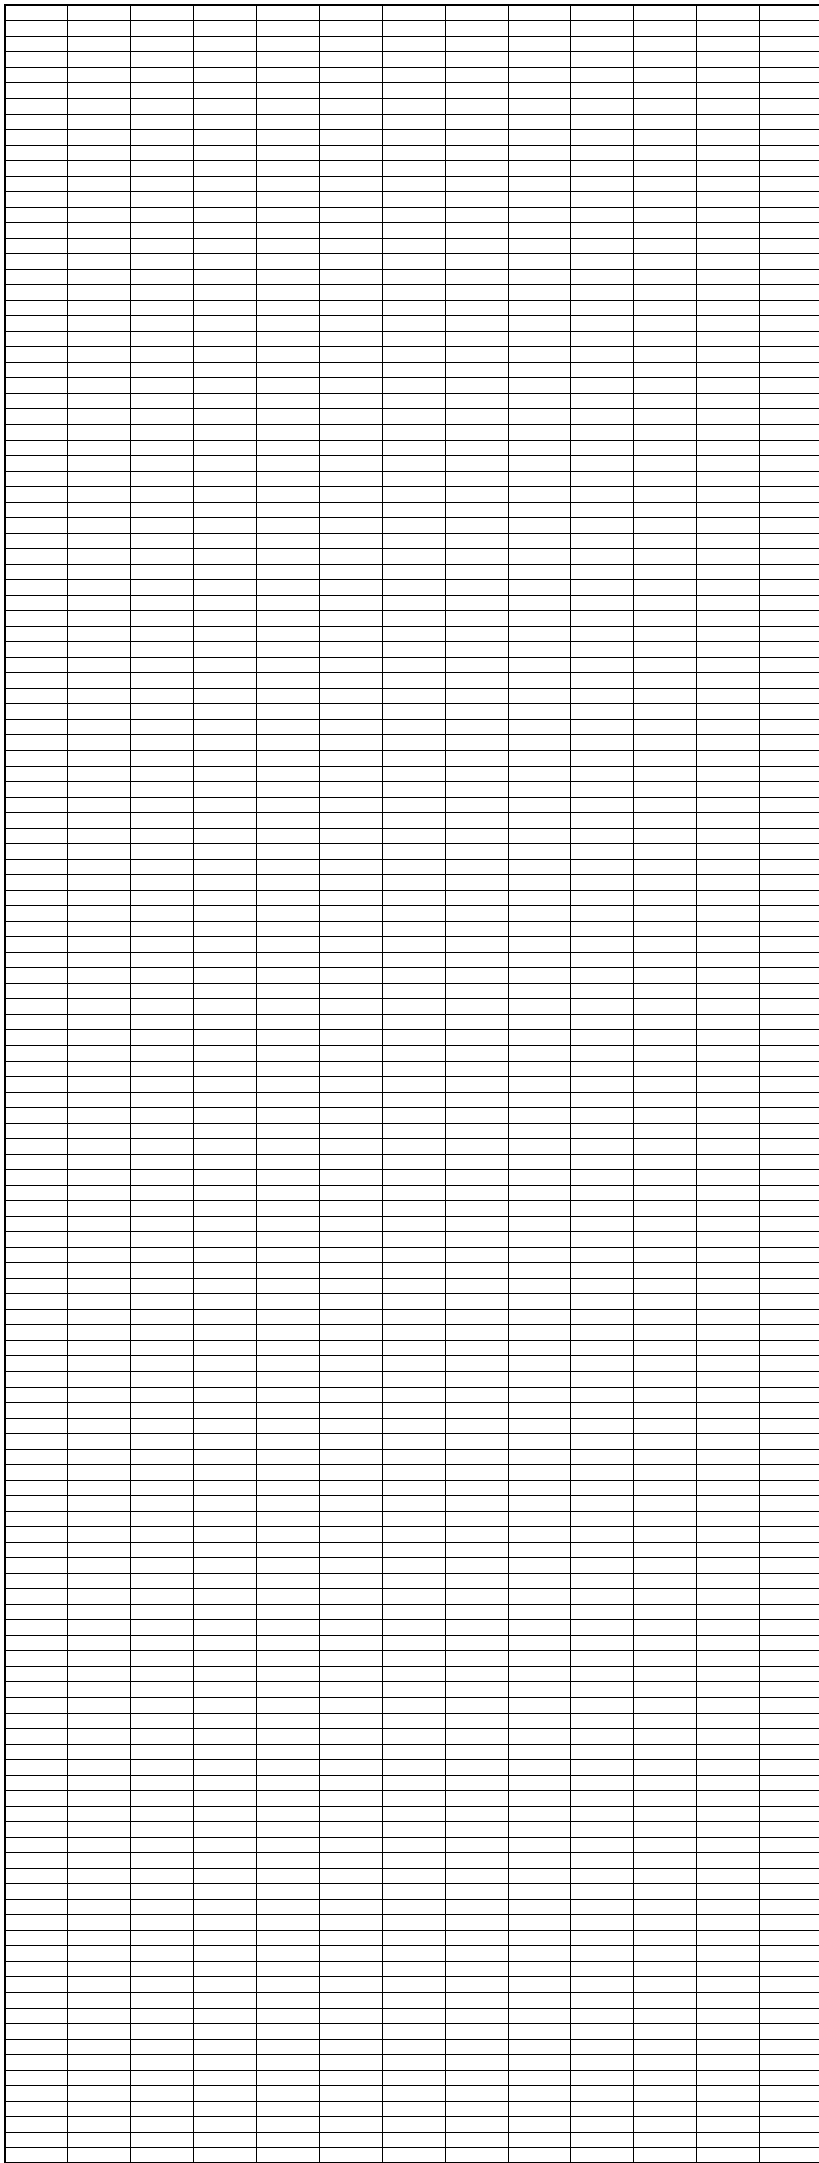


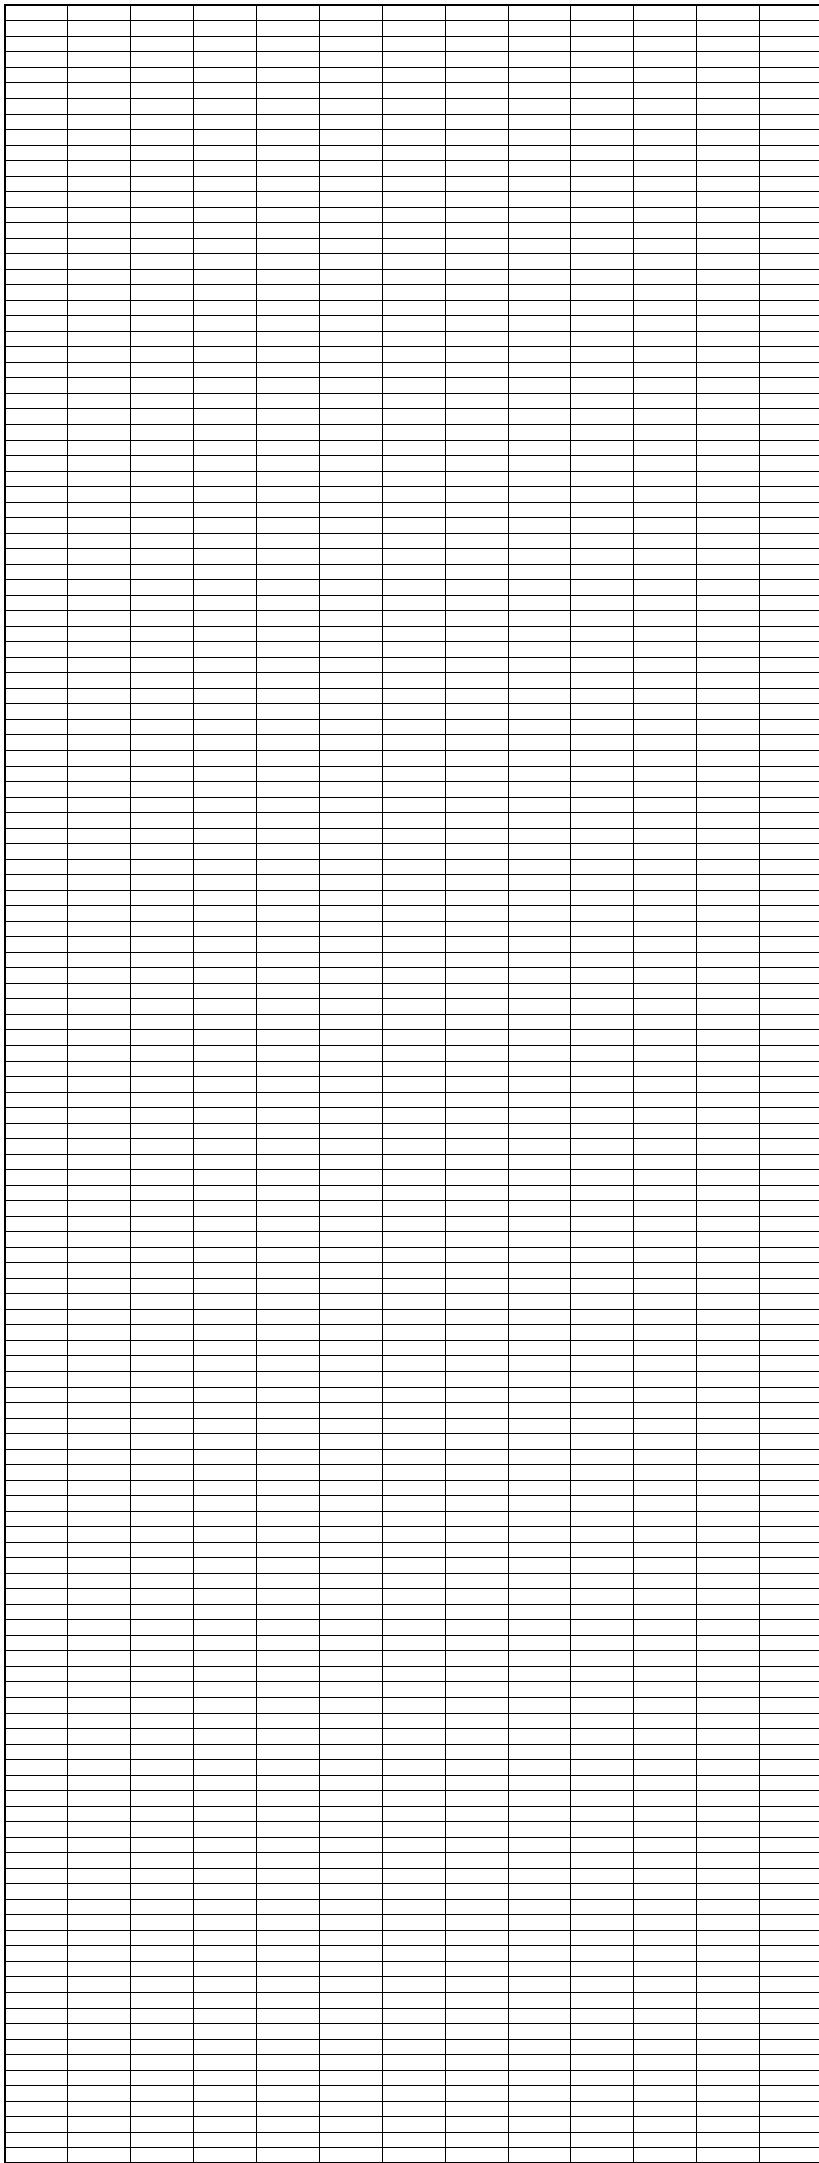


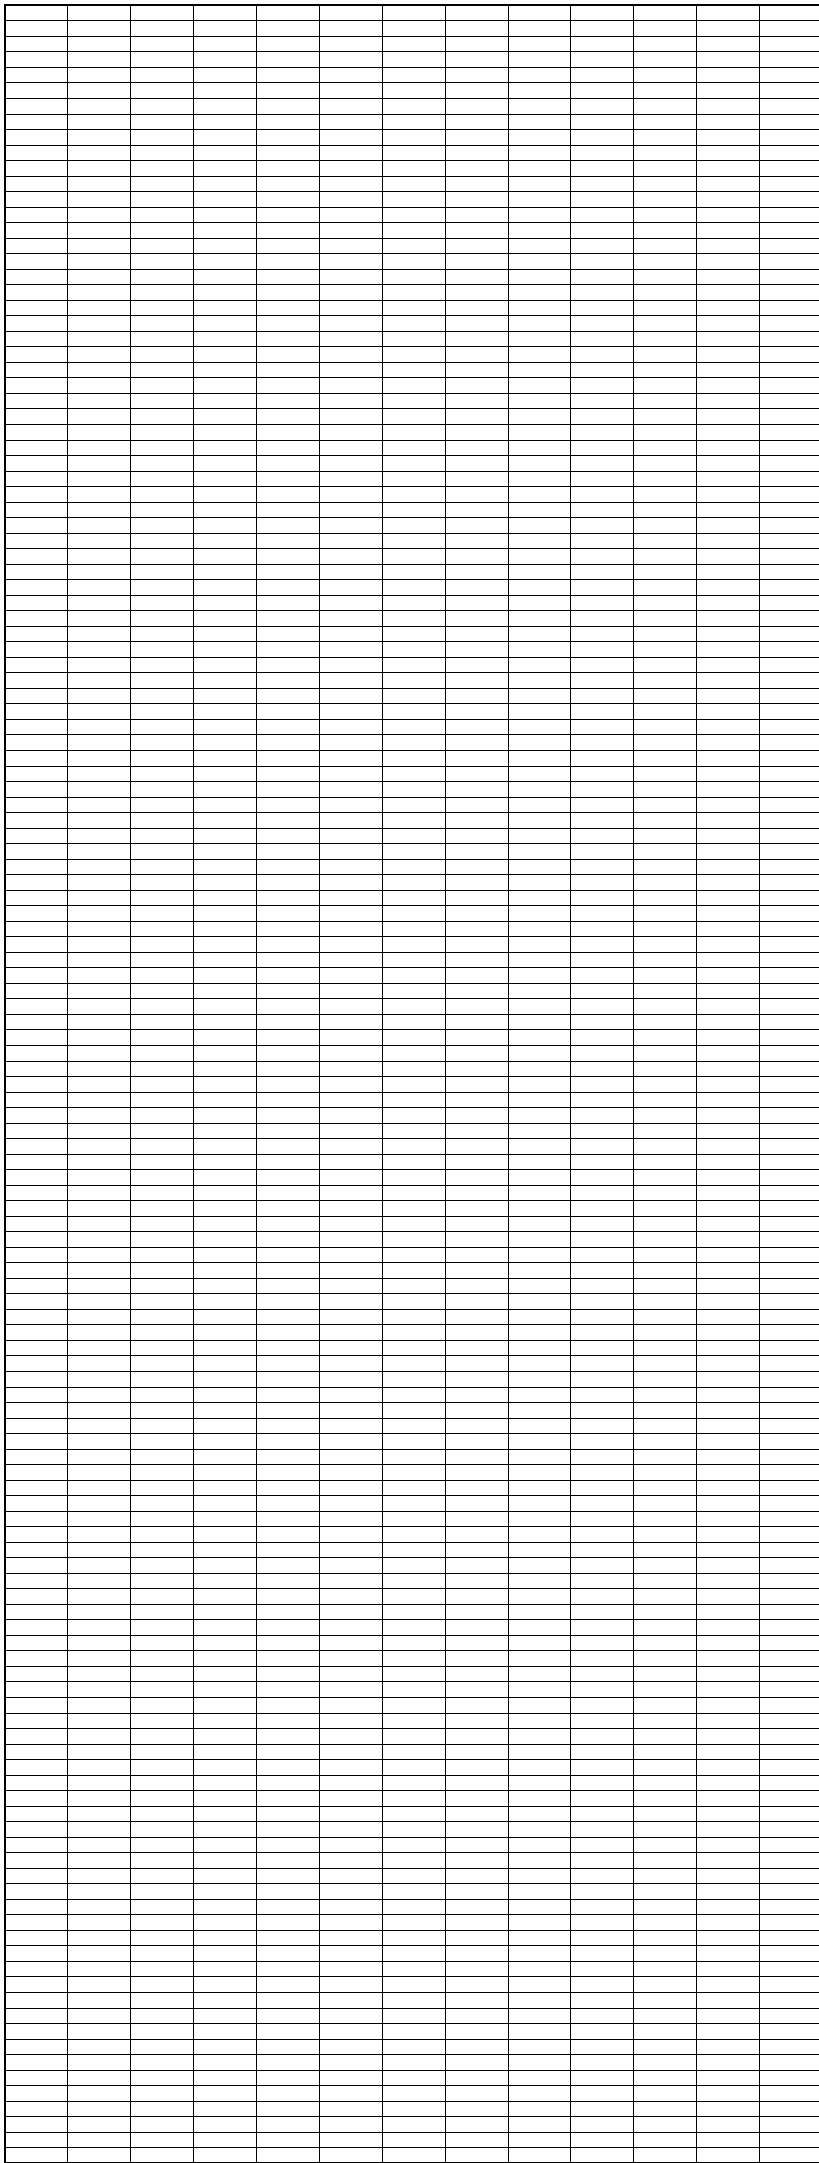


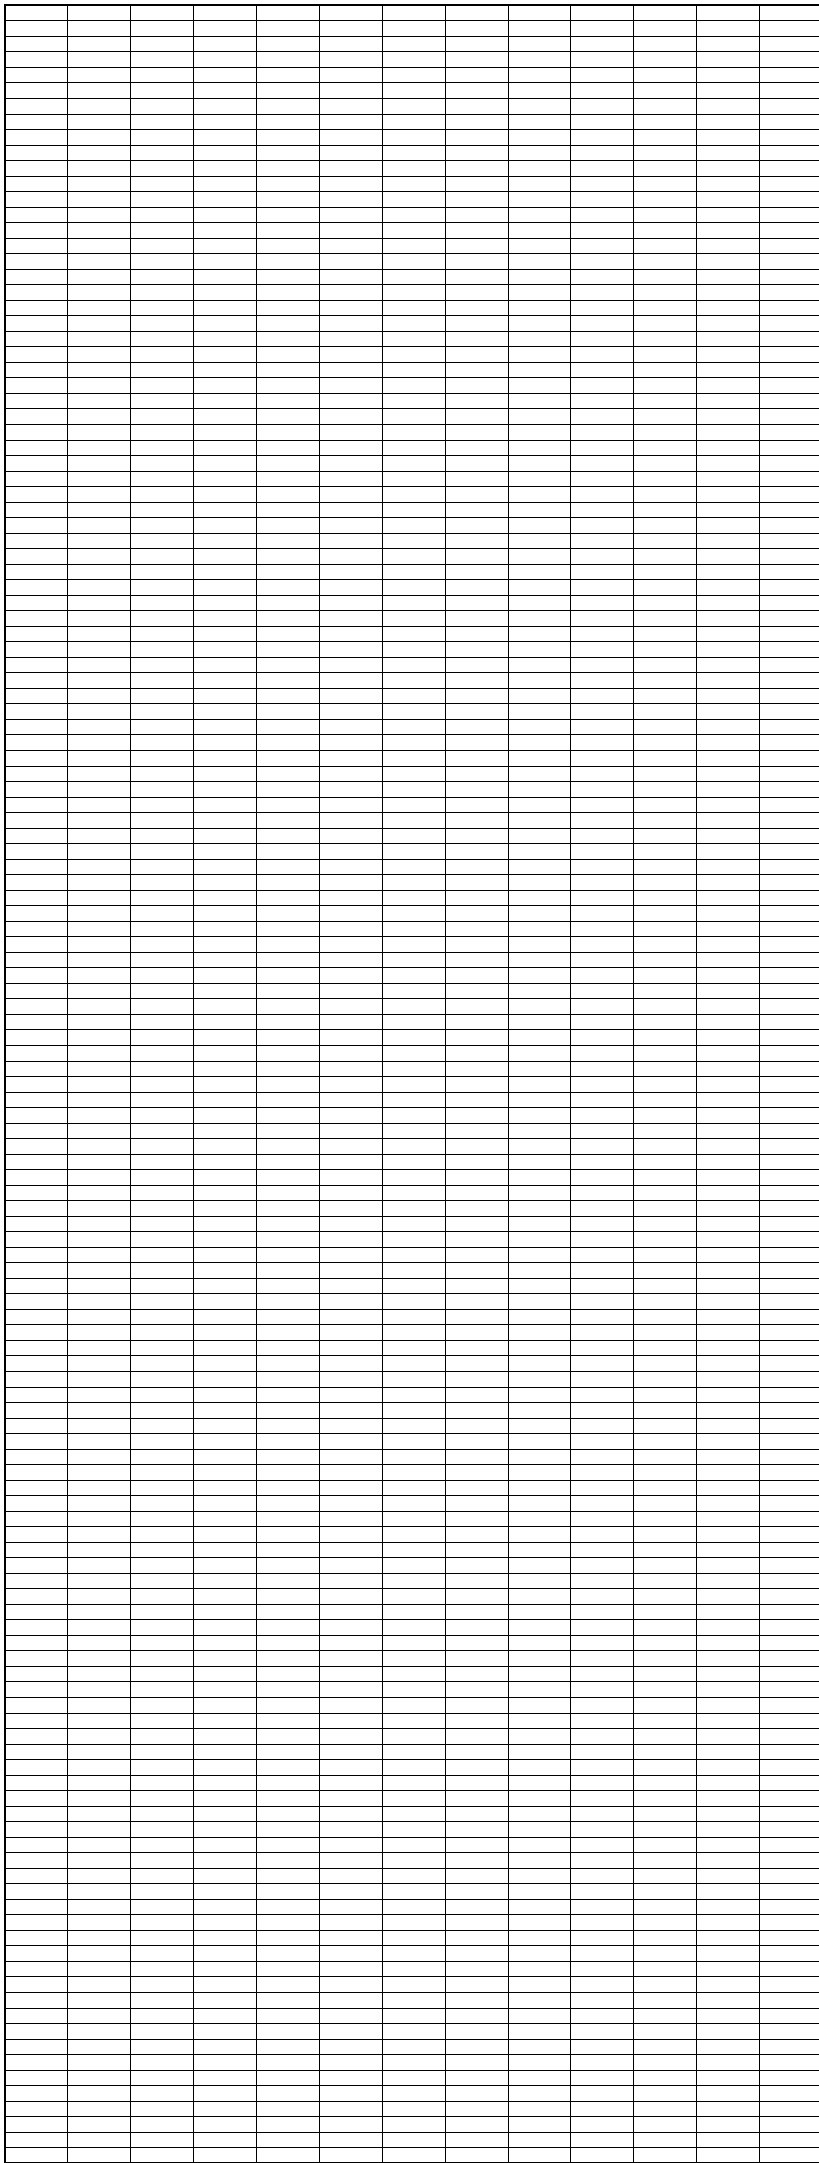

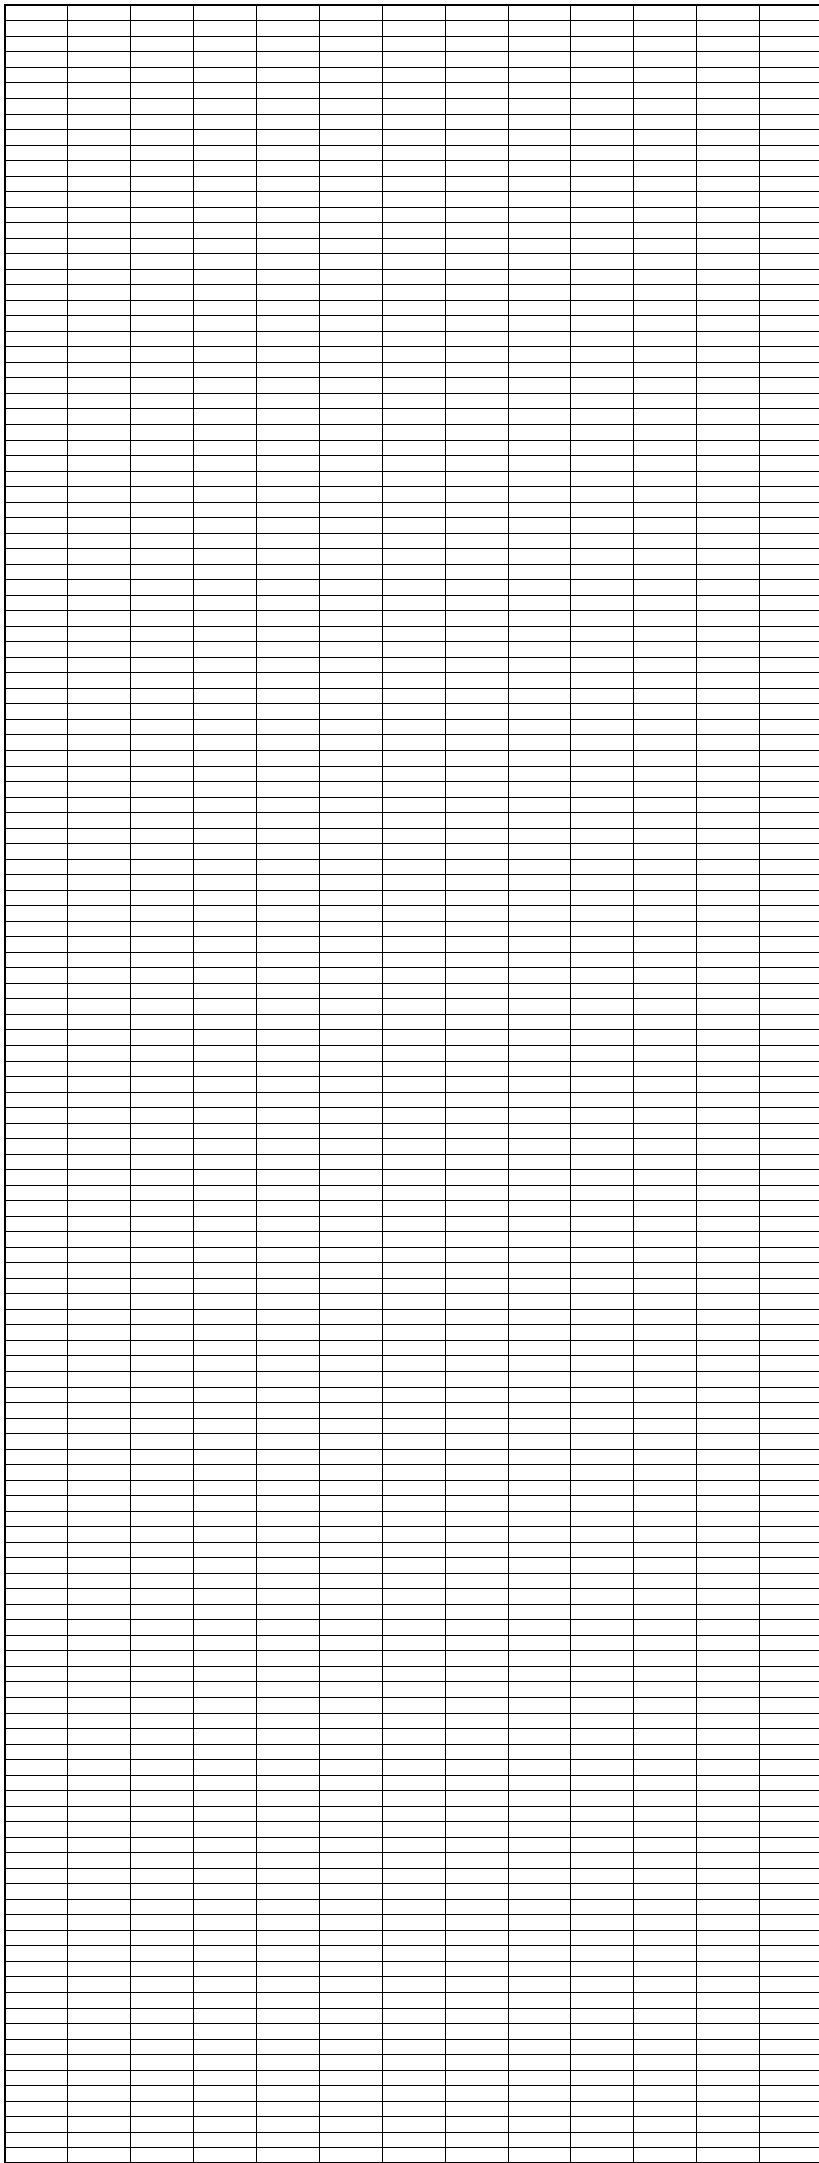


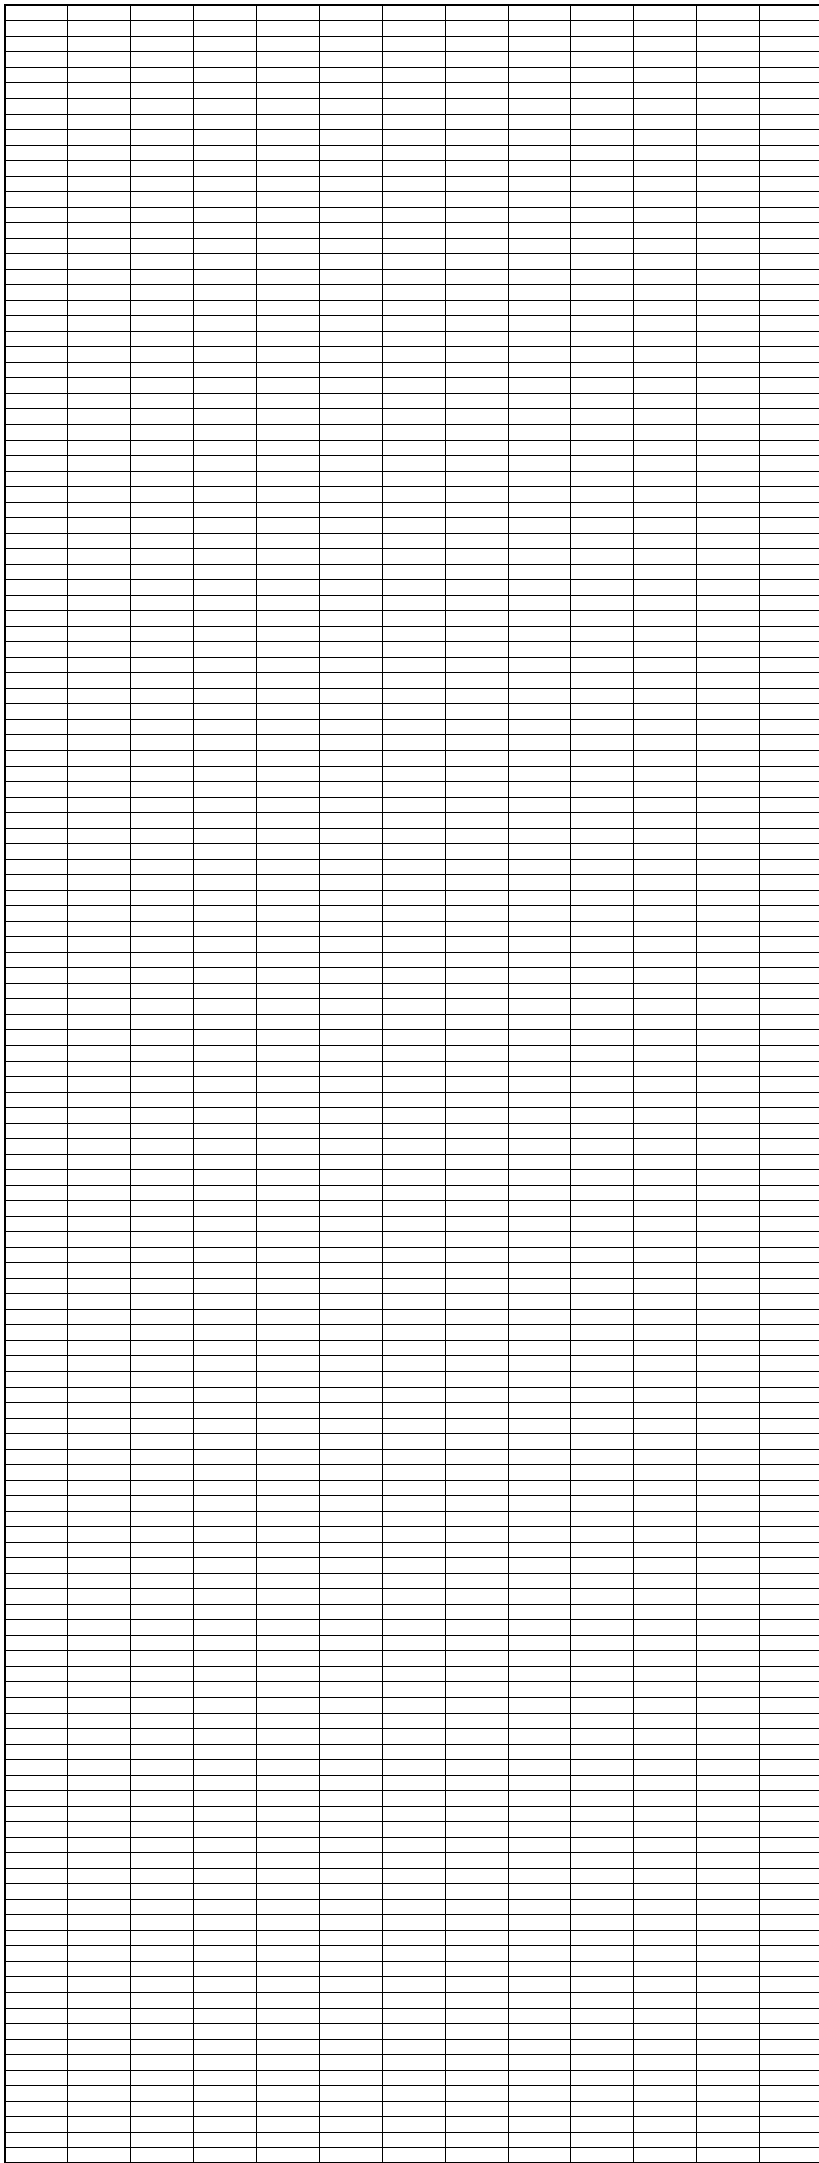


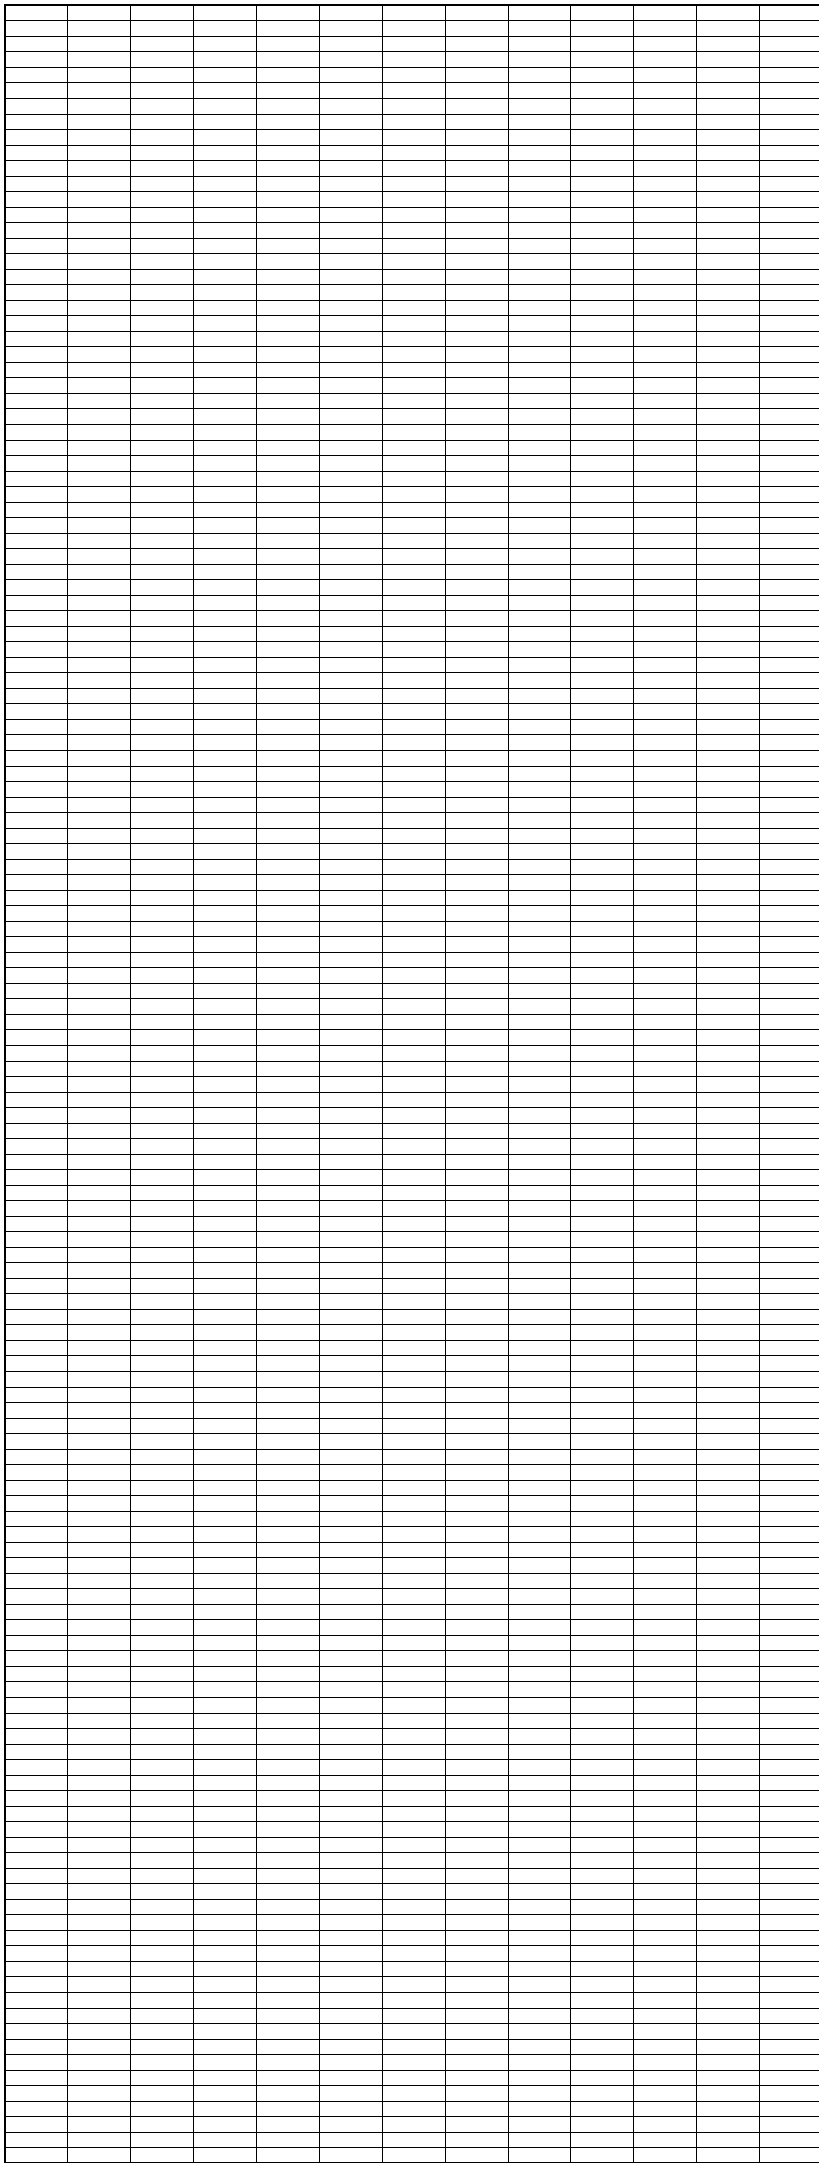

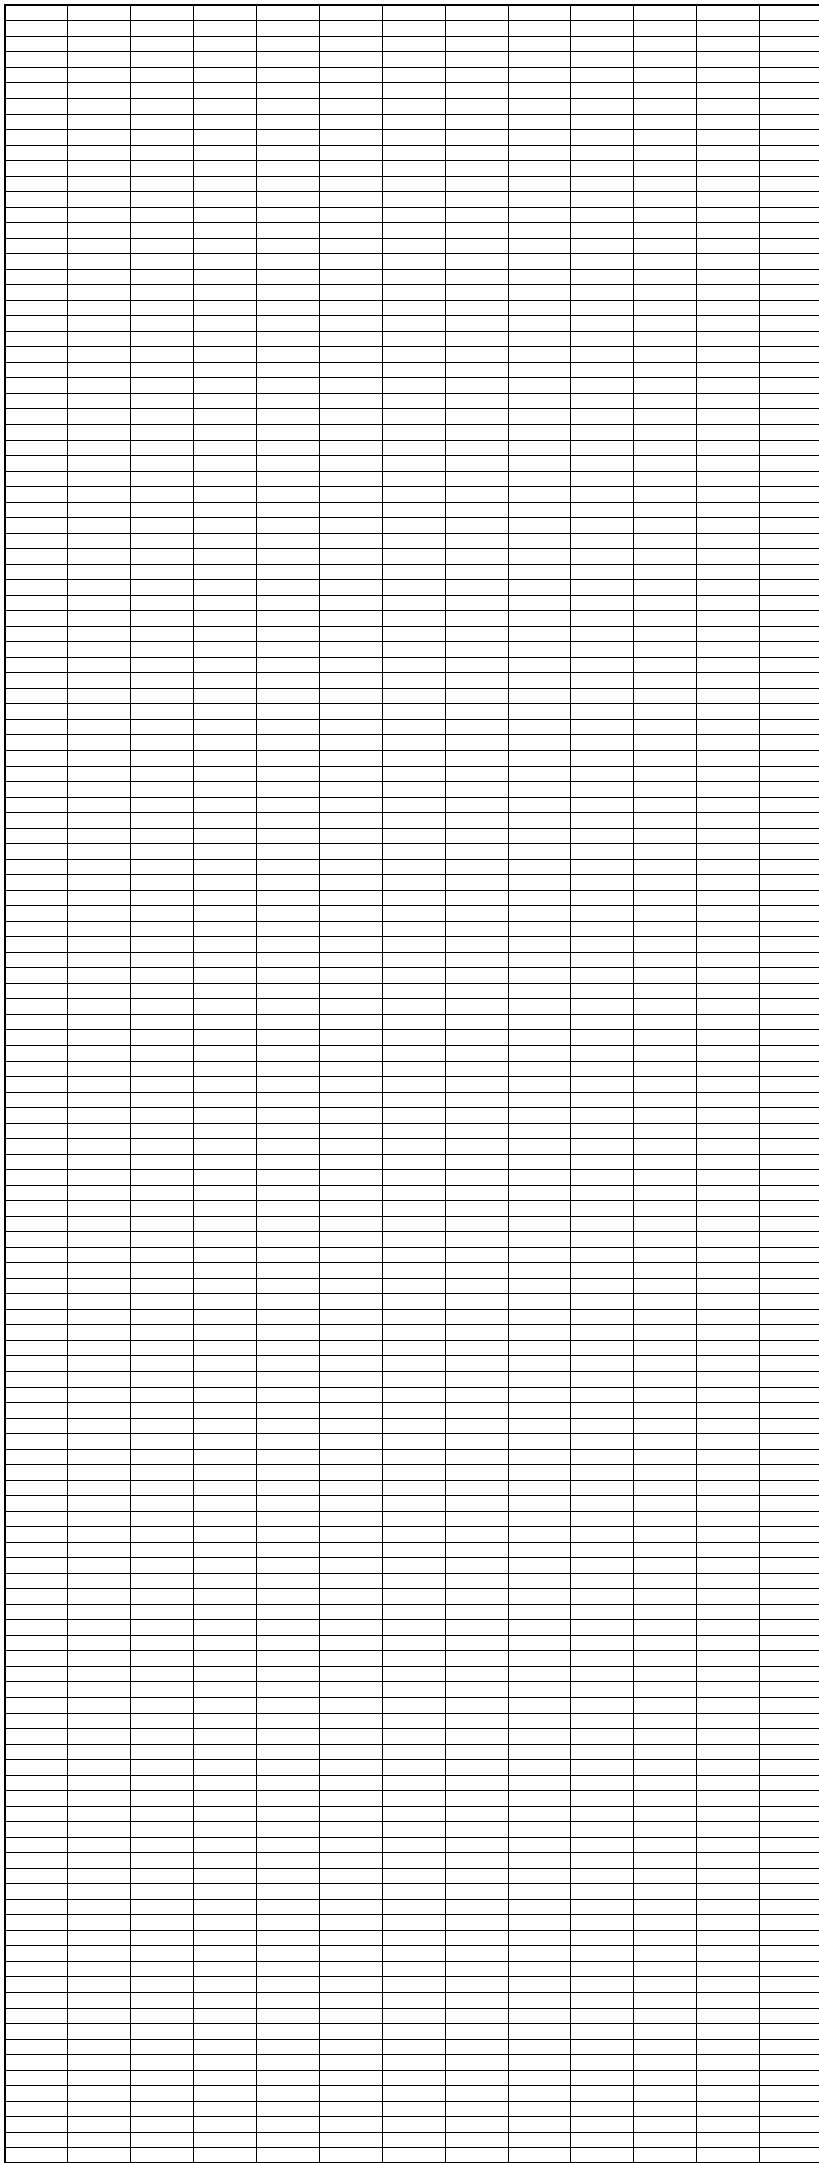



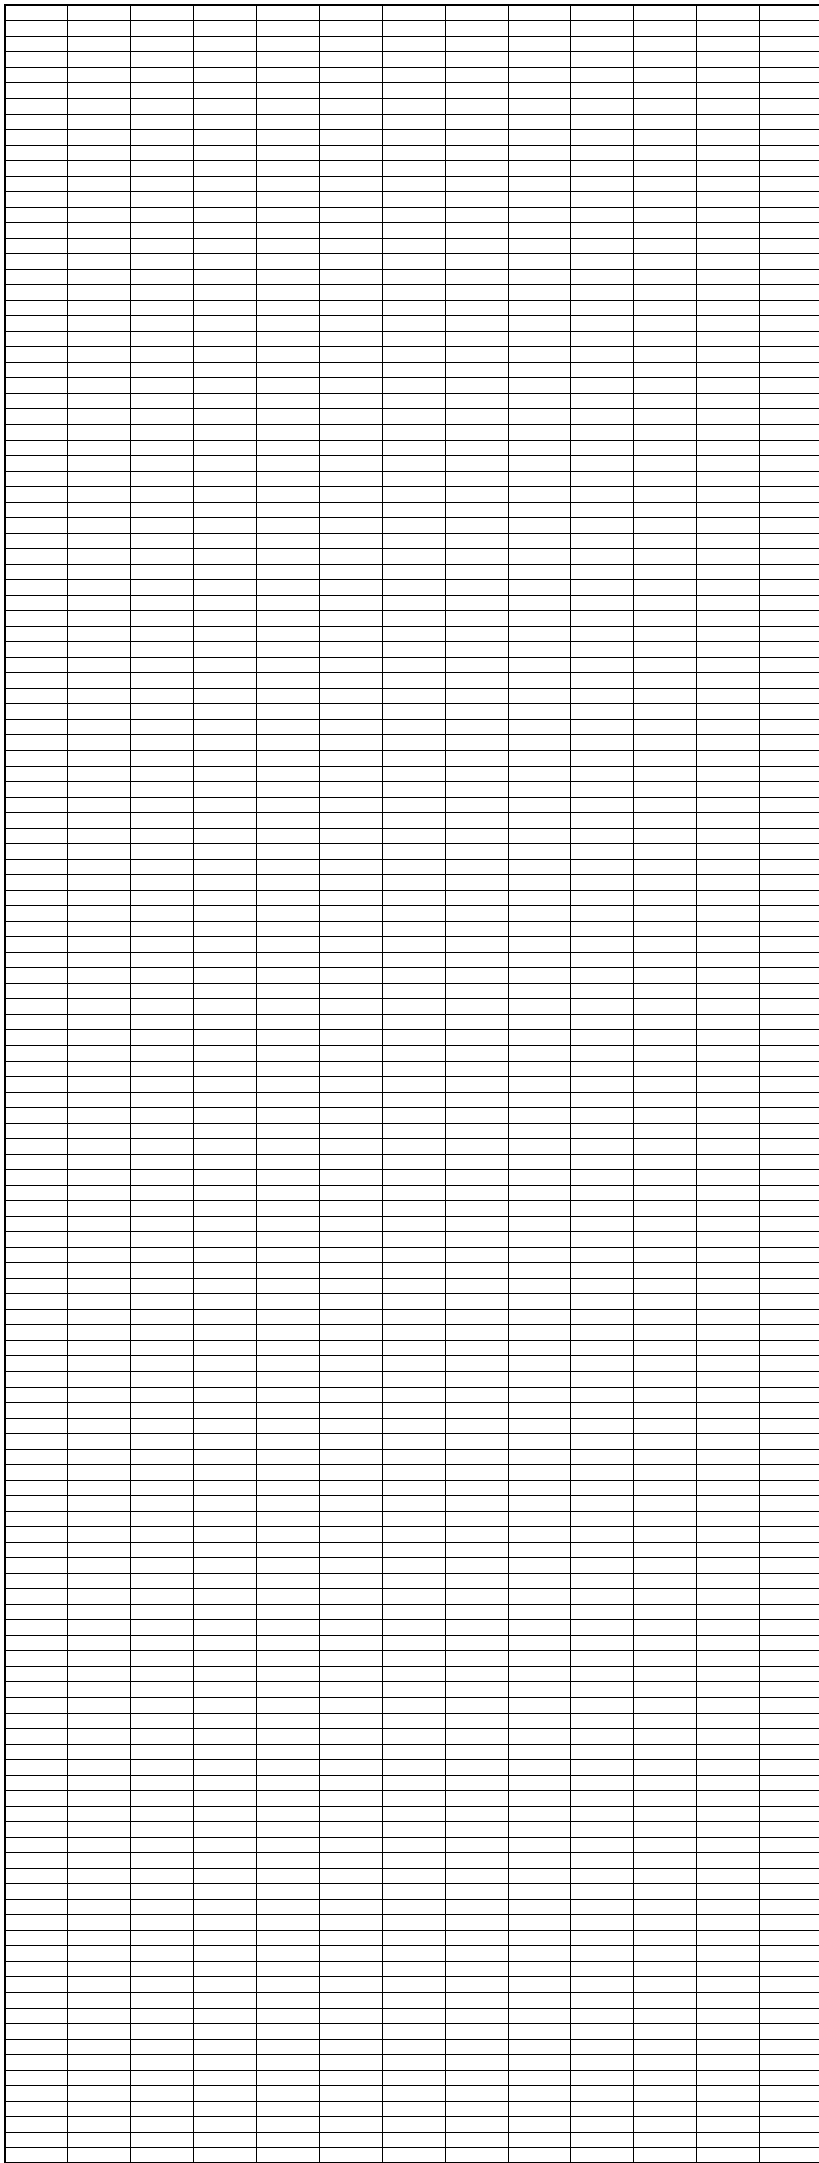

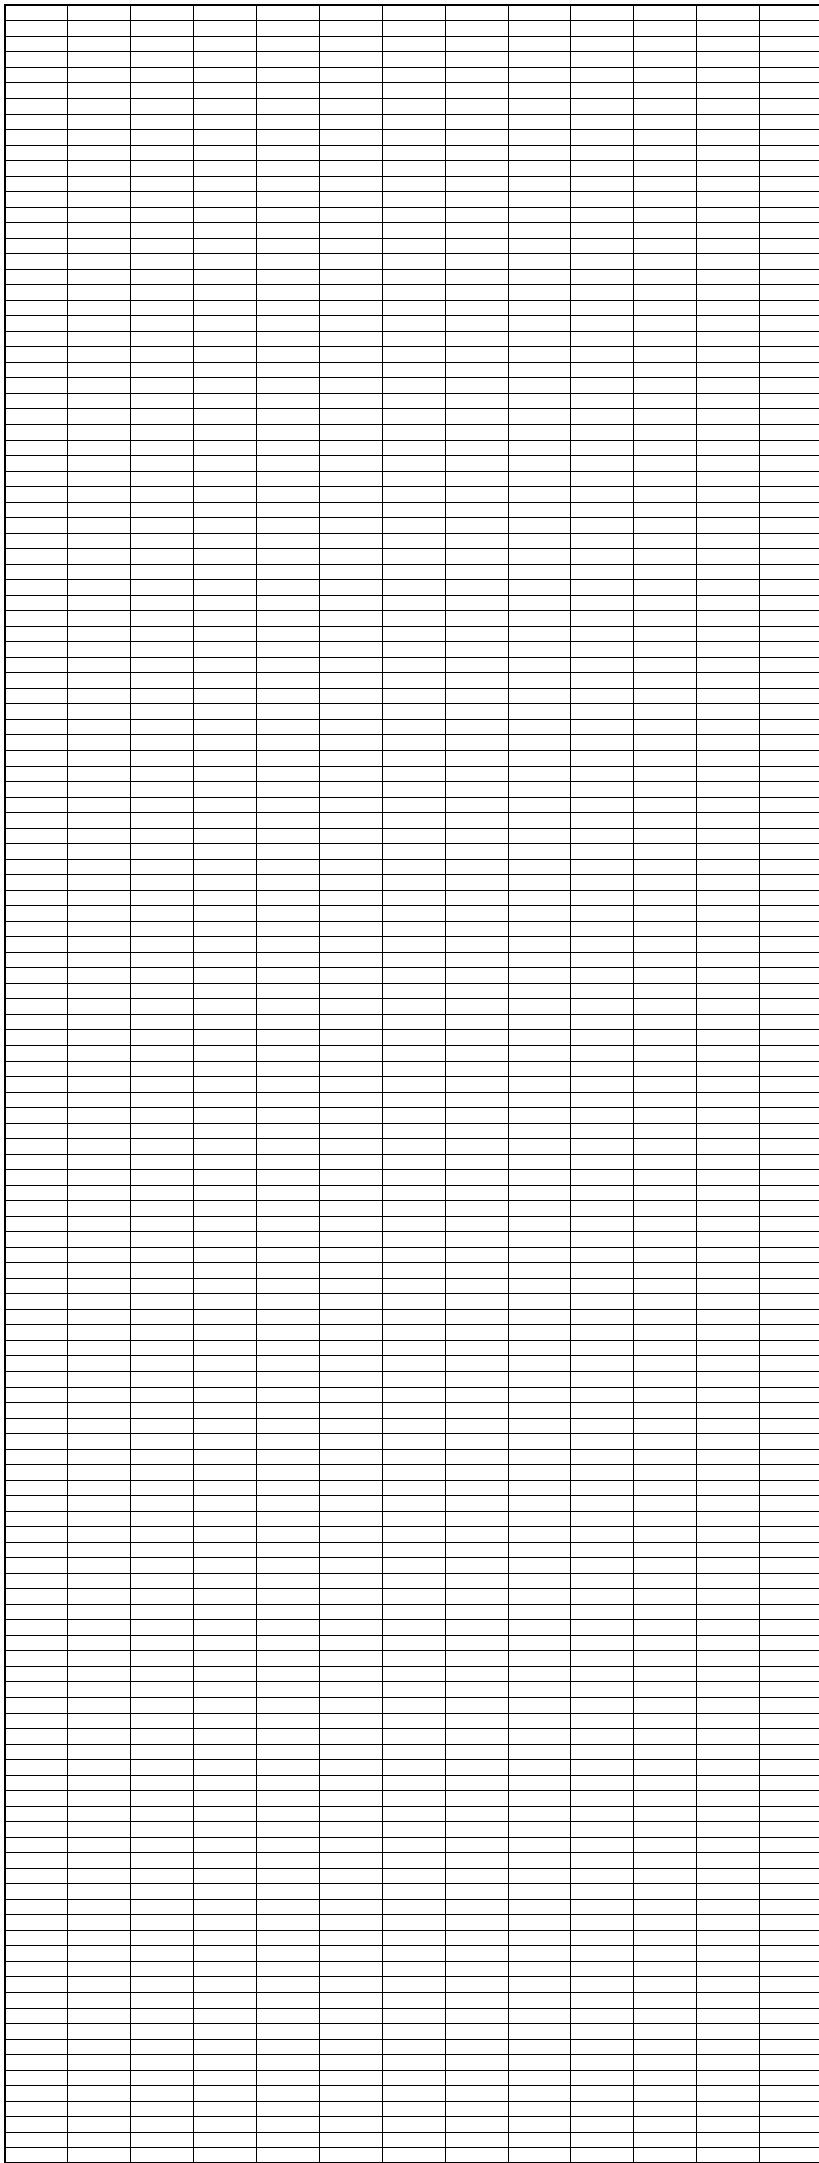

INI 02 -> 04H, INI 03 -> 05H

